


# TAA SmartPro 2U Rack-Mount Line Interactive UPS System Owner's Manual

[Home](#) » [TAA](#) » TAA SmartPro 2U Rack-Mount Line Interactive UPS System Owner's Manual 

## Contents

- [1 TAA SmartPro 2U Rack-Mount Line Interactive UPS System Owner's Manual](#)
- [2 Important Safety Instructions](#)
- [3 Mounting \(Rack\)](#)
- [4 Quick Installation](#)
- [5 Optional Installation](#)
- [6 Basic Operation](#)
- [7 Storage and Service](#)
- [8 Battery Replacement](#)
- [9 Specifications](#)
- [10 Product Registration](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)
- [12 Related Posts](#)

## TAA SmartPro 2U Rack-Mount Line Interactive UPS System Owner's Manual

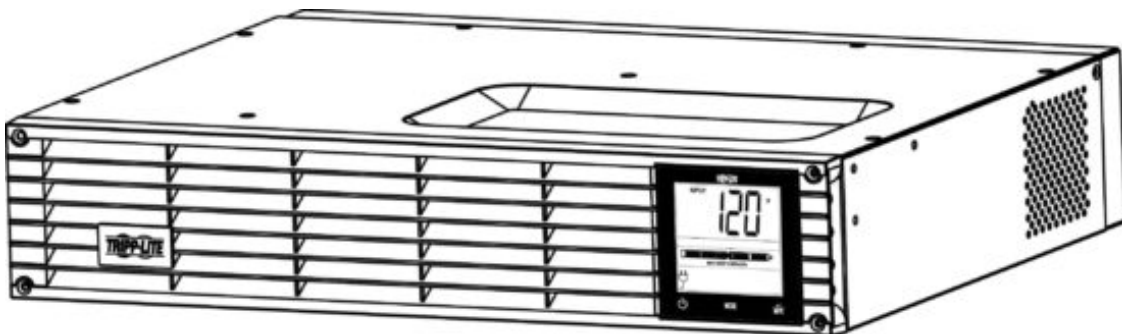

Intelligent, Line-Interactive UPS Systems  
120V Sine Wave Output • 1,000VA—1,500VA

SMART1500RML2UA  
(AG-0006, AG-02F7)

SMART1500RM2U  
(AG-0007, AG-02F8)

SMART1000RML2U  
(AG-0011, AG-02F9)

Not suitable for mobile applications.

## WARRANTY REGISTRATION

Register your product today and be automatically entered to win an ISOBAR® surge protector in our monthly drawing!

**[tripplite.com/warranty](http://tripplite.com/warranty)**



1111 W. 35th Street, Chicago, IL 60609 USA • [tripplite.com/support](http://tripplite.com/support)

Copyright © 2021 Tripp Lite. All rights reserved. SmartPro® is a registered trademark of Tripp Lite.



### Important Safety Instructions

#### SAVE THESE INSTRUCTIONS

This manual contains important instructions that should be followed during the installation, operation and storage of this product. Failure to heed these warnings may affect the warranty.

#### UPS Location Warnings

- Use caution when lifting the UPS. Because of the considerable weight of all rack-mount UPS systems, at least two people should assist in lifting and installing them.
- Install the UPS indoors, away from excess moisture or heat, dust or direct sunlight.
- For best performance, the ambient temperature near the UPS should be between 0° C and 40° C (between 32° F and 104° F).
- Leave adequate space around all sides of the UPS for proper ventilation. Do not obstruct its vents or fan openings.
- When mounting the UPS system in a tower orientation, make sure the LCD Screen panel is at the top of the UPS, not at the bottom.
- Do not mount unit with its front or rear panel facing down (at any angle). Mounting in this manner will seriously

inhibit the unit's internal cooling, eventually causing product damage not covered under warranty.

## UPS Connection Warnings

- The UPS contains its own energy source (battery). The output terminals may be live even when the UPS is not connected to an AC supply.
- Connect the UPS to a properly grounded AC power outlet. Do not modify the UPS plug in a way that would eliminate the UPS connection to ground. Do not use adapters that eliminate the UPS connection to ground.
- Do not plug the UPS into itself; this will damage the UPS and void your warranty.
- If you are connecting the UPS to a motor-powered AC generator, the generator must provide filtered, frequency-regulated computer-grade output. Connecting the UPS to a generator will void its Ultimate Lifetime Insurance.
- Install in accordance with National Electrical Code standards ANSI/NFPA 70 and Canadian Electrical Code, Part I, C22.1.
- Short circuit backup protection and overcurrent protection are provided by the building installation for permanently connected models.
- To reduce the risk of fire, connect only to a circuit provided branch circuit overcurrent protection in accordance with the National Electrical Code, ANSI/NFPA 70 and the Canadian Electrical Code, Part I, C22.1. Be sure to use maximum 20A overcurrent protection, in accordance with the plug/equipment rating, for the installation.
- The plug on the power supply cord is intended to serve as the disconnect device. Be sure that the socket-outlet is installed near the equipment and is made easily accessible.



**Caution!** This UPS may receive power from more than one source. Disconnection of the AC and DC sources is required to de-energize the unit before servicing.

## Equipment Connection Warnings

- Use of this equipment in life support applications where failure of this equipment can reasonably be expected to cause the failure of the life support equipment or to significantly affect its safety or effectiveness is not recommended.
- Do not connect surge protectors or extension cords to the output of the UPS. This might damage the UPS and may affect the surge protector and UPS warranties.

## Battery Warnings

- Batteries can present a risk of electrical shock and burn from high short-circuit current. Observe proper precautions. Do not dispose of the batteries in a fire. Do not open the UPS or batteries. Do not short or bridge the battery terminals with any object. Unplug and turn off the UPS before performing battery replacement. Use tools with insulated handles. There are no user-serviceable parts inside the UPS. Battery replacement should be performed only by authorized service personnel using the same number and type of batteries (Sealed Lead-Acid). Tripp Lite offers a complete line of UPS System Replacement Battery Cartridges (R.B.C.). Visit Tripp Lite on the Web at [tripplite.com/support/battery/index.cfm](http://tripplite.com/support/battery/index.cfm) to locate the specific replacement battery for your UPS. The RBC Type can also be found on the label affixed to the Battery Retention Plate.

- During hot-swap battery replacement, the UPS will not provide backup power in the event of a blackout or other power interruptions.
- Do not operate the UPS without batteries.

### **External Battery Connection Warnings**

- When adding external battery packs to select models with external battery pack connectors, connect only Tripp Lite-recommended battery packs of the correct voltage and type. Do not connect or disconnect battery packs when the UPS is operating on battery power. Visit

[tripplite.com/support/battery/index.cfm](http://tripplite.com/support/battery/index.cfm) to locate the supported battery type(s) for your UPS.

### **UPS and Battery Recycling**



Please recycle Tripp Lite products. The batteries used in Tripp Lite products are sealed lead acid batteries. These batteries are highly recyclable. Please refer to your local codes for disposal requirements.

Call Tripp Lite for recycling info at 773.869.1234. Or go to the Tripp Lite website for up-to-date information on recycling the batteries or any Tripp Lite product:

[tripplite.com/support/recycling-program/](http://tripplite.com/support/recycling-program/)

### **Mounting (Rack)**

Mount your equipment in either a 2-post or 4-post rack or rack enclosure. The user must determine the fitness of hardware and procedures before mounting. If hardware and procedures are not suitable for your application, contact the manufacturer of your rack or rack enclosure. The procedures described in this manual are for common rack and rack enclosure types and may not be appropriate for all applications.

Note: The illustrations may differ from your model.

#### **4-Post Mounting**

- 1** The included plastic pegs **A** will temporarily support the empty rack-mount shelves **B** while you install the permanent mounting hardware. Insert a peg near the center of the front and rear bracket of each shelf as shown. (Each front bracket has 6 holes and each rear bracket has 3 holes.) The pegs will snap into place.

After installing the pegs, expand each shelf to match the depth of your rack rails. The pegs will fit through the square holes in the rack rails to support the shelves. Refer to the rack unit labels to confirm that the shelves are level in all directions.

**Note:** The support ledge of each shelf must face inward.

- 2** Secure the shelves **B** to the mounting rails permanently using the included screws and cup washers **C** as shown. Place the cup washer between the screw and the rack so that the screw enters the wider opening of the cup washer first.





Place 4 screws total at the front and 4 screws total at the back.

Tighten all screws before proceeding.

**WARNING: Do not attempt to install your equipment until you have inserted and tightened the required screws. The plastic pegs will not support the weight of your equipment.**

- 3** Attach your equipment's mounting brackets to the forward mounting holes of the cabinet using the hardware included with your equipment. The mounting bracket "ears" should face forward. (Some equipment may have pre-installed or integral mounting brackets.)

- 4** With the aid of an assistant (if necessary), lift your equipment and slide it into the shelves. Attach the equipment mounting brackets to the forward mounting rails with user-supplied screws and washers **D**. Tighten all screws securely.

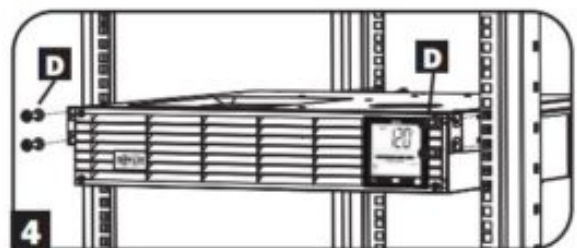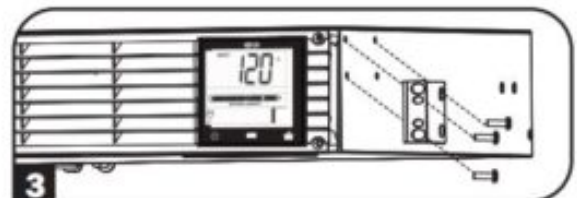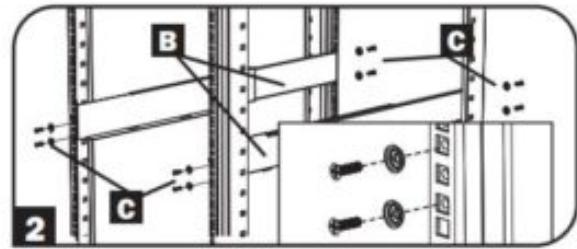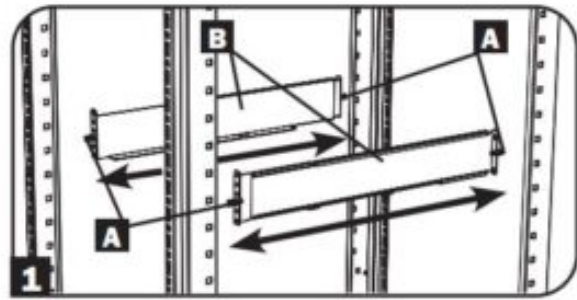

## 2-Post Mounting/Wall Mounting

2-post mounting requires a Tripp Lite 2-Post Rack-Mount Installation Kit (model: 2POSTRMKITWM, sold separately).

Wall mounting requires a Tripp Lite Wall-Mount Kit 9 (2POSTRMKITWM, sold separately).


### Mounting (Tower)

**WARNING:** When mounting the UPS system in a tower or wall-mount orientation, make sure the LCD Screen panel is at the top of the UPS, not at the bottom.

Note: To mount the UPS in an upright (tower) position, 2-9USTAND is required (sold separately).




Rotate the LCD Screen panel for easy viewing while the UPS is tower mounted. Insert a small screwdriver, or other tool, in the slots on either side of the panel. Pop the panel out, rotate it and pop the panel back in place.

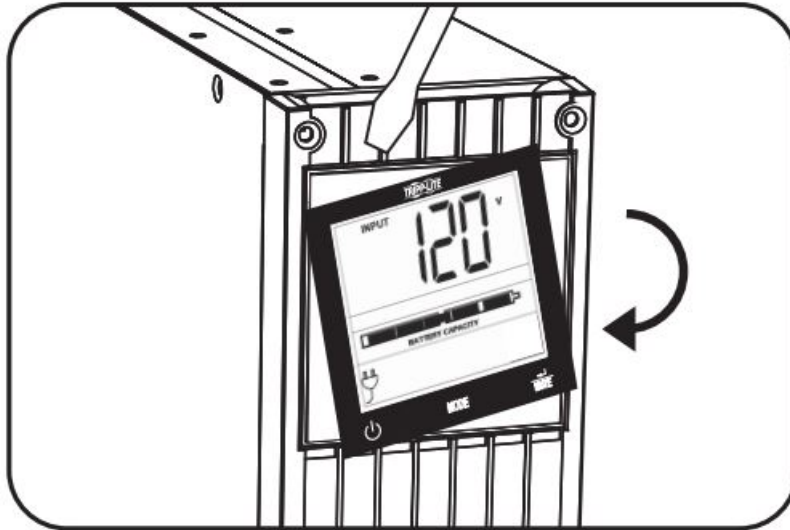

## Quick Installation


### 1 Plug the UPS into an outlet on a dedicated circuit.

**Note:** After you plug the UPS into a live AC outlet, the UPS (in "Standby" mode) will automatically charge its batteries, but will not supply power to its outlets until it is turned ON.

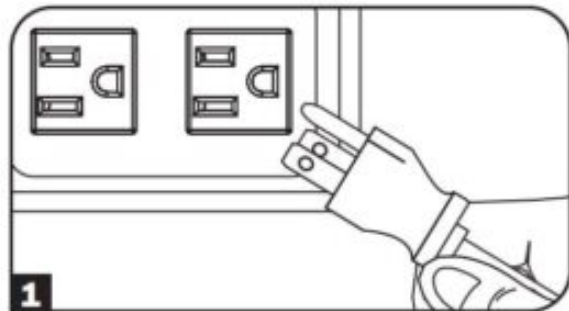

### 2 Plug your equipment into the UPS.\*


\* Your UPS is designed to support only electronic equipment. You will overload the UPS if the total VA ratings for all the equipment you connect exceeds the UPS Output Capacity. To find your equipment's VA ratings, look on its nameplates. If the equipment is listed in amps, multiply the number of amps by 120 to determine VA. (Example: 1 amp  $\times$  120 = 120 VA) If you are unsure if you have overloaded the UPS outlets, see LOAD icon description in LCD Interface section under Basic Operation.

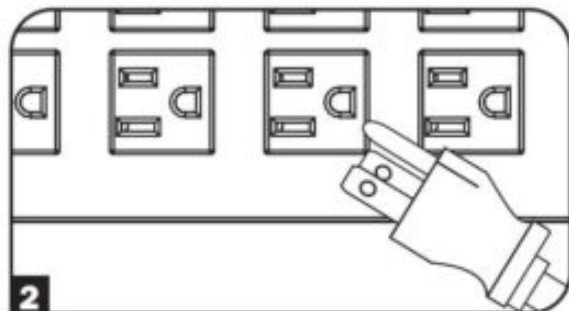

### 3 Turn the UPS ON.

Press and hold the  button **A** for one second. The alarm will beep once briefly.



**Note:** UPS system will function properly upon initial startup, however, maximum runtime and a successful self-test will only be accessible after it has been charged for 24 hours.

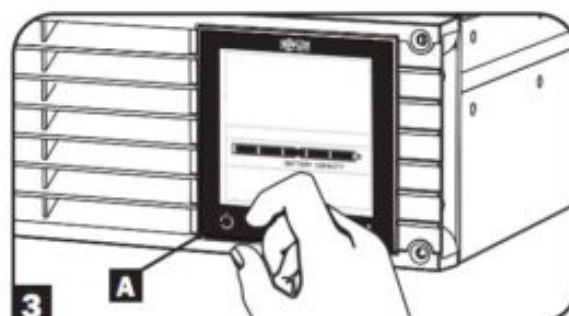

## Optional Installation

### 1 USB and RS-232 Serial Communications



Use the included USB cable (see **1A**) or DB9 serial cable (see **1B**) to connect the communication port on your computer to the communication port of your UPS. Install on your computer the Tripp Lite PowerAlert Software appropriate to your computer's operating system.

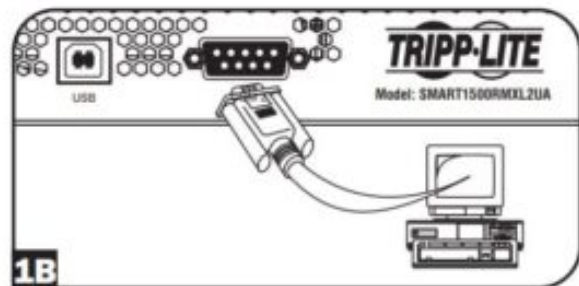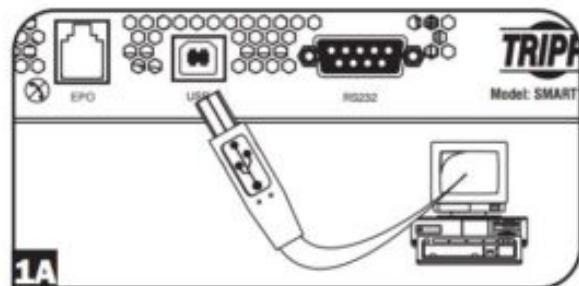

### 2 EPO Port Connection

This optional feature is only for those applications which require connection to a facility's Emergency Power Off (EPO) circuit. When the UPS is connected to this circuit, it enables emergency shutdown of the UPS inverter.

Using the cable provided, connect the EPO port of your UPS (see **2A**) to a user-supplied normally closed or normally open switch according to the circuit diagram (see **2B**). The EPO port is not a phone line surge protector. Do not connect a phone line to this port.

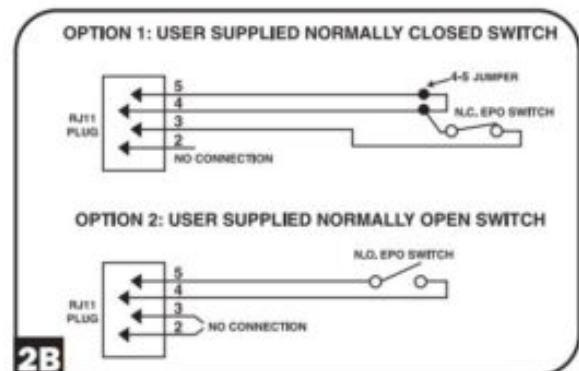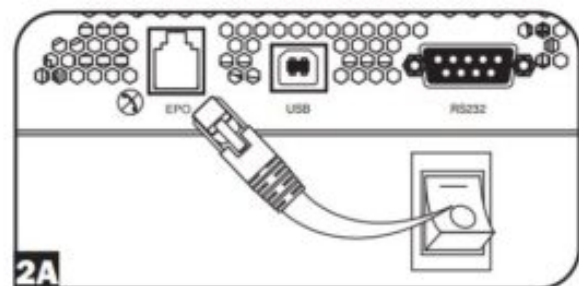

### 3 External Battery Connection (Select Models)


Your UPS comes with a robust internal battery system. External batteries are needed only to extend runtime. Use only Tripp Lite external battery packs with overcurrent protection. Adding external batteries will increase recharge time, as well as runtime. Installation is by qualified Service personnel only. See the battery pack owner's manual for complete installation instructions. Make sure cables are fully inserted into their connectors. Small sparks may result during battery connection; this is normal. Do not connect or disconnect battery packs when the UPS is running on battery power. Your UPS supports the following battery packs available from Tripp Lite. Contact Tripp Lite Customer Support at 773.869.1234 for the appropriate Tripp Lite battery pack to connect.

#### 36V Battery Packs

- BP36V15-2U (limit 1)
- BP36V42-3U (unlimited)

When installing your UPS with external batteries, be sure to connect the ground strap between the external battery packs to the metal enclosure of the UPS before connecting to the two-conductor external battery pack cables. Follow installation directions in accordance with the external battery pack owner's manual using the ground strap included with the external battery packs.

The illustration (see **3**) shows the location of your UPS External Battery Connector **A** where you will insert the battery pack cable. Complete installation instructions for your battery pack appear in the battery pack owner's manual. Make sure that cables are fully inserted into their connectors. Small sparks may result during battery connection; this is normal.

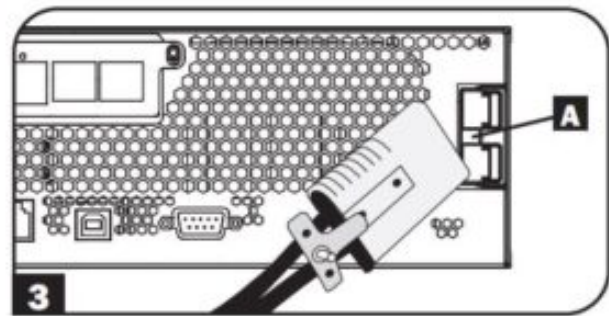

Do not connect or disconnect battery packs when the UPS is running on battery power.



**CAUTION!** When an external battery pack is connected, make sure the AC load does not exceed the nameplate rating. Select models are derated when an external battery pack is connected. See UPS nameplate label for derating details.

When connecting external batteries to the UPS, go to the Tripp Lite website at [tripplite.com/en/support/bpconfig/index.cfm](http://tripplite.com/en/support/bpconfig/index.cfm) to download the External Battery Pack Utility software to configure your UPS for external battery support.

Model Name	Wattage with Internal Batteries Only	Wattage with External Batteries Attached
SMART1500RML2UA	1350W	1200W
SMART1500RM2U	1350W	N/A
SMART1000RML2U	900W	800W

#### Note:


1. The runtime will automatically recalculate once the External Battery Pack Tool process is complete.
2. If the setup will no longer include external batteries, the UPS can be configured to work without external batteries via the LCD Screen. See External Battery Settings Control section under Basic Operation for details.
3. If external battery packs are removed, the UPS must be reset to "NO EXTERNAL BATTERY" via the LCD interface or the External Battery Configuration Program available on the Tripp Lite website. Failure to do so



may result in damage to the internal batteries due to over-charging.

## Basic Operation

### LCD Interface

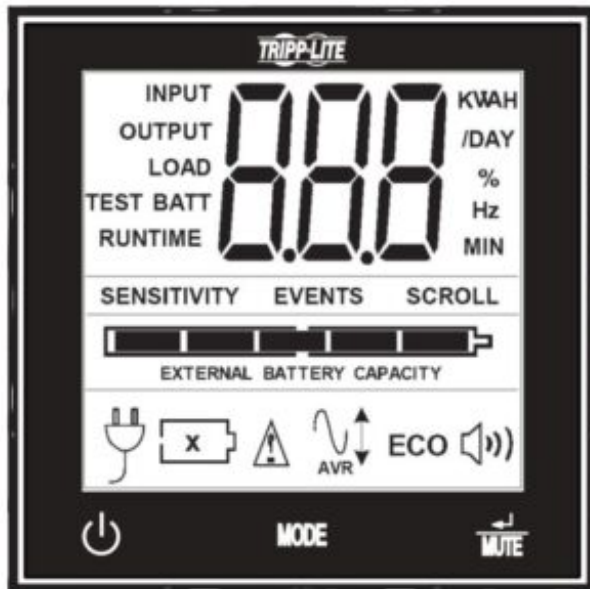

**Note:** This LCD image is shown with all icons illuminated. Under normal conditions, only select icons will be lit.



**3-Digit Display:** This display is generally used to show values for a given “Display” or “Control” screen.



#### “ON/OFF” Button

- **To turn the UPS ON:** After you plug the UPS into a live AC outlet, the UPS (in “Standby” mode) will automatically charge its batteries, but will not supply power to its outlets until it is turned ON. With the UPS plugged into a live AC wall outlet, press and hold the “ON/OFF” button for one second.\* The UPS will beep once to indicate ON status. Release the button.
- **To cold-start the UPS:** If utility power is absent, you can “cold-start” the UPS (i.e., turn it on and supply power for a limited time from its batteries) by pressing and holding the “ON/OFF” button for one second.\* The UPS will beep once to indicate ON status. Release the button.
- **To turn the UPS OFF:** With the UPS ON and receiving utility power, press and hold the “ON/OFF” button for 2.5 seconds.\* The UPS will beep once to indicate OFF status. Then unplug the UPS from the wall outlet. The UPS will be completely off.

\* If the user unintentionally presses the ON/OFF button, the OFF function can be temporarily canceled by continuing to hold the ON/OFF button until the UPS beeps and then, without releasing it, momentarily press either the MODE button or the ENTER/MUTE button. Once both buttons are released, the UPS will remain ON.



#### “MODE” Button

To enable viewing of power displays and control menu options, tap this button. See “Display Power Conditions” & “Control Menu Options” for details.


- Can be used in conjunction with the ON/OFF button to cancel the “OFF” function. See “ON/OFF Button” instructions above.
- Can be used in conjunction with the ENTER/MUTE button to restore the LCD to Factory Mode. See “Control Menu Options.”



#### “ENTER/MUTE” Button

To toggle settings options while viewing a control menu option, tap this button. The UPS power failure alarm can also be temporarily silenced by tapping this button. Once silenced, an alarm will automatically re-sound to indicate low battery conditions and can no longer be silenced.\*


- Can be used in conjunction with the ON/OFF button to cancel the “OFF” function. See “ON/OFF Button” instructions above.
- Can be used in conjunction with the ENTER/MUTE button to restore the LCD to Factory Mode. See “ON/OFF Button” instructions.
- \* **Note:** Alarm-free silent operation is available by setting the alarm to disable (see CONTROL MENU OPTIONS / ALARM ENABLE-DISABLE section).

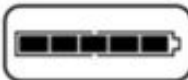


**Battery Capacity:** This will be active in all “Display” modes, but is not shown in “Control” modes.



**AC Input:** This indicates that the unit is running in Line Mode and supplying AC power to equipment connected to the output.

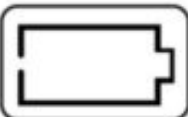

**Battery Input:** This will flash to indicate that the UPS is not receiving AC input and is running in inverter mode. The Battery Input icon is also used in conjunction with the EVENTS icon to indicate On Battery events.

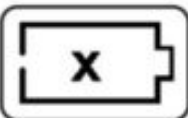


**Replace Battery Icon:** In the event that UPS batteries expire and require replacement, this icon and the warning icon will flash. This icon will also flash after a failed UPS self-test (see the BASIC OPERATION / CONTROL MENU OPTIONS / SELF-TEST section for more information).



**Warning:** This will flash to let the user know that there’s a warning condition and immediate action must be taken:

1. For Replace Battery: Replace Battery and Warning icons flash during any normal “Display” mode.
2. For Overload: Load, Warning and Load Percentage icons will flash, the alarm will sound repeatedly and the LCD screen will switch from the user-selected display mode to Load Percentage. Overload indication is available in both AC and battery modes. CAUTION! Any overload condition that is not corrected by the user immediately may cause the UPS to shut down and cease supplying power in the event of a blackout or brownout.

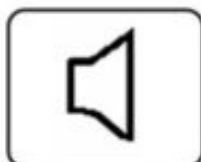**EVENTS**

**EVENTS Icon:** Displayed in conjunction with the AVR icon and BATT icons to indicate the number of On Battery or AVR events that have occurred.

**Alarm Off:** Indicates that the alarm is disabled.



**Alarm On:** Indicates that the alarm is enabled.

10

**INPUT**

**INPUT Icon:** Indicates that the 3-digit value displayed is the Input Voltage.

**OUTPUT**

**OUTPUT Icon:** Indicates that the 3-digit value displayed is the Output Voltage.

**LOAD**

**LOAD Icon:** Displayed in two modes:

1. Displayed in conjunction with the % icon and 3-digit value to indicate the load percentage.
2. Displayed in conjunction with KWH/Day and 3-digit value to indicate daily power consumption.
3. Both the LOAD icon and Warning icon will flash to indicate an overload.

**BATT**

**BATT Icon:** Displayed in two modes:

1. BATT icon (displayed in conjunction with % icon and 3-digit value) indicates the Battery Capacity %.
2. BATT icon is shown with TEST icon to indicate self-test mode or control mode.

%

**% Icon:** Indicates units of %.

**TEST**

**TEST Icon:** Displayed in conjunction with BATT icon to indicate that the UPS is performing a self-test.



**RUNTIME**

**MIN**

**RUNTIME Icon:** Displayed in conjunction with the MIN icon and 3-digit value to indicate Runtime in minutes.

**MIN Icon:** Indicates units of minutes.

1. Displayed in conjunction with RUNTIME icon and 3-digit value to indicate battery runtime in minutes.
2. Displayed in conjunction with the 3-digit value (reporting "LCD") to indicate the minimum brightness.

**WA**

**K**

**H  
/DAY**

**SENSITIVITY**

**VWA Icon:** This is a multipurpose icon which indicates units of Volts, VA, Watts, or Amps (V, VA, W, or A will be shown).


**K Icon:** Displayed in conjunction with the W to indicate Kilowatts. It is also used in conjunction with the WH and /DAY icons to indicate Kilowatt Hours per Day.

**H and /DAY Icons:** Displayed in conjunction with "K" and "W" icons to indicate Kilowatt Hours per day (KWH/DAY).

**Sensitivity Icon:** Displayed to set the AC input line sensitivity setting. Sensitivity settings available are 100% (Normal = no delay), 50% (half delay), and 25% (full delay).

**SCROLL**

**SCROLL Icon:** When enabled, the display will automatically cycle through each DISPLAY mode of the LCD once per two-second interval. If a button is pressed while Scroll Mode is enabled, the scroll function will pause for 10 seconds to allow the user to manually make menu selections before resuming scroll.

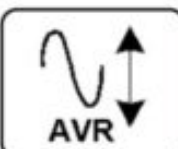

**Automatic Voltage Regulation Icon:** Indicates that the AC input is either low or high and that the AVR function is actively boosting or cutting the line. The AVR icon is also used in conjunction with the EVENTS icon to indicate AVR events.

**EXTERNAL BATTERY**

**EXTERNAL BATTERY Icon (Select Models):** Displayed only when the EXTERNAL BATTERY SETTING CONTROL is active.

**BATTERY CAPACITY**

**BATTERY CAPACITY Icon:** Used to better describe the battery capacity bar graph.

## Display Power Conditions


Use the **MODE** button to advance through power conditions.



1. Voltage In



2. Voltage Out

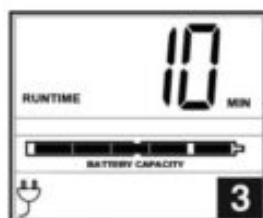

3. Estimated Runtime  
(in minutes)




4. Load %





5. Load Wattage\*

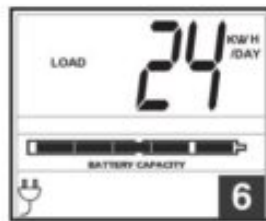


6. KWH/Day\*\*



7. Battery Capacity %


 

\* Load Wattage is displayed in watts up to "999" and then will be displayed in Kilowatts.

\*\* The Kilowatt Hour usage per day reports daily power consumption of equipment connected to the UPS in KWH in a 24-hour cycle. Press and hold the  button for 4 seconds to reset the accumulator to "0."

Note: When the UPS is in Battery Mode (power is supplied to the output from the batteries), the BATTERY icon will be lit in the display instead of the AC INPUT icon. The values displayed are random values used for example reference.



## Control Menu Options

### Enable/Disable Alarm

Tap the  button repeatedly to advance to the LCD display featuring the  icon. Press the  button to select ON or OFF alarm mode settings. The last option displayed before navigating away from this menu option will be the selected setting.



**Note:** Disabling the alarm via this control menu option will silence the alarm under all conditions, including low battery conditions.

### LCD Brightness

Tap the  button repeatedly to advance to the LCD Brightness display marked "LCD." Press the  button to select Medium Backlight (default), High Backlight or Dim Backlight. The last option displayed before navigating away from this menu option will be the selected setting.

**Note:** The default brightness is set at medium. Any time a button is pressed, the LCD will engage the high brightness setting. After 2 minutes of inactivity, the backlight will revert to the selected setting until a button is pressed.


### Self-test

Tap the  button repeatedly to advance to the TEST BATT display. Press the  button to initiate the test. The test will last approximately 10 seconds as the UPS switches to battery to test the capacity with a load. Upon completion of the test, the display will indicate PAS or BAD (pass or bad) for 20 seconds, and then return to the home screen. Connected equipment can remain on during the test. Do not unplug your UPS to test it; this will remove safe electrical grounding.

**Note:** If the self-test result is BAD, it may be due to the batteries not being fully charged for 24 hours. Fully charge the batteries and repeat the self-test. Please refer to the note under Step 3 on page 6.

## Scroll Control

This setting is normally set to "OFF." Setting it to "ON" allows the user to select the option to automatically scroll each operating condition of the UPS (such as Input Voltage, Output Voltage and Runtime) automatically.

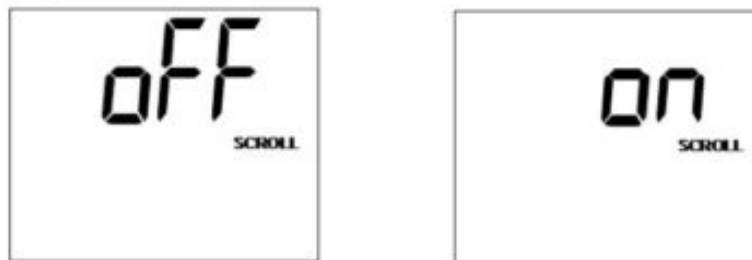

Tap the **MODE** button repeatedly to advance to the Scroll display as shown above.


Press the **WAVE** button to advance to the next available option. The last option displayed, before navigating away from this menu option, will be the selected setting.

**Note:**

1. Each condition is displayed in 2-second intervals.
2. If a button is pressed while Scroll Mode is enabled, the scroll function will pause for 10 seconds to allow the user to manually make menu selections.

## ON Battery Events

This feature allows the user to view the number of times the UPS has experienced an ON Battery Event. To reset the counter to "0," press and hold the **WAVE** button.

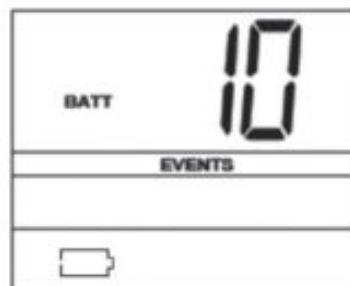

Tap the **MODE** button repeatedly to advance to the ON Battery Events display, as shown above.

**Note:** The value displayed is a random value used for example reference.

## AVR Events

This feature allows the user to view the number of times the UPS has experienced an Automatic Voltage Regulation Event. To reset the counter to "0," press and hold the **WAVE** button.



Tap the **MODE** button repeatedly to advance to the AVR display, as shown above.


**Note:** The value displayed is a random value used for example reference.

### Power Sensitivity

This setting is normally set to 100%, which enables the UPS to protect against waveform distortions in its AC input. When such distortion occurs, the UPS will normally switch to providing pure sine wave power from its battery reserves for as long as the distortion is present. In some areas with poor utility power or where the UPS input power comes from a backup generator, frequent brownouts and/or chronic waveform distortion could cause the UPS to switch to battery too often, draining its battery reserves. You may be able to reduce how often your UPS switches to battery due to waveform distortion or brownouts by experimenting with different settings. As the setting is reduced, the UPS becomes more tolerant of variations in its input power's AC waveform.

**Note:** When experimenting with different settings, operate connected equipment in a safe test mode so that the effect on the equipment of any waveform distortions in the UPS output can be evaluated without disrupting critical operations. The experiment should last long enough to assure that all expected line conditions are encountered.

Tap the **MODE** button repeatedly to advance to Sensitivity display, as shown on the previous page.

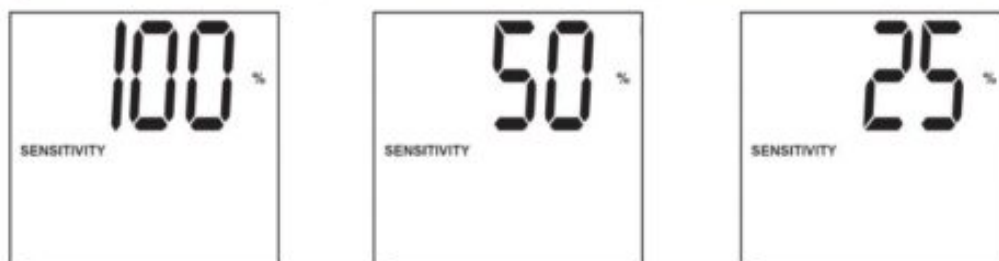


Press the **WAVE** button to advance through the options. The last option displayed, before navigating away from this menu option, will be the selected setting.

### External Battery Setting Control (Select Models)

This control menu option only appears when the UPS is configured using the External Battery Utility software and is reporting "YES" in the External Battery LCD Control Screen. This setting is normally set to "YES." The only available LCD interface configuration option is to change the setting from "YES" to "NO" external batteries.

Note: See the Optional Installation section for information on configuring the UPS for external battery operation using the External Battery Utility software.

Tap the **MODE** button repeatedly to advance to the External Battery display, as shown above. To set the UPS to “NO” External Battery, press and hold the **ENTER** button for 3.5 seconds.

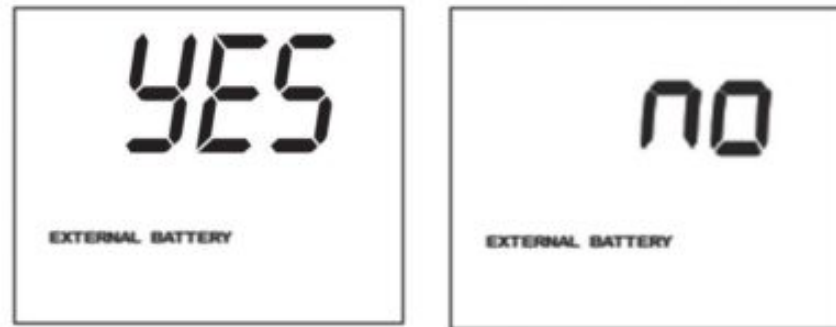

**Note:** The Battery Runtime calculation is based on this setting. The runtime will automatically recalculate once the external battery setting is configured for “NO” external batteries.

### Factory Mode Reset

The LCD settings can be restored to Factory Mode by holding the **MODE** and **ENTER/MUTE** buttons simultaneously for 5 seconds while in any display mode.


**CAUTION:** This action cannot be undone. The user must reconfigure the UPS for external batteries if the UPS setup includes external batteries.

### Other UPS Features (Rear Panel)




**15A 120V  
NEMA 5-15R**

**AC Outlets:** All models include NEMA 5-15R outlets. These outlets provide your connected equipment with AC line power during normal operation and battery power during blackouts and brownouts. The UPS protects equipment connected to these outlets against damaging surges and line noise. If you have a serial or USB connection to your UPS, you can remotely reboot connected equipment by turning the outlets OFF and ON using Tripp Lite's PowerAlert Software. The outlets are divided into one or more load banks (labelled “LOAD 1,” etc.) which may be remotely switched OFF and ON without interrupting power to equipment connected to the other outlets. Outlets labelled “UNSWITCHED” may not be remotely switched off.

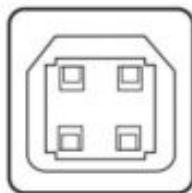


**Communications Ports (USB or RS-232):** These ports connect your UPS to any workstation or server. Use with Tripp Lite's PowerAlert Software and included cables to enable your computer to automatically save open files and shut down equipment during a blackout. Also use PowerAlert Software to monitor a wide variety of AC line power and UPS operating conditions. Consult your PowerAlert Software manual or contact Tripp Lite Customer Support for more information. See “USB and RS-232 Serial Communications” in the “Optional Installation” section for installation instructions.

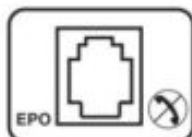

**EPO (Emergency Power Off) Port:** Your UPS features a EPO port that may be used to connect the UPS to a contact closure switch to enable emergency inverter shutdown. See Optional Installation.



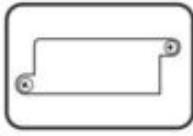


**Accessory Slot:** Remove the small cover panel from this slot to install optional accessories to remotely monitor and control your UPS. Refer to your accessory's manual for installation instructions. Contact Tripp Lite Customer Support at (773) 869-1234 for more information, including a list of available SNMP, network management and connectivity products.



**External Battery Connector (optional on select models):** Use to connect Tripp Lite external battery packs for additional runtime. Refer to instructions available with the battery pack for complete connection information and safety warnings. Visit [tripplite.com/support/battery/index.cfm](http://tripplite.com/support/battery/index.cfm) to locate the supported battery type(s) for your UPS.



**Input Breaker:** Your UPS features one breaker that protects your UPS. If one or more breakers trip, remove some of the load on the circuit(s), then reset them by pressing the breaker switch(es) in.

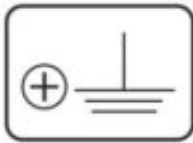

**Ground Screw:** Use this to connect any equipment that requires a chassis ground.

## Storage and Service

### Storage

Before storing your UPS, turn it completely OFF: with the UPS ON and receiving utility power, press and hold the "ON/OFF" button for two seconds (an alarm will beep once briefly after the interval has passed); then, unplug the UPS from the wall outlet. If you store your UPS for an extended period of time, recharge the UPS batteries once every three months: plug the UPS into a wall outlet; allow it to charge for 12 hours; and then unplug it and place it back in storage. If you leave your UPS batteries discharged for an extended period of time, they will suffer a permanent loss of capacity.

### Service

A variety of Extended Warranty and On-Site Service Programs are also available from Tripp Lite. For more information on service, visit [tripplite.com/support](http://tripplite.com/support). Before returning your product for service, follow these steps:

1. Review the installation and operation procedures in this manual to insure that the service problem does not originate from a misreading of the instructions.
2. If the problem continues, do not contact or return the product to the dealer. Instead, visit [tripplite.com/support](http://tripplite.com/support).
3. If the problem requires service, visit [tripplite.com/support](http://tripplite.com/support) and click the Product Returns link. From here you can request a Returned Material Authorization (RMA) number, which is required for service. This simple online form will ask for your unit's model and serial numbers, along with other general purchaser information. The RMA number, along with shipping instructions, will be e-mailed to you. Any damages (direct, indirect, special or consequential) to the product incurred during shipment to Tripp Lite or an authorized Tripp Lite service center is not covered under warranty. Products shipped to Tripp Lite or an authorized Tripp Lite service center must have transportation charges prepaid. Mark the RMA number on the outside of the package. If the product is within its warranty period, enclose a copy of your sales receipt. Return the product for service using an insured carrier to the address given to you when you request the RMA.


## Battery Replacement

Under normal conditions, the original batteries in your UPS will last many years. See Safety section before replacing batteries. The batteries are designed for hot-swap replacement (i.e., leaving the UPS in ON mode), but some qualified service personnel may wish to put the UPS in the OFF mode and disconnect equipment before proceeding.


Note: Refer to the label on the battery retention plate for the R.B.C. part number.

### SMART1500RMXL2UA, SMART1500RM2U and SMART1000RMXL2U Battery (RBC93-2U) Replacement Procedure


#### 1 Remove Front Panel

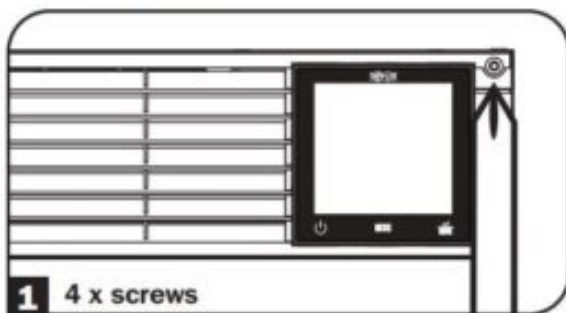


#### 2 Remove Battery Retention Plate

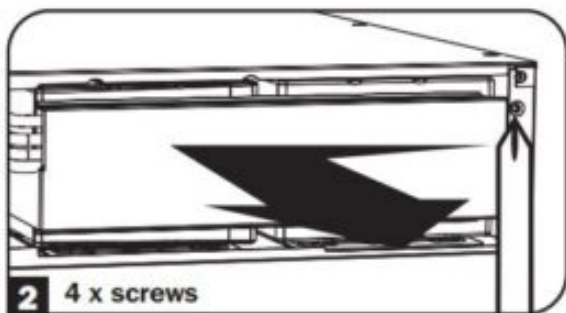


#### 3 Disconnect Batteries


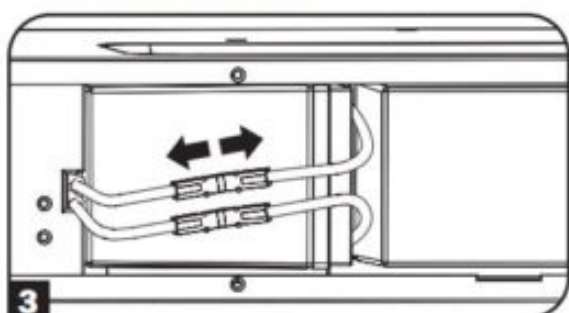


#### 4 Remove/Recycle Batteries

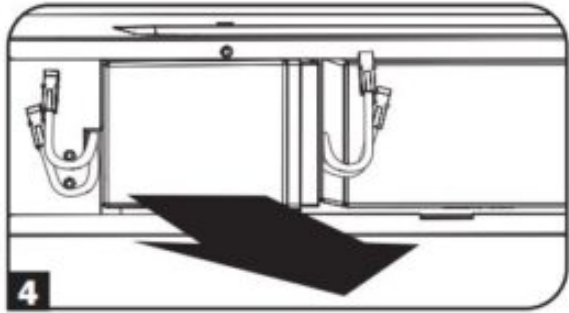


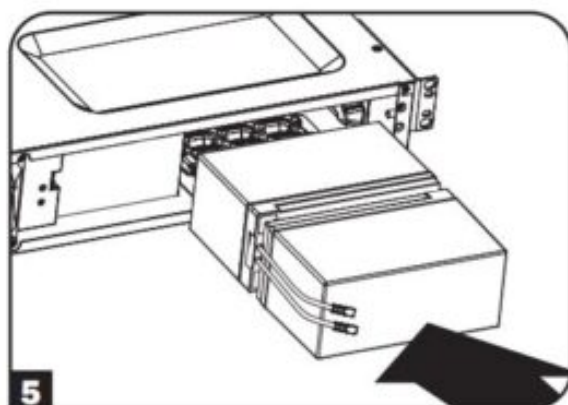**5 Add New Batteries****6 Connect Batteries**

Attach both sets of connectors as shown: black-to-black and red-to-red.

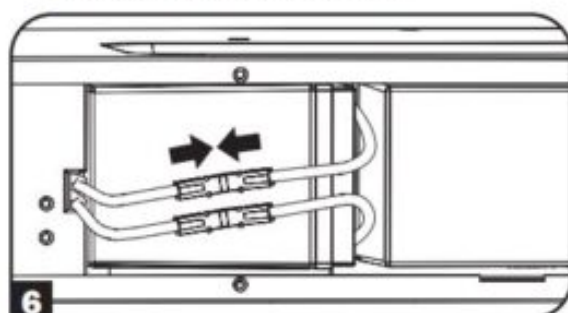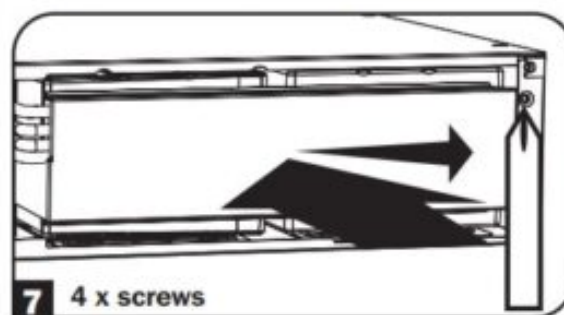**7 Replace Battery Retention Plate**

**7** 4 x screws

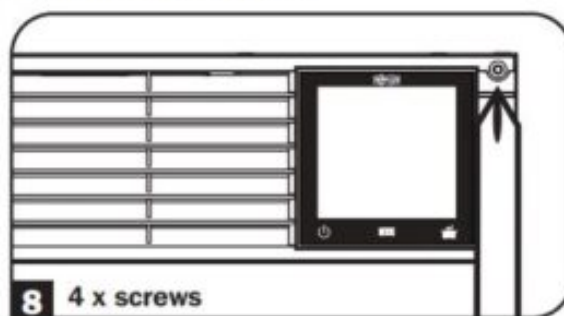**8 Replace Front Panel**

**8** 4 x screws

**Specifications**

Model	SMART1000RMXL2U	SMART1500RM2U	SMART1500RMXL2UA
Nominal voltage and input range:	120V~, 83-147V~	120V~, 83-147V~	120V~, 83-147V~
Nominal input frequency and tolerance:	60 Hz (+/- 5 Hz)	60 Hz (+/- 5 Hz)	60 Hz (+/- 5 Hz)
Nominal output voltage:	120V~ sinusoidal in line mode and 120V~ sinusoidal in battery mode	120V~ sinusoidal in line mode and 120V~ sinusoidal in battery mode	120V~ sinusoidal in line mode and 120V~ sinusoidal in battery mode
Nominal output frequency:	60 Hz (+/- 0.5 Hz)	60 Hz (+/- 0.5 Hz)	60 Hz (+/- 0.5 Hz)
Output voltage regulation in line mode:	120V~ (+6% / - 14%)	120V~ (+6% / - 14%)	120V~ (+6% / - 14%)
Output voltage regulation in battery mode:	120V~ (+/-5%)	120V~ (+/-5%)	120V~ (+/-5%)
Nominal output power in W / VA:	900W / 1000VA	1350W / 1500VA	1350W / 1400VA
Output voltage waveform:	Sinusoidal in line mode and sinusoidal in battery mode	Sinusoidal in line mode and sinusoidal in battery mode	Sinusoidal in line mode and sinusoidal in battery mode
Maximum output current @ P. F.	8.3A @ 120V~	12A @ 120V~	12A @ 120V~
	P.F. = 0.9	P.F. = 0.9	P.F. = 0.9

Maximum harmonic distortion of output voltage at full resistive load	3%	3%	3%
Efficiency with nominal load:	95%	95%	95%
Maximum operating altitude at 100% of nominal power:	6561 ft. (2000 m)	6561 ft. (2000 m)	6561 ft. (2000 m)
Online overload capability:	125% for 10 minutes	125% for 10 minutes	125% for 10 minutes
Overload capacity in battery mode:	105% @ 0.5 seconds	105% @ 0.5 seconds	105% @ 0.5 seconds
Current limitation:	Input 15A	Input 15A	Input 15A
Autonomy time at full load:	6.32 minutes @ 900W	4.45 minutes @ 1 350W	4.85 minutes @ 1 350W
Battery recharge time:	4.5 hours	4.5 hours	4.5 hours
Transfer time:	4 milliseconds typical (4 milliseconds max)	5 milliseconds typical (5 milliseconds max)	5 milliseconds typical (5 milliseconds max)
Outlets:	8x 5-15R outlets with battery backup, regulation and surge	8x 5-15R outlets with battery backup, regulation and surge	8x 5-15R outlets with battery backup, regulation and surge
Maximum input current:	9.2A	12A	12A

## Product Registration

Visit [tripplite.com/warranty](http://tripplite.com/warranty) today to register the warranty for your new Tripp Lite product.

You'll be automatically entered into a drawing for a chance to win a FREE Tripp Lite product!\*

\* No purchase necessary. Void where prohibited. Some restrictions apply. See Web site for details.

## FCC Notice, Class A

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. The user must use shielded cables and connectors with this equipment. Any changes or modifications to this equipment not expressly approved by Tripp Lite could void the user's authority to operate this equipment.

## Regulatory Compliance Identification Numbers

For the purpose of regulatory compliance certifications and identification, your Tripp Lite product has been assigned a unique series number. The series number can be found on the product nameplate label, along with all required approval markings and information. When requesting compliance information for this product, always refer to the series number. The series number should not be confused with the marking name or model number of



the product.

Tripp Lite has a policy of continuous improvement. Product specifications are subject to change without notice. Photos and illustrations may differ slightly from actual products.

### Note on Labeling

Two symbols are used on the label.

V~ : AC Voltage


V : DC VoltageProduct



1111 W. 35th Street, Chicago, IL 60609 USA • [tripplite.com/support](http://tripplite.com/support)

**Read More About This Manual & Download PDF:**

### Documents / Resources

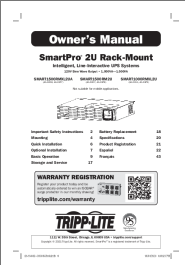	<p><a href="#">TAA SmartPro 2U Rack-Mount Line Interactive UPS System</a> [pdf] Owner's Manual SmartPro 2U Rack-Mount, SMART1500RMXL2UA, SMART1500RM2U, SMART1000RMXL2U, 120V Sine Wave Output, SmartPro 2U Rack-Mount Line Interactive UPS System, SmartPro 2U Rack-Mount, Line Interactive UPS System</p>
---	---

### References

- [TL Tripp Lite - Power and Connectivity Solutions](#)
- [TL Help Center | Eaton](#)
- [TL Tripp Lite - Power and Connectivity Solutions](#)
- [TL Tripp Lite - Power and Connectivity Solutions](#)
- [TL UPS & Battery Recycling | Eaton Tripp Lite](#)
- [TL Product Registration | Eaton](#)