



## Tablets 7 Inch Android Tablet User Manual

[Home](#) » [Tablets](#) » Tablets 7 Inch Android Tablet User Manual 📖

*Tablets 7 Inch Android Tablet User Manual*



**Tablet—User Manual**

## **Contents**

- 1 INTRODUCTION**
- 2 HANDLING GUIDELINES**
  - 2.1 UNIT OVERVIEW**
  - 2.2 OPERATION INSTRUCTIONS**
  - 2.3 Lock/sleep**
  - 2.4 Charging**
  - 2.5 Home Screen**
- 3 SETTINGS**
- 4 INSTALLING, REMOVING & USING APPLICATIONS**
  - 4.1 Installation applications**
- 5 SURFING THE WEB**
- 6 PICTURES**
- 7 CAMERA**
- 8 CONNECTING YOUR TABLET**
- 9 TROUBLESHOOTING**
- 10 CONTACT TECHNICAL SUPPORT**
- 11 DEVICE SPECIFICATIONS**
- 12 Documents / Resources**
- 13 Related Posts**

## **INTRODUCTION**

Thank you for purchasing this quality 7" Android™ tablet. Please read all the operating instructions before operating the unit and keep this manual in a safe place for later consultation.

## **HANDLING GUIDELINES**

1. Do not drop the unit. Avoid shaking the unit or placing substantial weight or pressure on the display; doing so may result in irreparable damage.
2. Do not use metal objects to touch the device.
3. Please backup your data regularly, especially before you upgrade the firmware. Failure to perform frequent backups may result in data loss.
4. Do not disassemble the unit. Do not wipe the surface of the unit using any solvents, alcohol, paint thinners or benzene.
5. Do not disconnect the unit while it is formatting or synchronizing or upgrading firmware. This may lead to software and content errors.
6. Do not use around water and do not place foreign objects in the unit.
7. Do not use the unit in places that are extremely hot, cold, dusty, or humid.
8. Specifications and technical characteristics are subject to change without notice. Google Play™ and Android™ are trademarks of Google Inc. All other trademarks are property of their respective owners.

## **UNIT OVERVIEW**



1. Front camera
2. Touch screen
3. USB interface
4. Power on/off Reset button
5. Volume +/-
6. Headphone jack
7. Rear camera
8. Micro SD Card interface
9. Speaker
10. Internal microphone
11. Reset button

## OPERATION INSTRUCTIONS

### Power on/Power off

Power on: press and hold the power button for 3 seconds; the unit will display the start-up logo. Power off: press and hold the power button for 3 seconds. The screen will show a menu saying, "Your tablet will shut down." Touch "OK." This will turn the unit off.

### **Lock/sleep**

Conserve your battery power by locking the display when your tablet is not in use. While the device is running, press the power button to lock the display and place the tablet into sleep mode. Press the power button while the device is locked to turn the display back on. Unlock the device by sliding the lock icon to the outer part of the circle (any direction).

### **Charging**

You can see the current battery level in the upper-right hand corner of the screen with the percentage of battery life left. When the device indicates a low battery charge, connect the tablet to the included AC power adapter using the USB charging cable. When device is connected to a PC or laptop, it will only receive a trickle charge when the tablet is in sleep mode.

Note: To improve the longevity of the battery, stop charging the device no more than 15 minutes after the battery is fully charged.

### **Home Screen**

Tap the "Home" icon—one of the on-screen buttons—which is always found at the bottom of the display, to show the Home Screen. Above these buttons you will find a the seven icons that make up the "Apps Dock." The icons in the Apps dock stay the same when you move from screen to screen. Here you will find (from left to right), a button that brings up all of the Google apps at once, the Google Play store, [Internet] Browser, the Apps icon (which brings up every app installed currently on the unit), Settings, Contacts, and Google Play Music.

## **SETTINGS**



Tap "Settings" icon from the Apps Dock to enter the settings menu. Adjust device settings as desired.

### **Setting the date & time Tap**

"Date & time" in the settings menu to set the current date and time. You may set the date, time zone, current time, 12h/24h time format, and date format in this menu. When connected to the Internet, the date and time can update automatically (with the "Automatic date & time" selection checked).

### **Setting the display brightness**

Tap "Display" in the settings menu. Tap on "Brightness" and tap and slide the bar to adjust the display brightness. Tap "OK." Note: lowering the display brightness can prolong your battery life.

### **Screen Timeout**

Your tablet can automatically enter sleep mode after a certain period of inactivity. To adjust the timeout, tap "Display" in the settings menu. Tap "Sleep" and select the desired display timeout duration. Note: Screen timeout is disabled during video playback.

### **Connecting to a Wi-Fi network**

Tap "Settings" from the Apps Dock. Tap Wi-Fi. If the slider switch is in the "Off" position, slide to turn on the wireless radio and search for available Wi-Fi networks. Tap the name of your network; you will need to enter a network password if your network is secured. If you do not know your network password, contact your Internet Service Provider or a qualified technician.

## INSTALLING, REMOVING & USING APPLICATIONS

### Installation applications

Open the Play store available from the Apps Dock to find thousands of free and paid applications, games, music, movies, TV shows, books and magazines for your tablet. Choose the category, find the items you want, and simply tap "Install" and enjoy! Note: to use Play store and to get the most out of your tablet you will need to logon to your Google account. If you do not have one, the tablet will guide you through creating one. There is no charge for the account.



### Removing applications

Tap on "Settings" from the Apps Dock. Tap "Apps". You will see a list of downloaded Apps. Tap on any app that you want to remove. Tap "Uninstall" and then tap "OK."

## SURFING THE WEB

After connecting to your Wi-Fi network, open the Browser app and enter a web address such as <http://google.com>.



Tap the icon to enter your list of bookmarks and consult your browser history. Tap on the desired web page in your bookmarks or history to open in current tab. Your unit also includes the Google Chrome browser, which can be used and even set as the default browser, if you prefer. AUDIO & VIDEO PLAYBACK

### Audio playback

Tap the "Music" icon from the Apps Dock to open the audio playback application. All audio files on the device and external memory card are listed, simply tap on the file name to commence playback. While listening to your music, tap the appropriate keys to play, pause, fast forward, and rewind. You can adjust volume either from the rocker switch on the upper-right side of the unit or from the soft navigation keys at the bottom of the screen.



### Video Playback

Tap "Play Movies & Tv" from the Apps screen to enter the video playback application. You will see a selection of free and paid movies available to watch. To watch videos that are on the device, select "On Device" from the Google Play menu. While watching your videos, tap the screen to show the playback controls to play, pause, increase/decrease the volume, fast-forward, and rewind. Tap the display again to hide the playback controls.

## PICTURES

Tap "Gallery" from the Apps screen to enter the photo and video playback application. Tap on the thumbnail of any picture to view it. While browsing your photos, note that at the bottom of the screen you have three buttons. The pencil button can be used to edit the photo, which includes functions such as autocorrect, crop and rotate. The middle icon is for sharing the photo, and the trashcan on the right is for deleting the photo.

 
## CAMERA

Tap "Camera" from the Apps menu.



## Taking photos

If the Camera icon is blue, the device is in Camera mode.



Tap the Camera icon button of the right to take the picture. Pressing the white camera icon to the right of the button brings up a menu, which contains options such as settings, lighting, exposure, and to switch between the rear facing camera and the front-facing camera.

## Recording video

To switch to video mode, press the camera icon found on the left of the screen and choose the movie camera icon. This will change the center button to a red button. Tap the red button to record video.



Tapping the white circle to the right of the red button will bring up a menu with the lighting, settings options as well as rear-facing or front-facing camera.

## CONNECTING YOUR TABLET

Connecting to your PC Connect your tablet with the PC with the provided USB cable. On your computer, two new drives will appear. One drive is the internal storage; the other is the removable Micro SD Card. Applications Additional software provided by third parties is included to help manage your device. For detailed operation methods, please consult the read me files located on the device. Some of the software contains geographic and network restrictions.

## TROUBLESHOOTING

### What if the device is abnormal during operation?

1. Reboot the device.
2. Charge the device using your external charger. Ensure the battery is charged before operating your device.
3. If an update is available, update the Android™ operating system.

### The tablet battery life is short. What do I do?

Battery life is based on usage and ambient temperature. If the ambient temperature is too high or too low, the use time of the battery will be affected. High volume output and frequent operation can also impact battery life.

## CONTACT TECHNICAL SUPPORT

By phone: By e-mail:

## DEVICE SPECIFICATIONS

Display resolution: 1024X600 capacitive touch screen

OS: Android 11

Input method: Soft keypad

Internal storage capacity: 16GB

SD Card capacity: up to 32GB

Audio formats: MP3, WMA, FLAC, APP, OGG

Video formats: MP4, DIVX, WMV, RMVB, H.264/1080P

E-book support

Wireless networking: 802.11b/g/n

Language support: English, Español, Français OTG Support

Operating temperature: -20°C to 60°C

Battery: Poly-lithium battery

Protect the environment: do not dispose of electrical

equipment in your domestic waste. Please return any personal electronics that you will no longer use to authorized collection points. These simple steps can help to prevent harmful environmental effects through incorrect disposal. Information concerning disposal locations can be obtained from your city or local authorities.

MADE IN CHINA

**FCC Caution** This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## Documents / Resources

 <p>INTRODUCTION Thank you for purchasing the quality 7 inch tablet</p>	<p><a href="#">Tablets 7 Inch Android Tablet</a> [pdf] User Manual DW-718, DW718, 2A2I7DW-718, 2A2I7DW718, 7 Inch Android Tablet, Android Tablet</p>
--	--