



TACHIKAWA IR Remote Controller User Manual


[Home](#) » [TACHIKAWA](#) » TACHIKAWA IR Remote Controller User Manual 

Contents

- [1 TACHIKAWA IR Remote Controller](#)
- [2 Product Information: IR Remote Controller](#)
- [3 Product Usage Instructions](#)
- [4 How to specify free position](#)
- [5 Operation Manual Perle Pair\(CLOSE\)](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

Tachikawa

TACHIKAWA IR Remote Controller

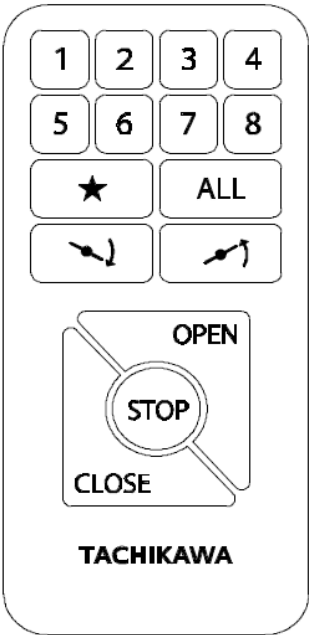

Product Information: IR Remote Controller

The IR Remote Controller is a device that allows you to control the movement of your blinds. The controller comes with an instruction manual that guides you on how to operate it. It features buttons for opening, closing, and stopping the movement of the blinds. Additionally, it has a slats tilting function that allows you to tilt the slats while pressing a button. The remote controller also comes with a free position function that enables the blind and slats to return to a specific position of your choice. The device is powered by batteries.

Product Usage Instructions

To Change the Setting

To change the setting, tap the button labeled “Operation Manual Perle Pair” or “Operation Manual Perle Double.”


To Replace the Batteries

To replace the batteries, follow these steps:


1. Mark open the cover by sliding the mark
2. Replace the batteries according to the illustration
3. Pay attention to the direction of the batteries. Inserting them the wrong way may cause troubles.

Address Button

The button number should link to the address number of the blinds for simultaneous operation.

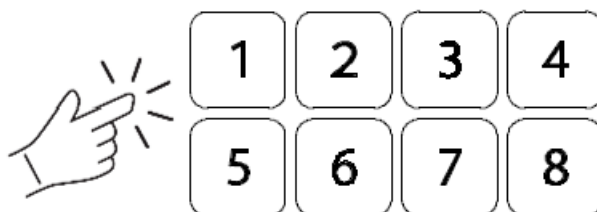



Button No. shall link to the address No. of the blinds.

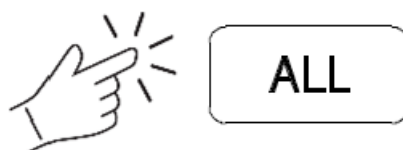



For simultaneous operation.

Open / Close

To open (Up) the blinds, push the “OPEN” button. To close (down) the blinds, push the “CLOSE” button. To stop the movement of the blinds, push the “STOP” button.

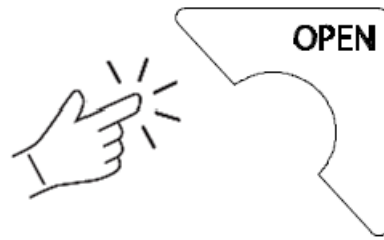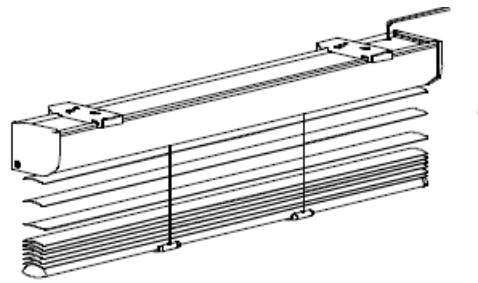

To open (Up) the blinds

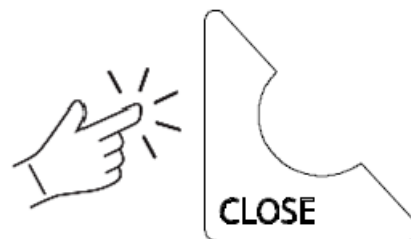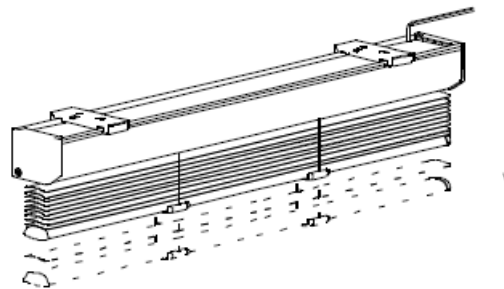


To close (down) the blinds



To stop the movement.

Slats Tilting


The slats keep tilting while pressing the corresponding button.

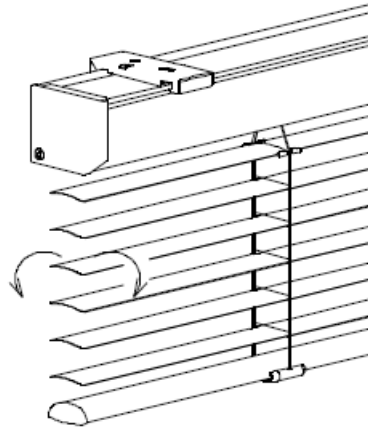

The slats keep tilting while pressing.

Free Position

The free position function allows you to return the blind and slats to a specified position. To specify the free position:

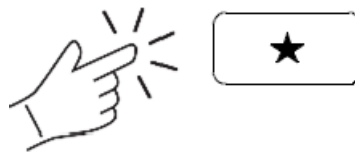


Blind and slats return to the specified position.

Ⓢ To specify free position.

How to specify free position


1. Set the blind(s) and slats to the appropriate position
2. Keep pressing the “STOP” and “STAR” button for 5 seconds

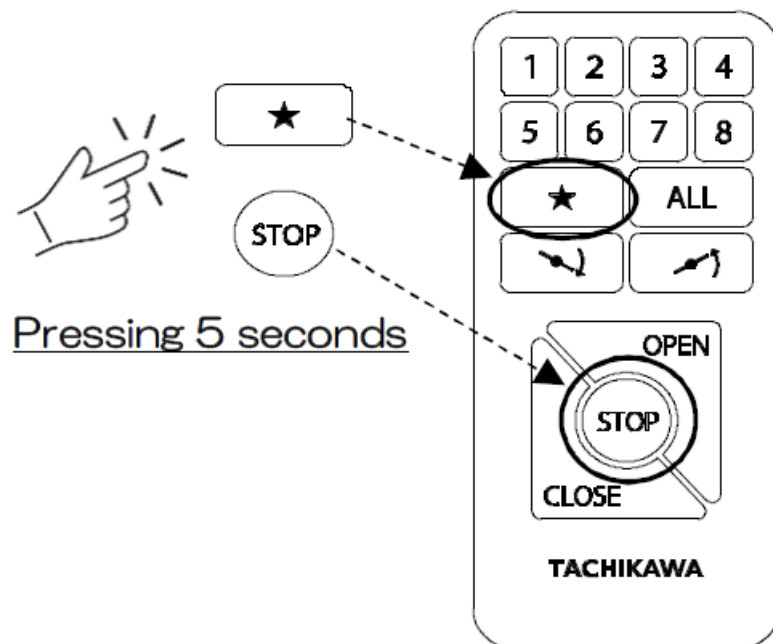


3. The blind(s) will move up/down, and a buzzer will sound when the setting is correctly completed.

Operation Manual Perle Pair(CLOSE)

Push CLOSE then the fabric on the bottom will move down.

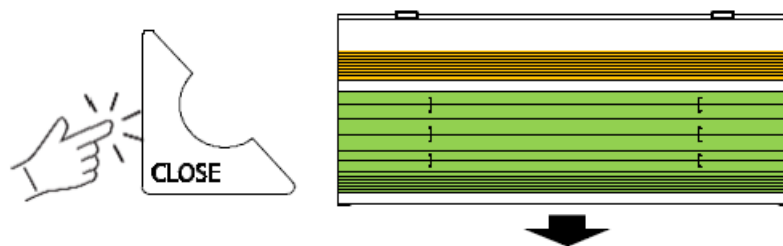


Push CLOSE again then the fabric on the top will move down

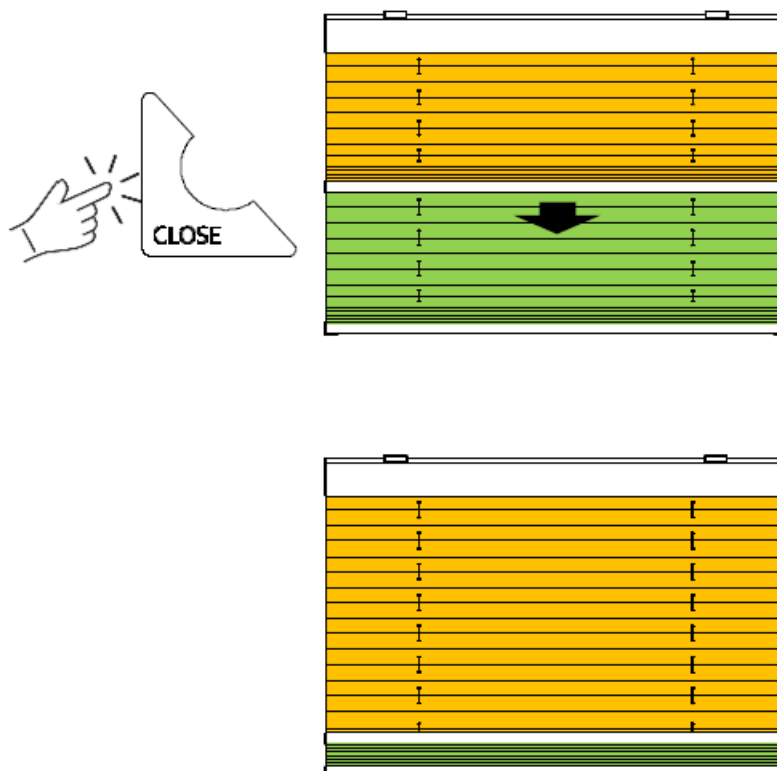



Push STOP then all movement will stop.

Operation Manual Perle Pair(OPEN

Push OPEN then the fabric on the top will move up.

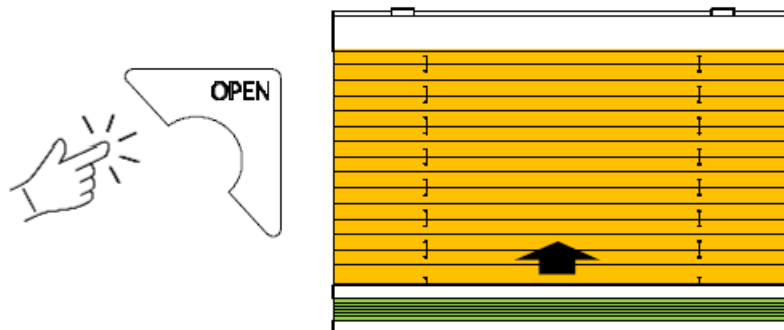


Push OPEN again then the fabric on the bottom will move up.

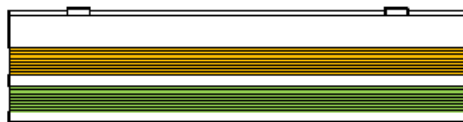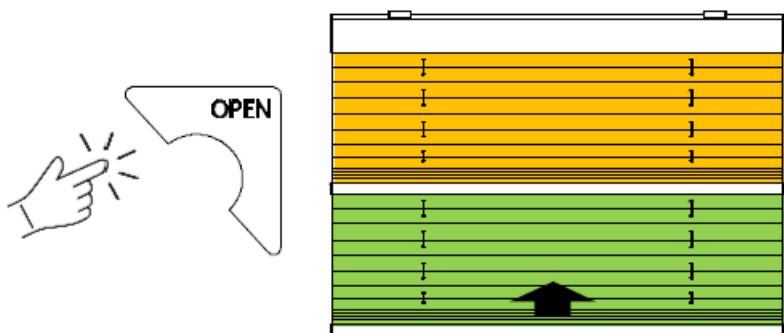


Push STOP then all movement will stop.

Operation Manual Perle Double(CLOSE)

Push CLOSE then the window side fabric will move down.

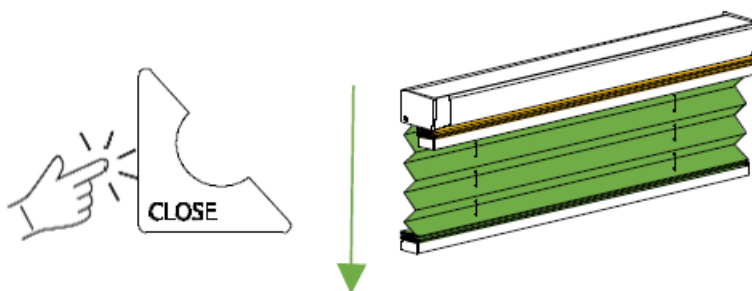


Push CLOSE again then the room-side fabric will move down.

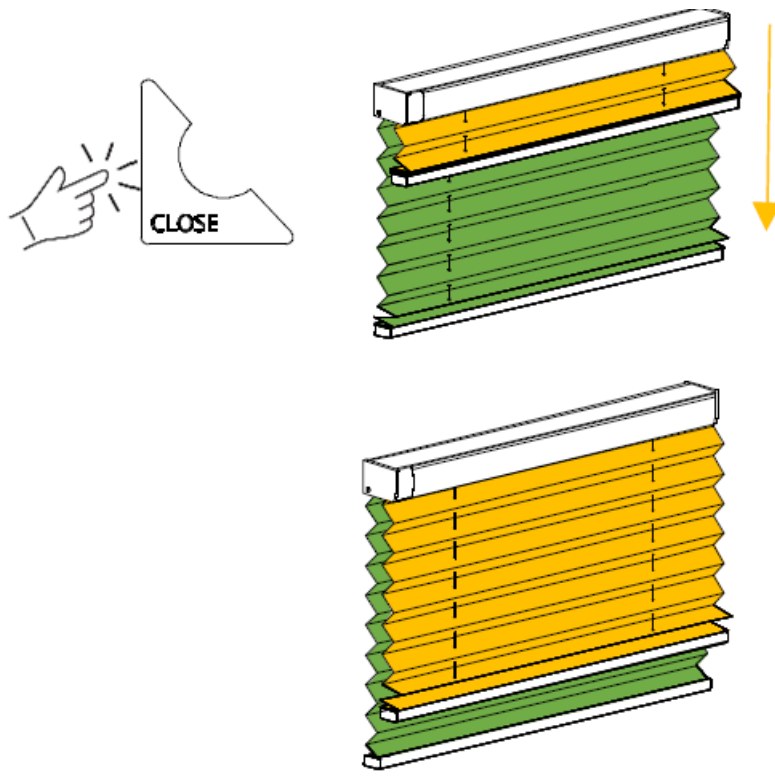


Push STOP then all movement will stop.

Operation Manual Perle Double(OPEN)

Push OPEN then the room side fabric will move up.

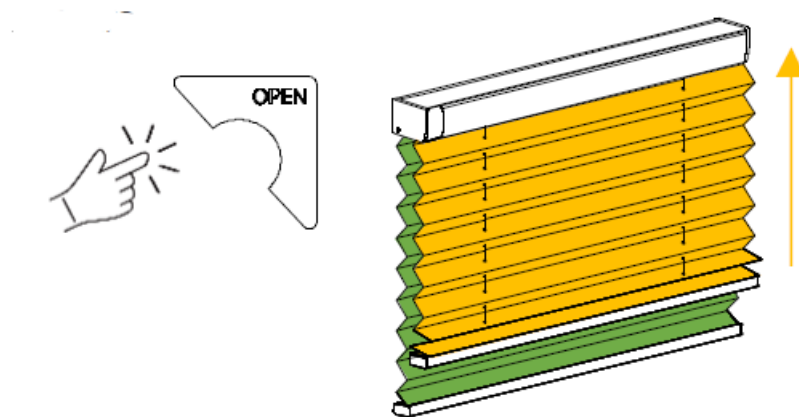


Push OPEN again then the window side fabric will move up.

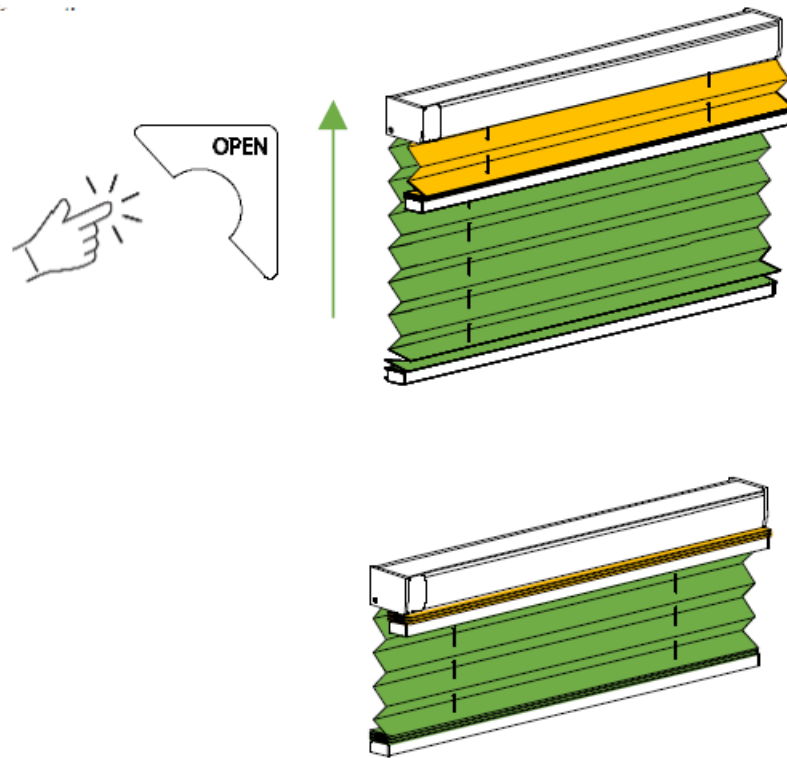


Push STOP then all movement will stop.

To change the batteries

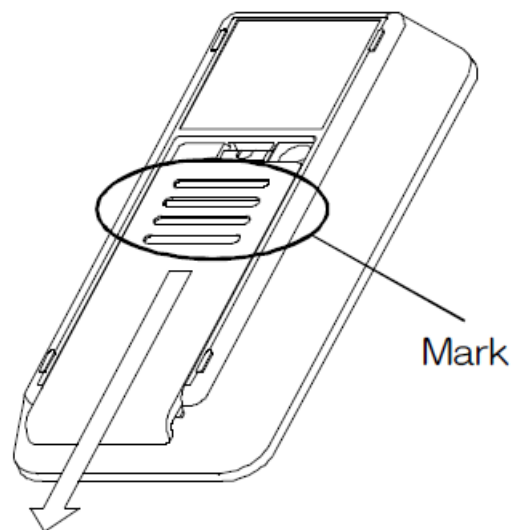


Open the cover with sliding the Mark

replace the batteries with following the illustration

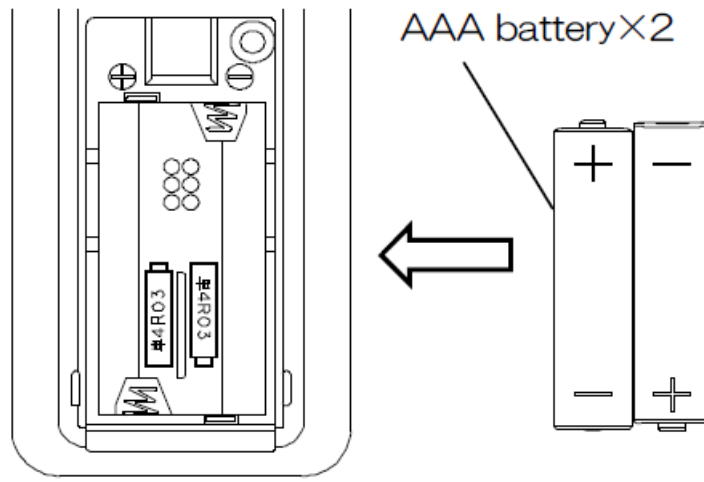

Pay attention to the direction of the batteries. The wrong way may cause of the trouble.

Documents / Resources

	<p>TACHIKAWA IR Remote Controller [pdf] User Manual IR Remote Controller, Remote Controller, Controller</p>
---	---