

Talking Products Multi Memo Voice Recorder Dictaphone Instruction Manual

Home » Talking Products » Talking Products Multi Memo Voice Recorder Dictaphone Instruction Manual

Talking Products Multi Memo Voice Recorder Dictaphone



Contents

- 1 Introduction
- **2 Operating Instructions**
 - 2.1 How to switch on and off
 - 2.2 How to record a message
 - 2.3 How to play a message
 - 2.4 How to locate messages
 - 2.5 How to erase a message
 - 2.6 How To Remove And Insert The Batteries
 - 2.7 How to protect your messages
 - 2.8 Battery information
- 2.9 Product Code
- 3 Safety Information
- **4 Customer Support**
- **5 Documents / Resources**
 - **5.1 References**
- **6 Related Posts**

Introduction

Multi-Memo is a high quality voice recorder that will allow you to record, store and playback multiple voice messages. Total recording time six minutes.

Please read the following instructions carefully and retain for future reference.

Operating Instructions


How to switch on and off

The power ON-OFF switch Is located on the rear side.

How to record a message

Press and hold the RECORD button to start recording and release the button to stop. When the button is pressed, the red light will illuminate to indicate that recording is in progress. You will also hear a 'beep' sound to indicate recording has begun and then a second 'beep' sound to indicate recording has finished.

Repeat these steps to record additional messages. The total recording du ration is six minutes, (360 seconds). You can record a maximum of 60 separate messages.

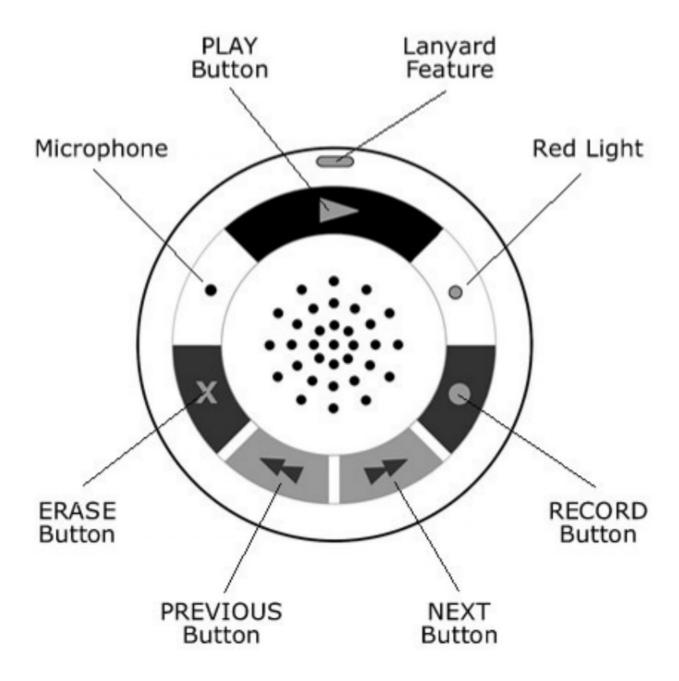

Press the PLAY button once to playback the last recorded message. If you wish to stop the playback at any time press the PLAY button once.

How to locate messages

Press the NEXT or PREVIOUS button once and the message will begin to play. Repeat as necessary to find the message you require.


NOTE: To skip directly to the last message press -and hold the NEXT button for 3 seconds. To skip directly to the first message press and hold the PREVIOUS button for 3 seconds.

How to erase a message

Locate the message you wish to erase and then press the ERASE button once. The red light will flash once and you will hear a 'beep' sound to confirm .

NOTE: To erase all messages press and hold the ERASE button and the PREV'I6us button to~ether for 15 seconds. Red light will flash and a 'beep' w1 II confirm.

How To Remove And Insert The Batteries

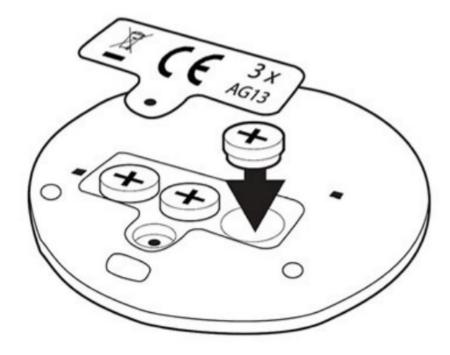

How to protect your messages

There is a LOCK switch located on the rear side. The ERASE Button and RECORD Button can be disabled by slid ng this switch to the left position.

Battery information

Rating: 1. 5 volts x 3 (4. 5 volts) **Type**: Button Cell AG13 / LR44 x 3

Product Code

MMV-006-GRN

Safety Information

- 1. Please keep the packaging and this document for future reference, it contains important information.
- 2. Not suitable for children under 3 years of age.
- 3. Non-rechargeable batteries are not to be charged.
- 4. Rechargeable batteries must be removed from the battery compartment before being charged.
- 5. Rechargeable batteries must only be charged under adult supervision.
- 6. Do not mix different types of batteries.
- 7. Do not mix old and new batteries.
- 8. Batteries must be fitted with the correct polarity.
- 9. Exhausted batteries must be removed from the battery compartment.
- 10. The power supply terminals must not be short-circuited.

Customer Support

Talking Products Ltd Unit CB The Premier Centre Abbey Park Industrial Estate Romsey, Hampshire 505-1 9DG, England

Tel: +44 (O) 1794 278327

Email: sales@TalkingProd1ucts.com www.Talk1ngProducts.com













Documents / Resources



<u>Talking Products Multi Memo Voice Recorder Dictaphone</u> [pdf] Instruction Manual Multi Memo Voice Recorder Dictaphone, Memo Voice Recorder Dictaphone, Voice Recorder Dictaphone, Pictaphone, Dictaphone

References

• User Manual

Manuals+, Privacy Policy