

TANGERINE FTTP Fibre to the Premises Connection Installation Guide

Home » TANGERINE » TANGERINE FTTP Fibre to the Premises Connection Installation Guide 1



BYO Router Setup Fibre to the Premises (FTTP) Connection


Contents

- 1 FTTP Fibre to the Premises
- Connection
- 2 Troubleshooting
- 3 Technical Support
- 4 Documents / Resources
 - 4.1 References
- **5 Related Posts**


FTTP Fibre to the Premises Connection

Step 1


Locate the nbn® Network Termination Device (also known as nbn® Connection Box) that has been installed inside your property.

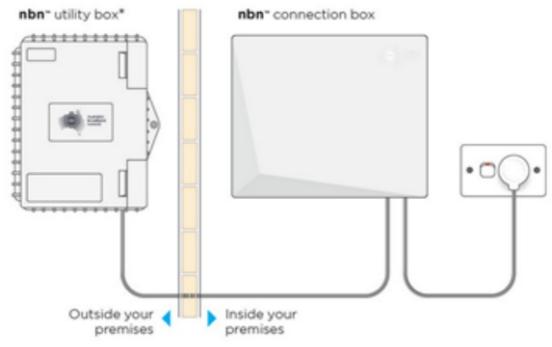

Step 2
Gently lift the cover of the nbn® Connection Box. To do this press the two clips on either side and lift the cover at an angle.

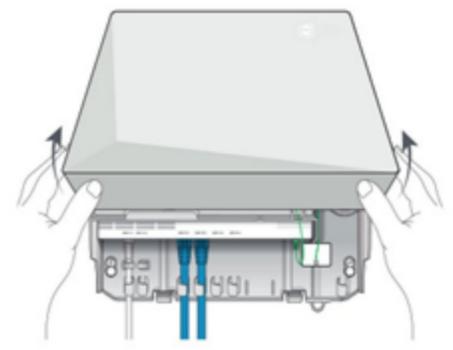


Step 3
Ensure that the power cable is securely in place and that the Power and Optical lights are showing as steady green on the nbn® Connection Box.

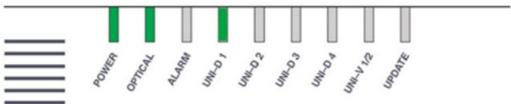

Step 4

Now look on the under side of the nbn® Connection Box where you can see the Uni-D ports surrounded by yellow.

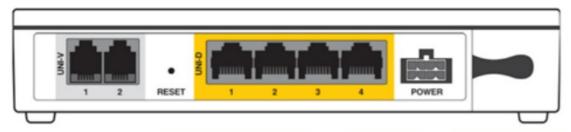

Using an ethernet network cable connect your router from its WAN port to the relevant Uni-D port on the nbn® Connection Box. We generally activate the next available Uni-D port – starting with Uni-D 1. We will detail your Uni-D port number in our emails to you.

Step 5

Connect a computer or laptop to your BYO router via a cable or by WIFI and access the router configuration page. If you are unsure how to do this, please consult the router user guide.

Step 6

Most routers will provide a Quick Start Guide or Setup Wizard – please try and follow these steps. Ensure that your router is configured in WAN mode and encapsulation is set to PPPoE. On most devices you should leave all other settings as default. Then configure your BYO router using the ISP username and password that we will have emailed and SMS'd to you.

Due to the number of router brands available it is hard to give precise setup information here. We recommend consulting your router user guide or speaking to the manufacturer of your device.

Step 7

After you have successfully configured your BYO router please wait a couple of minutes for it to connect to the network. After a couple of minutes you should see the authentication light on the router become lit and steady (not flashing). The authentication light is often labelled 'Internet' or 'www' or 'Web'. Please consult your router user guide if you are unsure which light is the authentication light.

Troubleshooting

SYMPTOM	THINGS TO TRY
Optical light on the nbn® Connection Box is red	You will need to contact our team in this instance, and we may need to log a fault with NBN.
www or internet light does not come onon your router	 Ensure that the router is in PPPoE mode and has been cor rectly configured with the ISP username and password. Tripl e check for any spelling mistakes or typos. Ensure that you are connected to the correct Uni-D port on the nbn® Connection Box. Try an alternative network cable to connect your router to the nbn® Connection Box. Ensure that the router is configured in WAN mode.

Technical Support

If you require assistance setting up your BYO device our team is available.

8AM - 10PM WEEKDAYS

8AM – 8PM SAT & SUNDAY AET

Phone: 1800 211 112

Live Chat: www.tangerinetelecom.com.au/chat

Whatsapp: +61 429637422 Overseas: +61 3 9021 9632

Documents / Resources



TANGERINE FTTP Fibre to the Premises Connection [pdf] Installation Guide FTTP Fibre to the Premises Connection, FTTP, Fibre to the Premises Connection, Premises Connection, Connection

References

- **Solution** Tangerine Telecom | Juicy nbn™ Broadband and Mobile SIM Deals
- * Loading...

Manuals+,