



# Tango Light-Up Wireless Speaker User Manual [XO-9768-1]

[Home](#) » [Tango](#) » Tango Light-Up Wireless Speaker User Manual [XO-9768-1] 

## USER MANUAL



Tango Light-Up Wireless Speaker  
XO-9768-1

## PRODUCT DESCRIPTION



1. Play/Pause/Answer/End Call
2. Vol – /Previous
3. Vol +/Next
4. Power On/Off
5. LED Charging indicator
6. Micro USB Charging port

## **PAIRING WIRELESS SPEAKER**

1. Press and hold power button for 3 seconds to turn on speaker.
2. Activate wireless mode in your device Settings. Scan/search and select “Tango” from the device list to pair.
3. When paired successfully, speaker light will glow.

## **DUAL SPEAKER MODE**

Connecting two Tango speakers together.

1. Press and hold power button of both speakers simultaneously to turn on both speakers. Speakers should connect to each other automatically.
2. Activate wireless mode in your device Settings. Scan/search and select “Tango” from the device list to pair.
3. When paired successfully, speaker light will glow.

## **PLAYING MUSIC**

Quickly press phone (1) button once to play music, or answer incoming call. Quickly press once again to pause music, or end call.

Press and hold – button to decrease volume; quickly press once to skip to previous track.

Press and hold + button to increase volume; quickly press once to skip to next track.

## **LIGHT MODES**

Color lights will automatically loop when playing music. Press power (4) button once to set colors to move to music. Press power button once again to turn off color lights.

## **CHARGING THE SPEAKER**

Using included USB cable, connect Micro USB end of cable to speaker and connect USB end to a USB power source. LED indicator will glow red when speaker is charging, and will turn off when speaker is fully charged.

## **SPECIFICATIONS**

**Output:** 3W

**Wireless frequency:** 100Hz-18KHz

**Wireless range:** 33 ft

**Battery capacity:** 1200mAh

**Playing time:** 5 hours

**Charging time:** 2.5 hours

**Wireless version:** 5.0

## **IMPORTANT SAFETY INSTRUCTIONS**

1. Handle with care.

2. Do not attempt to repair or disassemble the speaker.
3. Keep speaker away from wet and/or extremely hot environments.

### **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **§15.21 Information to user.**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **§15.19 Labelling requirements.**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation

This product complies with RF exposure when it used at 0mm form your body.

[Tango-Light-Up-Wireless-Speaker-User-Manual](#)

**Download**

Questions about your Manual? Post in the comments!