



Tank utility LTE-MC-C Cellular Tank Level Monitor Instruction Manual

[Home](#) » [Tank utility](#) » Tank utility LTE-MC-C Cellular Tank Level Monitor Instruction Manual 

Contents

- 1 Tank utility LTE-MC-C Cellular Tank Level Monitor
- 2 COMPATIBILITY
- 3 WATCH THE VIDEO
- 4 CONTENTS
- 5 Tank-utility-LTE-MC-C-Cellular-Tank-Level-Monitor-product
- 6 Attaching The Sensor To Your Tank's Dial
- 7 Turn Your Monitor On And Prompt A Reading
- 8 Mount The Monitor
- 9 Configure The Device In The Tank Utility Portal
- 10 Troubleshooting Setup
- 11 Battery Replacement
- 12 Tank Utility, Inc. Two Year Limited Warranty
- 13 Documents / Resources
 - 13.1 References
- 14 Related Posts



Tank utility LTE-MC-C Cellular Tank Level Monitor



COMPATIBILITY

(Relevant for the following models: LTE-MC-C, LTE-MC-D)

PROPANE & REFINED FUEL

- Tank Utility's remote tank monitor is intended to be used in stationary
- propane/refined fuel applications to transmit tank level data to Tank Utility's
- cloud Portal via cellular networks. This enables delivered fuel providers to operate more efficiently when delivering propane/refined fuel and maintaining tanks of their end-use customers.

HARDWARE SPECIFICATIONS

- Electrical ratings: Battery powered 6VDC by 4 Energizer L91 Lithium Iron Disulfide Cells. Enclosure Rating: IP68
- Monitor weight: 0.86 lbs (0.4 kg)
- Monitor dimensions: ~8"x3"x2"
- You may clean the tank monitor using soapy water if desired.

HAZARDOUS LOCATION ENVIRONMENTAL RATING

The manual must be consulted in all cases where this symbol is marked, in order to find out the nature of the potential HAZARDS and any actions which have to be taken to avoid them.


This product is designed for installation and use in the the following conditions:

- $-10 \leq T_{amb} \leq 40^{\circ}\text{C}$
- Class 1 Division 2 Group D T3C
- Pollution Degree 4
- Maximum Altitude: 2 miles (3218m)

WATCH THE VIDEO

Before you start, watch the installation video at www.tankutility.com/cell-setup1

CONTENTS

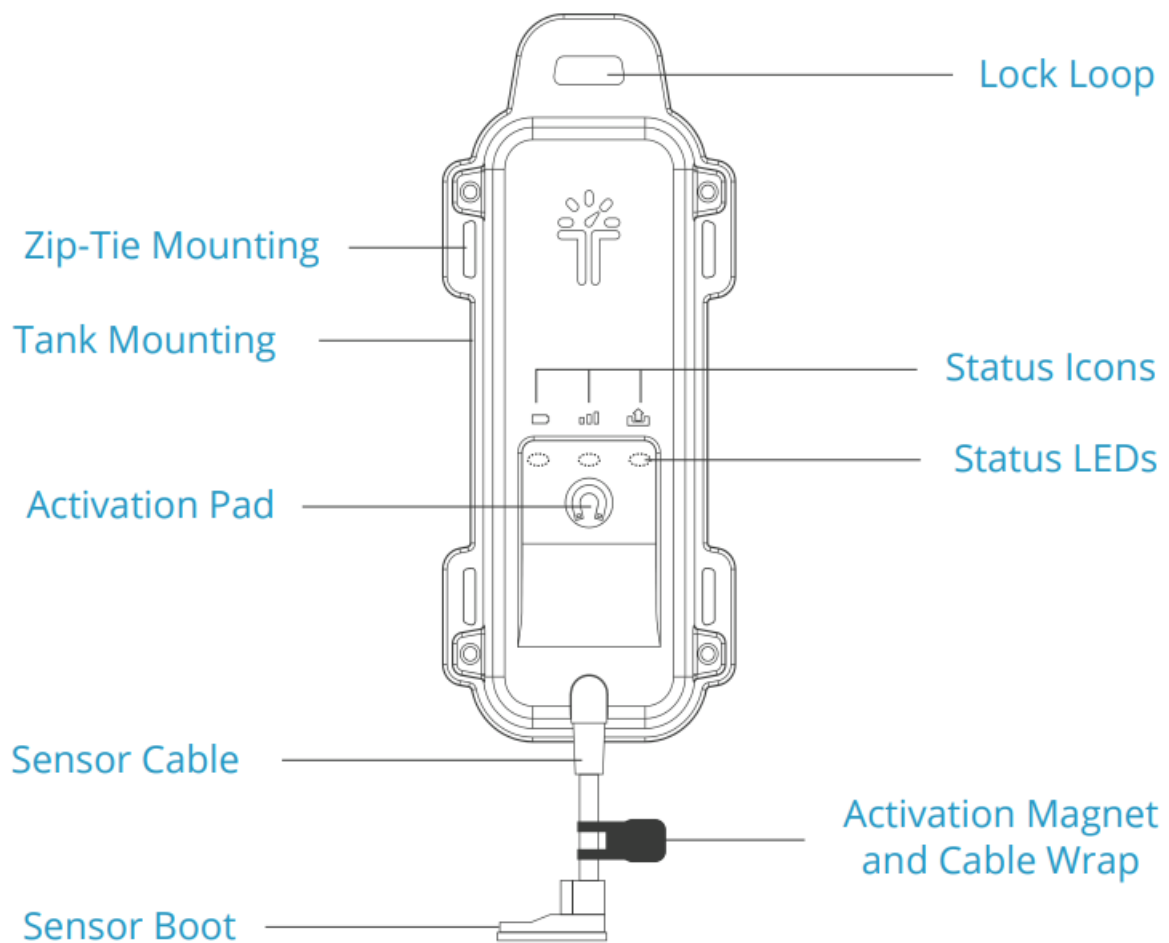


Tank-utility-LTE-MC-C-Cellular-Tank-Level-Monitor-product


Self-Tapping Mounting Screws



Mounting Bracket

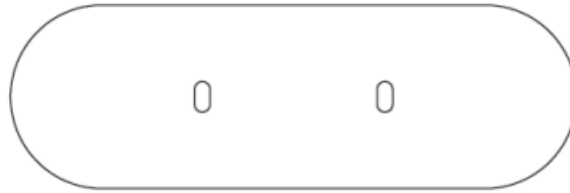

Attaching The Sensor To Your Tank's Dial

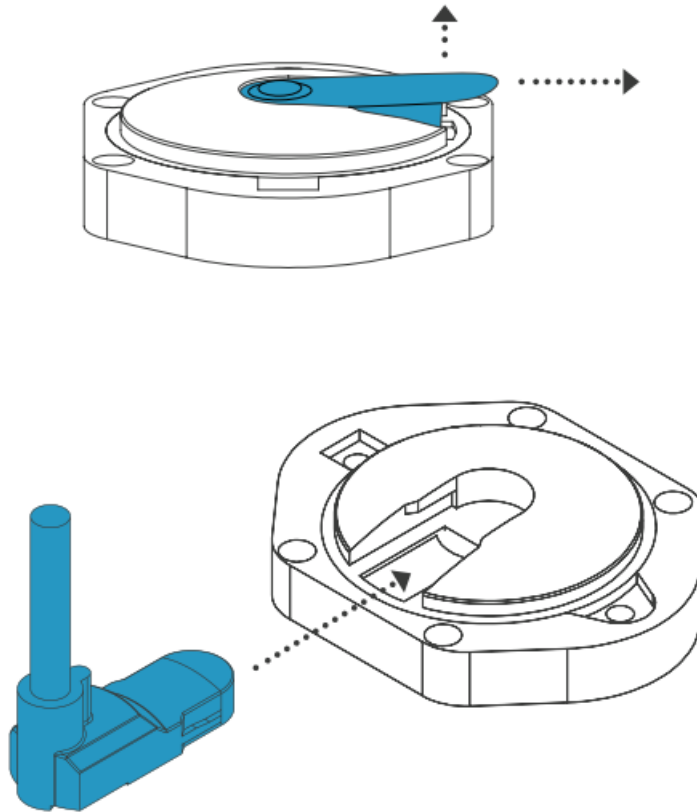

The Tank Utility remote level monitor can be installed on all tanks equipped with a Remote-Ready Dial. If your Remote-Ready Dial has a black dust cap, you will first need to remove it by simultaneously pulling up on the tab while sliding the dust cap out of the dial. If applicable, route the cable through the hole in the tank's collar or lid. Slide the sensor into the dial slot until you feel it click.

DIAL REPLACEMENT

Tank Utility sells and supports the installation of replacement Remote-Ready Dials. For propane tanks, this upgrade can often be completed without depressurizing the tank. Professional installation by a delivered fuel professional is recommended.

Go to <http://www.tankutility.com/support> to make sure the Tank Utility Monitor is compatible with your tank.

Turn Your Monitor On And Prompt A Reading


Hold the activation magnet (attached to the cable) to the activation pad (denoted by the magnet icon) on the monitor for 3 seconds, then remove. You will then see 3 LEDs blink aqua blue. This will turn the monitor on and send a reading.

The LEDs will flash in succession as the monitor attempts to send a reading. When all 3 LEDs are solid aqua blue, a reading was sent successfully.


NOTE: It may take up to five minutes to establish cellular connection. Please refer to the "Troubleshooting" section

of this guide if your monitor shows any red LEDs.

Hold the magnet to the activation pad.

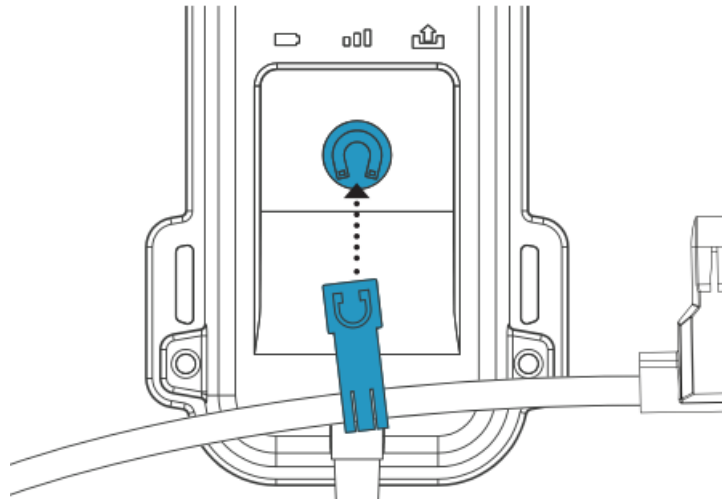

Successful reading confirmation shown by 3 solid aqua blue LEDs.

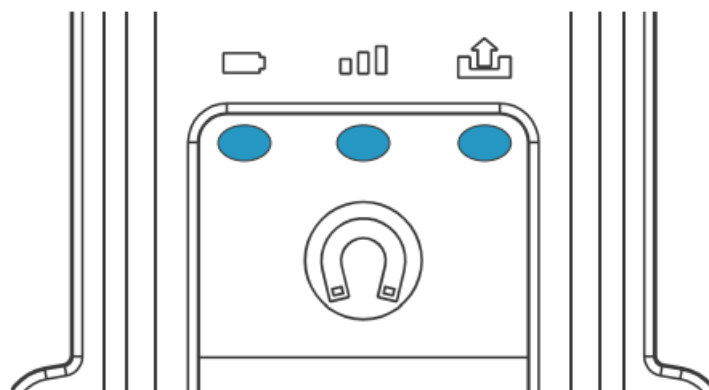


Mount The Monitor


FOR ABOVE GROUND TANKS

The underside of the monitor has two protruding magnetic feet which can be used to mount the monitor on either the tank or the lid.

On vertical tanks, mount the monitor with the cable pointing downwards.

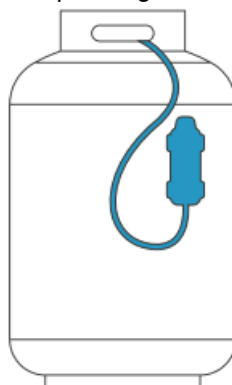


On horizontal tanks, mount the monitor on top of the tank.

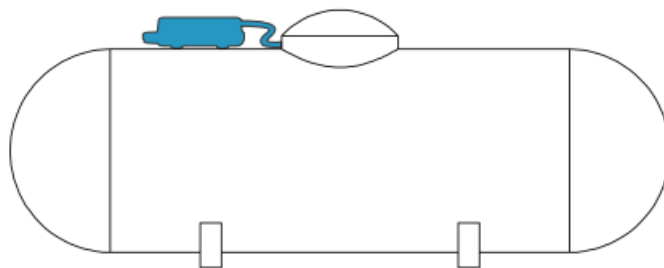


NOTE: Do not place the tank monitor under a steel lid or inside the collar since this can prevent the monitor from connecting to the cellular network.

FOR BELOW-GROUND TANKS

It is best to securely attach the monitor to the top of the lid. If the lid is not metal, use the included self-tapping screws to attach the mounting bracket to the non-metal lid to provide a place for magnet mounting.

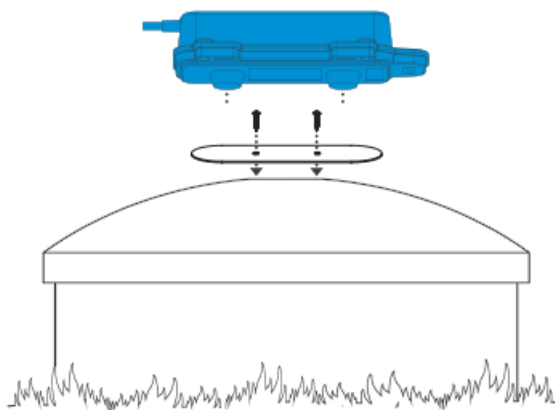

Configure The Device In The Tank Utility Portal

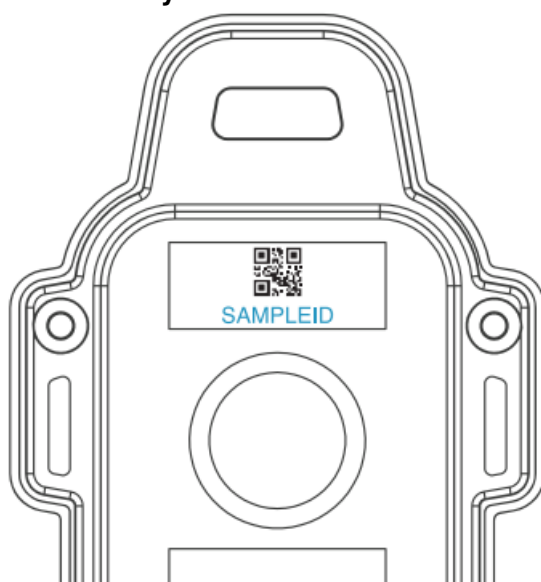

Your monitor is already associated with your Tank Utility account. To edit the details of the monitor, go to <http://portal.tankutility.com> and login with your credentials. Your monitor will appear in the portal when a reading is sent. You can identify the monitor with the 8 digit ID number on the back of your device.

Troubleshooting Setup

When the monitor is prompted to send a reading each LED will blink in succession. Each LED will turn aqua blue when the corresponding step is completed. If a problem is encountered, the LED will turn red.

BATTERY VOLTAGE


 
- The batteries need to be replaced.

CELL SIGNAL STRENGTH


- The monitor cannot connect to the cellular network because the signal is not strong enough.

SUCCESSFUL READING

- The monitor has not received a confirmation of a successful reading.

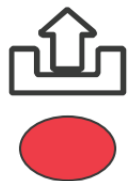


To Turn Off The Tank Monitor

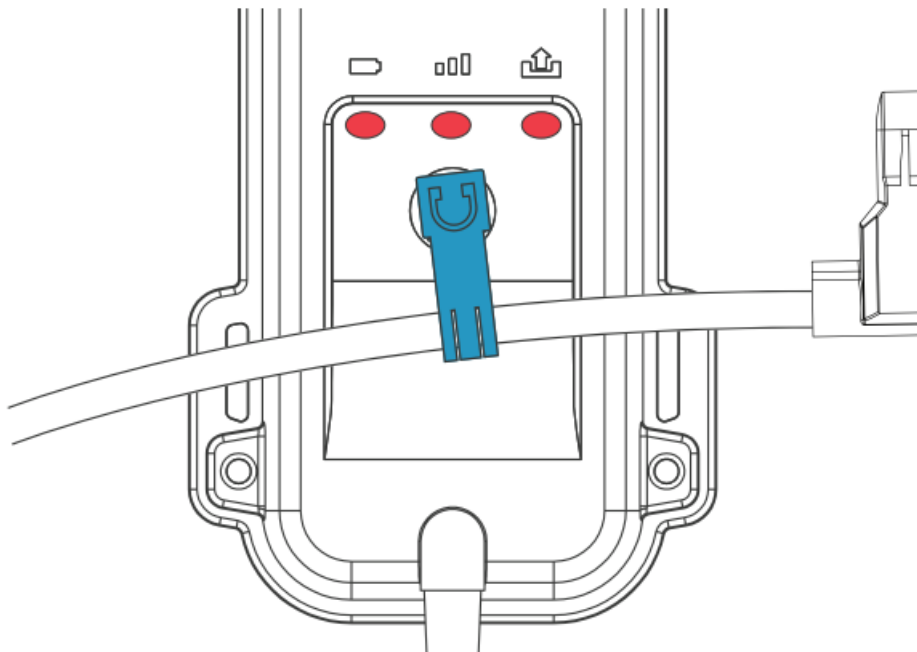


This will prevent the monitor from sending additional readings. Hold the activation magnet over the activation pad for approximately 15 seconds until all 3 LEDs are red. Remove the activation magnet while all 3 LEDs are red.

Battery Replacement

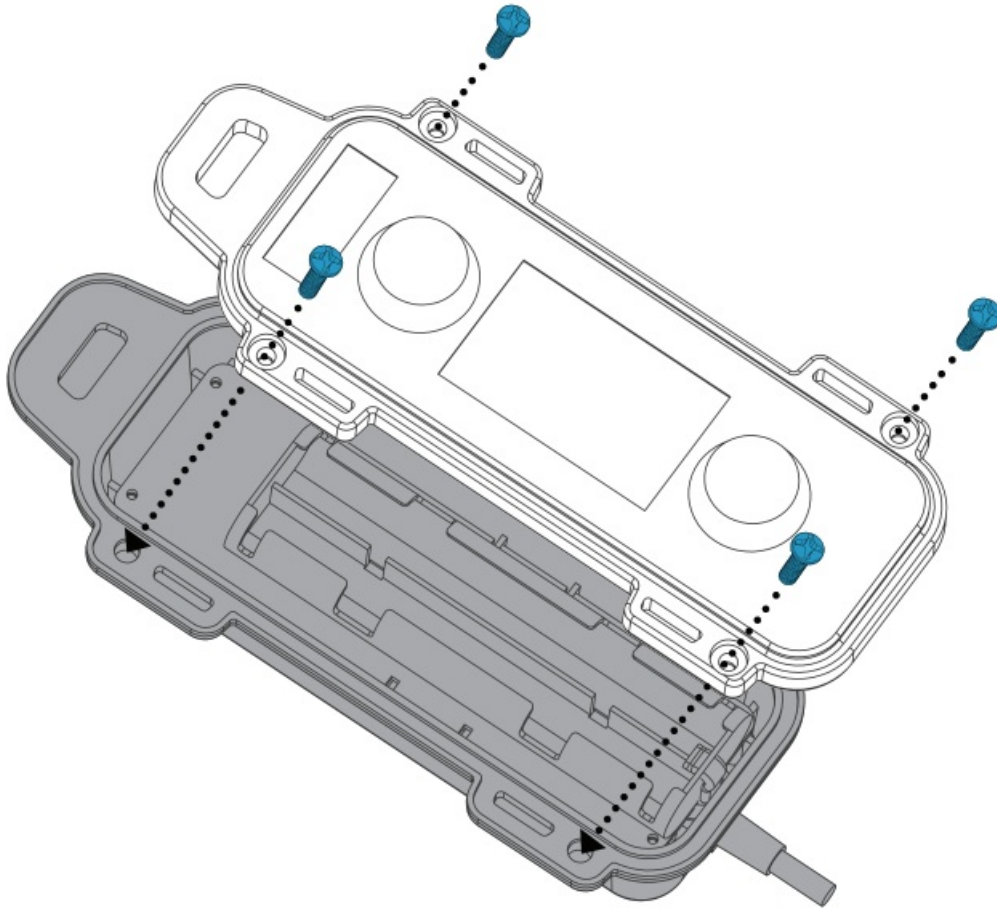

To replace your batteries, remove the 4 screws from the tabs on the enclosure and remove the lid. Batteries must be unused Energizer Ultimate Lithium L91.

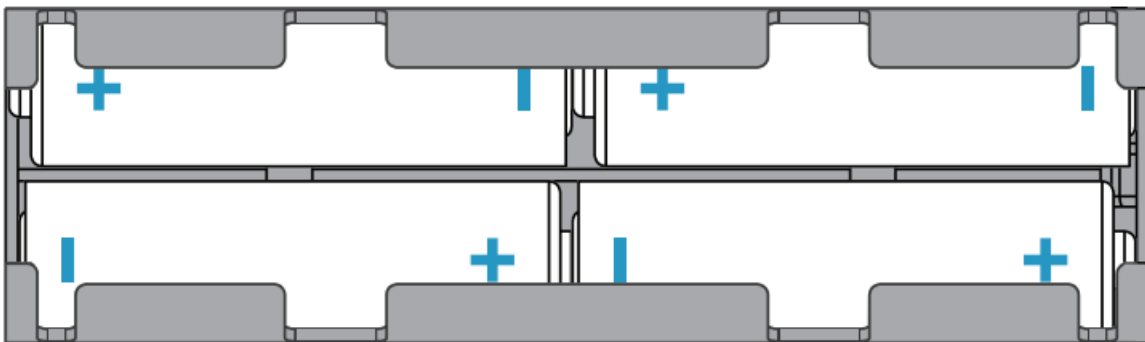

Using used batteries or a different make/model void the warranty. Remplacer les batteries uniquement avec Energizer L91 Ultimate Lithium.

WARNING: EXPLOSION HAZARD – BATTERIES MUST ONLY BE CHANGED IN AN AREA FREE OF IGNITEABLE CONCENTRATIONS.

AVERTISSEMENT: RISQUE D'EXPLOSION – LES BATTERIES NE DOIVENT ÊTRE REMPLACÉES QUE DANS UN EMPLACEMENT EXEMPT DE CONCENTRATIONS INFLAMMABLES.

Tank Utility, Inc. Two Year Limited Warranty

THIS LIMITED WARRANTY CONTAINS IMPORTANT INFORMATION ABOUT YOUR RIGHTS AND OBLIGATIONS, AS WELL AS LIMITATIONS AND EXCLUSIONS THAT MAY APPLY TO YOU.

WHAT THIS LIMITED WARRANTY COVERS; PERIOD OF COVERAGE

Tank Utility, Inc. ("Tank Utility"), P.O. Box 121134, Boston, Massachusetts USA, warrants to the owner of the enclosed product that the product contained in this box ("Product") will be free from defects in materials and workmanship for a period of two (2) years from the date of delivery following the original retail purchase (the "Warranty Period"). If the Product fails to conform to this Limited Warranty during the Warranty Period, Tank Utility will, at its sole discretion, either (a) repair or replace any defective Product or component; or (b) accept the return of the Product and refund the money actually paid by the original purchaser for the Product. Repair or replacement may be made with a new or refurbished product or components, at Tank Utility's sole discretion. If the Product or a component incorporated within it is no longer available, Tank Utility may, at Tank Utility's sole discretion, replace the Product with a similar product of similar function. This is your sole and exclusive remedy for breach of this Limited Warranty. Any Product that has either been repaired or replaced under this Limited Warranty will be covered by the terms of this Limited Warranty for the longer of (a) ninety (90) days from the date of delivery of the repaired Product or replacement Product, or (b) the remaining Warranty Period. This Limited Warranty is transferable from the original purchaser to subsequent owners, but the Warranty Period will not be extended in duration or expanded in coverage for any such transfer.

TOTAL SATISFACTION RETURN POLICY

If you are the original purchaser of the Product and you are not satisfied with this Product for any reason, you may return it in its original condition within thirty (30) days of the original purchase and receive a full refund.

WARRANTY CONDITIONS; HOW TO GET SERVICE IF YOU WANT TO CLAIM UNDER THIS LIMITED WARRANTY


Before making a claim under this Limited Warranty, the owner of the Product must (a) notify Tank Utility of the intention to claim by visiting tankutility.com/support during the Warranty Period and providing a description of the alleged failure, and (b) comply with Tank Utility's return shipping instructions. Tank Utility will have no warranty obligations with respect to a returned Product if it determines, in its reasonable discretion after examination of the returned Product, that the Product is an Ineligible Product defined below).

WHAT THIS LIMITED WARRANTY DOES NOT COVER

This Limited Warranty does not cover the following (collectively "Ineligible Products"): Products marked as "sample" or "Not for Sale", or sold "AS IS"; or Products that have been subject to: (a) modifications, alterations, tampering, or improper maintenance or repairs; (b) handling, storage, installation, testing, or use not in accordance with instructions provided by Tank Utility; (c) abuse or misuse of the Product; (d) breakdowns, fluctuations, or interruptions in electric power or the telecommunications network; or (e) Acts of God, including but not limited to lightning, flood, tornado, earthquake, or hurricane. This Limited Warranty does not cover consumable parts, including batteries, unless damage is due to defects in materials or workmanship of the Product, or software (even if such consumable parts or software are packaged or sold with the product). Tank Utility recommends that you use only authorized service providers for maintenance or repair. Unauthorized use of the Product or software can impair the Product's performance and may invalidate this Limited Warranty.

Tank Utility, Inc.
PO Box 121134 Boston, MA 02111
(802) 393-8265 support@tankutility.com

Documents / Resources

| | |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <small>Tank Utility Cellular Tank Level Monitor Installation Instructions for Qualified Craft Professionals</small> | Tank utility LTE-MC-C Cellular Tank Level Monitor [pdf] Instruction Manual LTE-MC-C, LTE-MC-D, LTE-MC-C Cellular Tank Level Monitor, LTE-MC-C, Cellular Tank Level Monitor, Tank Level Monitor, Level Monitor, Monitor |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

References

- [!\[\]\(467d80e979964f7f8c752fb22248b5b7_img.jpg\) Ops Portal](#)
- [!\[\]\(b71552d33dbf62adf5e5199a70ee02bf_img.jpg\) Support - Tank Utility](#)
- [!\[\]\(03134b765d1473836ff001925b1b0550_img.jpg\) Cellular monitor setup \(TLMC2\) - Tank Utility](#)
- [!\[\]\(aed6947356668967079310026052edc0_img.jpg\) Support - Tank Utility](#)

Manuals+.