

TANLANIN TE-2028WT Bluetooth Record Player for Vinyl with External Speaker Instructions


[Home](#) » [TANLANIN](#) » TANLANIN TE-2028WT Bluetooth Record Player for Vinyl with External Speaker Instructions 

Contents

- [1 TANLANIN TE-2028WT Bluetooth Record Player for Vinyl with External Speaker](#)
- [2 Instructions Before Start](#)
- [3 PARTS ILLUSTRATION](#)
- [4 SET UP](#)
- [5 Operation-Listen to a Record](#)
- [6 Bluetooth – pairing with bluetooth](#)
- [7 LINE-IN—Listen to auxiliary input](#)
- [8 RCA Audio Output](#)
- [9 HOW TO REPLACE THE NEEDLE](#)
- [10 TROUBLESHOOTING](#)
- [11 Specifications](#)
- [12 FCC Statements](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)
- [14 Related Posts](#)

TANLANIN

TANLANIN TE-2028WT Bluetooth Record Player for Vinyl with External Speaker

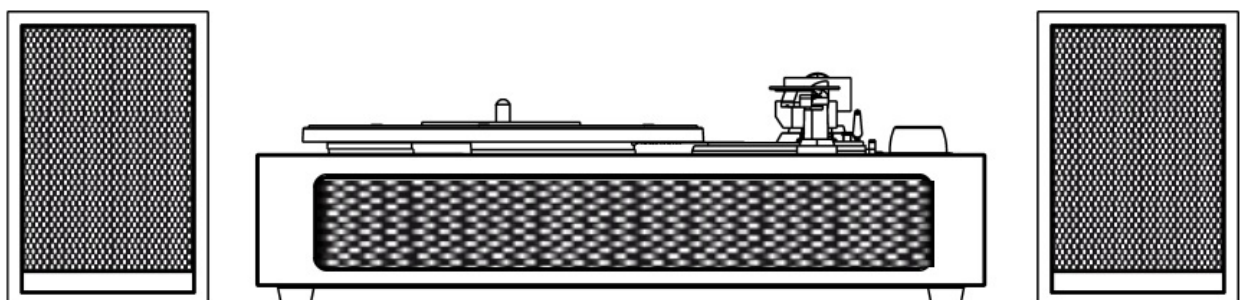

Questions, problems, missing parts? **CONTACT** ——— support25@163.com
Before returning to Amazon, please use above contact for Customer Service.

Instructions Before Start

Please Read the Manual Before Using this product. Keep these instructions for future reference.

About Records Applied

1. Do not use this product near water.
2. Never use a record with cracks or warps.
3. Never use a record that is cracked or warped, as this may cause extreme wear and destruction of the needle.
4. Never use unusual play methods such as scratching. This unit is not designed for such playback.
5. Do not expose the unit to direct sunlight, high temperature or high humidity. This may cause warping or deformation. When holding the record, hold only the label or the outer edge.
6. Do not touch the record groove. Dust and fingerprints may cause distortion of the sound. Care of the record
7. Use a special record cleaner and cleaner solution (sold separately). Wipe the record cleaner in a circular motion along the record groove.

About Built-in Bluetooth

1. The Bluetooth devices used in this unit use the same frequency band (2.4GHz) as wireless LAN devices (IEEE802.11b/g/n), so if they are used near each other, they may interfere with each other, resulting in reduced communication speed or connection failure. In this case, please use it as far away as possible (about 10m).
2. We do not guarantee the connection with all Bluetooth devices.
3. Also, depending on the conditions, it may take some time to connect.


Main Features

- 3 speed turntable plays 33 1/3, 78, and 45 rpm records;
- Auto stop function
- Supports Bluetooth Input
- Aux Line-in
- External stereo speakers
- RCA stereo audio outputs
- Volume Control/ON & OFF Power


Accessories Includes

- 45 rpm adapter
- 2x Stylus(one installed)
- AC power adapter
- 7-inch Turntable mat
- User's quick guide
- User's manual


Orientation

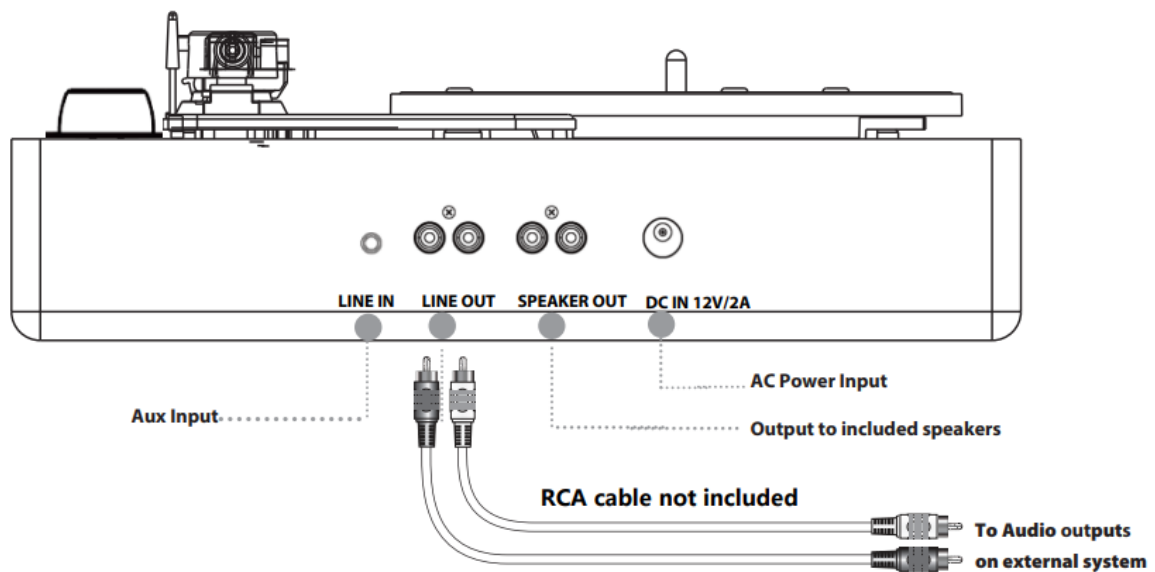

Front

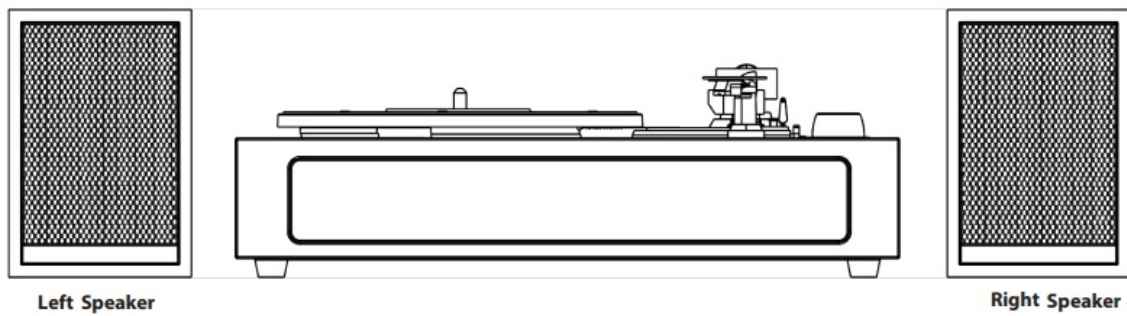

Back

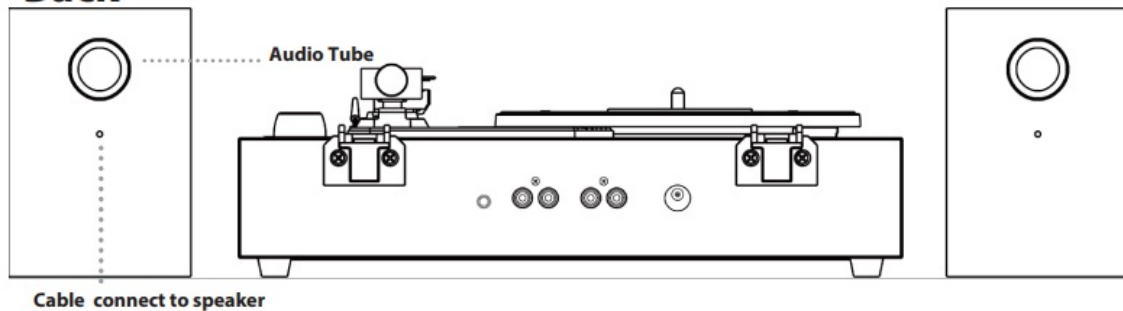

Remark: To avoid Larsen effect or Feedback noise, you can do the following:



1. Put your speakers at minimum distance of 60 cm or more from your turntable.
2. Let the dustcover open when you play a record at higher sound volume.
3. Keep the back of the speakers at minimum distance of 10 cm from from your wall.

SET UP

1. An AC/DC adaptor with an output of 12V DC 2.0A is included with this Turntable with Bluetooth reception and Wooden Speakers. The adaptor is required for operating the unit.
2. Connect the speaker cables from each speaker to the back of the unit (White jack to White hole, Red Jack to Red hole)
3. Firmly and securely insert the DC plug of the adaptor to the DC IN Jack on the back of the unit.
4. Plug the adaptor's AC plugs into a power outlet rated at 110-240V AV ~ 50 Hz.
5. Turn on the unit by the POWER/VOLUME Knob. The Power Led Light Indicator will turn on.

Warning:

Do Not Change The Original Adaptor Unless Being Advised By Qualified Technician)

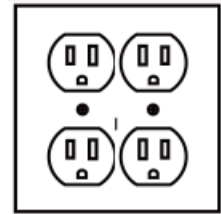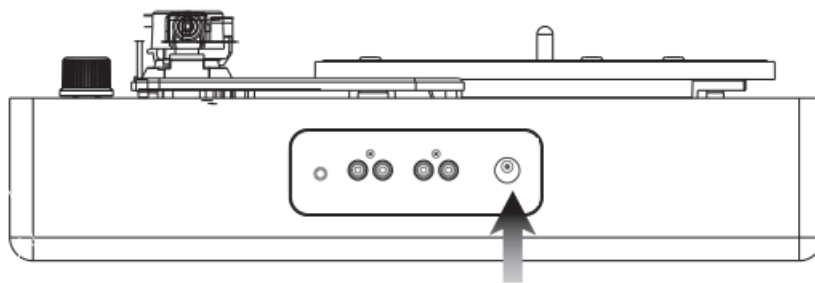


**12V/2A
Dedicated AC Plug**




Operation-Listen to a Record


It is recommended that you use extreme care when manipulating the tone arm, stylus, and other components of this turntable. These parts are very sensitive and can easily break or become damaged if they are carelessly handled.

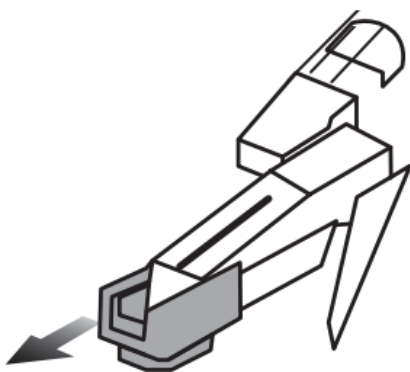

Lock

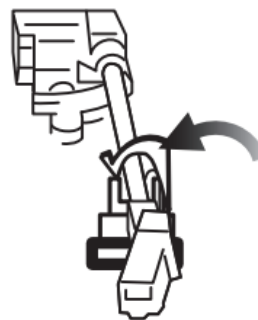

Unlock

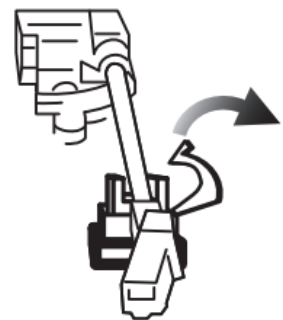


1. Turn the the Volume and power button clockwise till the LED indicator lights up, if not, check the power and adapter.
2. Turn the mode selector button aim to “PHO” on the control panel. Or once you place the tone am on the vinyl, the turntable will switch to vinyl mode and Bluetooth mode will automatically be disabled if you are using “BT” mode .
3. Remove the shroud that protects the stylus, and release the lock that holds the Tone Arm in it’s resting position.
4. Before use, turn the turntable clockwise about 10 times by hand to make sure there is no belt shift or kinks from the pulleys.
5. Select the correct turntable speed based on the type of record you wish to play, and place the record on the turntable. If you are playing a 45 rpm record, use the included adapter and place it between the turntable and the record.
6. Use the Tone Arm Lift Switch to raise the Tone Arm from its catch.
7. Using your hand, gently swing the Tone Arm into the desired location over the record. The turntable will start spinning as the Tone Arm is moved into position.
8. Use the Tone Arm Lift Switch to safely lower the stylus onto the record. Using the Lift Switch instead of your

hand will reduce the chance of accidentally damaging the record or the stylus.

- Slide the Auto Stop Switch to ON to enable the Auto Stop feature. When the record is finished playing, it will automatically stop the turntable. Use the Lift Switch to raise the stylus off of the record, and gently return the Tone Arm to the catch by hand.

Note: Some records place their Auto Stop area outside of the range of this unit. In these cases, the record will stop playing before the last track is reached. Set the Auto Stop Switch to OFF and use the Tone Arm Lift Switch to safely raise the stylus off the record when the end of the record has been reached.

- When not in use, secure and lock the Tone Arm in its resting position and replace the protective shroud over the stylus. This will minimize the risk of accidental damage to these sensitive parts.

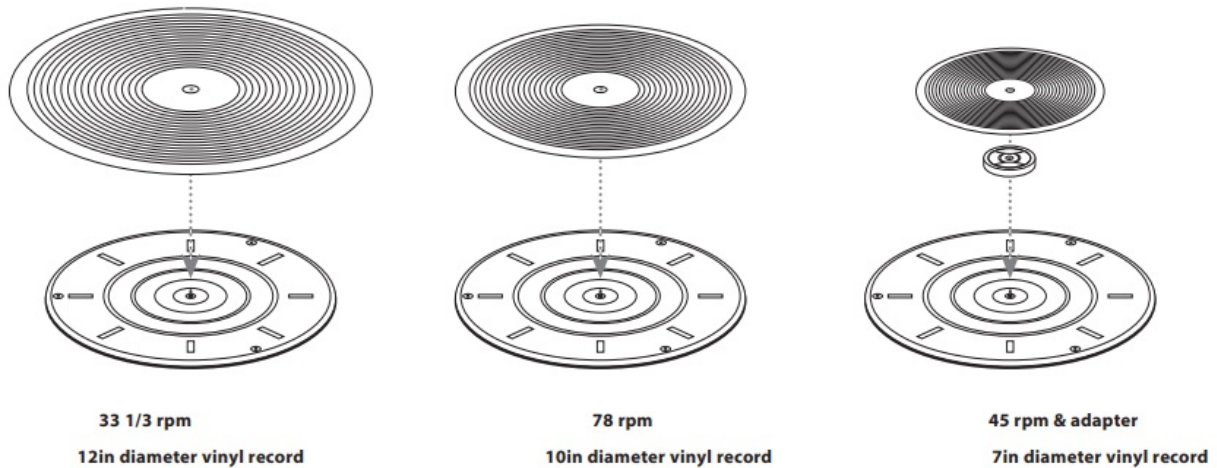


Bluetooth – pairing with bluetooth

- Turn on the the ON/OFF /Volume button to power on, turn the mode selector button aim to “BT” on the control panel.
- Using the controls on your Bluetooth device, search for and select “BLTD” in your Bluetooth settings to pair. If your device requests a password, enter the default password 0 0 0 0 and and press OK.
- When successfully paired and connected, an audible chime will sound. After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or you find it is unable to connect, repeat the above steps.
- After pairing to a Bluetooth device, use the controls on your connected Bluetooth Device to select a track.


On an iPhone

Go to SETTINGS > BLUETOOTH Search for devices (Make sure Bluetooth is turned ON)

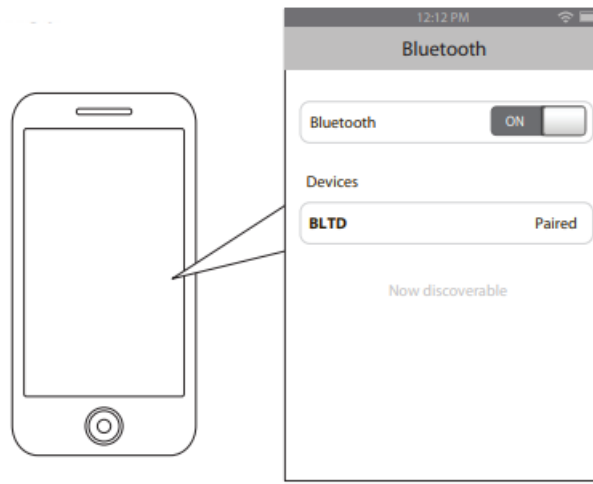

On an Android Phone

Go to SETTINGS > BLUETOOTH Search for devices (Make sure Bluetooth is turned ON)

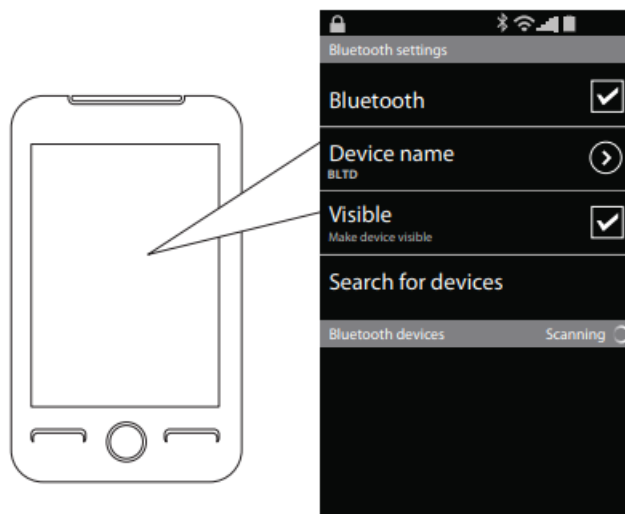


LINE-IN—Listen to auxiliary input

Requires 3.5 mm audio input cable (not included).

Note: When the Source selector is set to Aux In, When a 3.5mm audio cable is plugged into the unit, it will automatically detect the input and power ON in Aux In mode.


1. Turn the mode selector button aim to “AUX” on the control panel.
2. Plug a 3.5 mm audio input cable into the “AUX” on the unit and the audio output/headphone output on an MP3 Player or other audio source.
3. Use the controls on your connected music player to select and play audio.
4. Audio played through the connected device will now be heard through the speakers.

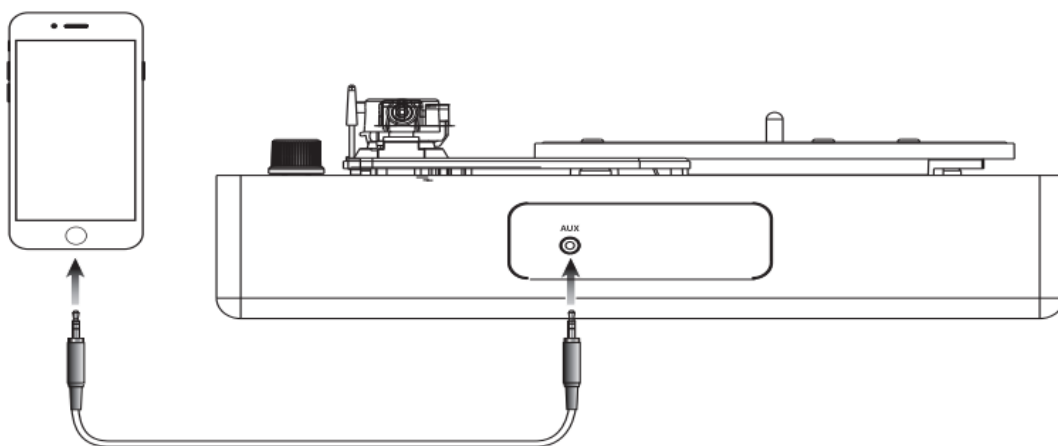

RCA Audio Output

Requires RCA audio cables (red/white, not included). Use to connect the turntable to an external stereo, television, or other source.

1. Connect RCA audio cables to the RCA Audio Output on the back of the turntable, and to the audio input of an external stereo system.
2. Adjust the external stereo system to accept input from the turntable.
3. Audio played through the turntable will now be heard through the connected stereo system.

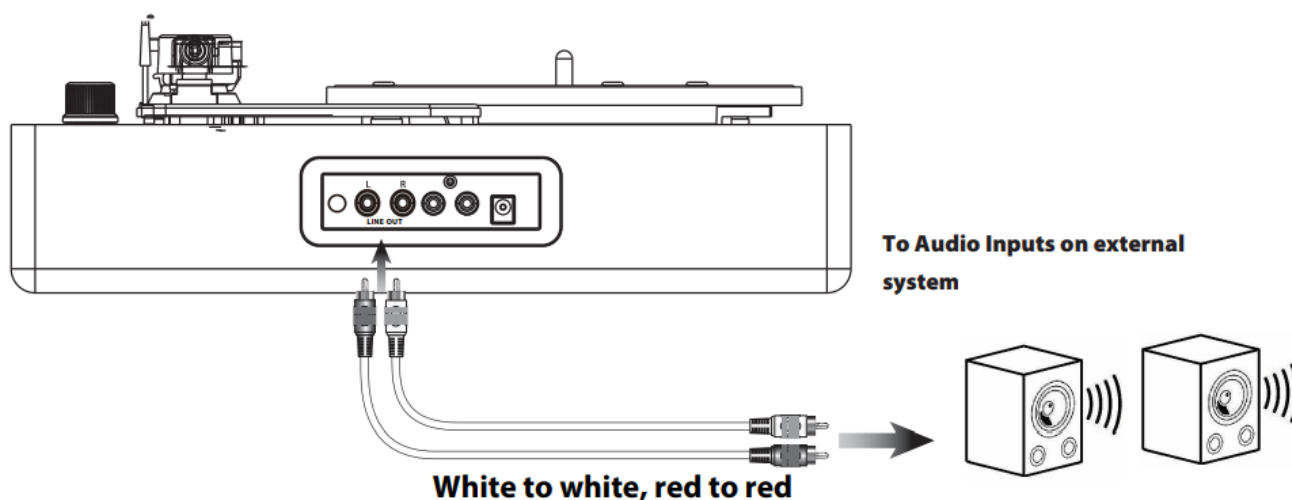

HOW TO REPLACE THE NEEDLE

The durability time of the recoil needle is about 200-250 hours. Replace the needle if necessary

Remove the Needle

1. Gently pull down the front edge of the needle.
2. Pull needle forward.
3. Pull out and remove.

The stylus needle is universal type and purchasable on [Amazon.com](https://www.amazon.com).



Installing Needle

1. Position the needle with its tip facing down.
2. Line up the back of the needle with the cartridge.
3. Insert the needle with its front end at a downward angle and gently lift the front of the needle upward until it snaps into place.



TROUBLESHOOTING

• There is no power

- Power adaptor is not connected correctly.
- No power at the power outlet.
- Use the wrong adapter instead of the original one included.
- Power button is not turned on, turn the volume/ON/OFF button clockwise to turn on.

• My record is skipping.

- Use the tone arm lift raise up and down the arm for 10 times before initial spinning.
- Change vinyl records or clean the vinyl records grooves properly.
- The needle is not in the middle of the stylus or broken, replace it.
- Put the record player on the flat surface with 4 legs/corners on the ground.
- The white stylus protector is still on.

• Power is on, but the platter does not turn

- Turntable drive belt has slipped off.
- An aux in cable is plugged into the aux in jack, unplug it.
- Bluetooth is connected, disconnect it and reset the mode to "PHO".

• Turntable is spinning, no sound comes, or not loud enough

- Volume is too low, turn it clockwise to volume up.
- Wrong connection to the pair of speakers that included
- Stylus protector is still on.
- Tone arm is lift up by the lever.
- Volume is not good: connect to the external powered speakers or place the speaker away from distortion.

Specifications

Turntable	TE-2028
Type	Belt drive full manual
Drive Motor	DC motor
Speed	33, 45, 78 RPM
Turntable platter	200mm
Bluetooth	
Version	4.2
Frequency Range	2402MHz to 2480MHz
Maximum Transmission Power	<8dbm
General	
ADAPTOR	input AC100-240V~50/60Hz
	output DC12V-2A
PRODUCT	DC12V-2A
Power Consumption	24W
Dimension	340x320x100mm for main unit; 130x120x200mm for speaker
Weight	Approx. 4,12 kgs

Electrical information	Value and and precision
Input voltage	120-240V
Input AC frequency	50-60Hz
Output voltage	DC 12V
Output current	2A
Output Power	24W
Average active efficiency	86.66%
Efficiency at low load (10%)	84.42%
No load Power consumption	0.08

FCC Statements

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Manuals+,