



TANNOY VLS 5 Passive Column Array Loudspeaker User Guide

[Home](#) » [TANNOY](#) » TANNOY VLS 5 Passive Column Array Loudspeaker User Guide 

TANNOY

VLS 5 Passive Column Array Loudspeaker
User Guide



VLS 5/VLS 5-WH

Passive Column Array Loudspeaker with 5 Mid Range Drivers for Speech Only Installation Applications

Contents

- [1 Important Safety Instructions](#)
- [2 LIMITED WARRANTY](#)
- [3 Introduction](#)
- [4 Connectors and cabling](#)
- [5 Switch for Low-Z and transformer tap selection](#)
- [6 Wiring the connectors](#)
- [7 Specifications](#)
- [8 Other important information](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

Important Safety Instructions

	CAUTION RISK OF ELECTRIC SHOCK! DO NOT OPEN IT!	
-----------------------------------------------------------------------------------	----------------------------------------------------------------------------	-------------------------------------------------------------------------------------



Terminals marked with this symbol carry an electrical current of sufficient magnitude to constitute a risk of electric shock.

Use only high-quality professional speaker cables with ¼" TS or twist-locking plugs pre-installed. All other installations or modifications should be performed only by qualified personnel.



This symbol, wherever it appears, alerts you to the presence of dangerous uninsulated voltage inside the enclosure – voltage that may be sufficient to constitute a risk of shock.



This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Please read the manual.



Caution

To reduce the risk of electric shock, do not remove the top cover (or the rear section).
No user-serviceable parts inside. Refer servicing to qualified personnel.



Caution

To reduce the risk of fire or electric shock, do not expose this appliance to rain and moisture. The apparatus shall not be exposed to dripping or splashing liquids and no objects filled with liquids, such as vases, shall be placed on the apparatus.



Caution

These service instructions are for use by qualified service personnel only.
To reduce the risk of electric shock do not perform any servicing other than that contained in the operation instructions. Repairs have to be performed by qualified service personnel.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.

6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for the replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Use only attachments/accessories specified by the manufacturer.



12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel.

Servicing is required when the apparatus has been damaged in any way, such as a power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
16. Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



7. Correct disposal of this product: This symbol indicates that this product must not be disposed of with household waste, according to the WEEE Directive (2012/19/EU) and your national law. This product should be taken to a collection center licensed for the recycling of waste electrical and electronic equipment (EEE). The mishandling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the efficient use of natural resources.

For more information about where you can take your waste equipment for recycling, please contact your local city office or your household waste collection service.

18. Do not install in a confined space, such as a bookcase or similar unit.
19. Do not place naked flame sources, such as lighted candles, on the apparatus.
20. Please keep the environmental aspects of battery disposal in mind. Batteries must be disposed of at a battery collection point.
21. This apparatus may be used in tropical and moderate climates up to 45°C.

LEGAL DISCLAIMER

Music Tribe accepts no liability for any loss which may be suffered by any person who relies either wholly on or in part upon any description, photograph, or statement contained herein. Technical specifications, appearances, and other information are subject to change without notice. All trademarks are the property of their respective owners.

Midas, Klark Teknik, Lab Gruppen, Lake, Tannoy, Turbosound, TC Electronic, TC Helicon, Behringer, Bugera, Oberheim, Auratone, Aston Microphones, and Coollaudio are trademarks or registered trademarks of Music Tribe Global Brands Ltd. © Music Tribe Global Brands Ltd. 2021 All rights reserved.

LIMITED WARRANTY

For the applicable warranty terms and conditions and additional information regarding Music Tribe's Limited Warranty, please see complete details online at musictribe.com/warranty.

Introduction

This Quick Start Guide presents only the essential information required to properly unpack, connect and configure a VLS Series loudspeaker. Please consult the full VLS Series Operation Manual for additional detailed information on low impedance versus 70/100 V operation, complex loudspeaker system configuration, cable types, equalization, power handling, rigging and safety procedures, and warranty coverage.

Connectors and cabling

VLS Series loudspeakers are connected to the amplifier (or to other loudspeakers in a 70/100 V system or series/parallel configuration) using a pair of internally paralleled barrier strip connectors.

All VLS Series models can be operated as either a low impedance loudspeaker or within a 70/100 V distributed system. The operation mode is selectable via a single switch located on the rear of the cabinet (see Fig.1 below).

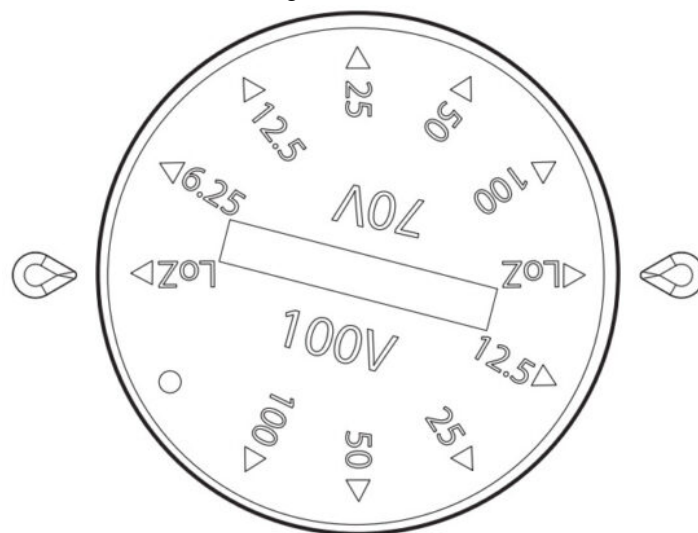


Fig.1 VLS 5 mode selector switch

Operation in low impedance mode often will require the use of larger diameter cables than are needed for a 70/100 V distributed system. Please consult the full VLS Operation Manual for recommended cable types for various applications.

Switch for Low-Z and transformer tap selection

A multi-position rotary switch on the rear input panel selects either the low-impedance operating mode or the high-impedance modes (70 V or 100 V) with available transformer taps. When using VLS Series loudspeakers in distributed line systems, the transformer can be tapped with available power levels shown in the table below:

70 V	100 V
6.25	12.5
12.5	25
25	50
50	100
100	—

All transformer primaries should be connected in parallel to the output of the amplifier. The summed total power rating in watts of the selected tap settings for all connected loudspeakers must not exceed the total output power rating of the connected amplifier output channel in watts. It is recommended that a generous power safety margin (minimum 3 dB headroom) be maintained between the total loudspeaker power requirements and the amplifier output capacity to avoid continuous amplifier operation at full rated output.

Wiring the connectors

Low Impedance Mode

If connecting directly to the amplifier in low impedance mode, connect the positive (+) conductor to a positive (+) barrier strip terminal and the negative (–) conductor to a negative (–) terminal. It is preferable to connect several loudspeakers to one amplifier output in parallel, series, or series/parallel configurations using the other internally paralleled barrier strip connector.

For more information on this, please consult the full VLS Series, Operation Manual.

Constant voltage (70 V / 100 V) Mode

In constant voltage distributed systems, normally a number of loudspeakers are connected in parallel to the single amplifier output. Connect the positive (+) conductor from the amplifier or prior loudspeaker in the system to a positive (+) barrier strip terminal and the negative (–) conductor to a negative (–) terminal. The other parallel barrier strip is available for connecting additional loudspeakers.

Outdoor Applications

A right-angled, watertight cable gland is supplied with the VLS 5 for use in outdoor applications (Fig.2). The input panel cover is secured to the cabinet using the four screws already inserted around the input.

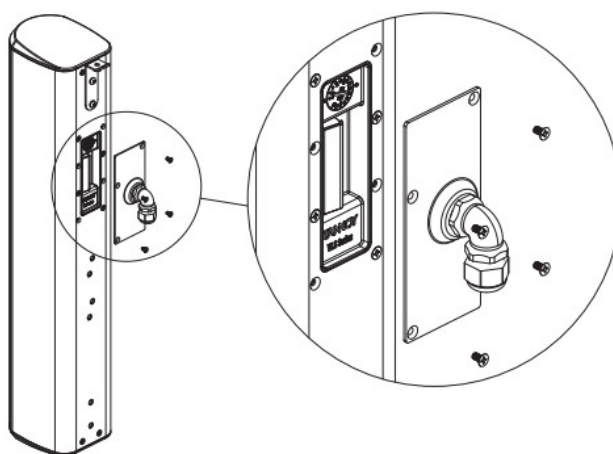


Fig.2 VLS 5 with watertight cable gland

Pan-Tilt Bracket (optional)

A pan-tilt bracket is available which allows panning and tilting for flexible orientation along both horizontal and vertical axes. Installation instructions are provided with the bracket.

Rigging and safety procedures

The installation of TANNOY loudspeakers using the dedicated hardware should be carried out only by fully qualified installers, in accordance with all the required safety codes and standards that are applied at the place of installation.

WARNING: As the legal requirements for flying vary from country to country, please consult your local safety standards office before installing any product.

We also recommend that you thoroughly check any laws and bylaws prior to installation. For more detailed information on rigging hardware and safety procedures, please consult the full VLS Series, Operation Manual.

Outdoor applications

VLS Series loudspeakers are rated IP64 for resistance to dust and moisture ingress, and are resistant to both salt spray and UV exposure, making them suitable for use in most outdoor applications. Please consult with your TANNOY dealer before installation in applications with extreme exposure to adverse environmental conditions such as prolonged heavy rainfall, prolonged temperature extremes, etc.

IMPORTANT NOTE: The mounting of a permanently installed sound system may be dangerous unless undertaken by qualified personnel with the required experience and certification to perform the necessary tasks. Walls, floors, or ceilings must be capable of safely and securely supporting the actual load. The mounting accessory used must be safely and securely fixed both to the loudspeaker and to the wall, floor, or ceiling. When mounting rigging components on walls, floors, or ceilings, ensure that all fixings and fasteners used are of an appropriate size and load rating. Wall and ceiling cladding, and the construction and composition of walls and ceilings, all need to be taken into account when determining whether a particular fixing arrangement can be safely employed for a particular load. Cavity plugs or other specialist fixings, if required, must be of an appropriate type, and must be fitted and used in accordance with the maker’s instructions.

The operation of your speaker cabinet as part of a flown system, if installed incorrectly and improperly, can potentially expose persons to serious health risks and even death. In addition, please ensure that electrical, mechanical, and acoustic considerations are discussed with qualified and certified (by local state or national authorities) personnel prior to any installation or flying.

Make sure that speaker cabinets are set up and flown by qualified and certified personnel only, using dedicated equipment and original parts and components delivered with the unit. If any parts or components are missing please contact your Dealer before attempting to set up the system.

Be sure to observe the local, state, and other safety regulations applicable in your country. Music Tribe, including the Music Tribe Group companies listed on the enclosed “Service Information Sheet”, assumes no liability for any damage or personal injury resulting from improper use, installation or operation of the product.

Regular checks must be conducted by qualified personnel to ensure that the system remains in a secure and stable condition. Make sure that, where the speaker is flown, the area underneath the speaker is free of human traffic. Do not fly the speaker in areas that can be entered or used by members of the public.

Speakers create a magnetic field, even if not in operation. Therefore, please keep all materials that can be affected by such fields (discs, computers, monitors, etc.) at a safe distance. A safe distance is usually between 1 and 2 meters.

Specifications

System	
Frequency response	150 Hz -12 kHz; ±3 dB 130 Hz – 15 kHz; -10 dB
Horizontal dispersion (-6 dB)	130° H
Vertical dispersion (-6dB)	45°
Power handling (IEC)	120W average, 240 W program, 480 W peak
Recommended amplifier power	350 W@84

System sensitivity	89 dB (1 m, Lo Z)
Sensitivity	75 dB (4 M, through transformer)
Nominal impedance (Lo Z)	12 fl
Maximum 511.	89 dB (4 M, through transformer)
Rated maximum SPL	110 dB average, 116 dB peak (1 m, Lo Z)
Crossover	Passive Network utilizing frequency shading
Crossover point	—
Directivity factor (Q)	7.2 averaged, 1 kHz to 10 kHz
Directivity Index (DI)	8.6 averaged, 1 kHz to 10 kHz
Components	5 x 3.5" (89 mm) fullrange drivers
Transformer taps (via rotary switch) (Rated noise power add impedance)	
70V	100 W (50 0) / 50 W (100 fl)/ 25 W (200 f) / 12.5 W (4004)/ off & low impedance operation
100 V	100 W (100 fl) / 50 W (200 11) / 25 W (4000) / off & low impedance operation
Coverage angles	
500 Hz	360° H x 106°V
1 kHz	220°H x 60°V
2 kHz	150°H x 46°V

4 kHz	170° H x 30° V
Enclosure	
Connectors	Barrier strip
Wiring	Terminal 1+ / 2- (input); 3- / 4+ (link)
Dimensions HWD	599 x 121 x 147 mm (23.6 x 4.8 x 5.8")
Net weight	8.2 kg (18.1 lbs)
Construction	Aluminum extrusion
Finish	Paint RAL 9003 (white) / RAL 9004 (black) Custom RAL colors available (additional cost and lead-time)
Grille	Powder-coated perforated steel
Flying hardware	Flying bracket, wall mount bracket, input panel cover plate, and gland

Notes:

1. Average over stated bandwidth. Measured in an IEC baffle in an Anechoic Chamber
2. Unweighted pink noise input, measured at 1 meter on axis
3. Long term power handling capacity as defined in the IEC268-5 test
4. The reference point for the reference axis (on-axis) is the center of the baffle

Other important information

Important information

1. Register online. Please register your new Music Tribe equipment right after you purchase it by visiting musictribe.com. Registering your purchase using our simple online form helps us to process your repair claims more quickly and efficiently. Also, read the terms and conditions of our warranty, if applicable.
2. Malfunction. Should your Music Tribe Authorized Reseller not be located in your vicinity, you may contact the Music Tribe Authorized Fulfiller for your country listed under "Support" at musictribe.com.
Should your country not be listed, please check if your problem can be dealt with by our "Online Support" which may also be found under "Support" at musictribe.com.

Alternatively, please submit an online warranty claim at musictribe.com BEFORE returning the product.

3. Power Connections. Before plugging the unit into a power socket, please make sure you are using the correct mains voltage for your particular model. Faulty fuses must be replaced with fuses of the same type and rating without exception.




Hereby, Music Tribe declares that this product is in compliance with Directive 2011/65/EU and Amendment 2015/863/EU, Directive 2012/19/EU, Regulation 519/2012 REACH SVHC and Directive 1907/2006/EC, and this passive product is not applicable to EMC Directive 2014/30/EU, LV Directive 2014/35/EU. The full text of the EU DoC is available at <https://community.musictribe.com/>

EU Representative: Music Tribe Brands DK A/S

Address: Ib Spang Olsens Gade 17, DK – 8200 Aarhus N, Denmark

TANNOY

Documents / Resources

	<p>TANNOY VLS 5 Passive Column Array Loudspeaker [pdf] User Guide VLS 5, VLS 5-WH, VLS 5 Passive Column Array Loudspeaker, VLS 5, Passive Column Array Loudspeaker</p>
------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

-  [Music Tribe](#)