

TANOSHIIMII
2BGI8-S10 Item
Tracker Compatible
with Apple Find My



TANOSHIIMII 2BGI8-S10 Item Tracker Compatible with Apple Find My Instruction Manual

[Home](#) » [TANOSHIIMII](#) » TANOSHIIMII 2BGI8-S10 Item Tracker Compatible with Apple Find My Instruction Manual



Contents

- 1 TANOSHIIMII 2BGI8-S10 Item Tracker Compatible with Apple Find My
- 2 Getting Started
- 3 Add Your Locator
- 4 Function introduction
- 5 Specifications
- 6 Button function
- 7 Battery and Lanyard replacement
- 8 Privacy and Security
- 9 FCC Statement
- 10 FAQs
- 11 Documents / Resources
 - 11.1 References

TANOSHIIMII

TANOSHIIMII 2BGI8-S10 Item Tracker Compatible with Apple Find My

•



The Apple® Find My® network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone®, iPad®, Mac®, or the Find Items app on Apple Watch®.

- To use the Apple Find My app to locate this item, the latest version of iOS®, iPadOS®, or macOS® is recommended. The Find Items app on Apple Watch requires the latest version of watchOS®.

 
Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My Network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Getting Started

- To prevent accidental shutdowns that could result in the device being unable to locate, we have re-upgraded the startup and shutdown methods.

Power On/Off

- Power On: Hold the circular dot on the device's power button for 3 seconds, and when you hear a ring-ring chime, it indicates that the device has been powered on. (Refer to the diagram)

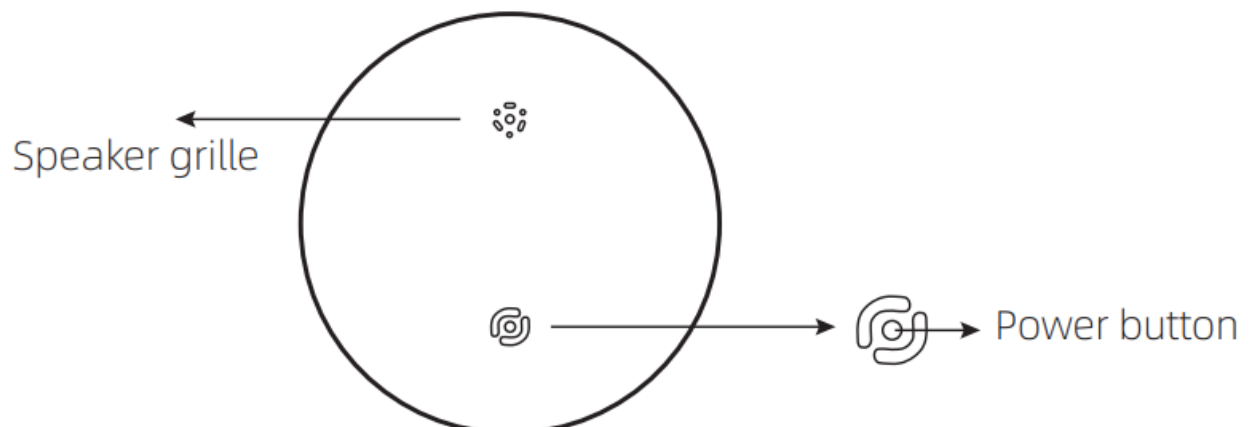

Power Off: Press the device button twice, and you will hear a confirmation sound. Then press and hold the power

button for 3 seconds(If you press it for less than 3 seconds or more than 3 seconds, the device will not power off), then release it... ,you will hear two beeps indicating it is powered off.

Remark:d setting a shutdown timer is designed to prevent accidental shutdowns, ensuring the device can continue to locate effectively.

.Check For Updates

To use the Apple® Find My® app to locate item Locator, the latest version of iOS®, iPadOS®, or macOS® is recommended. The Find My app on Apple Watch requires the latest version of watchOS®.

Add Your Locator

1. Start the App
2. Open Find My app on your supported iPhone® or iPad®
3. Allow notifications from the app.
4. Connect your Locator
5. Power on your Locator, select the “Items” tab then tap the “Add Item” tab, and tap “Other Supported Items”.
6. Make sure your Item Locator is close to your phone. Wait... until you see the pop-up “Wireless tag” then tap “Connect”.
7. Choose a recognizable name and emoji for your item Locator and tap “Continue”.
8. 2.2.4 Find I will ask for confirmation to add your Locator for your Apple ID – tap “Continue”.
2.2.5 Tap “Finish” and your Locator will be set up and ready to be connected to whatever item you wish to locate, e.g., your keys.

Function introduction

Locate Your Item

When your item is nearby “Play Sound” to make your Locator beep, and then you can find it. When it is out of arrange you can find Locator’s Last Known Location.

Notifications

- You will receive a notification when you leave your Locator behind when it’s no longer in range of your device.
- Note: “Notify When Found” can only be activated when your Locator is out of range.

Share items

- The people you’ve shared it with will be able to locate it, and they won’t receive unidentified tracking notifications.
- To use Share Items, make sure you and your friends have installed the iOS 17, iPadOS 17, or macOS 14 Sonoma public betas or newer.

Lost mode

When your item is lost, enable lost mode, and you will receive a notification when the location becomes available. You can leave a phone number or email address for the finder of your item to contact you. Note: When “Lost Mode” is enabled, your Locator is locked and no one else can pair with it. And DO NOT REMOVE ITEMS on the APP. Your Item Locator will be locked and cannot be used by any person.

Remove item

- Make sure your item is nearby, you can remove the item in the app, and it should make a ring-ring chime indicating it is removed successfully, and then the item can be used by other people.
- Note: When “Lost Mode” is enabled DO NOT REMOVE ITEM in the APP, otherwise your Item Locator will be locked and no one else can pair with it.

Factory Reset Your Locator

When your item is out of the range of your phone, and your Locator is removed from the Find My app, the device can't be used by other people. You need to reset your locator, then it can be used by other people. How to restore factory settings: Press the function button two times, and you can hear one beep. Then Press the function button four times rapidly and then hold it a fifth time until you hear a ring-ring chime, now the device is reset. The device can be repaired to a new Apple ID account as a new device.

Unwanted Tracking Detection

If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways: (1) If you have an iPhone or iPad, Find My will send a notification to your Apple device. This feature is available on iOS or iPadOS 14.5 or later. 2) If you don't have an iOS device or smartphone, a Find My network accessory that hasn't been with its owner for some time will emit a sound when it's moved. These features were created specifically to discourage people from trying to track you without your knowledge.

Specifications

- Battery: CR2032 3V (Replaceable)
- Working voltage: 2.8V-3.3V
- Capacity: 220mAh
- Wireless range: 10-30 meters
- Buzzer: Max 100 DB
- Product size:φ32X7.9mm

Button function

- **Power on (Find my function is on).**
 - Press the function button for 3 seconds to turn it on. It should have a ring-ring chime indicating it is powered on.
 - If the product is not linked with your Apple ID, it will be closed within 10 minutes automatically. You need to trigger the find my function again to continue pairing.
- **Power off (Find my function is off).**
 - Hold the function button for three seconds, then release it.. you will hear two beeps indicating it is powered off.
- **Enable learn more information query.**
 - Press the function button two times rapidly and you will hear a confirmation sound, This operation will be displayed on theFind My app to guide the person who gets the device to obtain the device information, such as the owner's contact information (if the item is set to the lost mode on the app), and the serial number of the device.

 
 
- **Restore factory settings**

- Press the function button two times, you can hear one beep, then Press the function button four times rapidly and then hold it a fifth time until you hear a ring-ring chime, now the device is reset.
- A reset operation is required to make the device enter the pairing state



Battery and Lanyard replacement

1. Insert the shell opening with a shell opening tool.
2. Rotate the shell opening tool 90 degrees to open the shell.
3. Use your fingernails at the small gap on the side of your Item Locator to carefully open the case.
4. Replace the battery with a new CR2032 battery 3V. (Positive pole with the text upward).



- Insert the opening tool
- Rotate the opening tool 90 degrees to open the case

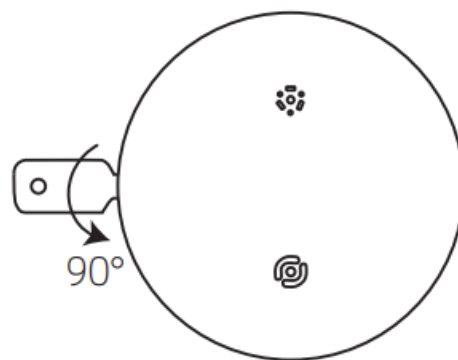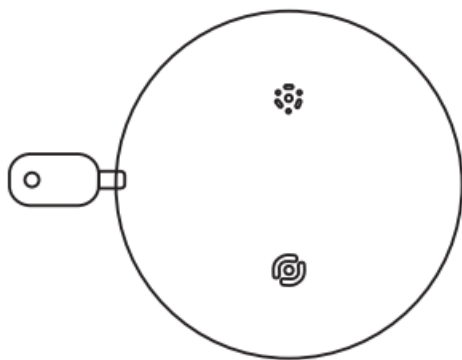

  - Positive pole with the text upward
- 4 Close the case (Graphic for reference)

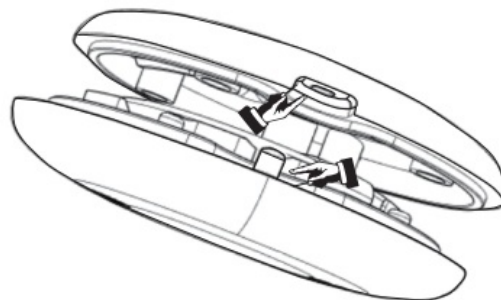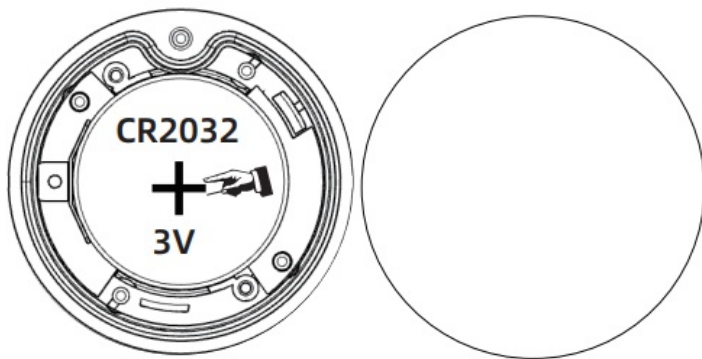

  1. Open the shell as a diagrammatic sketch. (No need to fully open the entire shell)
2. Put the lanyard into the column, then close the cover.

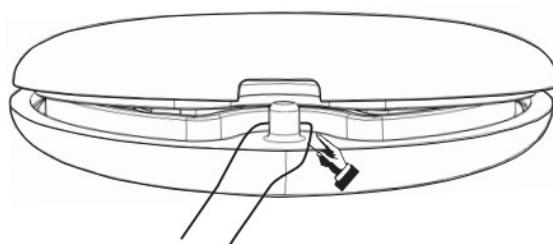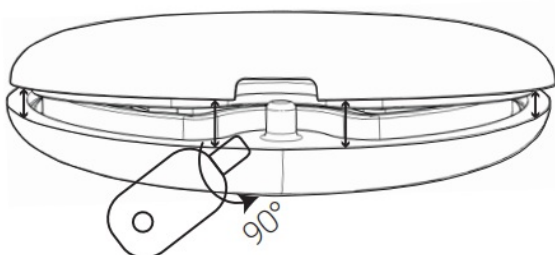

Privacy and Security

Your Locator sends out a secure Bluetooth signal that can be detected by nearby devices in the Find My network. These devices send the location of your Locator to iCloud — then you can go to the Find My app and see it on a map. The whole process is anonymous and encrypted to protect your privacy.

WARNING

1. Remove and Immediately recycle or dispose of used batteries according to local regulations and keep them away from children. Do NOT dispose of batteries in household trash or incinerate them.
2. Even used batteries may cause severe injury or death.
3. Call a local poison control center for treatment information.
4. Non-rechargeable batteries are not to be recharged.
5. Do not force discharge, recharge, disassemble, heat above 50°C/122°F or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
6. The compatible battery type is CR2032.
7. The nominal battery voltage: DC 3V
8. Ensure the batteries are installed correctly according to polarity(+ and -).
9. Do not mix old and new batteries, different brands, or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
10. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period according to local regulations.
11. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

WARNING: This product contains a button cell or coin battery.

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause as many internal Chemical Burns in as little as 2 hours.

WARNING

- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN** Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of body.
- Battery type: CR2032. Battery voltage: 3V. Keep in original package until ready to use;

Immediately dispose of used batteries and keep them away from children. Do NOT dispose of batteries in household trash.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

WARNING

KEEP OUT OF REACH OF CHILDREN Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.

FAQs


Why is my device’s location not updating?

There are two principles for product positioning reporting. If there are many Apple devices nearby, each new user in the vicinity of this device will report their location, typically within 2-5 minutes. If the device has not moved, the built-in sensors will detect this, and the device will enter a sleep mode, with the reported location ranging from 30 minutes to several hours. Don’t worry, the location you see might be from 30 minutes or several hours ago, but it’s very likely that the item hasn’t moved, and the location you see is the last known location.

When pairing a device with the Find My app, the phone will link to the Apple server.

Pairing may fail because of network problems. The following action is recommended: 1. Change the phone’s network, such as switching between WiFi and mobile. The first pairing may take a long time, so please wait patiently. 2. Reset your item. 3. Repair with Find My App.

Documents / Resources

| | |
|---|---|
|  | TANOSHIMI 2BG18-S10 Item Tracker Compatible with Apple Find My [pdf] Instruction Manual 2BG18-S10 Item Tracker Compatible with Apple Find My, 2BG18-S10, Item Tracker Compatible with Apple Find My, Compatible with Apple Find My, Apple Find My, Find My |
|---|---|

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.