



TAP ACCORDION Dynamic Active system Microphones Instruction Manual

[Home](#) » [TAP](#) » TAP ACCORDION Dynamic Active system Microphones Instruction Manual 

TAP ACCORDION Dynamic Active system Microphones Instruction Manual



Contents


- [1 Active, Professional Accordion System With Dynamic Microphones.](#)
- [2 INSTALLATION](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

Active, Professional Accordion System With Dynamic Microphones.

“TAP” Microphones system is the most advanced for Accordion with great performance and exceptional response. It consists, of two discreet units, one for the treble (melodies) section and the other for the bass section.

The internal preamplifier provides high output signal with low consumption. That matches to all amplifiers and consoles. The unit powered with a 3 Volt lithium battery (2032). Comes with 1/4 output jack that suitable to connect in amplifier and in microphone inputs of console. Include, Volume and Tone controls, along with an input (3.5) for the optional bass section “AKO-B”.

The clear sound covers all frequencies with a unique and warm reproduction. Dimensions : 330mm x 60mm x 26mm

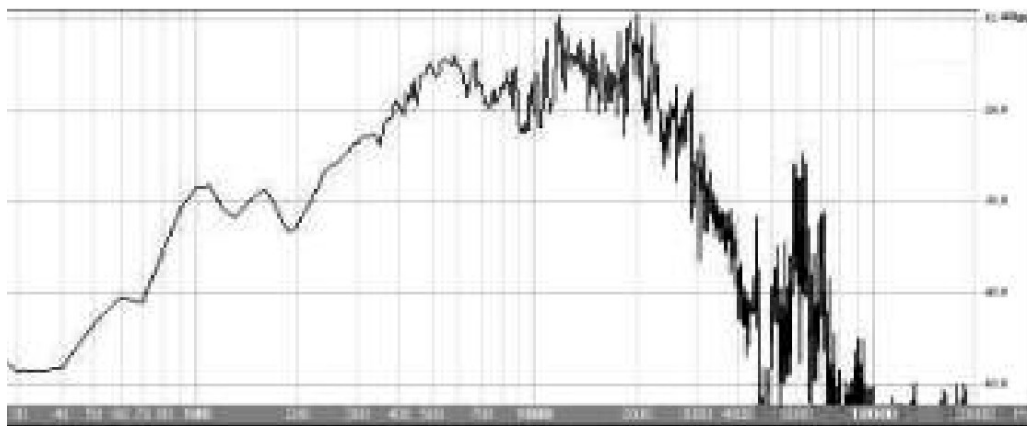


INSTALLATION



The section for the treble, installs easily over the accordion's front surface panel. The system secures on the accordion with 2 elastic round-strap brackets , that mounts on the sides. The rubber plate legs, avoids scratching on the accordion surface.

The AKO-B mounts over the bass holes, with special “Velcro” tape, and connect to appropriate input (3.5 mm).

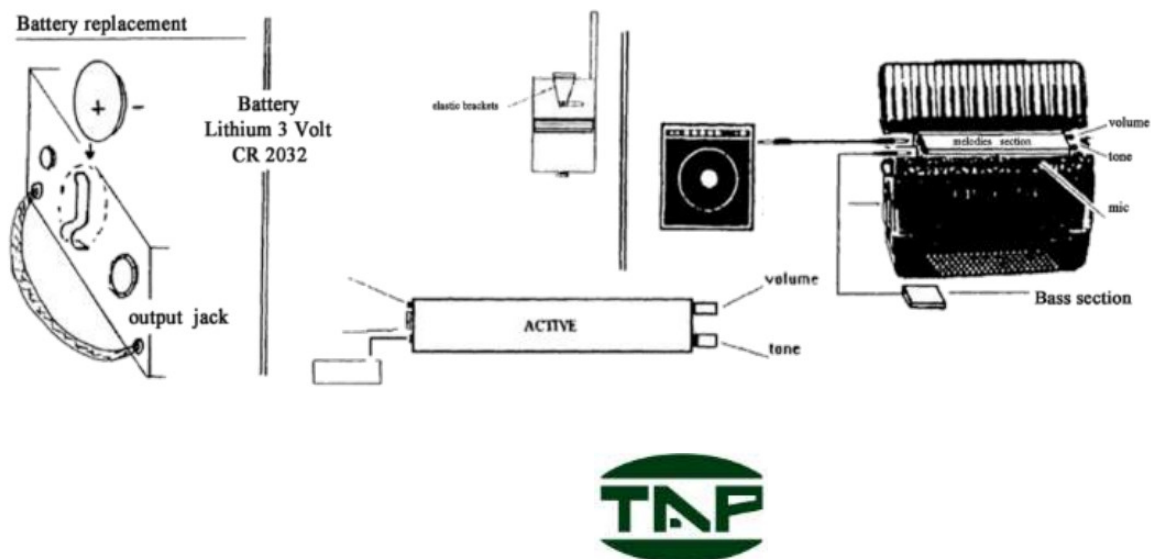

Documents / Resources



[TNP ACCORDION Dynamic Active system Microphones](#) [pdf] Instruction Manual
 ACCORDION Dynamic Active system Microphones, ACCORDION, Dynamic Active system Microphones, Active system Microphones, Microphones

[Manuals+](#)