



tapo C420S2 Smart Wire-Free Security Camera System User Guide

[Home](#) » [tapo](#) » tapo C420S2 Smart Wire-Free Security Camera System User Guide 

tapo C420S2 Smart Wire-Free Security Camera System User Guide



Contents

- [1 Safety Information](#)
- [2 Mount the Camera After Setup](#)
- [3 Charge the Battery](#)
- [4 Set Up](#)
- [5 Local Recording](#)
- [6 Reset](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

Safety Information

- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Do not use damaged charger or USB cable to charge the device.
- Do not use any other chargers than those recommended.
- Do not use the device where wireless devices are not allowed.

- Keep the device away from fire or hot environments. DO NOT immerse in water or any other liquid.
- Adapter shall be easily accessible.

CAUTION!


Risk of fire or explosion if the battery is replaced by an incorrect type.

CAUTION!

Avoid replacement of a battery with an incorrect type that can defeat a safeguard. Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion. Do not leave a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; Do not leave a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

Mount the Camera After Setup

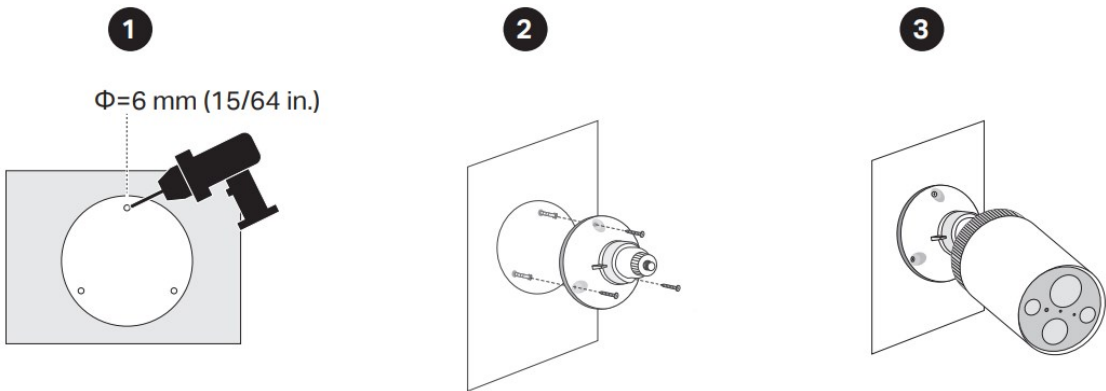


Images may differ from the actual products.

Note: Images may differ from the actual products.


Charge the Battery

Method 1: Battery Itself

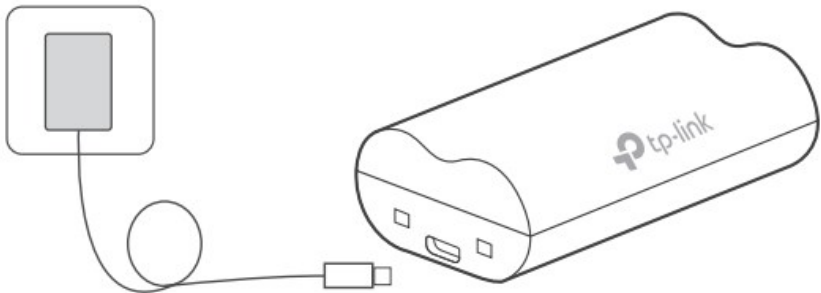

LED indication	Charging: Steady orange
	Fully charged: Steady green

Method 2: Battery Inside Camera

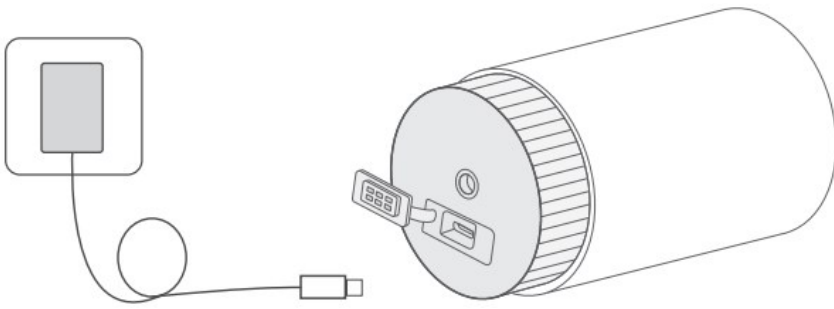


*Check battery status in the Tapo app after setup.

Set Up

1. Get the Tapo app from the App Store or Google Play.



2. Follow the app instructions to set up your hub and camera.

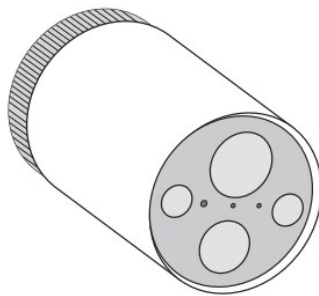

3. Follow the app instructions to mount your camera.

Local Recording

If you want the camera to record videos locally, insert a microSD card to your hub.

Initialize the microSD card within the Tapo app.




Reset

Reset Hub

Use a pin to press and hold the RESET button for about 5 seconds.

Reset Camera

Press and hold the SYNC/RESET button for about 5 seconds.

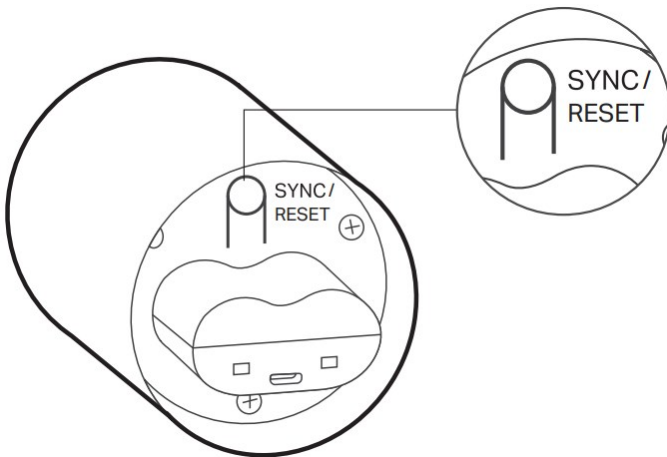

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/53/EU, 2009/125/EC, 2011/65/EU and (EU)2015/863.

The original EU Declaration of Conformity may be found at <https://www.tapo.com/support/ce/>.

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Regulations 2017.

The original UK Declaration of Conformity may be found at <https://www.tapo.com/support/ukca/>



Documents / Resources

	<p>tapo C420S2 Smart Wire-Free Security Camera System [pdf] User Guide</p> <p>C420S2 Smart Wire-Free Security Camera System, C420S2, Smart Wire-Free Security Camera System, Wire-Free Security Camera System, Security Camera System, Camera System</p>
--	--

References

-  [Anatel — Agência Nacional de Telecomunicações](#)
-  [Support | Tapo](#)
-  [Tapo Smart | Smart Devices for Smart Living](#)
-  [Support | Tapo](#)
-  [Regulatory Compliance | Tapo](#)
-  [UKCA | Tapo](#)
-  [Support Videos | TP-Link](#)

Manuals+.