

 **TASSIMO**
TAS16Bx
Multi
Beverage
Machine



TASSIMO TAS16Bx Multi Beverage Machine User Manual

[Home](#) » [TASSIMO](#) » TASSIMO TAS16Bx Multi Beverage Machine User Manual 

Contents

- 1 [TASSIMO TAS16Bx Multi Beverage Machine](#)
- 2 [Product Usage Instructions](#)
- 3 [FAQ](#)
- 4 [Safety](#)
- 5 [Overall view](#)
- 6 [Performing initial start-up](#)
- 7 [Cleaning the appliance](#)
- 8 [Descale the appliance](#)
- 9 [Troubleshooting](#)
- 10 [Technical specifications](#)
- 11 [Warranty conditions](#)
- 12 [Central Service Contacts](#)
- 13 [Documents / Resources](#)
 - 13.1 [References](#)
- 14 [Related Posts](#)



TASSIMO TAS16Bx Multi Beverage Machine



Specifications

- **Model:** TAS16Bx
- **Manufacturer:** Finesse
- **Power Supply:** Alternating Current
- **Voltage:** Check the rating plate for specific voltage
- **Frequency:** Check the rating plate for a specific frequency
- **Power Consumption:** Check the rating plate for a specific value

Product Usage Instructions

First Time Setup

1. Refer to the visual guide at the beginning of the manual for initial setup steps.
2. Ensure the appliance is connected to a suitable power source.

Using IntensityBoost Feature

1. Refer to figures 29 – 45 in the manual for instructions on utilizing the IntensityBoost feature.

Descaling Process

1. If the LED indicator prompts for descaling, follow the visual guide at the beginning of the manual (figures 46 – 60).
2. Ensure the appliance is connected to a power source before initiating the descaling process.

Troubleshooting Common Issues

- LED stays red despite enough water in the tank: Move the float in the water tank up and down.

- All LEDs blinking indicating power issues: Unplug the appliance for 5 minutes, then plug it back in. Contact support if the problem persists.
- LEDs blinking with no water flow: Unplug the appliance and contact support.

FAQ

- **Q: Where can I find additional information about my appliance?**
 - **A:** Scan the QR code provided in the manual or visit the website mentioned to access Further Notices for Use.

Safety


- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit. Only use this appliance:
 - for preparing hot drinks.
 - In private households and enclosed spaces in a domestic environment.
 - Up to an altitude of max. 2000 m above sea level.
- This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory, or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.
- Do not let children play with the appliance.
- Children must not perform cleaning or user maintenance unless they are at least 8 years old and are being supervised.
- Keep children under the age of 8 years away from the appliance and power cable.
- Keep packaging material away from children.
- Do not let children play with packaging material.
- Keep small parts away from children.
- Do not let children play with small parts.
- Connect and operate the appliance only under the specifications on the rating plate.
- Connect the appliance to a power supply with alternating current only via a properly installed socket with earthing.
- The protective conductor system of the domestic electrical installations must be properly installed.
- Never operate a damaged appliance.
- Never operate an appliance with a cracked or fractured surface.
- Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box.
- Call customer services.
- Repairs to the appliance should only be carried out by trained specialist staff.
- Only use genuine spare parts when repairing the appliance.
- If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service, or a similarly qualified person to prevent any risk.
- Never immerse the appliance or the power cord in water.

- Liquids must not be spilled on the appliance plug connection.
- Only use the appliance in enclosed spaces.
- Never expose the appliance to intense heat or humidity.
- Do not use steam- or high-pressure cleaners to clean the appliance.
- Ventilate the appliance adequately.
- Never operate the appliance in a cupboard.
- Never leave the appliance unattended while it is switched on.
- Do not use extension cables or multiple socket strips.
- If the power cord is too short, contact Customer Service.
- Only use adapters approved by the manufacturer.
- Never open the brewing system during operation.
- Only use the original Tassimo T DISCs.
- Never use a damaged T DISC.
- Never use a drink T DISC more than once.
- Never touch hot appliance parts.
- Allow hot appliance parts to cool down before touching.
- Leave drinks to cool down if necessary.
- Do not let escaping liquids or steam come into contact with your skin.
- To avoid injuries, only use the appliance for its intended purpose.
- Be careful of your fingers when inserting or cleaning the T DISC.
- People with electronic implants must stand at least 10 cm away from the appliance.
- This minimum distance of 10 cm must also be observed for the water tank when removed.
- To ensure hygiene, follow the cleaning instructions for the appliance.

Overall view

- You can find an overview of the parts of your appliance here.
- **Note:** Individual details and colors may differ, depending on the appliance model **Fig. 1**.

1. Float
2. Calc mark
3. Max mark
4. Water tank
5. T DISC reading window
6. T DISC piercing unit
7. T DISC holder
8. Lock
9. Brewing unit
10. Control panel
11. Storage compartment
12. Bowl
13. Cup stand
14. Drip grate
15. Brief cleaning/descaling instructions

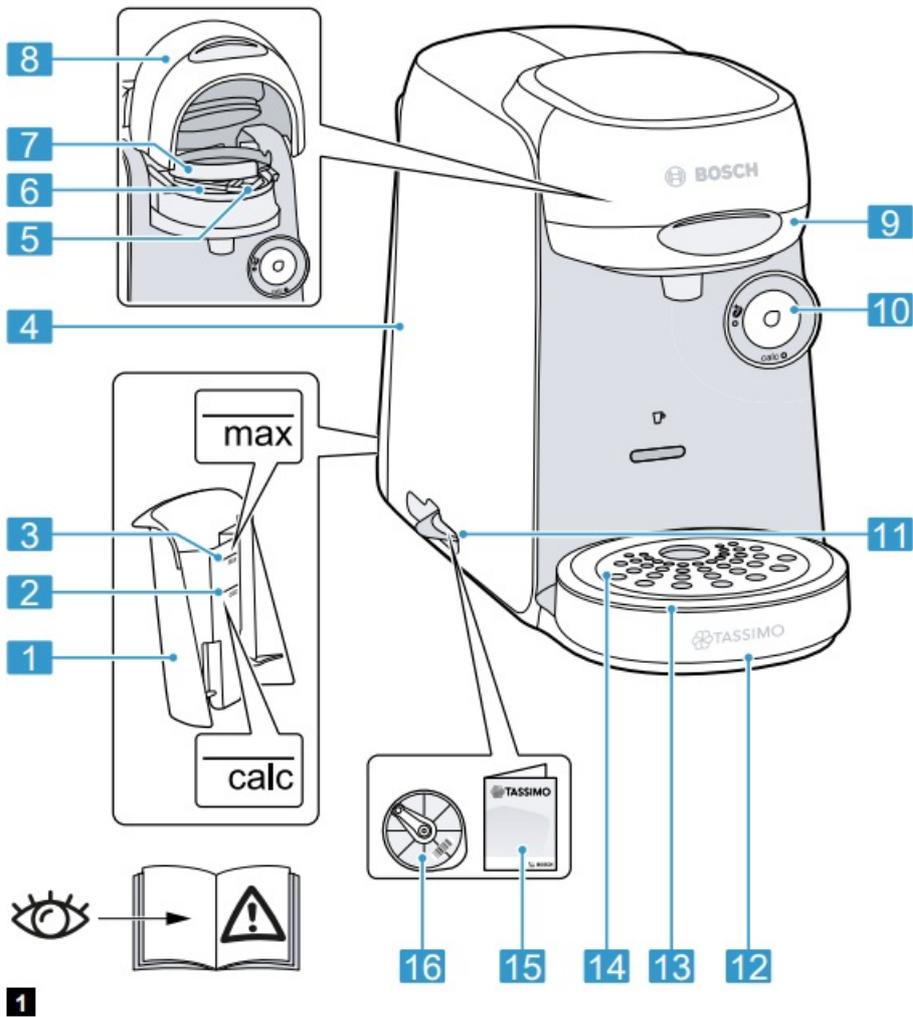


Control panel

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.


	<ul style="list-style-type: none"> ■ Activate the appliance. ■ Start standard drinks dispensing. ■ Start IntensityBoost drinks dispensing. ■ Stop drinks dispensing. ■ Prolong drinks dispensing.
	LED lights up yellow, appliance is ready for use.
	LED flashes yellow, drinks dispensing is running.
	LED lights up red, fill water tank.
	LED lights up yellow, Intensity-Boost is activated.
calc	LED lights up or flashes red, appliance needs to be descaled or descaling programme is running.

Performing initial start-up

Follow the pictorial instructions at the start of these instructions. **Fig. 2 – 14**

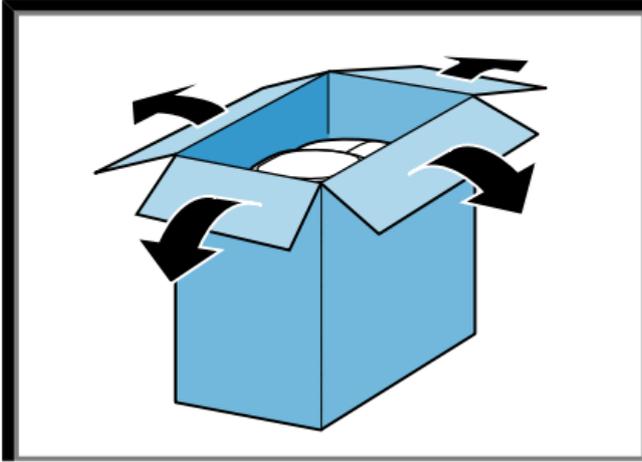



2

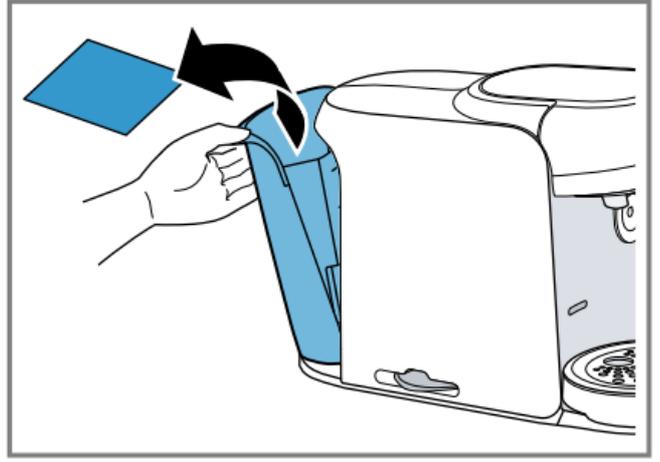



3




4

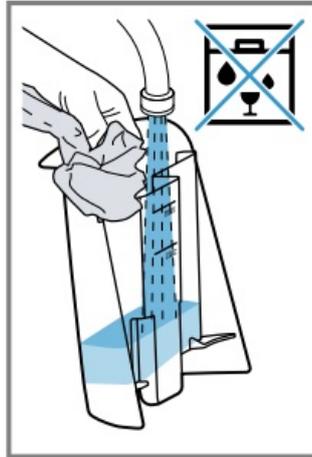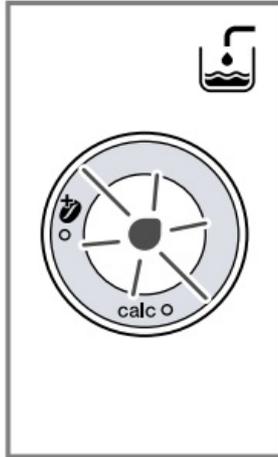


5

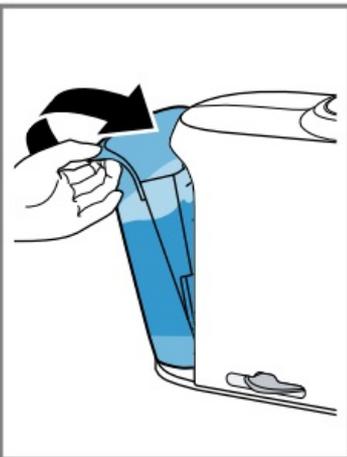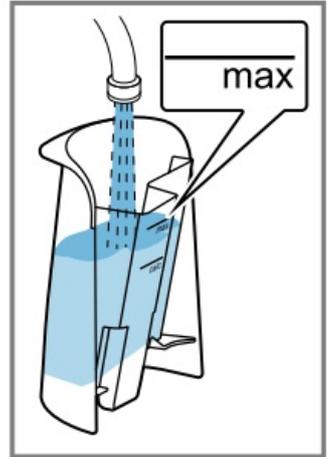


6

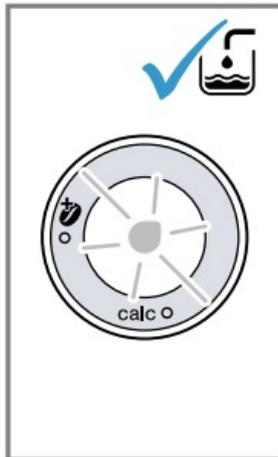

7

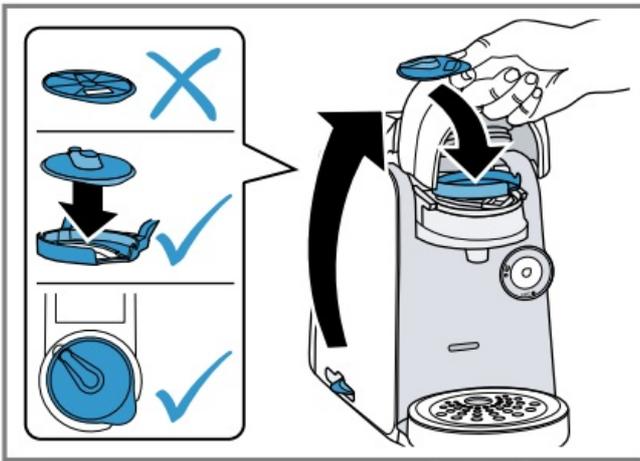


8

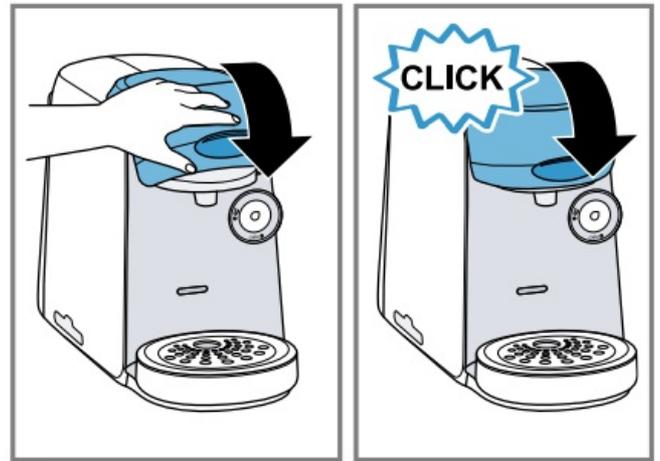


9




10

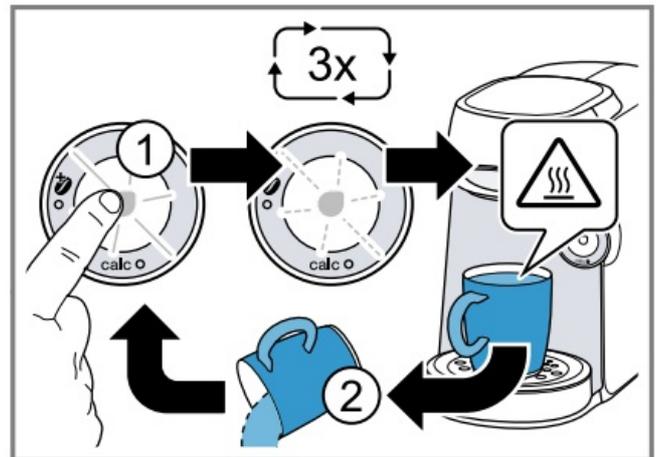

11

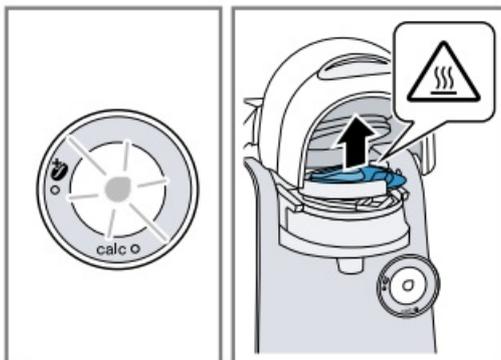


12

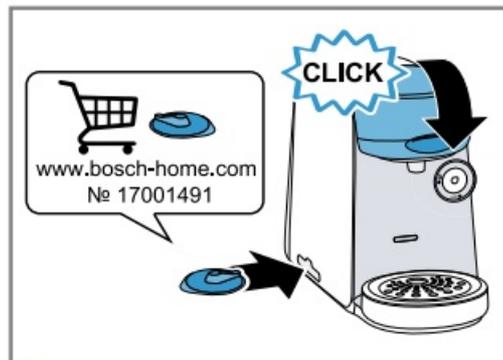

13



14

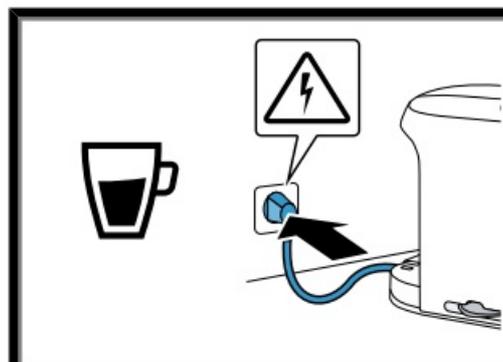


15

- **Note:** You can prepare a wide range of hot beverages with the multiple hot drinks machine. When you insert a T DISC, the scanner reads the barcode and controls the flow of hot water automatically.


Preparing a drink

- Find out how to prepare a drink of your choice. Follow the pictorial instructions at the start of these instructions.

Fig. 15 – 27

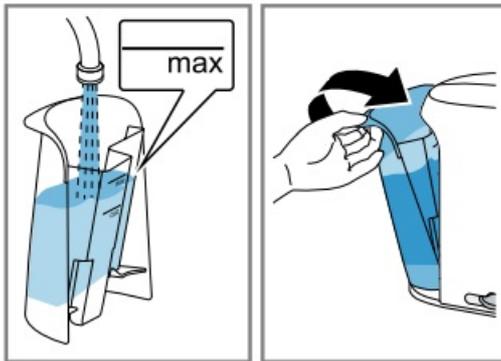


16

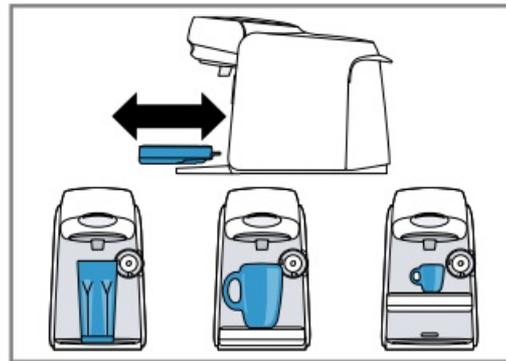


17




18

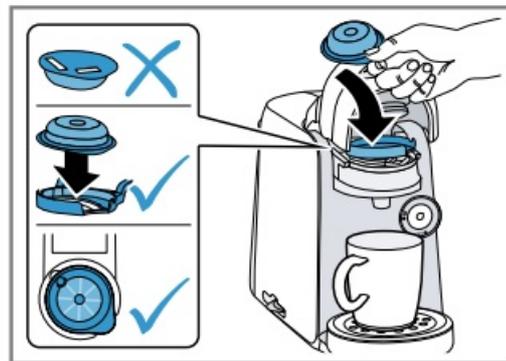

19

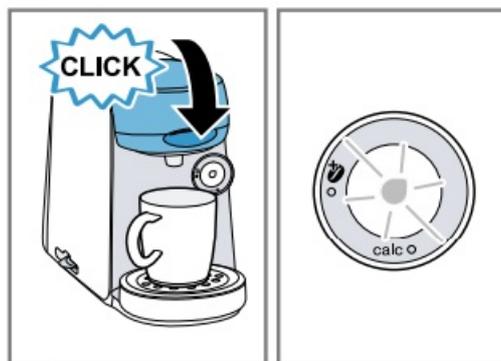


20

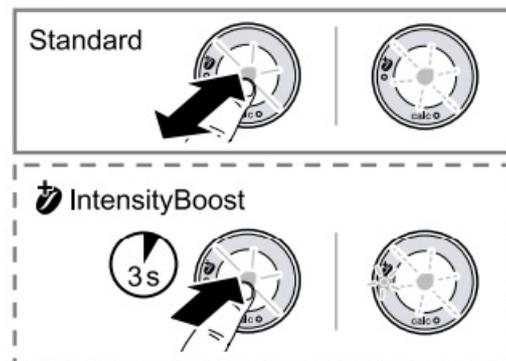


21




22

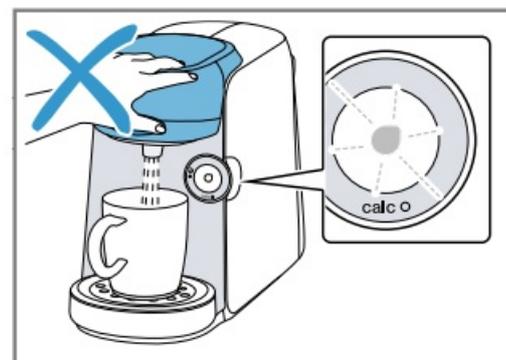


23

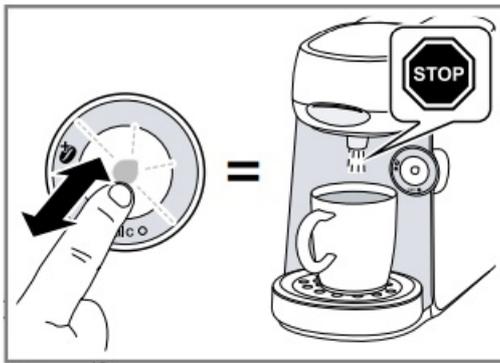

24

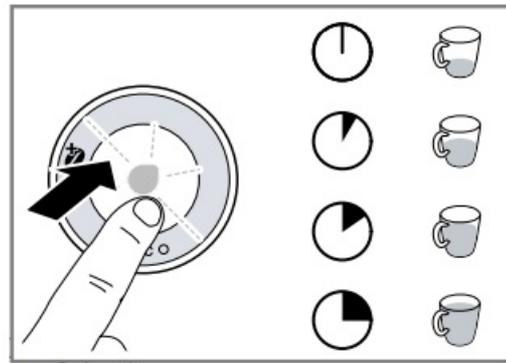

25

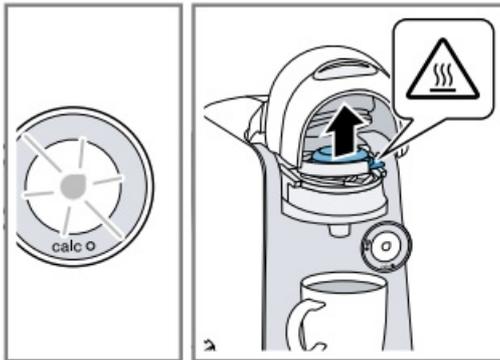

26



27

- **Note:** Fill the water tank each day with fresh, cold, non-carbonated water.
- **Tips** Do not use chemically decalcified water.
- To interrupt the dispensing process, briefly press .
- To prolong dispensing, press, and hold until  the required quantity is reached.

IntensityBoost


- To obtain coffee with a stronger flavor, press the button for 3 seconds. The  LED lights up and your appliance automatically adjusts the brewing process.

Dishwasher-safe components


- Here you can find an overview of the components you can clean in the dishwasher. **Fig. 28**

Cleaning the appliance


- Follow the pictorial instructions at the start of these instructions. **Fig. 29 – 45**

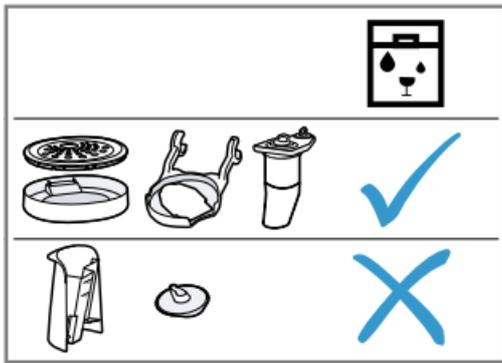


28

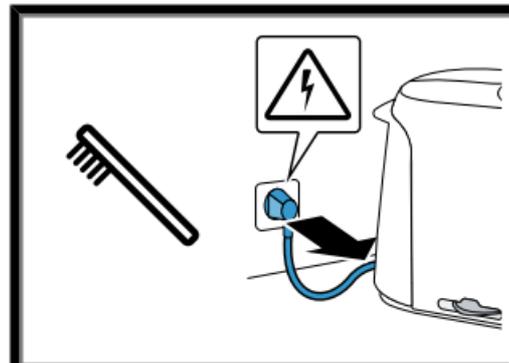


29

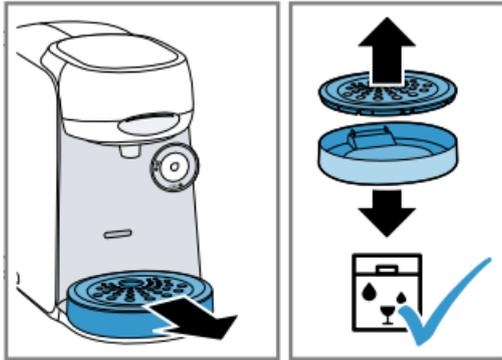


30

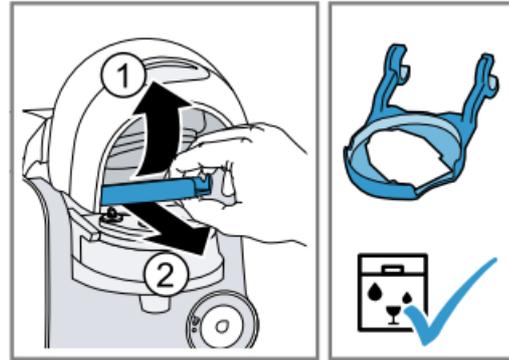


31

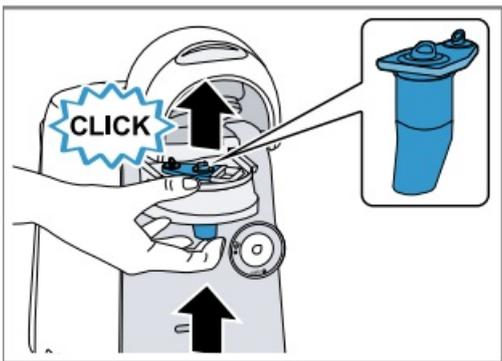


32

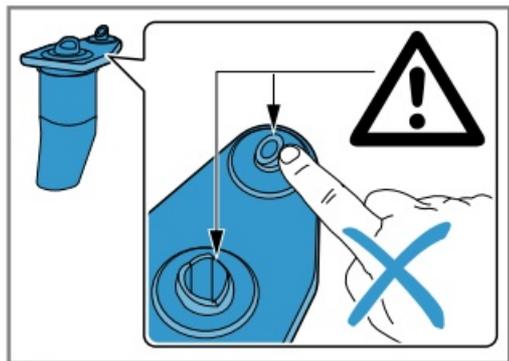


33

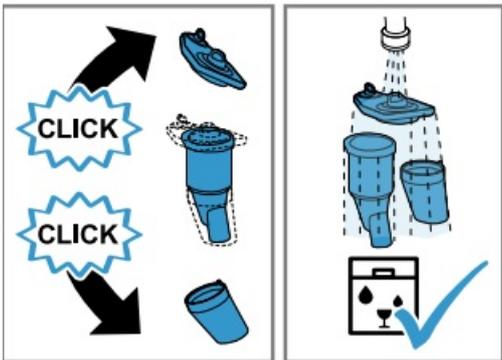


34

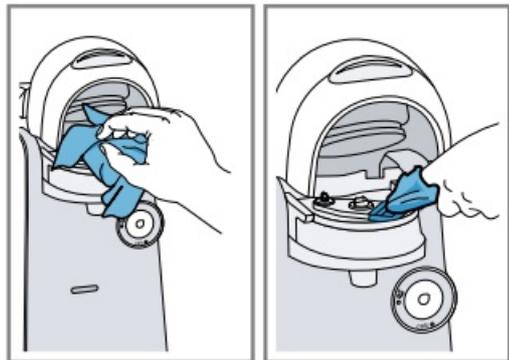


35

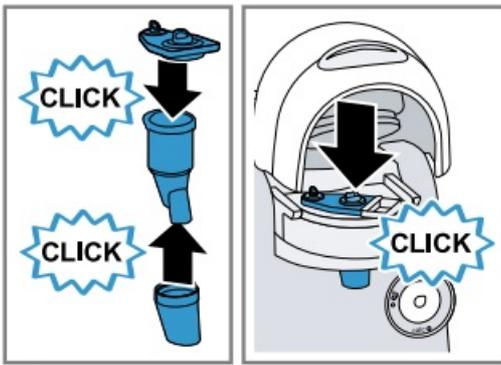


36

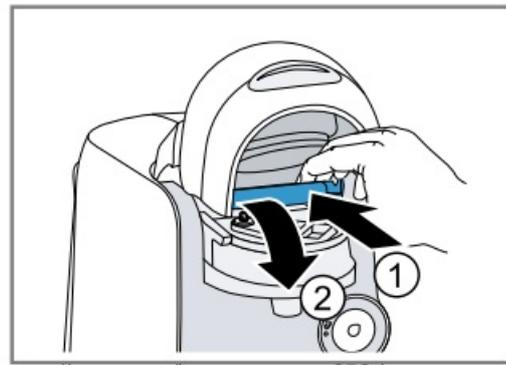


37

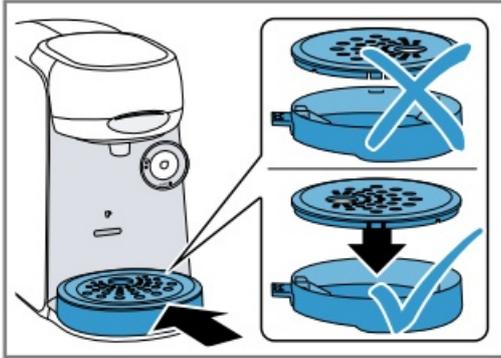


38

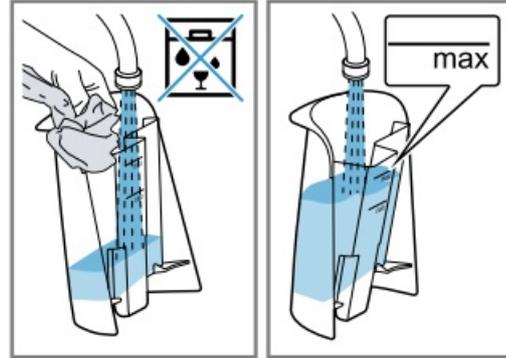


39

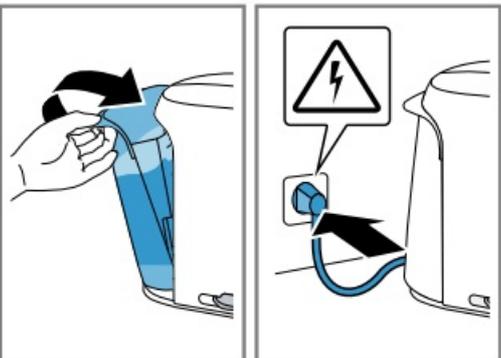


40

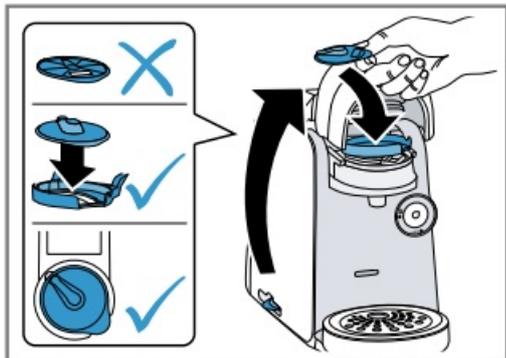

41

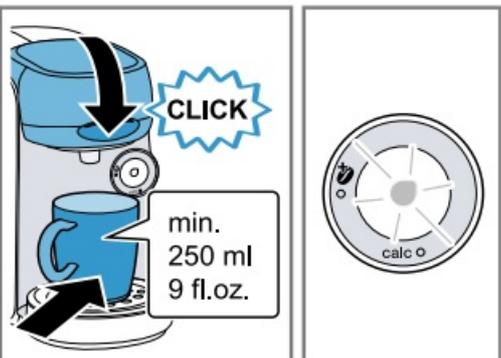

42

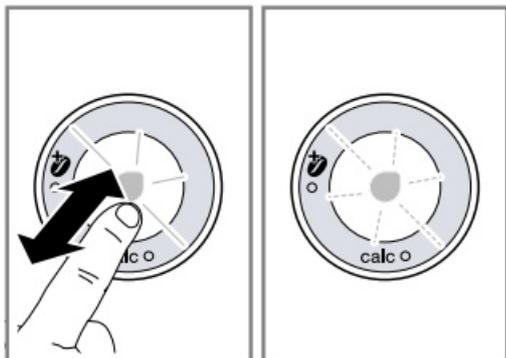


43




44



45

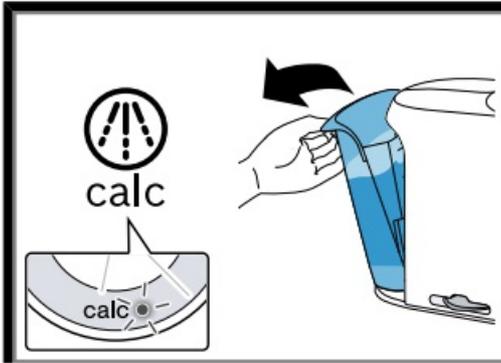

46

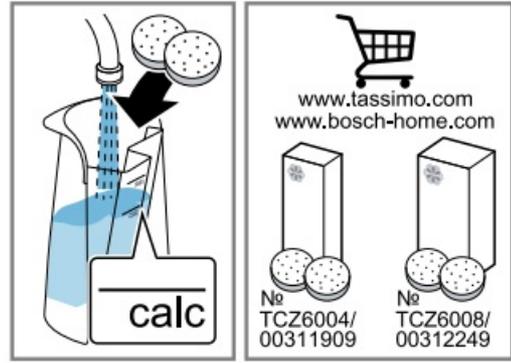


47

Descal the appliance


- If the LED lights up, run the descaling programme. Follow the illustrated instructions at the beginning of this manual.
- Immediately perform the descaling process according to the instructions.
- Do not use a descaling agent with phosphoric acid. Fig. 46 – 60




48

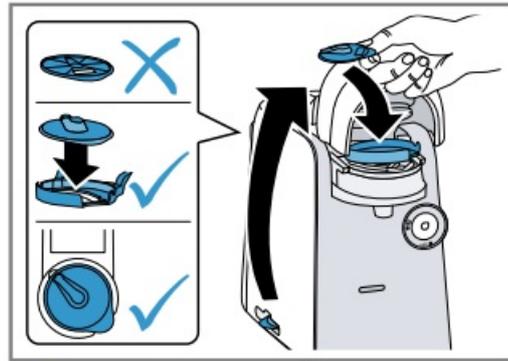






49

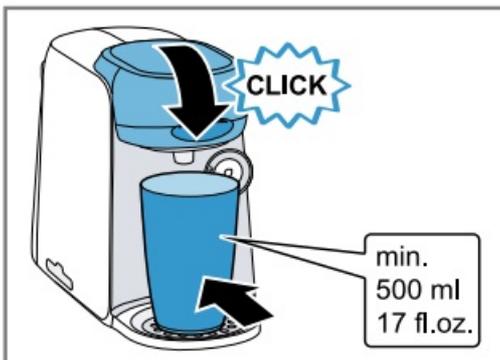

50

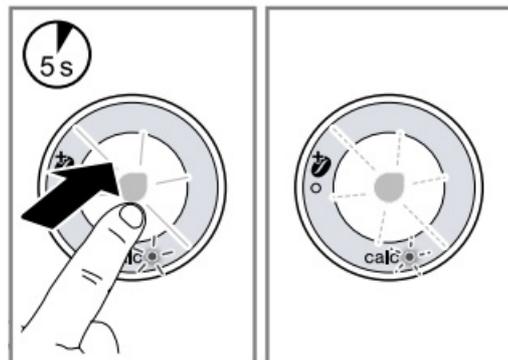

51

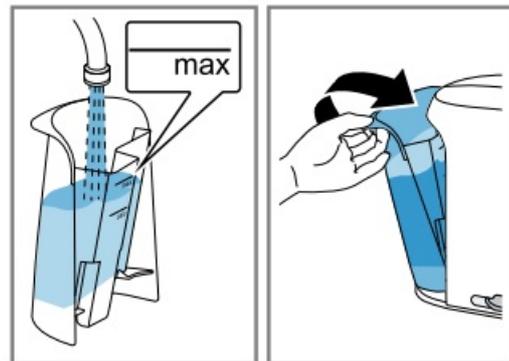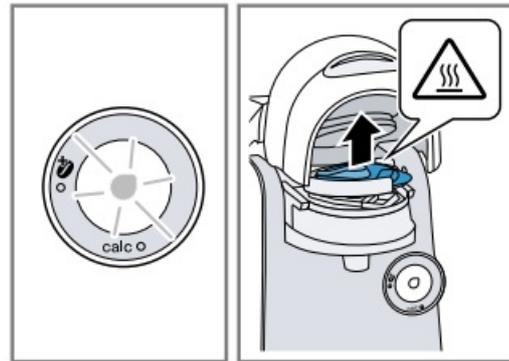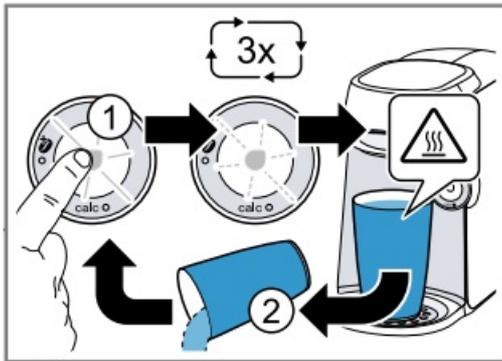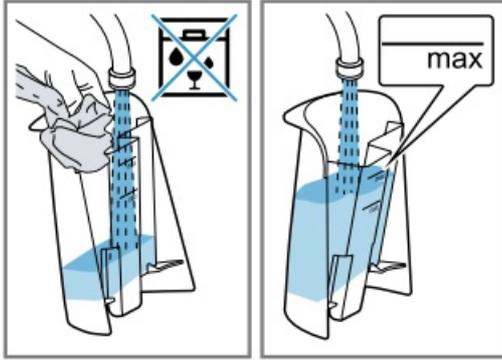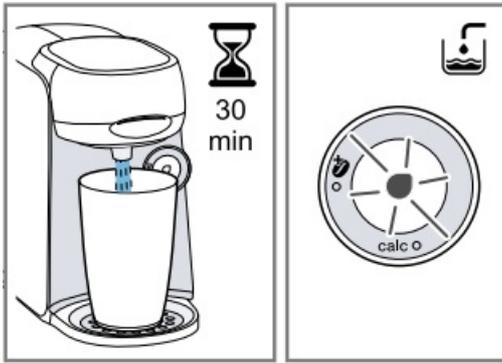



60

Troubleshooting

- Repairs to the appliance should only be carried out by trained specialist staff.
- Only use genuine spare parts when repairing the appliance.
- If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer
- Service or a similarly qualified person in order to prevent any risk.
- **The appliance is not working**
 - LEDs do not light up.
 - The appliance has no power supply.
 - Check to see whether the appliance is connected to the mains.
- **The brewing process starts, but the drink is not dispensed**
 - The water tank was removed during brewing and inserted again or the appliance has not been used for a long time.
 - Start cleaning with the Service T DISC.
 - The float is stuck in the water tank.

1. Describe the appliance.

- Describe the appliance.

2. Reach into the water tank and move the float up and down.

- **The brewing process does not start, status display lights up red**
 - The water tank has not been sufficiently filled.
 1. Fill the water tank with fresh, cold water up to the mark max.
 2. Insert the water tank.
- **The brewing process does not start, status display flashes red**
 - T DISC has not been correctly inserted.
 - Check whether the T DISC is inserted.
 - The T DISC bar code is not recognized.
 - Clean the T DISC reading window with a soft, damp cloth.
 - Smooth out the film of the T DISC.
 - Remove the used T DISC.
- Contact the TASSIMO care line if the problem persists.

- The appliance was not connected to the power supply when the T DISC was inserted.
- Connect the appliance to the power supply before inserting the T DISC.
- **The brewing unit cannot be closed**
 - T DISC piercing unit or T DISC holder is not correctly inserted.
 1. Press the T DISC piercing unit into the holder until it clicks audibly into place.
 2. Check the position of the T DISC holder.
 - T DISC has not been correctly inserted.
 1. Insert the T DISC with the printed side facing downwards.
 2. Check whether the tab of the T DISC is in the recess.
- **The brewing unit cannot be opened**
 - The brewing unit is locked.
 - Only open the brewing unit when the status display remains lit continuously.
 - If the brewing unit remains locked, contact the TASSIMO care line.
- **Water is dripping from the brewing unit**
 - T DISC is damaged or not correctly inserted.
 - Use a new T DISC.
 - T DISC piercing unit is not correctly inserted.
 - Press the T DISC piercing unit into the holder until it clicks audibly into place.
- **There is water under the cup stand**
 - Condensation has formed due to technical reasons or valves are clogged with limescale.
Describe the appliance.
 - Describe the appliance.
- **No LED is lit**
 - The appliance is in idle mode.
 - Press  or open or close the brewing system.
- **All LEDs flashing**
 - There are problems with the power supply.
 1. Pull out the mains plug, wait 5 minutes, and plug it back in.
 2. If the problem persists, contact the TASSIMO care line.
-  **LED lights up red even though there is enough water in the water tank**
 - The float is stuck in the water tank.
 1. Describe the appliance.
 - Descale the appliance
 2. Reach into the water tank and move the float up and down.
-  **LED lights up although softened water has been used**
 - Decalcified water still contains small amounts of lime.
 - Describe the appliance.
 - Describe the appliance.
 - LED and LED flash, brewing is not possible.
 - The appliance has a fault.
 1. Unplug the mains plug.
 2. Contact the TASSIMO care line.

- **Quality of beverages has deteriorated, e.g. crema or volume**

- The beverage outlet is soiled.
- Clean the beverage outlet.
- Clean the brewing unit with the T DISC
- The build-up of limescale in the appliance.
- Describe the appliance.
- Describe the appliance.

- **Drink volume has reduced**

- Drink dispensing halts.
- A water tank has not been sufficiently filled.
 1. Fill the water tank with fresh, cold water up to the mark **max**.
 2. Keep  pressing until the desired fill volume is reached.

Technical specifications

- **Voltage** 220–240 V ~
- **Frequency** 50 Hz
- **Power rating** 1400 W

Disposing of old appliance

1. Unplug the appliance from the mains.
 2. Cut through the power cord.
 3. Dispose of the appliance in an environmentally friendly manner.
- Information about current disposal methods is available from your specialist dealer or local authority.



-  This appliance is labeled under European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment – WEEE).
- The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

Warranty conditions

- You can make warranty claims for your appliance under the following conditions.
- The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased.
- The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

Central Service Contacts

Service world-wide

- Great Britain
- BSH Home Appliances Ltd.
- Grand Union House, Old Wolverton Road,
- Wolverton
- Milton Keynes MK12 5PT
- To arrange an engineer visit, to order spare parts and accessories, or for product advice please visit www.boschhome.co.uk Or call Tel.: 03448928979
- Calls are charged at the basic rate, please check with your telephone service provider for exact charges.
- TASSIMO careline
- For information, questions, or locations of authorised Bosch service centers nearest you, please contact TASSIMO:
- Phone: 08000328833
- www.tassimo.co.uk
- HELLO
- Looking for help? You'll find it here.
- Expert advice for your Bosch home appliances needs help with problems or a repair from Bosch experts.
- Find out everything about the many ways Bosch can support you: www.bosch-home.com/service
- Contact data of all countries are listed in the attached service directory.
- Visit tassimo.com for registration, accessories, and more.
- BSH Hausgeräte GmbH
- Carl-Wery-Straße 34
- 81739 München, GERMANY
- www.bosch-home.com
- A Bosch Company
- Valid within Great Britain:
- Imported to Great Britain by
- BSH Home Appliances Ltd.
- Grand Union House
- Old Wolverton Road
- Wolverton, Milton Keynes
- MK12 5PT
- United Kingdom

Documents / Resources

 <p>TASSIMO finesse</p> <p>TAS16Bx</p> <p>BOSCH</p>	<p>TASSIMO TAS16Bx Multi Beverage Machine [pdf] User Manual TAS16Bx Multi Beverage Machine, TAS16Bx, Multi Beverage Machine, Beverage Machine, Mac hine</p>
--	---

References

- [🇦🇹 Bosch Hausgeräte Österreich: Qualität & Zuverlässigkeit | Bosch AT](#)
- [🇨🇭 Bosch Hausgeräte CH | Qualität, Zuverlässigkeit & Präzision](#)
- [🌐 Home Appliances Global Website | Bosch](#)
- [🌐 Bosch Service | Service worldwide](#)
- [🇸🇰 Kvalitné, udržateľné domáce spotrebiče | Bosch](#)
- [🇸🇰 Bæredygtige kvalitetshvidevarer og -husholdningsprodukter | Bosch](#)
- [🇪🇸 Electrodomésticos sostenibles y de calidad | Bosch](#)
- [🇫🇮 Laadukkaat, kestävät kodinkoneet | Bosch](#)
- [🇬🇷 Ποιοτικές, βιώσιμες οικιακές συσκευές | Bosch](#)
- [🇬🇧 Bosch home appliances: experience quality, reliability and precision.](#)
- [🇸🇰 Bærekraftige husholdningsprodukter av høy kvalitet | Bosch](#)
- [🇷🇴 Electrocasnice Bosch: experimentează sustenabilitatea, calitatea și precizia.](#)
- [🇸🇪 Högkvalitativa och hållbara hushållsprodukter och vitvaror - Bosch Home](#)
- [🇮🇹 TASSIMO Webshop | T-DISCs, maschinen, angebote](#)
- [🇮🇹 TASSIMO Webshop | T-DISCs, Maschinen, Angebote](#)
- [🇮🇹 TASSIMO Webshop | Make drinks that are perfect in every way](#)
- [🇮🇹 TASSIMO | Káva a horké nápoje vysoké kvality | Tassimo CZ](#)
- [🇮🇹 TASSIMO Webshop | Für jeden Moment das perfekte Getränk](#)
- [🇮🇹 TASSIMO | Kaffe og varme drikke af høj kvalitet | Tassimo DK](#)
- [🇮🇹 TASSIMO Tienda Online | Haz tu bebida perfecta en diferentes maneras](#)
- [🇮🇹 Dosettes, machines à café, offres & accessoires | Boutique TASSIMO](#)
- [🇮🇹 Ανακαλύψτε το Tassimo | Tassimo GR](#)
- [🇮🇹 TASSIMO | T-Discs, Coffee machines & Offers | For every moment](#)
- [🇮🇹 TASSIMO | Kaffe og varm drikke av høy kvalitet | Tassimo NO](#)
- [🇮🇹 Tassimo | Cafea și băuturi calde de înaltă calitate | Tassimo RO](#)
- [🌐 Switch stores](#)
- [🇮🇹 TASSIMO | Kaffe och varma drycker av hög kvalitet | Tassimo SE](#)
- [🇮🇹 TASSIMO | Káva a horúce nápoje vysokej kvality | Tassimo SK](#)
- ^{B/S/H/} [Home | BSH Hausgeräte GmbH](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.