



## taurus Intenso Mocha Instruction Manual

[Home](#) » [taurus](#) » taurus Intenso Mocha Instruction Manual 


# taurus

### Intenso Mocha Instruction Manual

#### Contents

- [1 Intenso Mocha](#)
- [2 SAFETY ADVICE AND WARNINGS](#)
- [3 Documents / Resources](#)
  - [3.1 References](#)

### Intenso Mocha

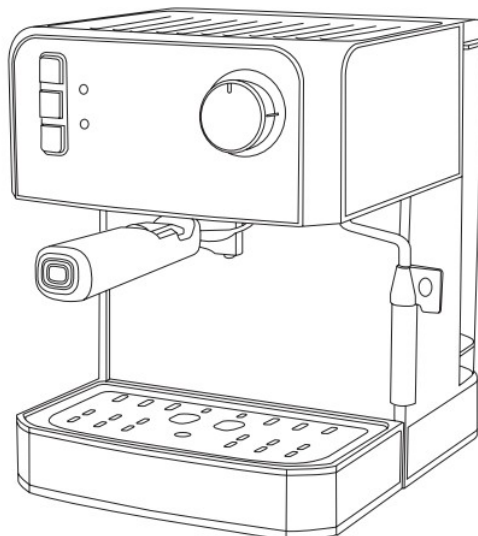

**Dear customer,**

Many thanks for choosing to purchase a TAURUS brand product.

Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

## **SAFETY ADVICE AND WARNINGS**

- Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions could lead to an accident.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Clean all the parts of the product that will be in contact with water or coffee, as indicated in the cleaning section, before use.
- This appliance must not be immersed in water or any other liquid.
- Avoid spillage on the connector.
- The heating element surface is subject to residual heat after use.
- **WARNING:** Misuse of this appliance can lead to potential injury. Care shall be taken during cleaning.
- The coffee-maker shall not be placed in a cabinet when in use.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
- Ensure that the voltage indicated on the rating label matches the mains voltage before plugging in the appliance.
- Connect the appliance to a mains socket rated at least 10 amperes.
- The appliance's plug must fit into the mains socket properly. Do not alter the plug. Do not use plug adaptors.
- Do not use the appliance if the supply cord or the plug is damaged.
- Do not pull on the supply cord. Never use the supply cord to lift up, carry or unplug the appliance.
- Do not wrap the supply cord around the appliance.
- Check the state of the supply cord. If it is damaged it will increase the risk of electric shock.
- If the appliance enclosure breaks, immediately disconnect the appliance from the mains to prevent the possibility of an electric shock.
- Do not use the appliance if it has been dropped, if there are visible signs of damage or if it has a leak.
- Do not touch the plug with wet hands.
- The appliance must be used and placed on a flat, stable surface.
- Do not place the appliance on hot surfaces, such as cooking plates, gas burners, ovens or similar.

- Take care to avoid starting the appliance involuntarily.
- Do not leave the appliance out in the rain or exposed to moisture. If water gets into the appliance, this will increase the risk of electric shock.

## SERVICE

- Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.

## ANOMALIES AND REPAIR

- Take the appliance to an authorised technical support service if problems arise. Do not try to dismantle or repair without assistance, as this may be dangerous.



This symbol means that in case you wish to dispose of the product once its working life has ended, take it to an authorised waste agent for the selective collection of waste electrical and electronic equipment (WEEE).

- Information relating to Regulation (EU) 2023/826 on ecodesign requirements for energy consumption in off mode and standby mode.
  - This coffee maker switches automatically into off mode, 22 minutes after completion of the last brewing cycle.
  - This coffee maker has an off mode power consumption of 0.4W
- This appliance complies with Directive 2014/35/EU on Low Voltage, Directive 2014/30/EU on Electromagnetic Compatibility, Directive 2011/65/EU on the restrictions of the use of certain hazardous substances in electrical and electronic equipment and Directive 2009/125/EC on the ecodesign requirements for energy-related products.

## WARRANTY AND TECHNICAL ASSISTANCE

- This product enjoys the recognition and protection of the legal guarantee in accordance with current legislation. To enforce your rights or interests you must go to any of our official technical assistance services.
- You can find the closest one by accessing the following web link: <http://taurus-home.com/>
- You can also request related information by contacting us.
- You can download this instruction manual and its updates at <http://taurus-home.com/>


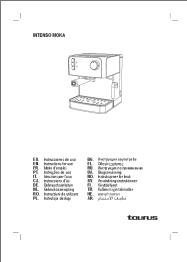
**taurus**

Hong Kong

ADDRESS Unit H,13/F., World Tech Centre,  
PHONE Hong kong (852) 2448 0116 / 9197 3519

[www.taurus-home.com](http://www.taurus-home.com)

13/09/2024 – Page Size A5

	<a href="#">taurus Intenso Mocha</a> [pdf] Instruction Manual Intenso Mocha, Mocha
	<a href="#">taurus Intenso Mocha</a> [pdf] Instruction Manual Intenso Mocha, Intenso, Mocha

References

- [t Taurus](#)
- [t Taurus](#)
- [t Taurus](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.