



## Taylor 5873 Digital Super Loud Timer User Manual

[Home](#) » [TAYLOR](#) » Taylor 5873 Digital Super Loud Timer User Manual 

### Contents

- [1 Taylor 5873 Digital Super Loud Timer](#)
- [2 INTRODUCTION](#)
- [3 BATTERY INFORMATION](#)
- [4 SET THE CLOCK](#)
- [5 PROGRAM THE TIMER](#)
- [6 SPECIFICATIONS](#)
- [7 KEY FEATURES AND FUNCTIONALITY](#)
- [8 CLEANING & CARE](#)
- [9 ONE YEAR LIMITED WARRANTY](#)
- [10 References](#)
- [11 Related Posts](#)



**Taylor 5873 Digital Super Loud Timer**



## INTRODUCTION

In the world of culinary arts, timing is everything. The Taylor 5873 Digital Super Loud Timer ensures that your cooking and baking are timed to perfection, preventing any kitchen mishaps like overbaked cookies or undercooked roasts. Let's delve into the details of this indispensable kitchen tool.

## BATTERY INFORMATION

The timer operates on 2 AA batteries (included). Before use, remove the strip under battery cover. Replace batteries when readings grow dim.

## SET THE CLOCK

1. Slide the switch on the bottom of the timer to CLOCK SET.
2. Press "H" to set the hour ( 1-11 AM/PM or 24 hour mode). Press "M" to set minutes the "▶■" to confirm time setting.
3. Slide switch back to CLOCK or TIMER.

## PROGRAM THE TIMER

- Slide switch to TIMER.
- Press "H" and "M" to set hours and minutes.
- Press "▶■" to start the timer countdown.
- To pause, press"▶■". Press to start timing again.
- To reset the timer, press"▶■" to pause then press again and hold for 3 seconds.
- When the countdown reaches zero, the alarm will sound at 95 decibels. Press any button to stop the alarm. The timer has a memory function and will display the previously set time.
- The timer will also count up. Press"▶■" when '00:00 00' displays and the timer will count up and"
- TIMER" shows on the LCD.
- If the slide switch is in CLOCK or CLOCK SET and the countdown reaches zero. the alarm will sound and

TIMER DONE will blink. Press any button to stop the alarm. The count up time will display when the switch is moved to TIMER. Press “▶■” to recall memory function. Press and hold “▶■” for 3 seconds to reset.

- The maximum timer allowance is '23H 59M00S'.
  - **NOTE:** Please recycle or dispose of batteries per local regulations.
  - **WARNING:** Batteries may pose a choking hazard. As with all small items, do not let children handle batteries. If swallowed, seek medical attention immediately.
  - **PRECAUTION:** Do not dispose of batteries in fire. Batteries may explode or leak. Remove the batteries if the scale will not be used for a long period of time.

## SPECIFICATIONS

- **Color:** Gray
- **Brand:** Taylor
- **Material:** Plastic
- **Product Dimensions:** 1.94"D x 3.3"W x 3.3"H
- **Item Weight:** 3.36 Ounces
- **Manufacturer:** Lifetime Brands Inc.
- **Country of Origin:** China
- **Item Model Number:** 5873
- **Batteries:** 2 AA batteries required (included)

## KEY FEATURES AND FUNCTIONALITY

- **Super Loud Alarm**
  - With a 95-decibel alert, this timer's alarm continues to beep until turned off, ensuring you hear it from anywhere in the house.
- **Versatile Timer Range**
  - The timer offers a full display with hour/minute/second timing, capable of counting up or down to 23 hours, 59 minutes, and 59 seconds.
- **Dual Functionality**
  - When not in use as a timer, it doubles as a clock, adding utility to your kitchen space.
- **Elegant Design with Practicality**
  - Boasting stainless steel accents and a non-skid base, it combines a classic design with functionality to fit into any kitchen décor.
- **Battery Information**
  - Operates on 2 AA batteries, which are included. A safety strip under the battery cover must be removed before use. Replace batteries when display dims.
- **Setting the Clock and Timer**
  - Easily set the clock and program the timer using designated buttons. The timer also has a memory function for frequently used settings.
- **Alarm and Safety Features**
  - The alarm sounds at 95 decibels and will continue until manually turned off. The device also has important safety messages regarding battery use and disposal.
- **Cleaning and Maintenance**

- The timer should be cleaned by hand and not immersed in water or placed in the dishwasher.
- **One-Year Limited Warranty**
  - Taylor offers a one-year warranty (excluding batteries), ensuring reliability and customer satisfaction.
- **California's Proposition 65 Warning**
  - This product is compliant with California's Proposition 65, which requires warnings for products containing chemicals known to the state of California to cause cancer, birth defects, or other reproductive harm.

## **CLEANING & CARE**

- **Cleaning the Timer:**
  - Clean the timer by hand using a damp, non-abrasive cloth.
  - Be careful not to let any water get into the electronic components or the Heated Base of the timer.
  - Avoid using harsh chemicals, abrasive cleaners, or scouring pads, as they may damage the surface.
- **Avoiding Water Immersion:**
  - Do not immerse the timer in water or any other liquids.
  - The timer, especially its electronic components, is not designed to withstand water immersion and doing so can cause damage.
- **Battery Maintenance:**
  - The timer operates on 2 AA batteries. Replace the batteries when the display grows dim to ensure continued accurate performance.
  - To change the batteries, open the battery compartment, replace the batteries ensuring correct polarity, and then close the compartment.
  - Do not mix old and new batteries or different types of batteries.
  - If the timer will not be used for a long period, remove the batteries to prevent potential damage from battery leakage.
- **Storage:**
  - Store the timer in a dry place when not in use.
  - Avoid exposing the timer to extreme temperatures, humidity, or direct sunlight, as these conditions can damage the electronic components.
- **Handling:**
  - Handle the timer with care. Avoid dropping it or subjecting it to impact, as this can damage its internal components.
- **Regular Checks:**
  - Periodically check the timer for any signs of wear or damage. If any damage is noticed, especially to the cord or plug, do not use the timer.
- **Professional Servicing:**
  - Do not attempt to repair or disassemble the timer yourself, as this could damage it and void the warranty. If the timer needs servicing, contact Taylor customer service or a professional technician.

## **ONE YEAR LIMITED WARRANTY**

Taylor warrants this product to be free from defects in material or workmanship (excluding batteries), and on return, will repair or replace it at our option, without charge.

- ©2016 Taylor Precision Products. Taylor® is a registered trademark of Taylor Precision Products and its affiliated companies. All rights reserved.
- [www.shoptoylorusa.com](http://www.shoptoylorusa.com)
- Made in China
- **Date:** 12/12/16
- **Designer:** Wendell W. Cisco II

## Frequently Asked Questions

What are the voltage and wattage specifications of the Nostalgia FPS200 Electric Fondue Pot?

The appliance operates at 120 Volts, 60 Hz, and 1200 Watts. It is ETL Approved.

Can I immerse the Nostalgia FPS200 Fondue Pot or its cord in water?

No, never immerse the appliance or its cord in water. This poses a risk of electrical shock and can damage the appliance.

Is the Nostalgia FPS200 Fondue Pot safe for use near water?

No, it should never be used near water to avoid the risk of electric shock.

Can I use abrasive materials to clean the Fondue Pot?

No, do not use abrasive sponges or cloths on the appliance as they can damage the surface.

Is it safe to leave the Fondue Pot unattended while in use?

No, never leave the appliance unattended while in use. Always unplug the appliance when not in use and before cleaning.

Can I put the Nostalgia FPS200 Fondue Pot in a dishwasher?

No, the appliance should not be placed in a dishwasher. It should be hand-washed with care.

Is the appliance intended for outdoor use?

No, the Nostalgia FPS200 Fondue Pot is designed for indoor use only.

Can I operate the Fondue Pot with a damaged cord or plug?

No, do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions. It should be returned to an authorized service facility for examination or repair.

What should I do if I need to use an extension cord with this Fondue Pot?

If a long detachable power-supply cord or extension cord is used, it should have an electrical rating at least as great as the appliance. Also, if the appliance is grounded, the extension cord should be a grounding 3-wire cord.

How do I operate the Nostalgia FPS200 Electric Fondue Pot?

Before first use, wipe down the Fondue Pot, Fork Rest, and Color-Coded Forks with a damp, non-abrasive cloth. Fill the pot with your fondue mixture without exceeding the maximum capacity of about 4 cups. Plug in the appliance, set the desired temperature, and use the Fondue Forks for dipping.

What precautions should I take when using oil in the Fondue Pot?

When using oil, ensure it is suitable for high temperatures and does not smoke or boil over. Do not reuse oil and do not cover the Fondue Pot during cooking.

How should I clean the Nostalgia FPS200 after use?

Ensure the appliance is completely cool before cleaning. Hand wash the Fondue Pot, Fork Rest, and Forks in warm, soapy water. Wipe the Heated Base with a dry, non-abrasive cloth. Ensure no water gets inside the Heated Base.

**Download The Pdf Link: [Taylor 5873 Digital Super Loud Timer User Manual](#)**

---

## References

- [User Manual](#)