





tc electronic DYNAMIC DIGITAL DELAY User Guide

Home » tc electronic » tc electronic DYNAMIC DIGITAL DELAY User Guide 🖫

Contents

- 1 tc electronic DYNAMIC DIGITAL DELAY
- **2 Product Usage Instructions**
- 3 Controls
- **4 Battery Replacement**
- **5 Specification**
- **6 LIMITED WARRANTY**
- 7 Safety Instruction
- **8 FEDERAL COMMUNICATIONS COMMISSION COMPLIANCE**

INFORMATION

9 FAQ

10 Documents / Resources

10.1 References

tc electronic

tc electronic DYNAMIC DIGITAL DELAY



Specifications

• Connectors: 1/4" TS, unbalanced

Input Impedance: >350 k
Output Impedance: 1 k

• Power Input: Standard 9 V DC, center negative, >100 mA

• Battery Option: Internal 9 V battery connector

Product Usage Instructions


Quick Start Guide:

- 1. Connect your guitar to the INPUT jack of the pedal.
- 2. Connect a cable from the OUTPUT jack to your amplifier.
- 3. The LED will light up when the pedal is engaged.
- 4. The pedal operates in true bypass when disengaged.
- 5. Adjust the MIX knob to blend the delayed signal with the dry signal.
- 6. Set the TIME knob to adjust the delay time before full decay.

Controls and Connectors:


For English (EN), Spanish (ES), Portuguese (PT), Italian (IT), Dutch (NL), Swedish (SE), Polish (PL), Japanese (JP), and Chinese (CN) languages, follow the respective instructions provided in the manual for connecting the pedal and adjusting settings.

Controls

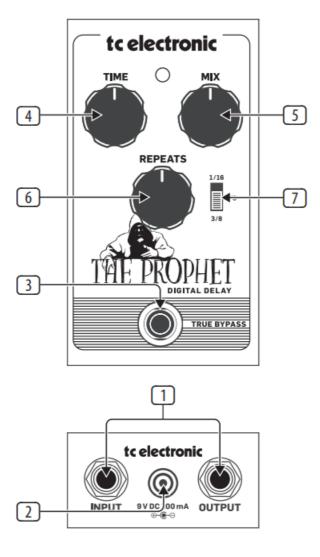


- 1. **Input/Output jacks** Connect a 1/4" cable from your guitar to the INPUT jack, and connect a cable from the OUTPUT jack to your amplifier.
- 2. **9 V DC** Connect a 9 V power supply (not included).
- 3. **Footswitch** Turns the effect on and off. The LED will light when the pedal is engaged. The pedal operates in true bypass when disengaged.
- 4. **Time** Adjusts the tempo of the repeats.
- 5. **Mix** Adjusts how much of the effect is mixed with the dry signal.
- 6. Repeats Adjusts how many echos are heard before full decay.
- 7. **3-position switch** Adjusts the range for the delay time.

Battery Replacement

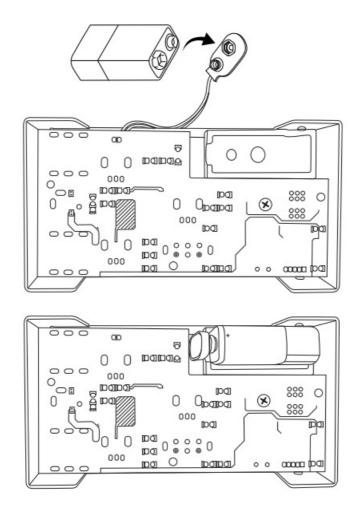

Storage

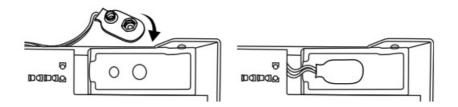

Specification

Connectors

- Input 1/4" TS, unbalanced
- \circ Impedance >350 k Ω
- Output 1/4" TS, unbalanced
- Impedance 1 kΩ
- Power input Standard 9 V DC, center negative, >100 mA
- Battery option Internal 9 V battery connector
- Current consumption <100 mA

Physical

- Dimensions (H x W x D) 58 x 74 x 132 mm (2.3 x 2.9 x 5.2")
- Weight 0.5 kg (1.1 lbs)

LEGAL DISCLAIMER

Music Tribe accepts no liability for any loss that may be suffered by any person who relies either wholly or in part upon any description, photograph, or statement contained herein. Technical specifications, appearances, and other information are subject to change without notice. All trademarks are the property of their respective owners. Midas, Klark Teknik, Lab Gruppen, Lake, Tannoy, Turbosound, TC Electronic, TC Helicon, Behringer, Bugera, Aston Microphones, and Coolaudio are trademarks or registered trademarks of Music Tribe Global Brands Ltd. © Music Tribe Global Brands Ltd. 2023 All rights reserved.

LIMITED WARRANTY

For the applicable warranty terms and conditions and additional information regarding Music Tribe's Limited Warranty, please see complete details online at community.musictribe.com/pages/support#warranty

Safety Instruction

- Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with a dry cloth.
- 7. Do not block any ventilation openings. Install by the manufacturer's instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Use only attachments/accessories specified by the manufacturer.
- 10. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 11. Correct disposal of this product: This symbol indicates that this product must not be disposed of with household waste, according to the WEEE Directive (2012/19/EU) and your national law. This product should be taken to a collection center licensed for the recycling of waste electrical and electronic equipment (EEE). The mishandling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. Atthe same time, your cooperation in the correct disposal of this product will contribute to the efficient use of natural resources. For more information about where you can take your waste equipment for recycling, please contact your local city office or your household waste collection service.
- 12. Do not install in a confined space, such as a bookcase or similar unit.
- 13. Do not place naked flame sources, such as lighted candles, on the apparatus. Batteries (battery packs or batteries installed) shall not be exposed to excessive heat such as sunshine, fire, or the like.

WARNING

- As with all small batteries, the batteries used with this product should be kept away from small children who still put things intheir mouths. If they are swallowed, promptly call your local poison control center.
- Always purchase the correct size and grade of battery most suitable for intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device before battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).

- Always remove the battery if consumed or if the product is to be left unused for a long time.
- Replacement of a battery with an incorrect type that can defeat safeguard! Replace only with the same or equivalent type!
- Risk of fire or explosion if the battery is replaced by an incorrect type.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- Leaving a battery in an extremely high-temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas; and
- A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
- Attention should be drawn to the environmental aspects of battery disposal

FEDERAL COMMUNICATIONS COMMISSION COMPLIANCE INFORMATION

• Responsible Party Name: Music Tribe Commercial NV Inc.

• Address: 122 E. 42nd St.1, 8th Floor NY, NY 10168, United States

• Email Address: legal@musictribe.com

THE PROPHET DIGITAL DELAY

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1. this device may not cause harmful interference, and
- 2. this device must accept any interference received, including interference that may cause undesired operation. Important information:

Changes or modifications to the equipment not expressly approved by Music Tribe can void the user's authority to use the equipment.

Hereby, Music Tribe declares that this product is in compliance with Directive 2014/30/EU, Directive 2011/65/EU and Amendment 2015/863/EU, Directive 2012/19/EU, Regulation 519/2012 REACH SVHC and Directive 1907/2006/EC.

Full text of EU DoC is available at https://community.musictribe.com/

- EU Representative: Music Tribe Brands DK A/S
- Address: Gammel Strand 44, DK-1202 København K, Denmark
- UK Representative: Music Tribe Brands UK Ltd.
- Address: 6 Lloyds Avenue, Unit 4CL London EC3N 3AX, United Kingdom

FAQ

Q: What should I do if the LED does not light up when I engage the pedal?

A: Check the battery connection or power supply to ensure proper functioning of the pedal.

Q: How can I achieve different delay effects with this pedal?

A: Experiment with adjusting the TIME, MIX, and REPEATS knobs to create various delay effects according to your preference.

Q: Can I use a different power adapter with this pedal?

A: Use only a standard 9 V DC power adapter with center negative polarity to power the pedal for optimal performance.

Documents / Resources



tc electronic DYNAMIC DIGITAL DELAY [pdf] User Guide DYNAMIC DIGITAL DELAY, DYNAMIC, DIGITAL DELAY, DELAY

References

- Music Tribe
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.