

TCHELICON VOICETONE C1 Hardtune and Pitch Correction Pedal



# TCHELICON VOICETONE C1 Hardtune and Pitch Correction Pedal User Manual

[Home](#) » [TCHELICON](#) » TCHELICON VOICETONE C1 Hardtune and Pitch Correction Pedal User Manual 

## Contents

- [1 TCHELICON VOICETONE C1 Hardtune and Pitch Correction Pedal](#)
- [2 Product Usage Instructions](#)
- [3 Important Safety Instructions](#)
- [4 LEGAL DISCLAIMER](#)
- [5 LIMITED WARRANTY](#)
- [6 Controls](#)
- [7 FEDERAL COMMUNICATIONS COMMISSION COMPLIANCE INFORMATION](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)

# TCHELICON

**TCHELICON VOICETONE C1 Hardtune and Pitch Correction Pedal**



## Product Specifications

- **Product Name:** VOICETONE C1
- **Version:** 2.0
- **Manufacturer:** Music Tribe

## Important Safety Instructions

**Caution:** To reduce the risk of fire or electric shock, do not expose this appliance to rain and moisture. The apparatus shall not be exposed to dripping or splashing liquids, and no objects filled with liquids, such as vases, shall be placed on the apparatus.

**Caution:** These service instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operation instructions. Repairs have to be performed by qualified service personnel.

## Product Usage Instructions

1. Read and keep all safety instructions provided.
2. Avoid exposure to rain, moisture, and dripping liquids.
3. Do not place objects filled with liquids on the device.
4. Qualified service personnel should handle any repairs.
5. Ensure the mains plug or disconnect device is readily operable.
6. Dispose of the product correctly at authorized recycling centers.

7. Avoid installation in confined spaces or near heat sources.
8. Avoid placing naked flame sources on the apparatus.
9. Dispose of batteries at designated battery collection points.

## FAQ (Frequently Asked Questions)

- **Q: Can I use VOICETONE C1 in tropical climates?**

A: Yes, you can use the device in places with tropical and moderate climates that support indicated temperatures.

- **Q: Where can I find information on recycling this product?**

A: For more information about recycling locations and Music Tribe's waste collection service, please contact your local city office or visit [community.musictribe.com/pages/support#warranty](https://community.musictribe.com/pages/support#warranty) .

- **Q: What should I do if the device stops functioning normally?**




A: If the device stops functioning normally, do not attempt to repair it yourself. Contact qualified service personnel for assistance.

## Quick Start Guide

VOICETONE C1

## Important Safety Instructions



-  Terminals marked with this symbol carry electrical current of sufficient magnitude to constitute risk of electric shock. Use only high-quality professional speaker cables with 1/4" TS or twist-locking plugs pre-installed. All other installation or modification should be performed only by qualified personnel.
-  This symbol, wherever it appears, alerts you to the presence of uninsulated dangerous voltage inside the enclosure – voltage that may be sufficient to constitute a risk of shock.
-  This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Please read the manual.

## Caution

- To reduce the risk of electric shock, do not remove the top cover (or the rear section).
- No user serviceable parts inside. Refer servicing to qualified personnel.

### Caution


To reduce the risk of fire or electric shock, do not expose this appliance to rain and moisture. The apparatus shall not be exposed to dripping or splashing liquids and no objects filled with liquids, such as vases, shall be placed on the apparatus.

### Caution

- These service instructions are for use by qualified service personnel only.
  - To reduce the risk of electric shock do not perform any servicing other than that contained in the operation instructions. Repairs have to be performed by qualified service personnel.
1. Read these instructions.
  2. Keep these instructions.
  3. Heed all warnings.
  4. Follow all instructions.
  5. Do not use this apparatus near water.
  6. Clean only with dry cloth.
  7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
  8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
  9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
  10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
  11. Use only attachments/accessories specified by the manufacturer.
- 
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
  13. Unplug this apparatus during lightning storms or when unused for long periods of time.
  14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
  15. The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
  16. Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall

remain readily operable.



17.  Correct disposal of this product: This symbol indicates that this product must not be disposed of with household waste, according to the WEEE Directive (2012/19/EU) and your national law. This product should be taken to a collection center licensed for the recycling of waste electrical and electronic equipment (EEE). The mishandling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the efficient use of natural resources. For more information about where you can take your waste equipment for recycling, please contact your local city office, or your household waste collection service.
18. Do not install in a confined space, such as a book case or similar unit.
19. Do not place naked flame sources, such as lighted candles, on the apparatus.
20. Please keep the environmental aspects of battery disposal in mind. Batteries must be disposed-of at a battery collection point.
21. This apparatus may be used in tropical and moderate climates up to 45°C.


## LEGAL DISCLAIMER

- Music Tribe accepts no liability for any loss which may be suffered by any person who relies either wholly or in part upon any description, photograph, or statement contained herein.
- Technical specifications, appearances and other information are subject to change without notice. All trademarks are the property of their respective owners. Midas, Klark Teknik, Lab Gruppen, Lake, Tannoy, Turbosound, TC Electronic, TC Helicon, Behringer, Bugera, Aston Microphones and Cool audio are trademarks or registered trademarks of Music Tribe Global Brands Ltd. © Music Tribe Global Brands Ltd. 2023 All rights reserved.

## LIMITED WARRANTY

For the applicable warranty terms and conditions and additional information regarding Music Tribe's Limited Warranty, please see complete details online at [community.musictribe.com/pages/support#warranty](https://community.musictribe.com/pages/support#warranty) .

## Controls

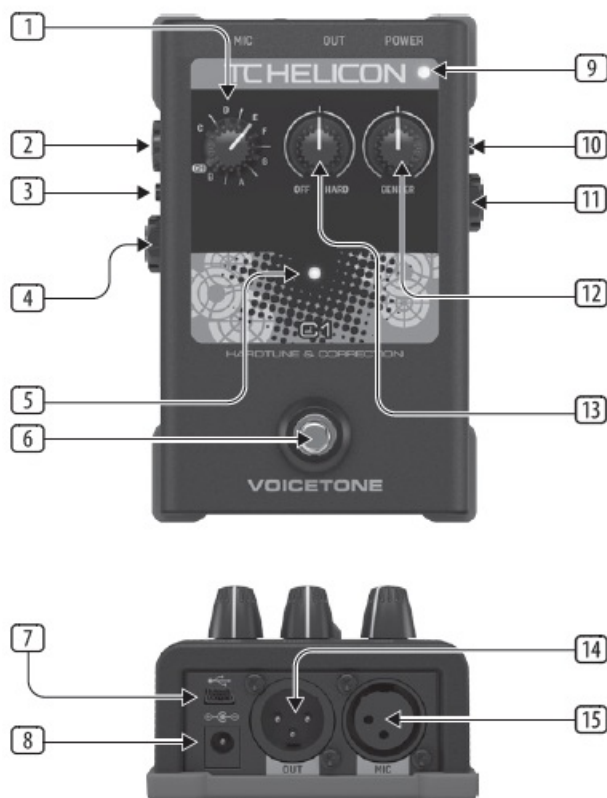

1. Key Selector – Selects a major key for pitch correction. CH setting is either Chromatic (no Instrument) or Chords (Instrument connected).
2. Mic Input Level Control
3. Ground Lift – Press the button inward if you experience buzz and hum.
4. Instrument Thru – Send a copy of the instrument input signal to an amp or PA.
5. Effect Active LED
6. Effect On/Off Footswitch
7. USB – Accepts the included mini-USB cable for firmware update.
8. Power – Connect the included 12 V / >= 400 mA power supply.
9. Input Level LED – Green = signal, red = clip.
10. Mic Control – Use the optional MP-75 mic (button in = on).
11. Guide Instrument Input
12. Gender – Adjust your vocal biology between male and female.
13. Off/Hard – Adjust the pitch correction attack from natural to robotic.
14. Out – Connect to a mixer or powered speaker.
15. Mic – Connect your microphone.

## FEDERAL COMMUNICATIONS COMMISSION COMPLIANCE INFORMATION

**TC Helicon**  
VOICETONE C1

- **Responsible Party Name:** Music Tribe Commercial NV Inc.
- **Address:** 122 E. 42nd St.1, 8th Floor NY, NY 10168, United States
- **Email Address:** [legal@musictribe.com](mailto:legal@musictribe.com)

## VOICETONE C1

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

### Important information:


- Changes or modifications to the equipment not expressly approved by Music Tribe can void the user's authority to use the equipment.
- Operation Ambient Temperature up to 45°C.

Hereby, Music Tribe declares that this product is in compliance with Directive 2014/35/EU, Directive 2014/30/EU, Directive 2011/65/EU and Amendment 2015/863/EU, Directive 2012/19/EU, Regulation 519/2012 REACH SVHC and Directive 1907/2006/EC.

- Full text of EU DoC is available at <https://community.musictribe.com/>
- **EU Representative:** Music Tribe Brands DK A/S
- **Address:** Gammel Strand 44, DK-1202 København K, Denmark
- **UK Representative:** Music Tribe Brands UK Ltd.
- **Address:** 6 Lloyds Avenue, Unit 4CL London EC3N 3AX, United Kingdom



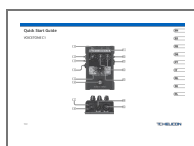


---

## Documents / Resources



**[TCHELICON VOICETONE C1 Hardtune and Pitch Correction Pedal](#)** [pdf] User Manual  
VOICETONE C1 Hardtune and Pitch Correction Pedal, VOICETONE C1, Hardtune and Pitch Correction Pedal, Pitch Correction Pedal, Correction Pedal, Pedal

## References

-  [Music Tribe](#)
-  [Music Tribe](#)
-  [Music Tribe](#)
-  [Music Tribe](#)
-  [Music Tribe](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.