



# TCL HH515V 5G Home Station Router User Guide

[Home](#) » [TCL](#) » TCL HH515V 5G Home Station Router User Guide 

## Contents

- [1 TCL HH515V 5G Home Station Router](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 INSERT SIM CARD](#)
- [6 CONNECTIVITY](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)

# TCL

**TCL HH515V 5G Home Station Router**



## Product Information

The TCL CJB1YM001AAB is a wireless router that supports both 4G and 5G networks. It has indicators for power, Wi-Fi/WPS, 4G and 5G networks. The router comes with WAN/LAN ports, LAN ports, a telephone port, a power connector, a micro USB port, a nano SIM card slot, and a reset button. It also has a WPS button that can be used to enable the WPS function.

 
## Product Usage Instructions

To use the TCL CJB1YM001AAB wireless router, follow these instructions:

1. Connect the power adapter to the power connector and plug it into an electrical outlet.
2. Insert a nano SIM card into the nano SIM card slot located at the bottom of the device. Do not remove the SIM card when the router is in use.
3. Press the power button to turn on the device. The power indicator will light up.
4. Connect your computer or other wired devices to the WAN/LAN port or LAN ports using an Ethernet cable.
5. Use the telephone port to connect a telephone to make or answer calls.
6. To enable the WPS function, press the WPS button for 3 seconds. The WPS function will be automatically disabled if a WPS connection is not established within 2 minutes.
7. If you need to reset the device, use a paperclip to press and hold the reset button for 3 seconds.


**Note:** The micro USB port is intended for debug use only and should not be used for normal operation.

## OVERVIEW

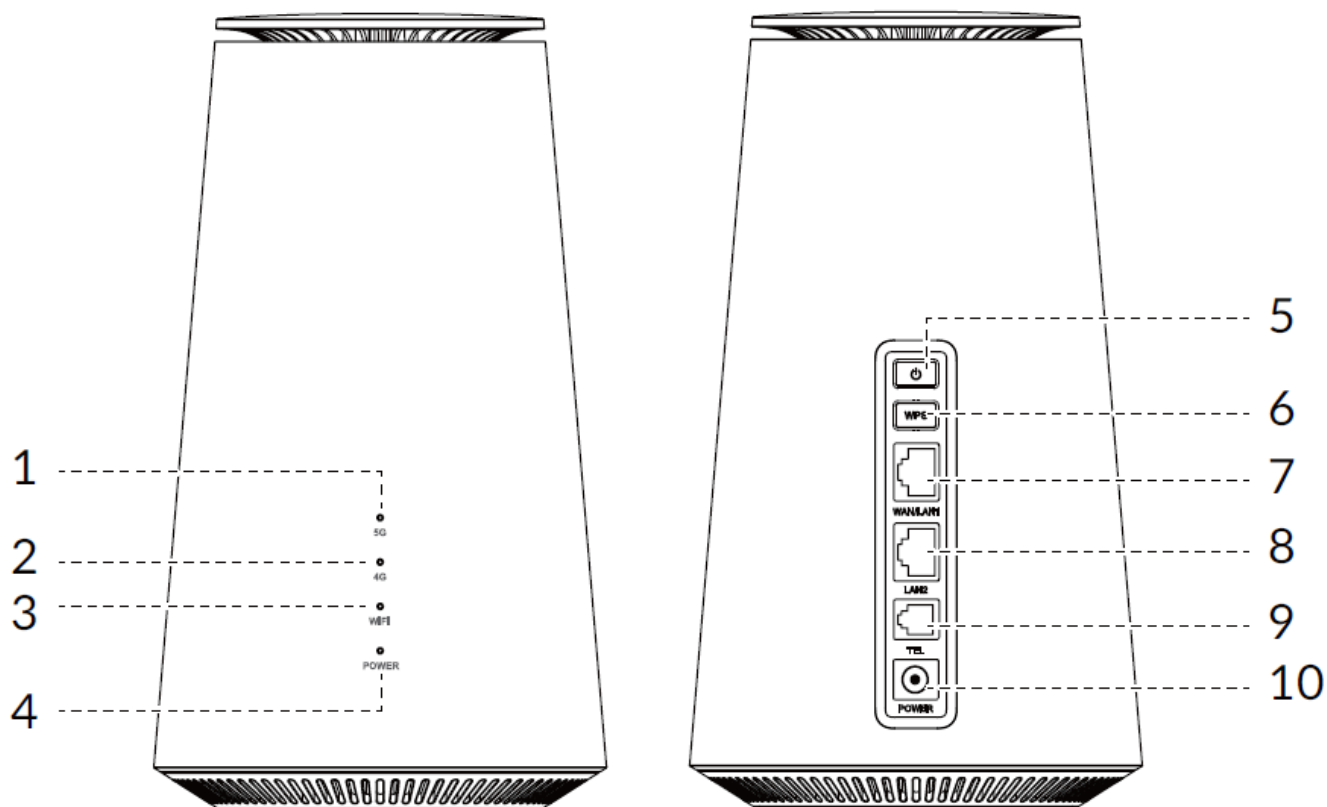


1. 5G network indicator	<ul style="list-style-type: none"> <li>• Solid blue: the signal is strong.</li> <li>• Solid yellow: the signal is good.</li> <li>• Solid red: the signal is weak.</li> <li>• Off: the 5G network is not working.</li> </ul>
2. 4G network indicator	<ul style="list-style-type: none"> <li>• Solid blue: the signal is strong.</li> <li>• Solid yellow: the signal is good.</li> <li>• Solid red: the signal is weak.</li> <li>• Off: the 4G network is not working.</li> </ul>
3. Wi-Fi/WPS indicator	<ul style="list-style-type: none"> <li>• Blinking blue: WPS connection is available.</li> <li>• Solid blue: Wi-Fi is enabled.</li> <li>• Off: Wi-Fi is disabled.</li> </ul>

4. Power indicator	<ul style="list-style-type: none"> <li>• Solid blue: the device is on.</li> <li>• Blinking blue: the device is performing factory reset or firmware update.</li> <li>• Off: the device is off.</li> </ul>
5. Power button	<ul style="list-style-type: none"> <li>• Press for 3 seconds to power off your device.</li> <li>• Press for 1 second to power on your device.</li> </ul>
6. WPS button	Press the button for 3 seconds to enable the WPS function. The WPS function will be automatically disabled if a WPS connection is not established within 2 minutes.
7. WAN/LAN port	Used to connect to an internet source or wired devices such as computers or switches.
8. LAN port	Used to connect to wired devices such as computers or switches.
9. Telephone port	Connect a telephone to make or answer calls.
10. Power connector	Used to connect to the power adapter.

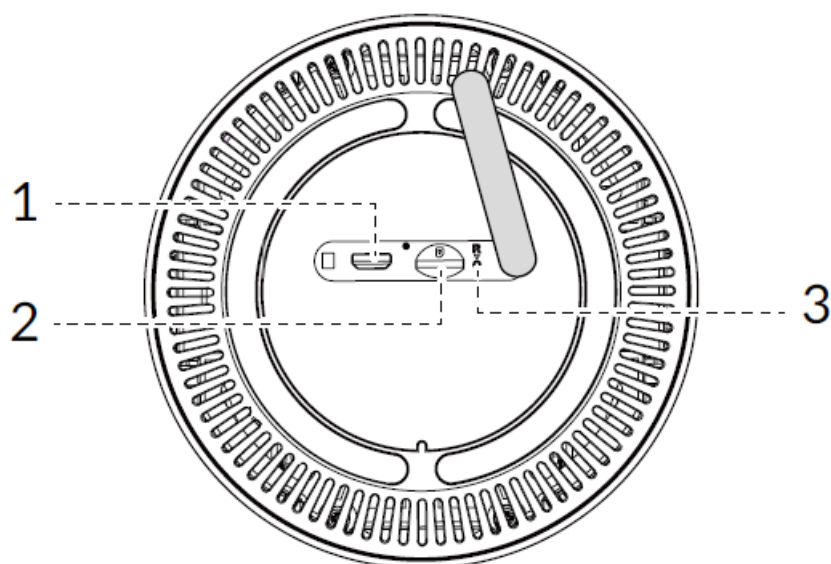 


1. Micro USB port	It is intended for debug use only.
2. Nano SIM card slot	Insert a nano SIM card in the slot.
3. Reset button	Use a paperclip to press the button for 3 seconds to reset the device.


## INSERT SIM CARD

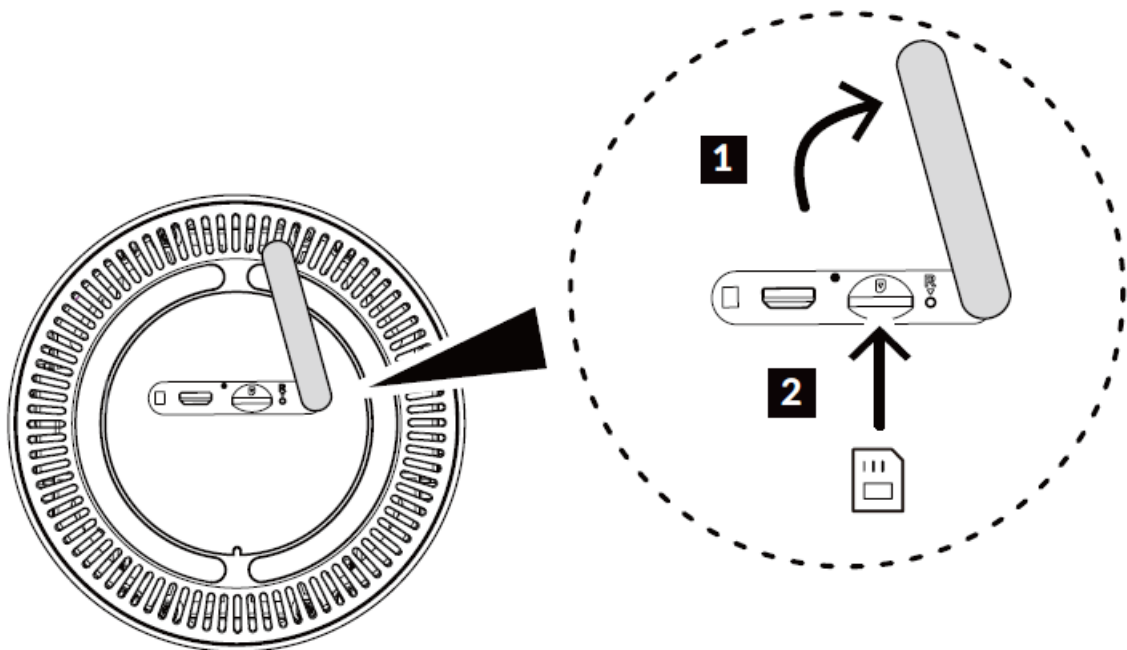 

**NOTE:** Do not remove the SIM card when your CPE is in use.

## CONNECTIVITY

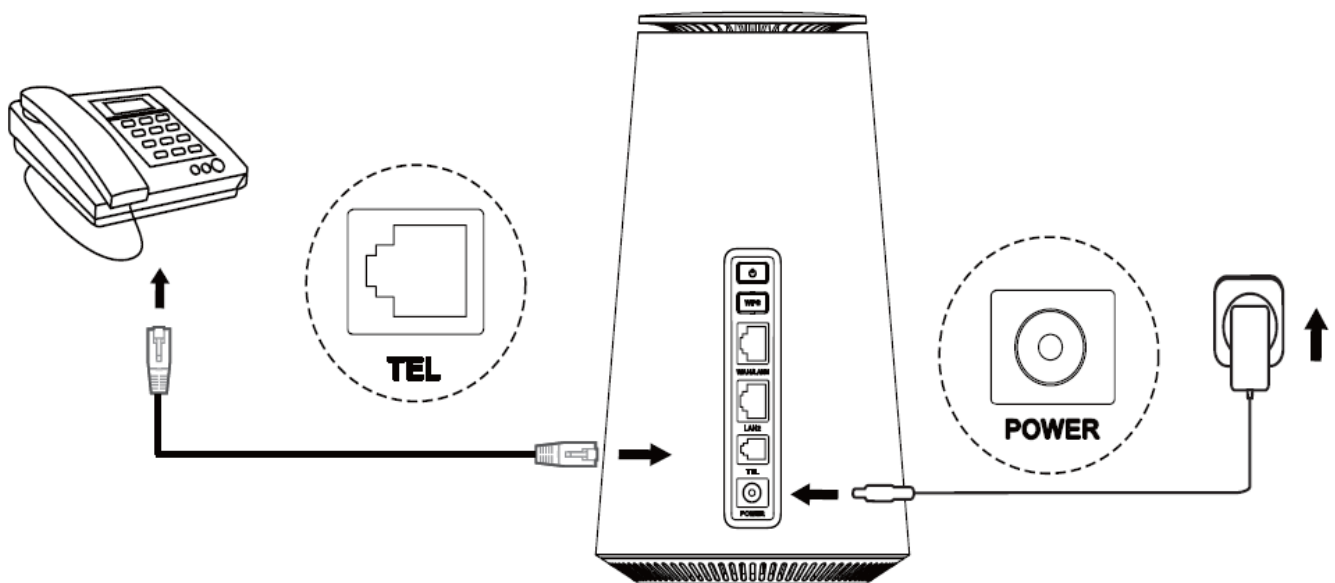 

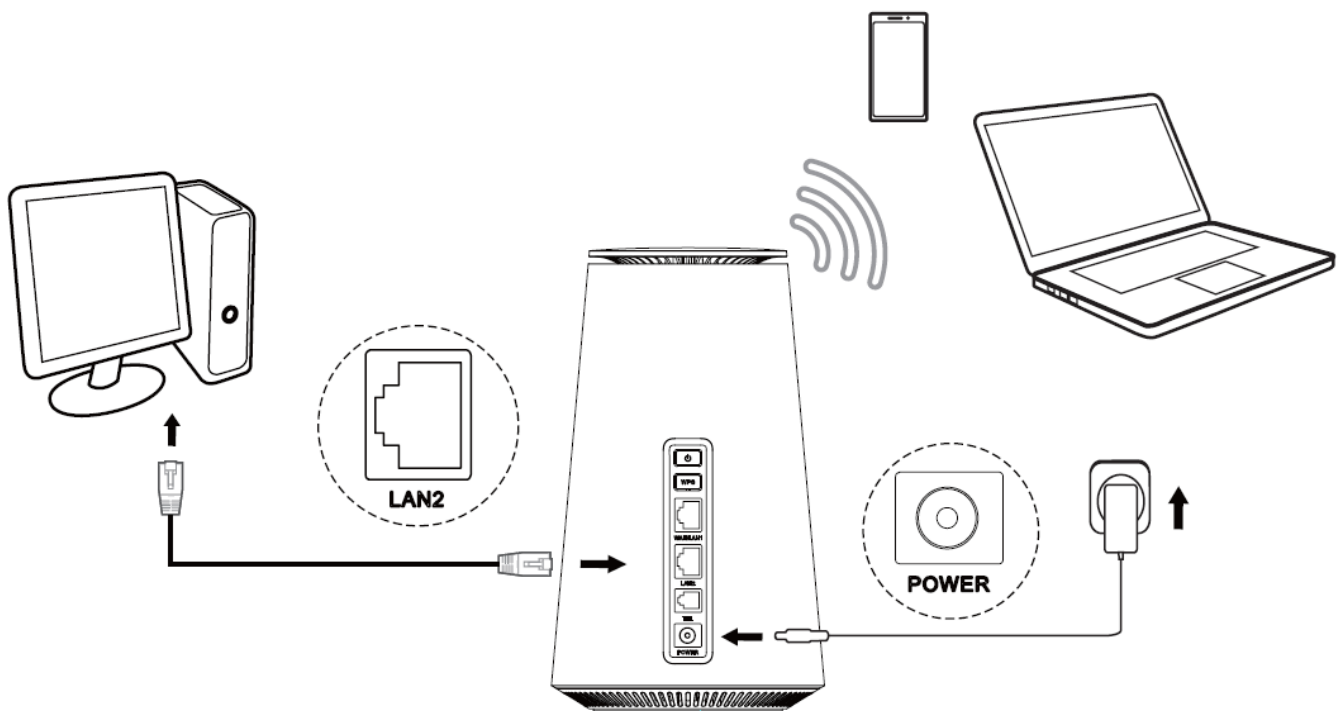 

- To establish a wired network connection, connect the wired device to the LAN port of your CPE using an Ethernet cable.
- To establish a wireless network connection, search for the Wi-Fi name on your wireless devices. The default Wi-Fi name (or the SSID) and password can be found on the bottom label of your CPE.
- To configure the CPE Wi-Fi network, open a web browser on the device connected to the CPE network wiredly or wirelessly, then go to <http://192.168.1.1> and follow the on-screen instructions.

**NOTE:** For the default login information, refer to the bottom label of your CPE.

[www.tcl.com](http://www.tcl.com)

## Documents / Resources

	<p><b><a href="#">TCL HH515V 5G Home Station Router</a></b> [pdf] User Guide  HH515V 5G Home Station Router, HH515V, 5G Home Station Router, Home Station Router, Station Router, Router</p>
--	--

## References

- [TCL USA | Enjoy More](#)