

TCL
TCL NXPAPER11
Display Tablet



TCL NXPAPER11 Display Tablet User Guide

[Home](#) » [TCL](#) » TCL NXPAPER11 Display Tablet User Guide 

Contents

- 1 [TCL NXPAPER11 Display Tablet](#)
- 2 [Product Usage Instructions:](#)
- 3 [Your device](#)
- 4 [Getting Started](#)
- 5 [Home screen](#)
- 6 [Contacts](#)
- 7 [Gmail](#)
- 8 [Getting connected](#)
- 9 [Disclaimer](#)
- 10 [Documents / Resources](#)
 - 10.1 [References](#)
- 11 [Related Posts](#)

TCL

TCL NXPAPER11 Display Tablet



Specifications

- Model: 9466X
- Manufactured: China
- Battery: USB-C rechargeable
- Memory Expansion: microSD slot
- Network: Wi-Fi only

Product Usage Instructions:

Charging the Battery

Your new tablet comes partially charged. To charge the battery:

1. Connect the provided USB-C cable to the charger.
2. Plug the charger into a power source.
3. Connect the USB-C cable to your tablet to start charging.

Memory Expansion

To expand memory using a microSD card:

1. Use the provided ejector tool to open the memory expansion tray.
2. Insert your microSD card into the tray slot labeled microSD.
3. Note: microSD cards are sold separately. Do not use SIM cards in the memory expansion tray.

Home Screen Navigation:

To navigate the Home screen:

- Tap the Home icon to return to the main screen.
- Tap on icons to open applications, folders, etc.

Contacts Management:

To manage contacts

- Use the Contacts app to add, edit, delete, and synchronize contacts.
- You can import or export contacts from various sources like external storage or email accounts.

Gmail Usage

To use Gmail on your tablet:

- Open the Gmail app from the Home screen to send and receive emails.
- You can add multiple email accounts and switch between them easily.
- Create and send emails by following the steps provided in the manual.

Frequently Asked Questions (FAQ)

- **Q: Can I use a SIM card with this tablet?**

 
 
A: No, this device is Wi-Fi only and does not support SIM cards. Only microSD cards for memory expansion are compatible.

- **Q: How do I access the Notification and Quick Settings panels?**


A: Swipe downward from the Status bar to access the Notification panel or Quick Settings panel. To close the panel, touch and drag upward.

QUICK START GUIDE


Your device

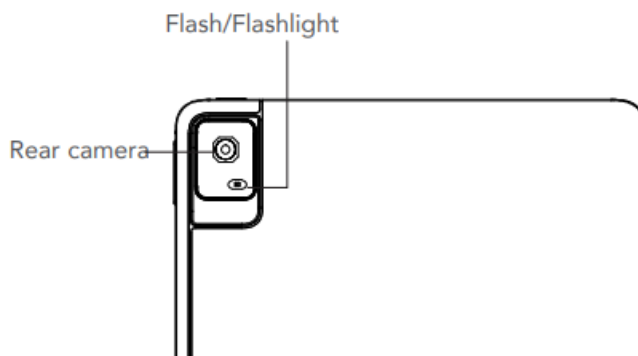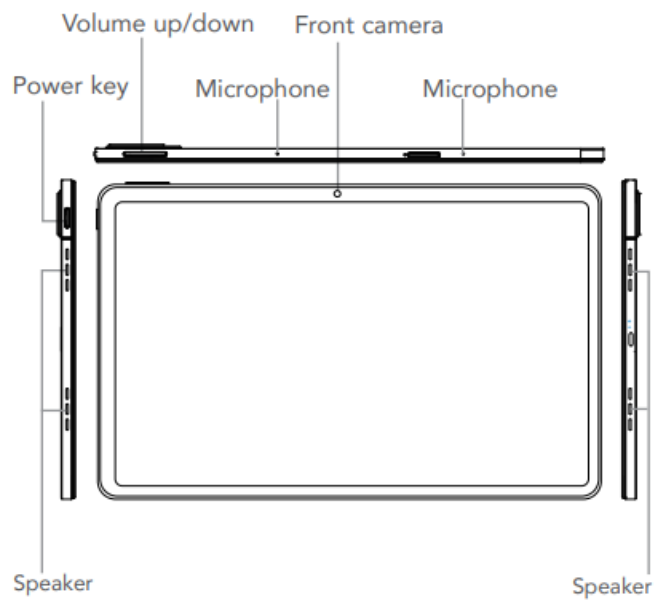

Getting Started

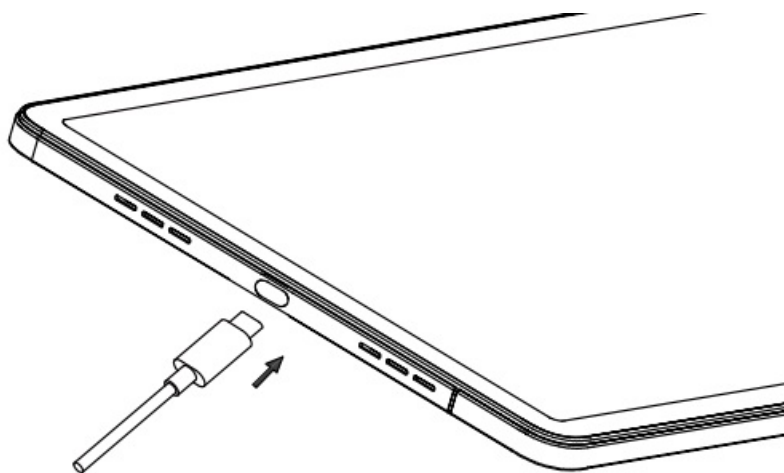 

 1. Your new tablet is partially charged. Charge the battery by using the USB-C cable and charger provided.

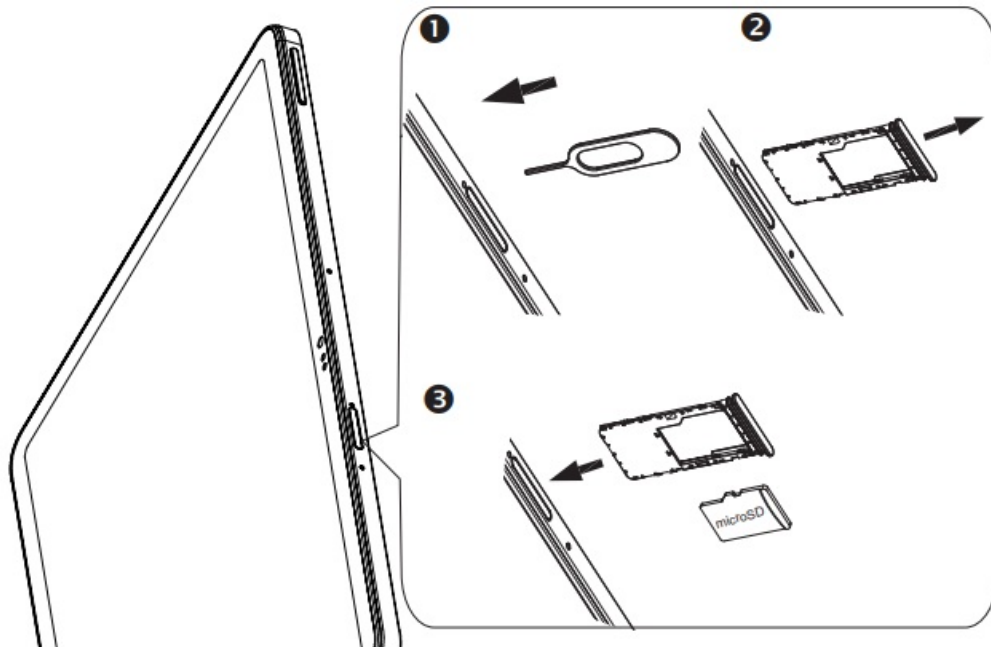


2. Use the provided ejector tool to open the memory expansion tray.
3. Place your microSDTM card into the tray slot where labeled "microSD".

Note: microSDTM cards are sold separately. Do not attempt to place SIM cards in the memory expansion tray. The device is Wi-Fi only, and cannot be used with a SIM card.

Home screen

You can bring all of the items (applications, shortcuts, folders) that you use most frequently to your Home screen for quick access.

Tapping Home  always takes you back to the main

Home screen.

- Status/Notification indicators
- Drag down to open the notification panel



Tap an icon to open an application, folder, etc.

Favorite applications tray

- Tap to enter the application
- Long press to move or change applications

 
The Home screen is provided in an extended format to allow more space for adding application icons, shortcuts etc. Swipe left and right on the Home screen to view the extended screens.

Status bar

In the status bar, you can see the notifications on the left side and the connection service status on the right side. Swipe downward from the Status bar to access the Notification panel or the Quick Settings panel. To close the panel, touch and drag upward.

Notification panel


Tap on the notification to view it in the app.

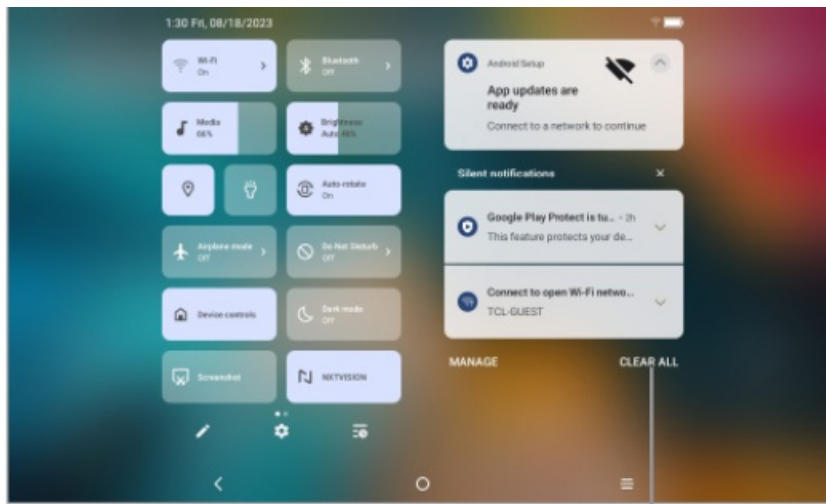

Tap to clear all event-based notifications. On-going notifications will remain on the panel.

Quick settings panel

 From the Quick Settings panel you can enable or disable functions or change modes by tapping the icons.

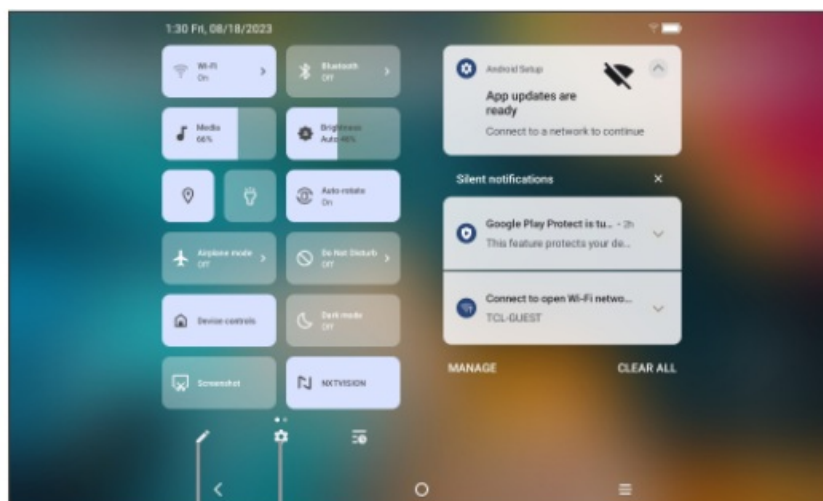

Tap to access the full Settings menu, where you can manage other items.

 
Tap to edit Quick Settings panel.

Contacts



Contacts are stored in your tablet with the Contacts app.

Add, edit, or delete contacts on your tablet and synchronize them with the contacts in other accounts that support contact syncing.

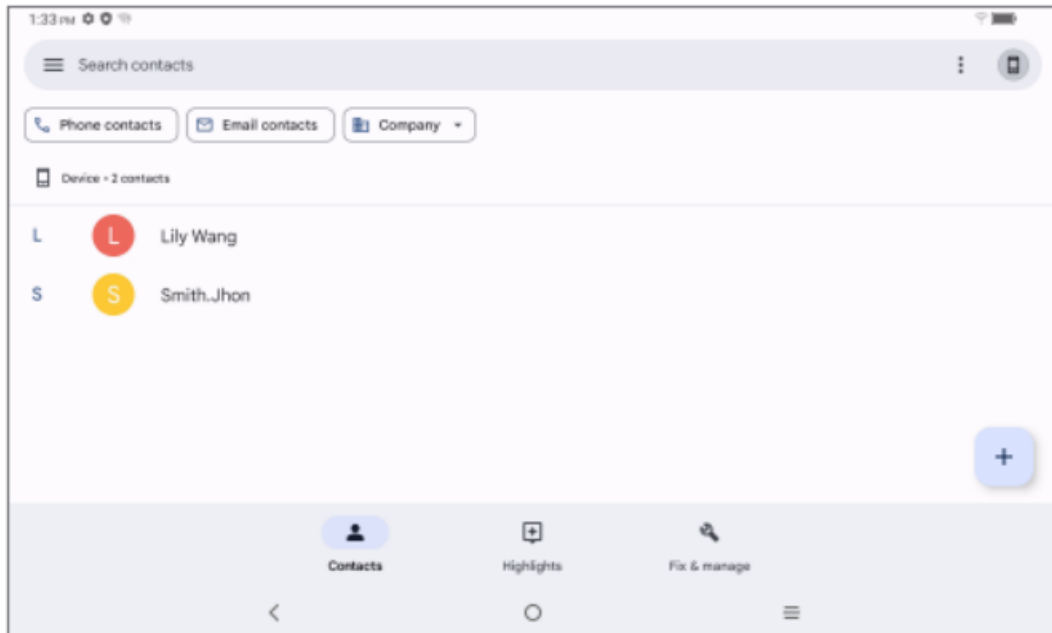You can also import or export your contacts from different locations such as an external storage, email, or other account.



Adding a contact

Open Contacts  from applications list, then tap  to add a new contact.

 
Synchronizing contacts in multiple accounts

Contacts, data or other information can be synchronized from multiple accounts, depending on the applications installed on your tablet.

Gmail

When you first set up your tablet, it is automatically synchronized with your Google account. Use Gmail to create, send, and receive emails directly on your tablet.


The Gmail app will allow you to add several email accounts.

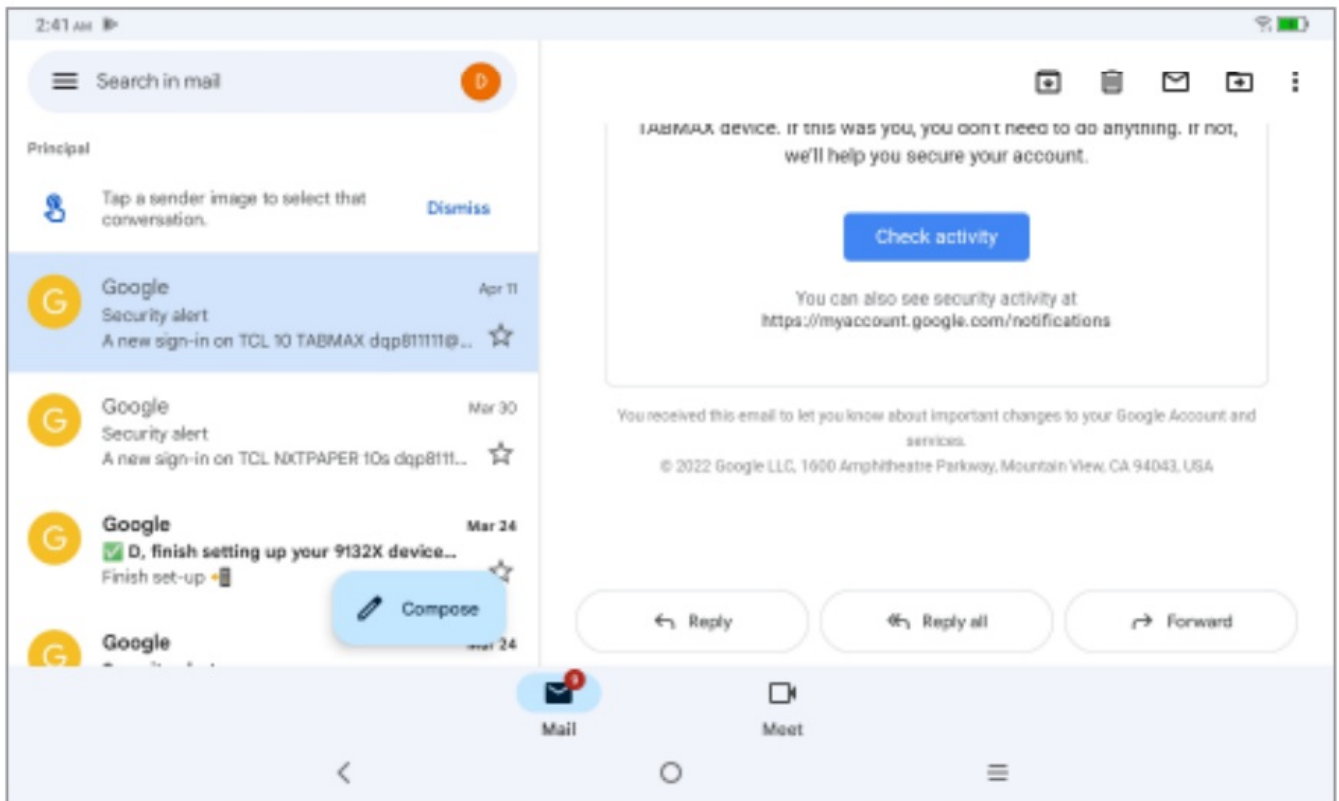

To open Gmail






From the Home screen, tap Gmail in the Google folder.

Gmail displays messages and conversations from one single Gmail account at a time. If you own additional email accounts, you can add an account by tapping Menu  > Settings > Add account. Switch to another account by tapping the icon in the top right corner, then select the name of the account you want to view.

To create and send emails



1. Tap  from the Inbox screen.
2. Enter the recipient(s)'s email address in "To" field.
3. If necessary, tap  to copy (CC) or blind copy (BCC) a recipient to the message.
4. Enter the subject and the content of the message.

5. Tap  icon and select Attach file to add an attachment.

6. Tap  to send.

If you do not want to send the email right away, tap



>Save draft. To view the draft later, tap Menu



and


NOTE: Software is constantly evolving, the screen images and icons you see here are for reference only.

Getting connected

To connect to the Internet with this tablet, you will need to have an internet connection via Wi-Fi.

Wi-Fi

To turn Wi-Fi on and connect to a Wi-Fi network:

1. Go to Settings > Wi-Fi.
2. Tap the switch  to turn on Wi-Fi.
3. Tap a Wi-Fi network to connect. If the network you selected is a secured network, you will need to enter a password or other credentials. When finished, tap CONNECT.
4. For hidden network, slide up the screen and select Add network. Enter the SSID of the network, password and its secured credentials. Then, tap SAVE.

Disclaimer

There may be certain differences between the user manual description and the device's operation, depending on the software release of your device or specific operator services. TCL Communication Ltd. shall not be held legally responsible for such differences, if any, nor for their potential consequences, which responsibility shall be borne by the operator exclusively.




Help

- Check out the TCL website at www.tcl.com for tutorials and answers to frequently asked questions, and to download the User Manual.
- To get support for your tablet, visit the TCL website (www.tcl.com) or dial the number listed below:
Canada- 1-[855-224-4228](tel:855-224-4228) United States- 1-[855-224-4228](tel:855-224-4228)
- **Update your tablet's software**
Go to Settings > System > System Update to check software updates.
- **Back up your personal data**
Go to Settings > System > Backup > Back up to back your device.
- **Reset your tablet**
Go to Settings > System > Reset > Erase all data (factory reset) > Erase all data.

Documents / Resources

<p>TCL NXTPAPER11</p> <p>QUICK START GUIDE</p> 	<p>TCL NXPAPER11 Display Tablet [pdf] User Guide NXPAPER11, NXPAPER11 Display Tablet, Display Tablet, Tablet</p>
---	--

References

-  [TCL USA | TVs, Sound Bars, Phones, Appliances](#)
-  [LED TVs | 4K Ultra HD, Full HD & Android TVs | TCL Australia](#)
-  [TCL Canada | TVs, Sound Bars, Phones, Appliances](#)
- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.