

TCL T602DL 30 Z Smartphone User Guide

Home » TCL » TCL T602DL 30 Z Smartphone User Guide



Thank you for choosing TCL. This booklet helps you get started with your new device.

For more information about your phone or to download the complete user manual version, please visit tcl.com/us

Contents [hide

- 1 Phone Setup
- 2 Contacts
- 3 Messages
- 4 Gmail
- 5 Camera & Video
- 6 Security
- 7 Data backup
- 8 Factory data reset
- 9 Getting connected
- 10 Status bar
- 11 Documents /

Resources

- 11.1 References
- **12 Related Posts**


Phone Setup

Installing the SIM card and microSD™ card


Your phone already has a SIM card installed. If you need to change or remove your SIM card, follow the steps below.

1. Remove the back cover.

2. To install SIM/microSD™ card, place the SIM/microSD™ card with the chip facing down into the SIM card tray and then slide it into its slot.

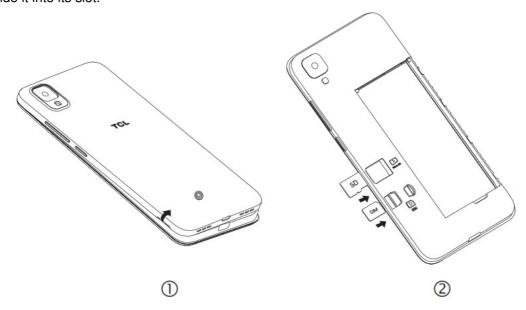

Charging the battery

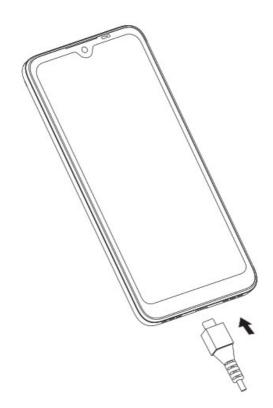

It is advised that you fully charge your battery before first use (). Connect the charger to your phone and an outlet. Charging status is indicated by the percentage on screen while the phone is powered off. The percentage increases as the phone are charged.

Power on your phone

Hold down the Power key until the phone powers on, unlock your phone (screen lock, face unlock) if necessary, and confirm. The Home screen is displayed.

If you do not know your PIN/password or pattern, or if you have forgotten it, contact your service provider. Do not leave your PIN/password or pattern, with your phone. Store this information in a safe place when not in use.

Set up your phone for the first time

The first time you power on the phone, you'll be able to select your language, select a network, log in to your Google

Account and Google Services, and select a screen lock option.

Power off your phone

Hold down the **Power** key from any screen until the phone options appear, and select **Power off**.

Personalize your Home screen

Add

You can touch and hold a folder, an application, or a widget to activate the Move mode and drag the item to any Home screen as you prefer.

Reposition

Touch and hold the item to be repositioned to activate the Move mode, drag the item to the desired position and then release. You can move items both on the Home screen and the favorite tray. Hold the icon on the left or right edge of the screen to drag the item to another Home screen.

Remove

Touch and hold the item to be removed to activate the Move mode, drag the item up to the top of the Remove icon, and release it after the item turns grey.

Create folders

To improve the organization of items (shortcuts or applications) on the Home screen and the favorite tray, you can add them to a folder by stacking one item on top of another. To rename a folder, open it and touch the folder's title bar to input the new name.

Wallpaper customization

Touch and hold the Home screen then touch **Wallpaper** to customize wallpaper.


Phone

Placing a call

Touch the **Phone**



from the Home screen.

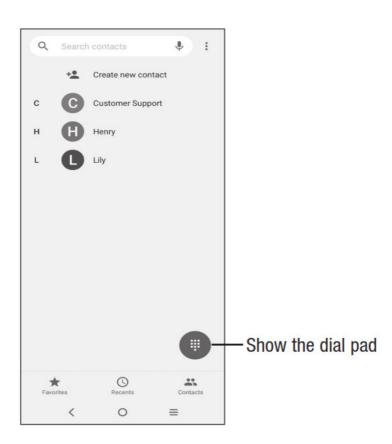

Enter the desired number from the keyboard directly, or select one of the following:

Access frequently called or favorite contacts in Favorites



• View recently called numbers and contacts in **Recents** .



Choose a saved contact in Contacts

Touch to place the call



To hang up a call, touch



Answering or rejecting a call

When you receive a call:


- · Swipe up to answer.
- Swipe down to reject.
- Touch to reject the call by sending a preset message.

To mute the ringtone volume of an incoming call, press the Volume up/down key.

Contacts

Contacts enable quick and easy access to the people you want to reach. You can view and create contacts on your phone.

To access this feature, swipe up on the Home screen, then select **Contacts**Adding a contact

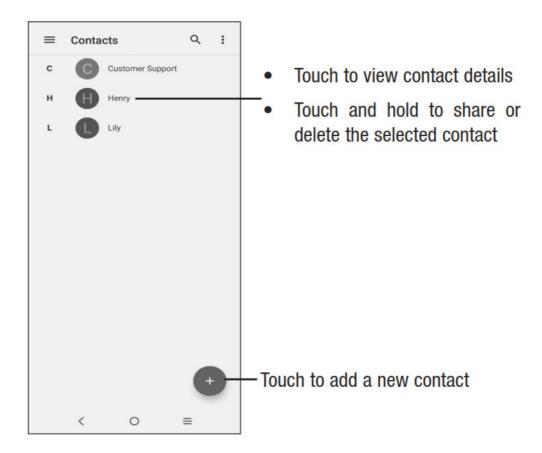

Editing a contact

To edit contact information, touch on the contact details screen. When finished, touch SAVE. Importing, exporting, and sharing contacts

From the Contacts screen, touch to open the options menu, touch **Settings** > **Import/Export**, then select to import/export contacts from/to your SIM card, phone, micro SD card, etc.

Share a single contact or multiple contacts with others by sending the contact's vCard to them via Bluetooth, Gmail, etc.


Touch and hold the contact (s) you want to share, touch



Messages

You can create, edit, and receive SMS and MMS with this phone.

To access this feature, touch **Messages** from the Home screen.

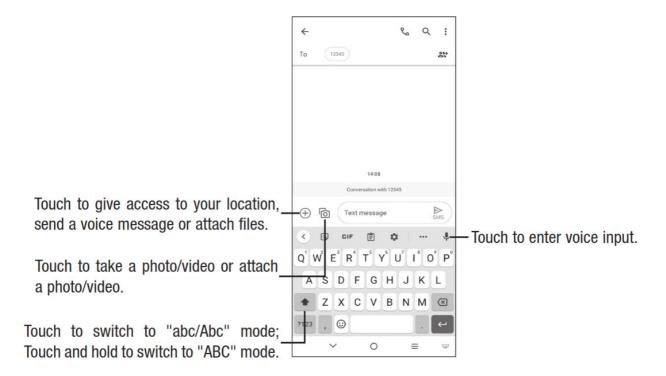

Sending a message

Enter the mobile phone number of the recipient in the To bar or select a contact, then touch the Text message



bar to type the text of the message. When finished, touch SMS to send the text message.



An SMS of more than 160 characters will be split and sent as multiple SMS. A counter will be displayed on the right of the text box to remind you of how many characters can be entered in one message. Specific letters (accent) will also increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

Sending a multimedia message

MMS enables you to send video clips, images, photos, animations, slides and sounds to other compatible phones and e-mail addresses.

An SMS will be converted to MMS automatically when media files (image, video, audio, slides, etc.) are attached or subject or email addresses are added.

Gmail

In addition to your Gmail account, your phone supports external POP3, IMAP, or Exchange email accounts. To access this feature, swipe up on the Home screen then select **Gmail**.

To create and send emails

- Touch from the Inbox screen.
- Enter recipient(s) email address(es) in the To: field.

- If necessary, tap $\stackrel{\textstyle \smile}{\textstyle}$ next to the To: field to add Cc/Bcc to the message.
- Enter the subject and the content of the message.
- Tap

 to add an attachment.
- Tap to send.

Camera & Video

Your phone's camera is equipped with multiple modes for taking photos and videos. From the home screen, touch to access.



To take a picture:

The screen acts as a viewfinder. First, position the object or landscape in the viewfinder, and touch the screen to focus if necessary. Touch to capture, and the photo will be automatically saved. You can also touch and hold to take burst shots.

To take a video:

Touch **VIDEO** to change the camera mode to video. Touch to start video recording.

Touch the left part of this icon to take a picture during video recording.

Touch the right part of this icon to pause the video recording and touch to continue. Touch to stop recording. The video will be automatically saved.

Security

Swipe up on the Home screen, then touch Settings > Security & biometrics.

Enable your lock/unlock method: Swipe, Pattern, PIN, Password, or Face Unlock. Face Unlock will unlock your phone using the front camera to register your face.

Note: facial recognition methods may not be as secure as Pattern, Pin, or Password locks.

Data backup

This phone enables you to back up your phone's settings and other application data to the Google Server, with your Google Account.

If you replace your phone, the settings and data you've backed up are restored onto the new phone the first time you sign in with your Google Account.

To activate this function:

• Swipe up on Home screen > Settings > System > Backup.

Factory data reset

To activate factory data reset:

- Swipe up on Home screen > Settings > System > Reset > Erase all data (factory reset).
- Tap Erase all data.

Resetting the phone will erase all of your personal data from internal phone storage, including information about your Google Account, any other accounts on your phone, your system and application settings, and any downloaded applications. If you reset the phone in this way, you're prompted to re-enter the same kind of information as when

you first set up your device.

If you are unable to power on your phone, there is another method to perform a factory data reset by pressing the Power key and the Volume up the key at the same time until the screen lights up.

Getting connected

Your phone can connect to the Internet using 4G networks or Wi-Fi, whichever is convenient and available.

Network

The first time you turn on your phone, it will automatically configure your 4G network service. To check the network

connection you are using, swipe up on the **Home screen > Settings > Mobile network**.



Wi-Fi

Using Wi-Fi, you can connect to the Internet when your phone is within the range of a wireless network. Wi-Fi can be used on your phone even without a SIM card inserted.

To turn Wi-Fi on and connect to a wireless network

- Swipe up on the Home screen, then touch Settings > Wi-Fi.
- Touch the switch next to Wi-Fi to turn Wi-Fi on or off.
- Touch Wi-Fi, the detailed information of detected Wi-Fi networks is displayed in the Wi-Fi networks section.
- Touch a Wi-Fi network to connect. If the network you selected is secured, you are required to enter a password or other credentials (you may contact the network carrier for details). When finished, touch CONNECT.

Connecting to Bluetooth Devices

Bluetooth is a short-range wireless communication technology that you can use to exchange data or connect to other Bluetooth devices for various uses.

To turn on Bluetooth

- Swipe up on the Home screen, then touch **Settings** > **Bluetooth**.
- Touch to activate/deactivate this function.

To pair/connect your phone with a Bluetooth device

- Touch Settings > Bluetooth > + Pair a new device.
- Touch a Bluetooth device you want to pair your phone with from the list.
- In the dialog that pops up, touch PAIR to confirm.
- If the pairing is successful, your phone will be connected to the device. To disconnect/unpair from a Bluetooth device
- Touch next to the device name
- Touch and FORGET DEVICE to confirm

Status bar

From the status bar, you can view both phone status and notification information.

Status icons

E 11	GSM	ı I	Vibrate mode
4G	WCDMA	(1)	Alarm is set
	LTE	(î:	Connected to a Wi-Fi network
all	Signal strength	0	Speakerphone is on
*	No signal	Z	No SIM card inserted
†	Airplane mode	\$ 86	Battery is charging
3 °	Bluetooth connected	9	Battery is low
	Headset connected	58	The battery is partially drained
•	GPS is on	100	Battery is full

Notification icons

\bowtie	New Gmail message	č	Missed call
	New text or multimedia message	?	Connect to an open Wi-Fi network
31	Upcoming event	<u>†</u>	Uploading data
<u>+</u>	Downloading data	C	System update available

Regulatory Agency Information		
FCC ID	2ACCJH152	
Max. SAR (W/kg) – Head	0.73 W/Kg	
Max. SAR (W/kg) – Body	1.07 W/Kg	
HAC (Hearing Aid Compatible) & Rating	M4/T3	



Documents / Resources

	TCL T602DL 30 Z Smartphone [pdf] User Guide H152, 2ACCJH152, T602DL 30 Z Smartphone, T602DL, 30 Z Smartphone	
* TCL30z		
* Safety and Precautions	TCL T602DL 30 Z Smartphone [pdf] User Guide H152, 2ACCJH152, T602DL 30 Z Smartphone, T602DL, 30 Z Smartphone	

References

• Open Source Initiative – The steward of the Open Source Definition, setting the foundation for the Open Source Software ecosystem.

- © TCL USA | Enjoy More
- ctic CTIA Home
- F© FCC ID Search | Federal Communications Commission
- © CTIA Home
- TCL Electronics México

Manuals+, home privacy