



TCL TS9030 RAY-DANZ 3.1 Atmos Sound Bar with Wireless Subwoofer User Guide

[Home](#) » [TCL](#) » TCL TS9030 RAY-DANZ 3.1 Atmos Sound Bar with Wireless Subwoofer User Guide 

Contents


- [1 TCL TS9030 RAY-DANZ 3.1 Atmos Sound Bar with Wireless Subwoofer](#)
- [2 What's in the box?](#)
- [3 Dimensions](#)
- [4 Optical connection](#)
- [5 Battery type: 1.5V AAA Alkaline battery x 2](#)
- [6 Frequency range/Max transmitting power](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)





TCL TS9030 RAY-DANZ 3.1 Atmos Sound Bar with Wireless Subwoofer




What's in the box?

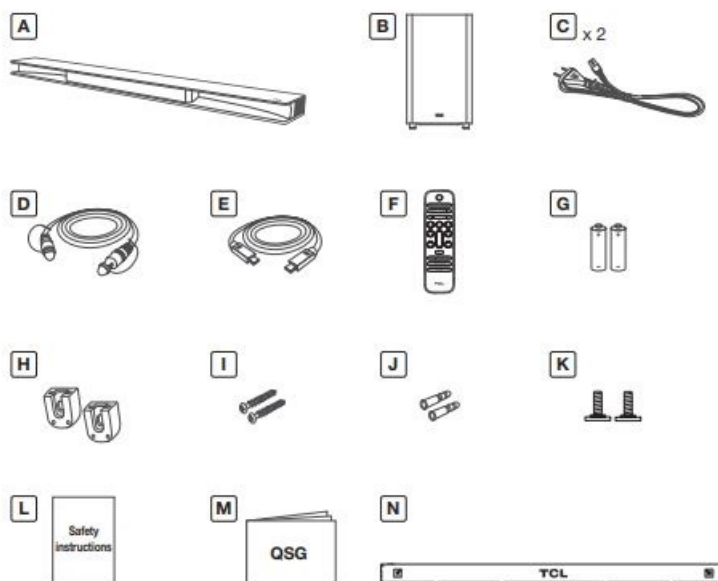

2a

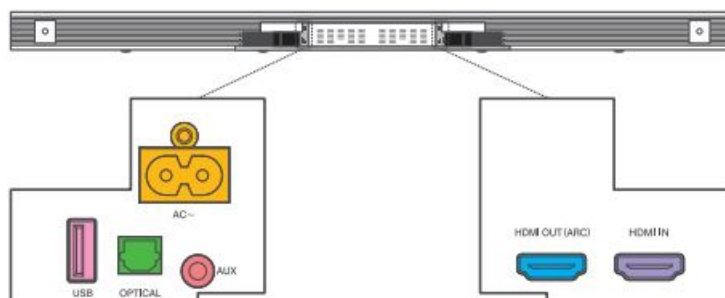
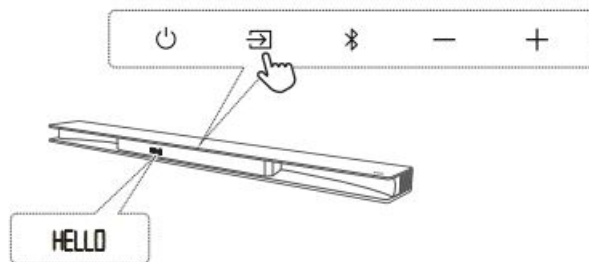


2b


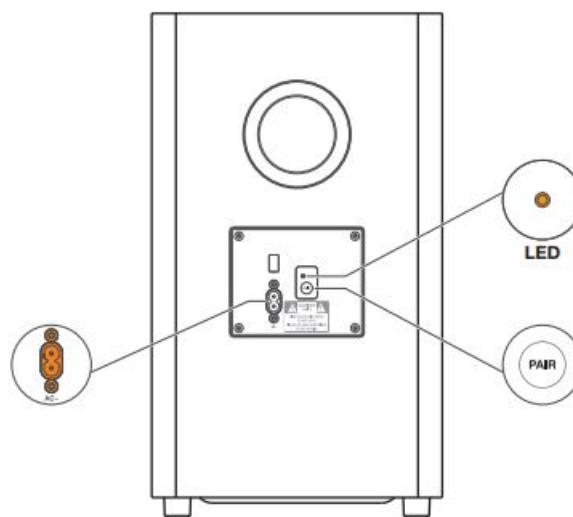


Dimensions





3a

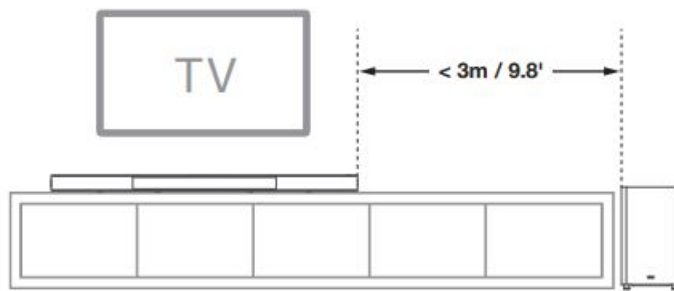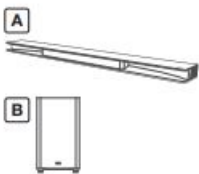

3b

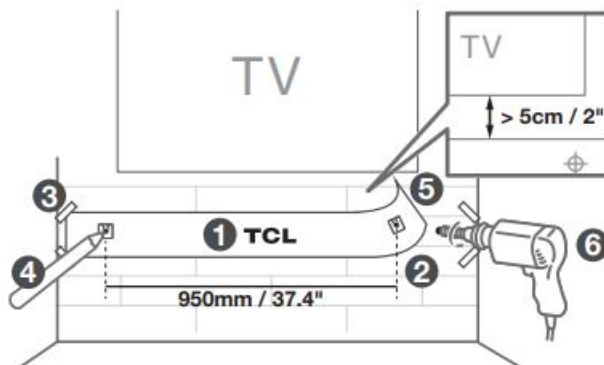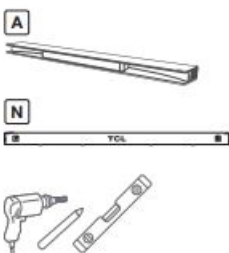

3b

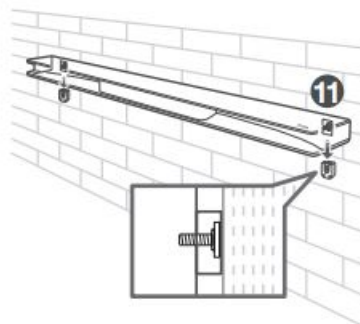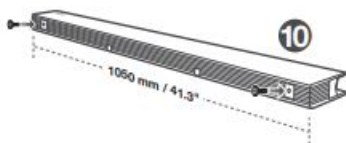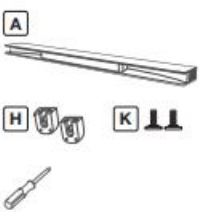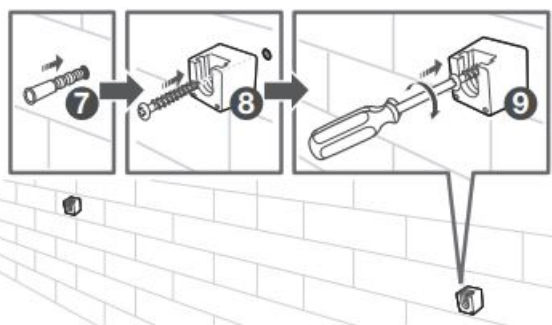

Optical connection

4



A



 
4a



E









4b



D




    4c

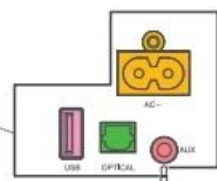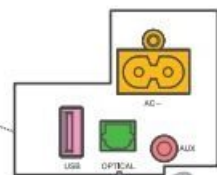


4d

C

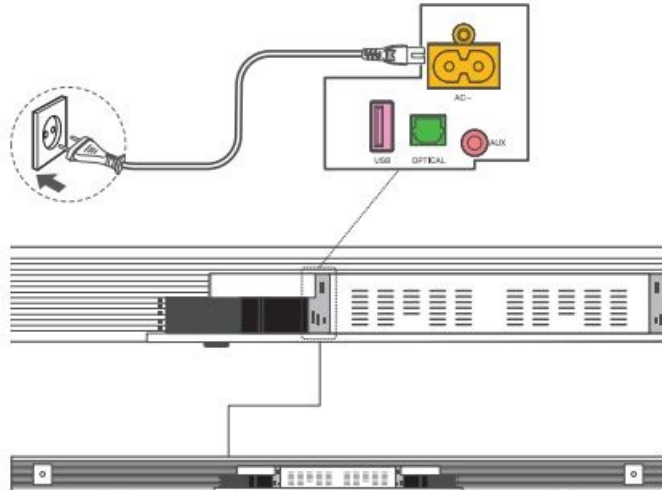


Battery type: 1.5V AAA Alkaline battery x 2


5

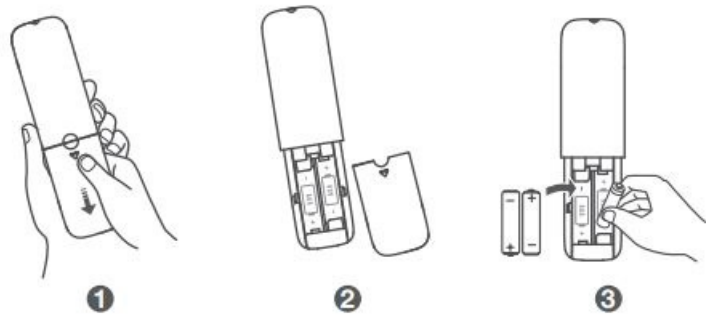

6a

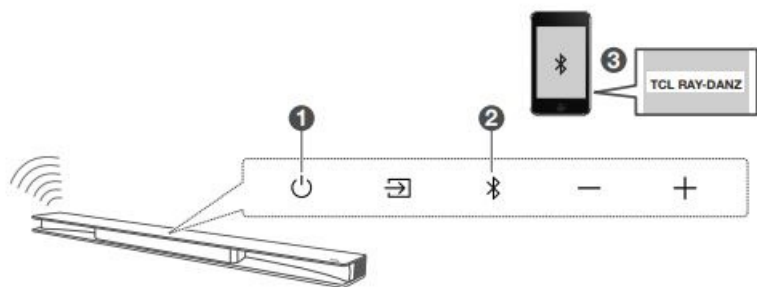

Frequency range/Max transmitting power

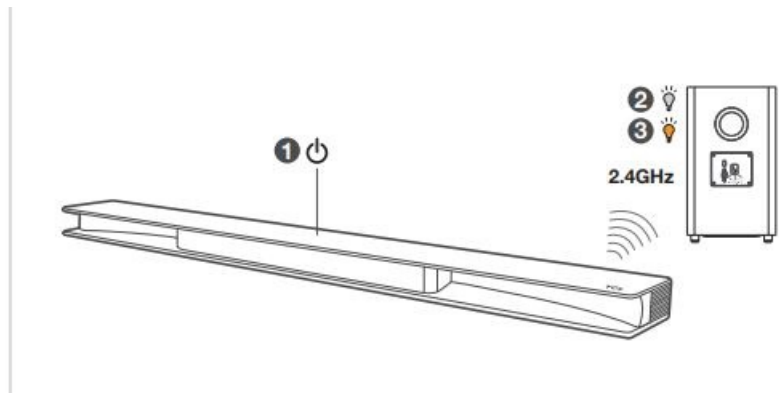

	Sound Bar status	LED display
	Power on Power off Standby	HELLO STANDBY •
	Bluetooth Optical HDMI IN HDMI ARC USB	BT OPT HDMI IN HDMI ARC USB
	Searching mode Pairing mode	BT (flashing) PAIR
	Volume level Minimum volume reached Maximum volume reached Mute	VOL 00 V MIN V MAX MUTE
	BASS + / - TREBLE + / -	BASS+3 TRE-3
	ON / OFF	SUR ON / SUR OFF
	Movie, Music, TV, BOOST	MOVIE MUSIC TV BOOST
	Unsupported format USB unavailable Audio format detected	NOT SUPPORT FORMAT NO USB PCM AUDIO / DOLBY AUDIO / DOLBY ATMOS

Documents / Resources

	TCL TS9030 RAY-DANZ 3.1 Atmos Sound Bar with Wireless Subwoofer [pdf] User Guide TS9030, RAY-DANZ 3.1 Atmos Sound Bar with Wireless Subwoofer
--	--