



TCP Smart 49323 Automation Oil Radiator User Guide

[Home](#) » [TCP Smart](#) » TCP Smart 49323 Automation Oil Radiator User Guide 



49323 Automation Oil Radiator User Guide




TCP Smart Heating Schedules

Contents


- 1 49323 Automation Oil Radiator
- 2 Documents / Resources
 - 2.1 References
- 3 Related Posts

49323 Automation Oil Radiator

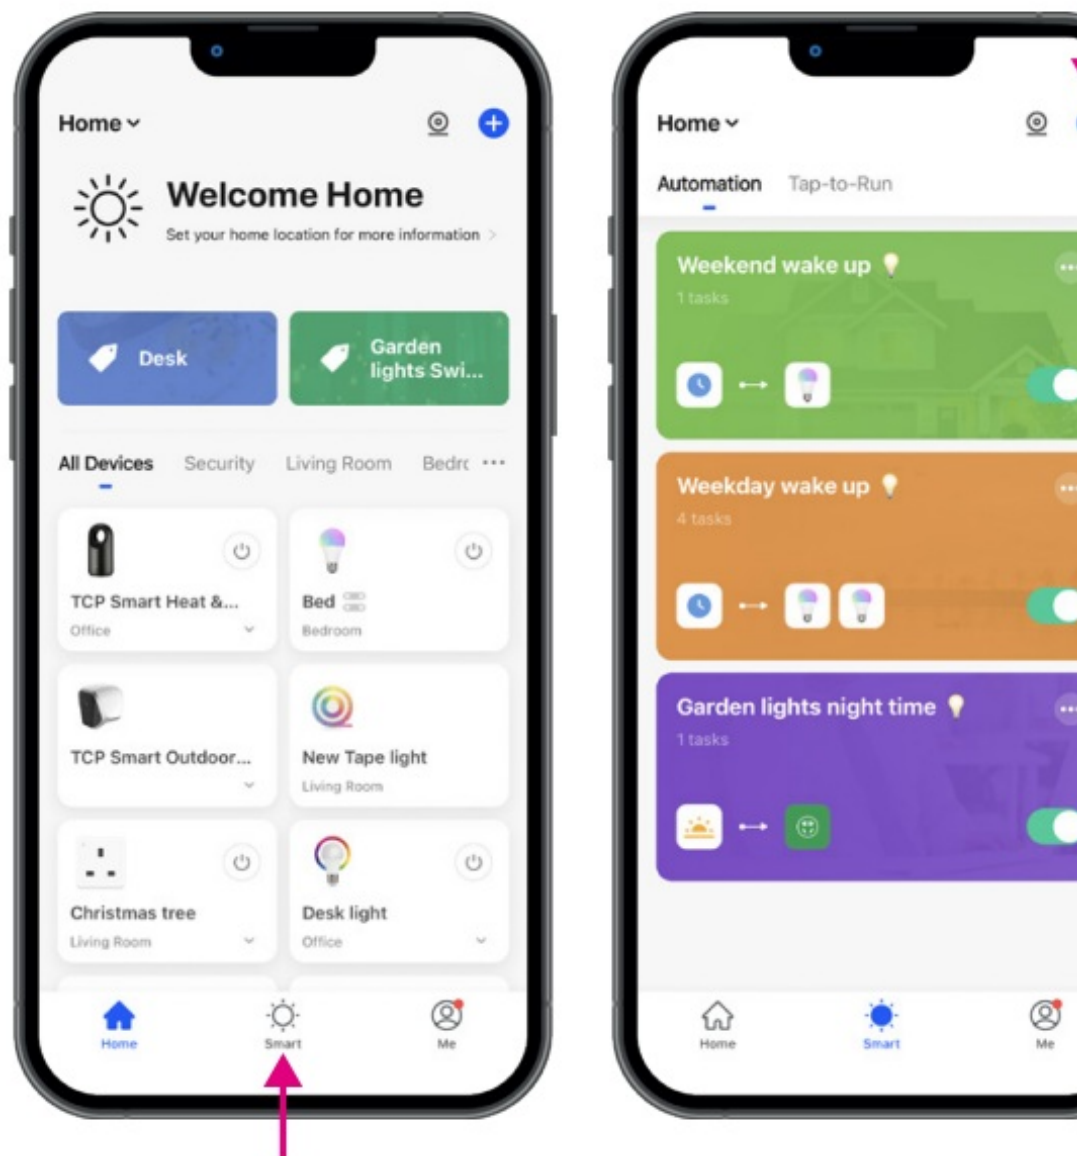



From the homepage go to the SMART menu

Start a smart automation using the + icon top right

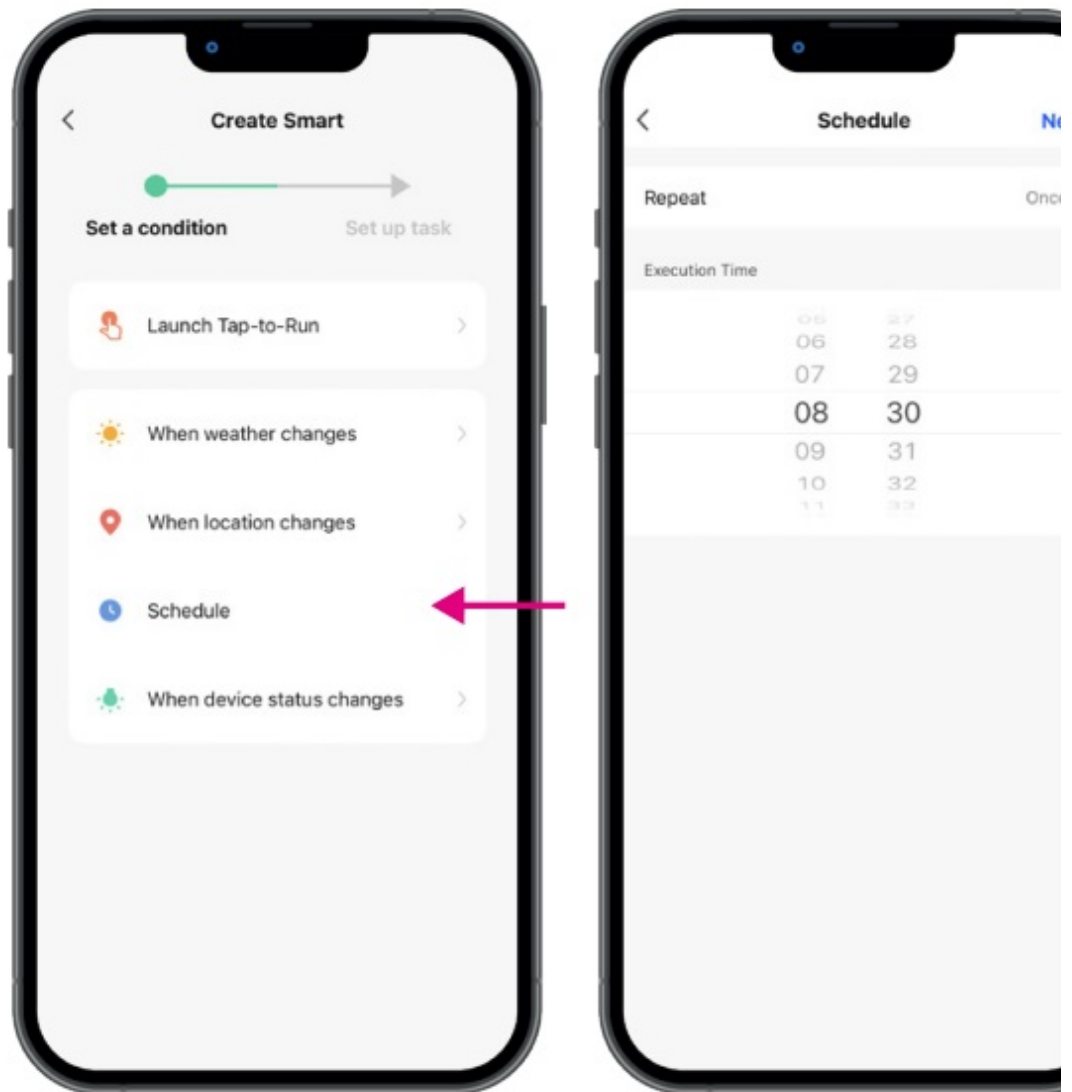


Choose SCHEDULE from the list

Select the time you wish the schedule to start

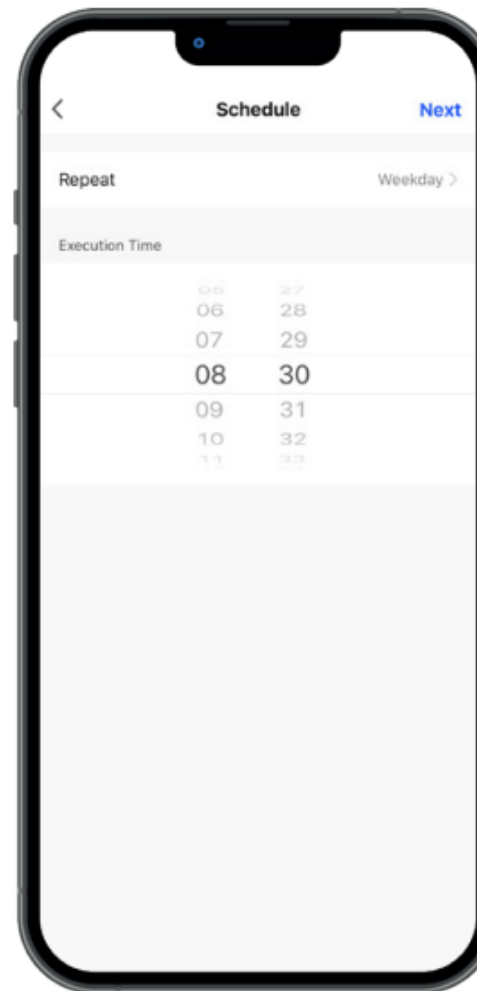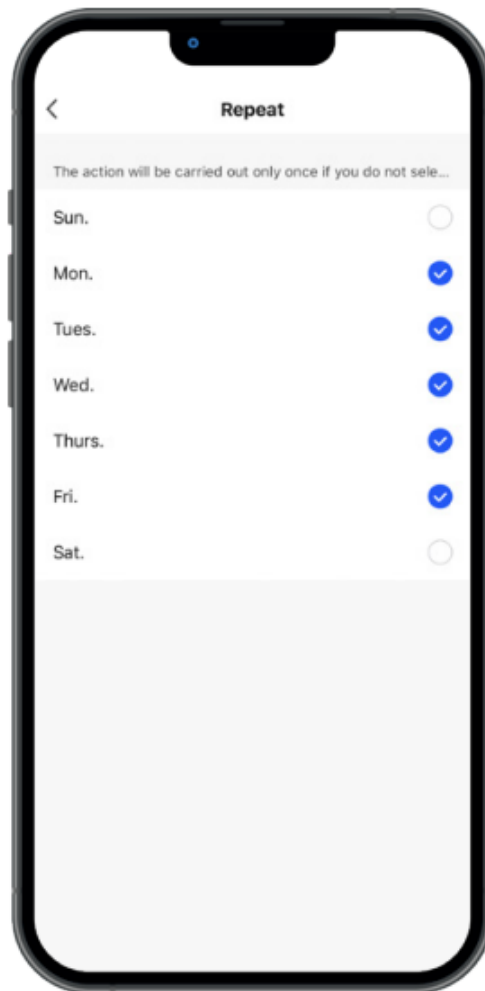


Click REPEAT and then tick the days you want the schedule to run on

Click NEXT

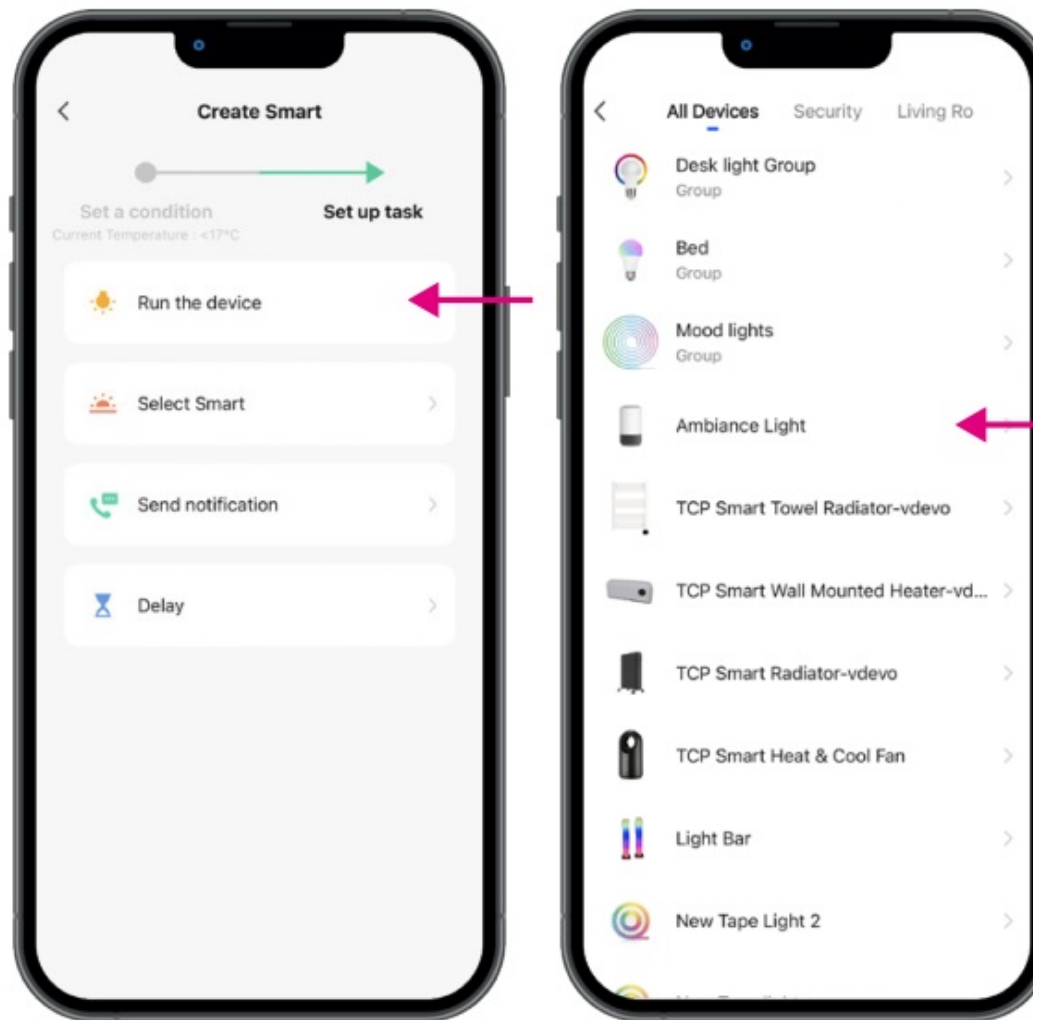


Choose RUN THE DEVICE from the smart automation list

Select your radiator

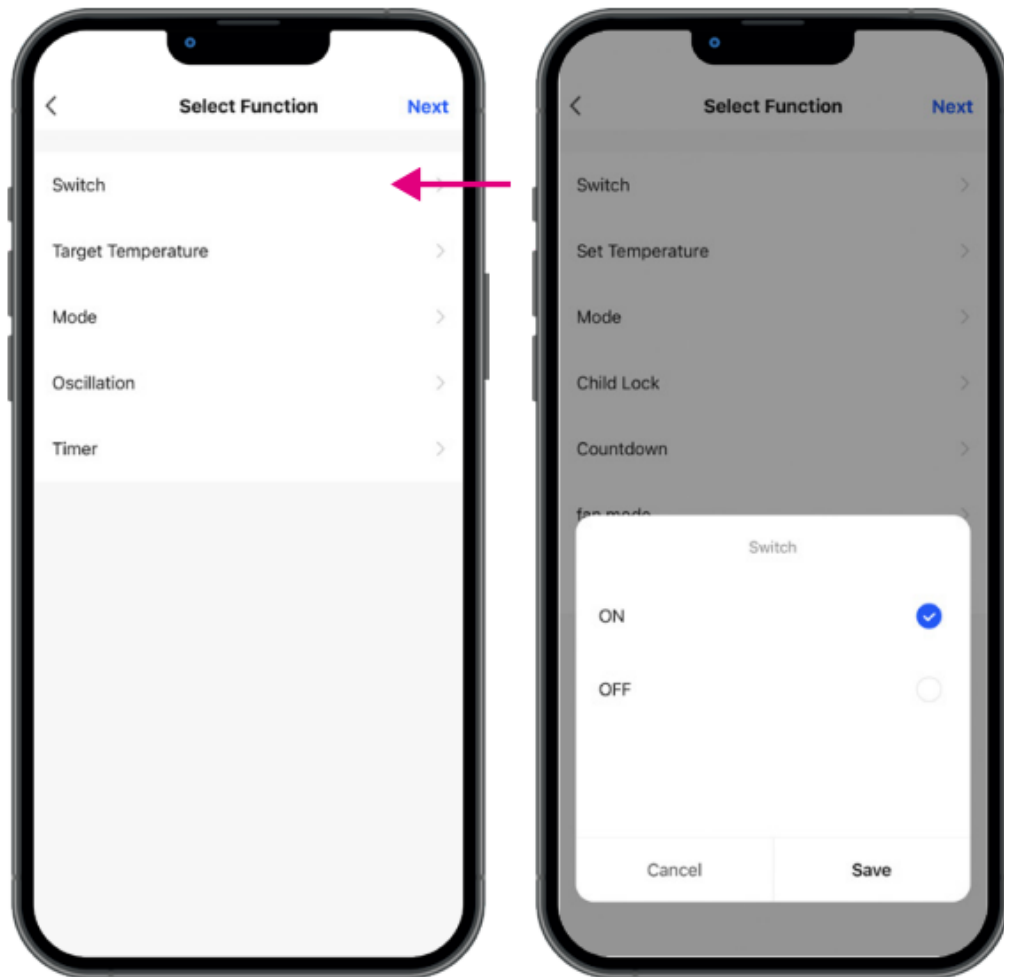


Select SWITCH from the function list to turn the heater on

Make sure ON is selected

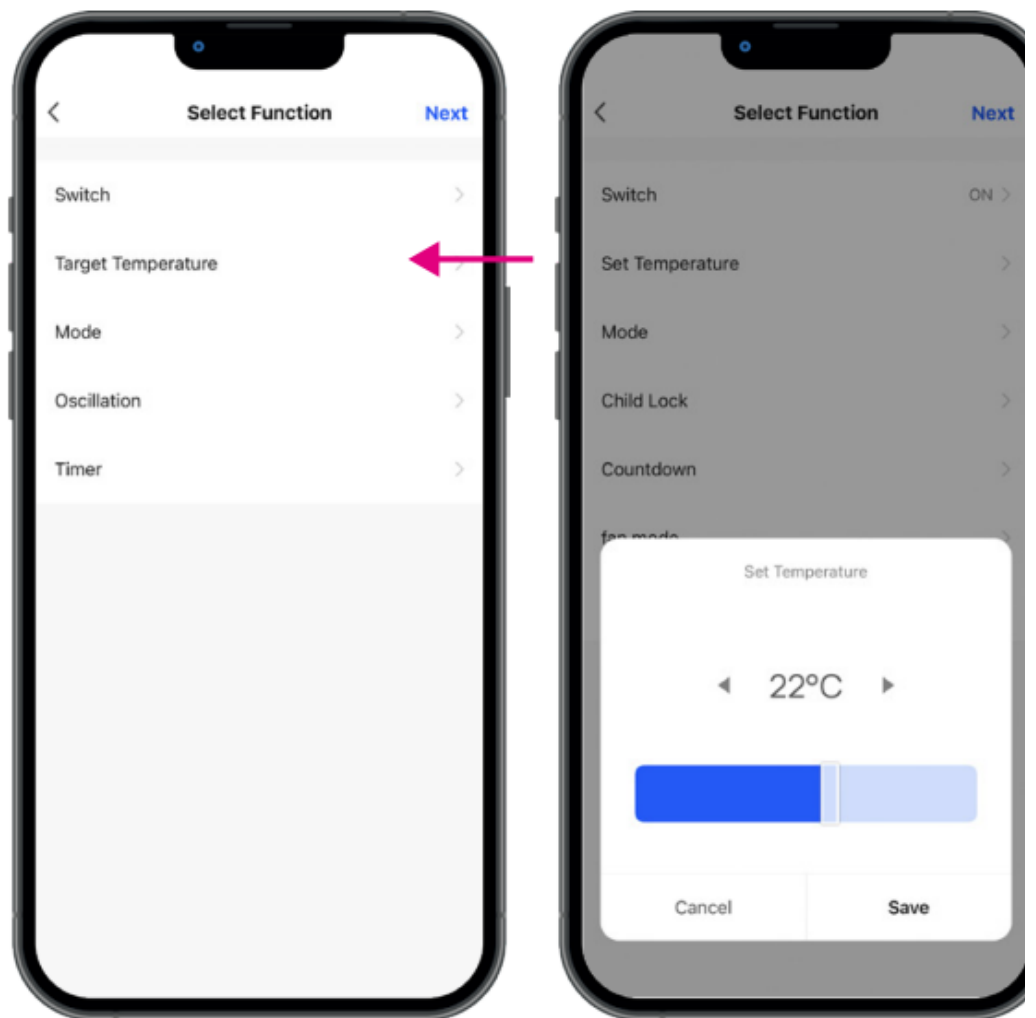

To set the target temperature choose TARGET TEMPERATURE from the function list

Set the desired temperature you wish the radiator to reach

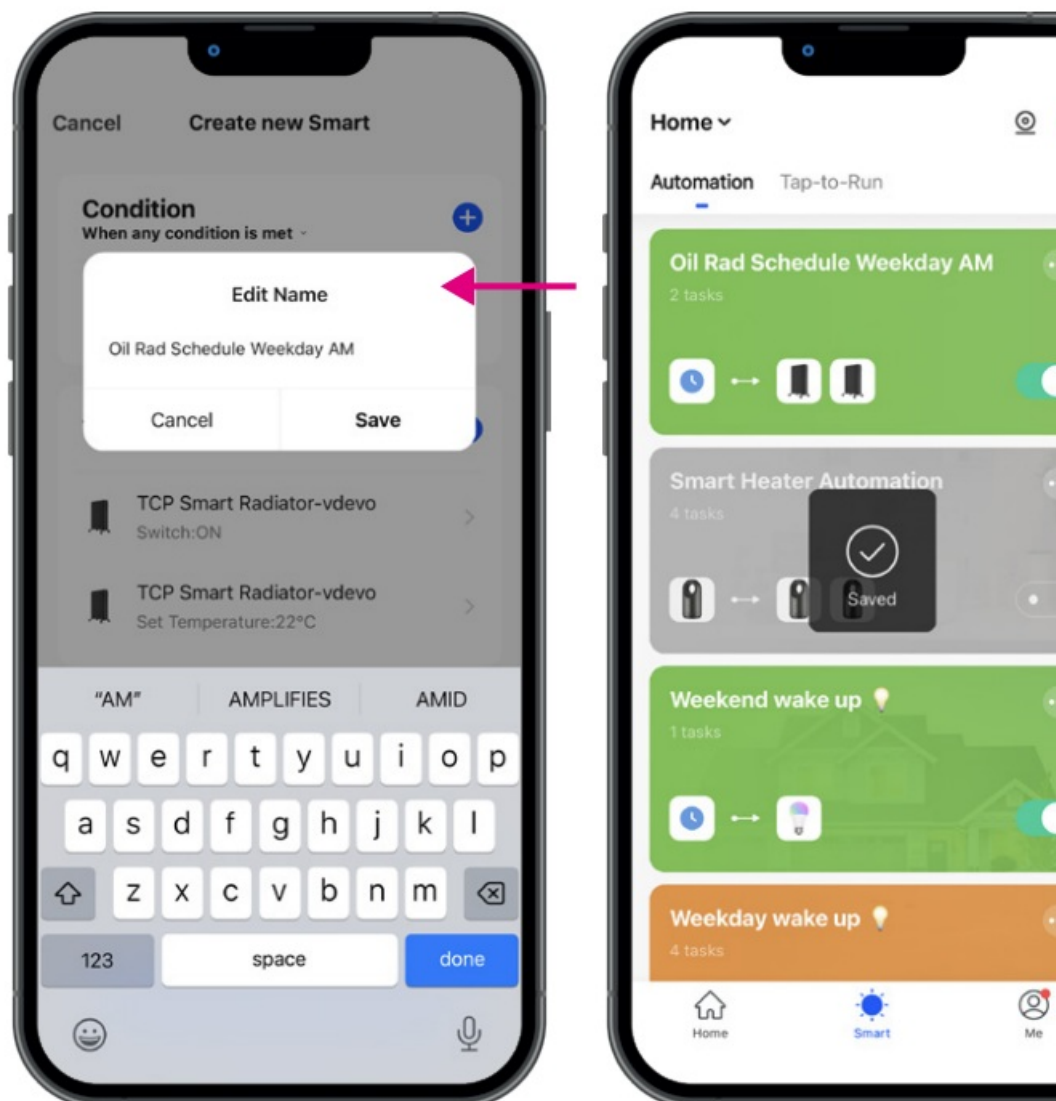

Name the Schedule and save to finish

The Schedule will now be in the Smart Automation list. You can create more schedules by repeating the steps above



[TCP Smart 49323 Automation Oil Radiator](#) [pdf] User Guide
49323 Automation Oil Radiator, 49323, Automation Oil Radiator, Oil Radiator, Radiator

References

-  **[TCP Smart – Fit. Connect. Play!](#)**

Manuals+.