



# TCP Smart SMABLFAN1500WBHN1903 WiFi Fan Heater User Manual

[Home](#) » [TCP Smart](#) » TCP Smart SMABLFAN1500WBHN1903 WiFi Fan Heater User Manual 



The TCP Smart WiFi Fan Heater offers an efficient and quick heating solution which is portable and easy to use. Control your heating exactly as you desire either using the control panel situated on the heater or mobile phone using the TCP Smart App and /or voice control via Alexa or Google hub.

## USER INSTRUCTIONS

### Contents

- [1 IP24 ELECTRONIC SERIES](#)
- [2 SAFETY INSTRUCTIONS](#)
- [3 OPERATING THE HEATER](#)
- [4 CONNECTING THE APPLIANCE TO WI-FI](#)
- [5 CONNECTING THE APPLIANCE TO WIFI](#)
- [6 SETTINGS](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)

## IP24 ELECTRONIC SERIES

IP24 ELECTRONIC SERIES  
MODEL  
POWER  
SMABLFAN1500WBHN1903/

**IMPORTANT:** Read these instructions fully before using the heater. Retain these instructions for future reference.

## SAFETY INSTRUCTIONS

(to be read before operating the heater).

1. Before using set the power-level switch which is located at the back of the heater to "I".

Please note: there may be a trace of odour during the first few minutes of initial use, or after a period of storage. This is normal and will quickly disappear.

 
2. CAUTION: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present. Children 3 years and younger should be continually supervised when in close proximity to the heater.

Children aged from 3 years to less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

3. Use this heater on a horizontal and stable surface.
4. Keep the power cord away from the hot body of the heater.
5. Indoor use only.
6. Do not place the heater on carpets with a very deep pile.
7. Do not place the heater close to curtains or furniture in order to avoid a fire hazard.
8. Do not insert any object through the air grilles of the heater.
9. Do not use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
10. Always unplug the heater when moving it from one location to another.
11. Do not use this heater if it has been dropped;
12. Do not use if there are visible signs of damage to the heater;
13. Do not leave the heater switched on when your property is vacant.

## WARNINGS

- In order to avoid overheating, do not cover the heater.
- Always use the heater in an upright position.
- Do not use the heater to dry your laundry. Never obstruct the intake and outlet grilles to avoid the danger of overheating.
- Do not place it up against walls, furniture, curtains, etc.
- If the supply cord is damaged, it must be replaced by the manufacturer, their service agent or a similarly qualified person in order to avoid a hazard.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

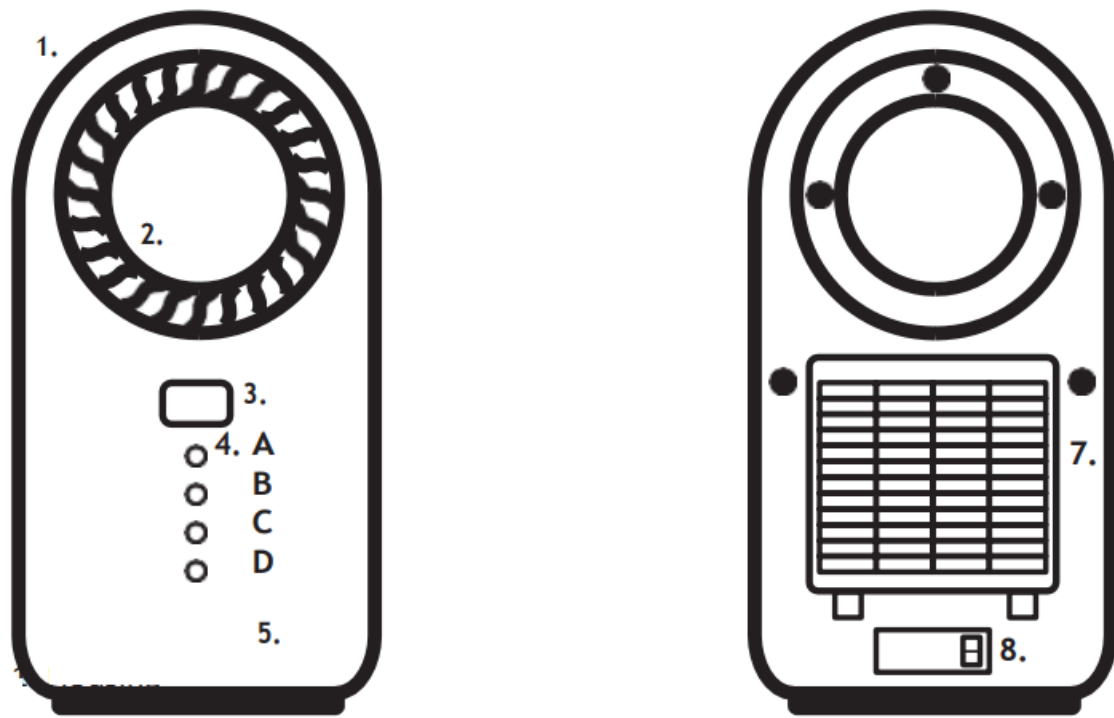

1. Housing
2. Outlet
3. Display
4. Controls
  - A. Oscillation
  - B. Mode / On / Off
  - C. Timer
  - D. Temp
5. Base
6. Safety push button
7. Filter
8. Power switch

## OPERATING THE HEATER

**Note:** It is normal when the heaters are turned on for the first time, or when they are turned on after a long period of time not being used, the heaters may emit some smell and fumes. This will disappear when the heater has been on for a short while.

Choose a suitable location for the heater, taking into account the safety instructions above. Insert the plug of the heater into a suitable socket.

### MODE/ON/OFF BUTTON

Before using, set the power-level switch which is located at the back of the heater to “I”.

Press the MODE/ON/OFF button located on the front of the fan once to start the operating modes. The fan will automatically start on fan mode.

Press this button to select one of the 3 operating modes: Fan, Low Heat or High Heat.

To turn the device off, press the MODE/ON/OFF button until the fan light is lit. The fan will then begin a 30 second count down. When the 30 seconds have counted down, the heater will turn off.

This feature can be performed using the TCP Smart App.

### OSCILLATION

Press the swing button to activate or deactivate the oscillation function. When it is activated, the oscillation light indicator will turn on and air flow will be moved from left to right.

This feature can be performed using the TCP Smart App.

## **TIMER BUTTON**

Press the timer button repeatedly to increase the operating time by 1-hour intervals. The time can be set from 1 to 12 hours. To cancel the timer, press the timer button repeatedly until the 00 is displayed.

This feature can be performed using the TCP Smart App.

## **TEMPERATURE BUTTON**

Press the temperature button repeatedly to increase the room temperature, from 15 to 40°C. Once the temperature is set, the digits will flash for 3 seconds and then the display will show the current room temperature. The device will then work to achieve the desired temperature. The device has a safety tilt switch, which will turn the device off.

This feature can be performed using the TCP Smart App.

## **CLEANING THE HEATER**

Always un-plug the heater from the wall socket and allow it to cool down before cleaning. Clean the outside of the heater by wiping with a damp cloth and buff with a dry cloth. Do not use any detergents or abrasives and do not allow any water to enter the heater.

## **STORING THE HEATER**

When the heater is not used for long period of time it should be protected from dust and stored in a clean dry place.

## **CORRECT DISPOSAL OF THIS PRODUCT**



## **WARRANTY INFORMATION**

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year, starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted. The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances.

## **CERTIFICATION CONFORMITY**

Hereby, Technical Consumer Products Ltd declares that the radio equipment type TCP Smart Wifi Fan 1500W – White, TCP Smart Wifi Fan 1500W – Black, is in accordance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address – [www.tcpi.eu](http://www.tcpi.eu).

## **REGISTERED OFFICES**

TCP UK Ltd, 1 Exchange Court, Cottingham Road, Corby, Northants, NN17 1EW.

TCP France, Quai Gabriel P'ri, 1, Joinville Le Point, France, 94340.

## **CONNECTING THE APPLIANCE TO WI-FI**

Use the QR code below to download the TCP Smart App for control of the heater by voice or TCP Smart App.  
QR code for both android and iOS



<http://l.ead.me/bawWnR>

To control the heater using the TCP Smart App the unit must be turned on.  
Before you get started you will need the following:

- Smart device such as a mobile phone or tablet
- Access to the Google or Apple App store, log on and passwords
- The name of your Wi-Fi network and password to your Wi-Fi network
- Confirm your home Wi-Fi router is running on 2.4Ghz and not 5Ghz. If you are unsure, please consult your broadband provider for details on how to change the settings.
- Turn off any Wi-Fi extenders during set up
- Check you do not have any limitations on the number of devices with your broadband provider

Please note: Our products do not work on 5Ghz only 2.4Ghz.

For instructions on how to connect to Amazon Alexa or Google Nest please visit <https://www.tcpsmart.eu/how-to-alexa-google-nest>

With the heater turned on, hold down the On/Off button until it beeps and the LED light above the button blinks quickly, the device is now in pairing mode. In the TCP Smart App, enter your WiFi password and follow the instructions in the App to connect.

## **CONNECTING THE APPLIANCE TO WIFI**

### **DEVICE CONTROL SCREENS**

1. Switch – (power On or Off)
2. Mode – to select Cool, Low Heat or High Heat
3. Timer – to select time countdown duration
4. Settings – to select oscillation function or schedule



## SWITCH

ON / OFF

Press Switch to turn heater on and off remotely.  
Set Target Temperature by using + or – buttons.



## MODES

Press Mode for options, one mode can be selected at any one time. Press selected mode once to activate.

## COOL

Press Mode. Press Cool to activate the cool mode.  
Set Target Temperature by using + or – buttons.



## LOW HEAT

Press Mode. Press Low Heat Mode to activate.  
Set Target Temperature by using + or – buttons.



## HIGH HEAT

Press Mode. Press High Heat Mode to activate.  
Set Target Temperature by using + or – buttons.



## AUTO

Press Mode. Press Auto Mode to activate.  
Set Target Temperature by using + or – buttons.





## TIMER

Using the Timer function, the heater can be set to turn off after a specified amount of time.

 
Choose Timer at the bottom of the screen, select the duration of time that you want the heating to stay on for. The heater will turn off after the selected amount of time has passed.



## SETTINGS

## OSCILLATION

Press Settings. Slide oscillation button to right to activate. Slide to left to deactivate.

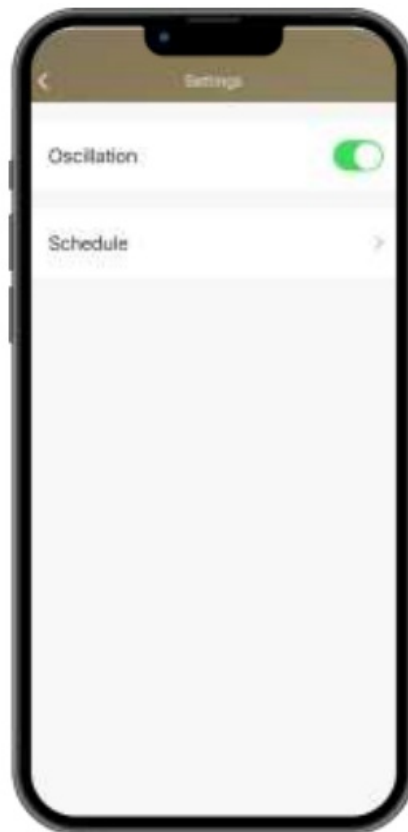

## SETTINGS

 
### SCHEDULE

In settings operate the schedule by pressing the Schedule > button.  
Press Add button.



To add just one occurrence select the time you want to start the heater, press Switch and select on. Press Done followed by Save.

Select the time you want the heater to turn off, press Switch and select off. Press Done followed by Save.

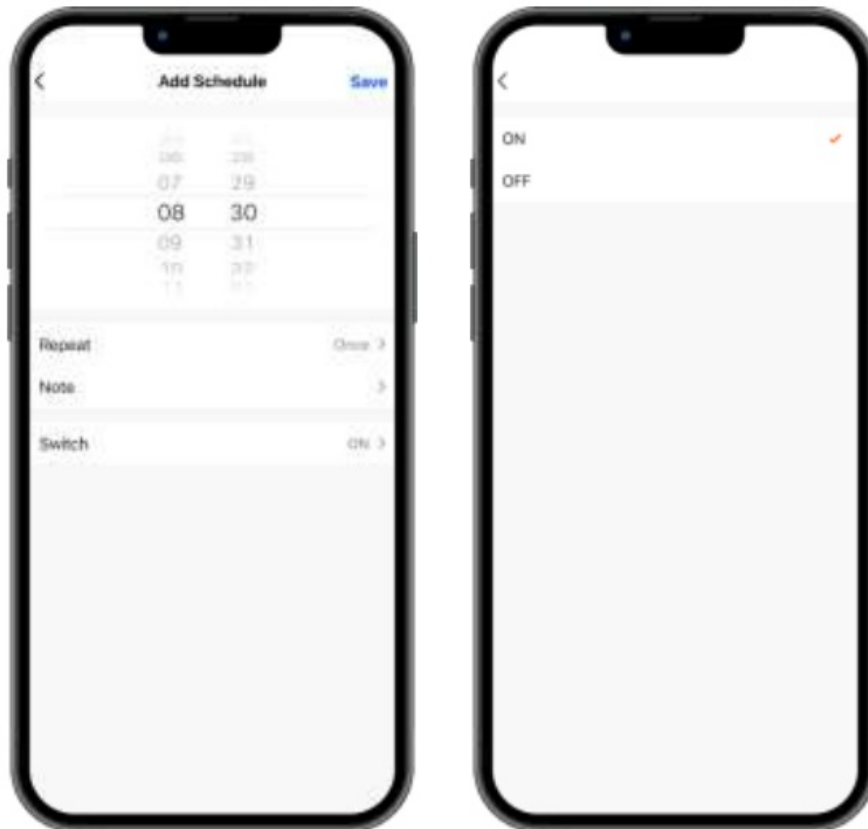

## WEEKLY SCHEDULE

 
To turn the heater on for specific day(s) and time(s).

Press repeat to show days of the week.


Tick the day(s) of the week you want the heater to turn on.

Press < button on top left hand of the screen.

To receive a notification to your phone to alert when the schedule has activated, before saving press Notification.

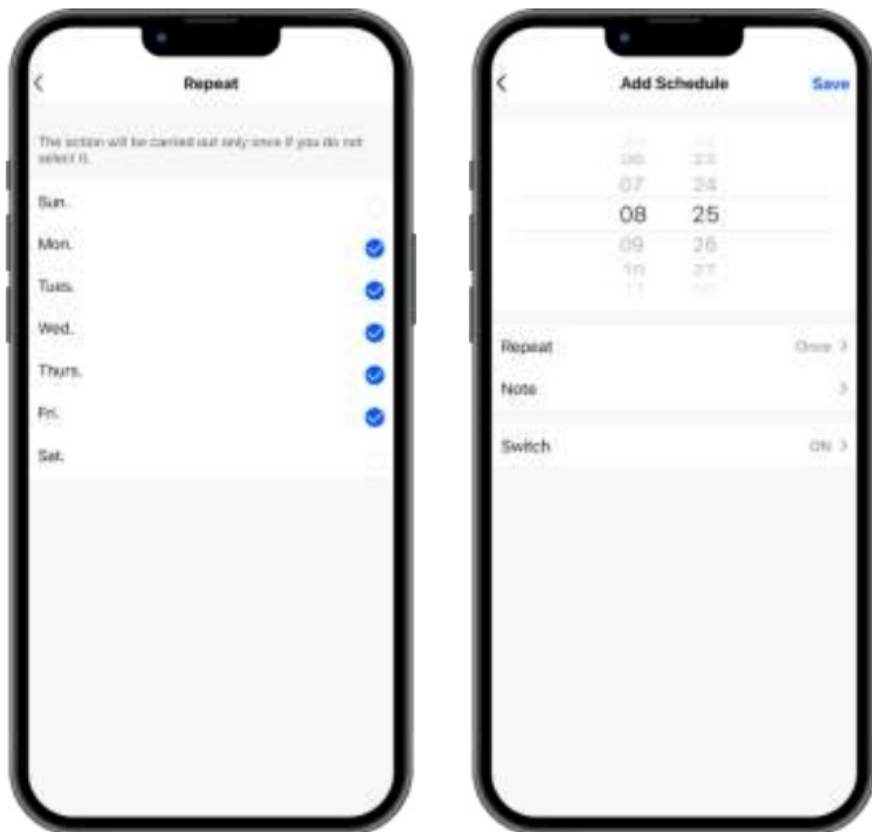


 Select the time you want the heater to start.  
Press Switch.  
Press on followed by Done. Press Save.

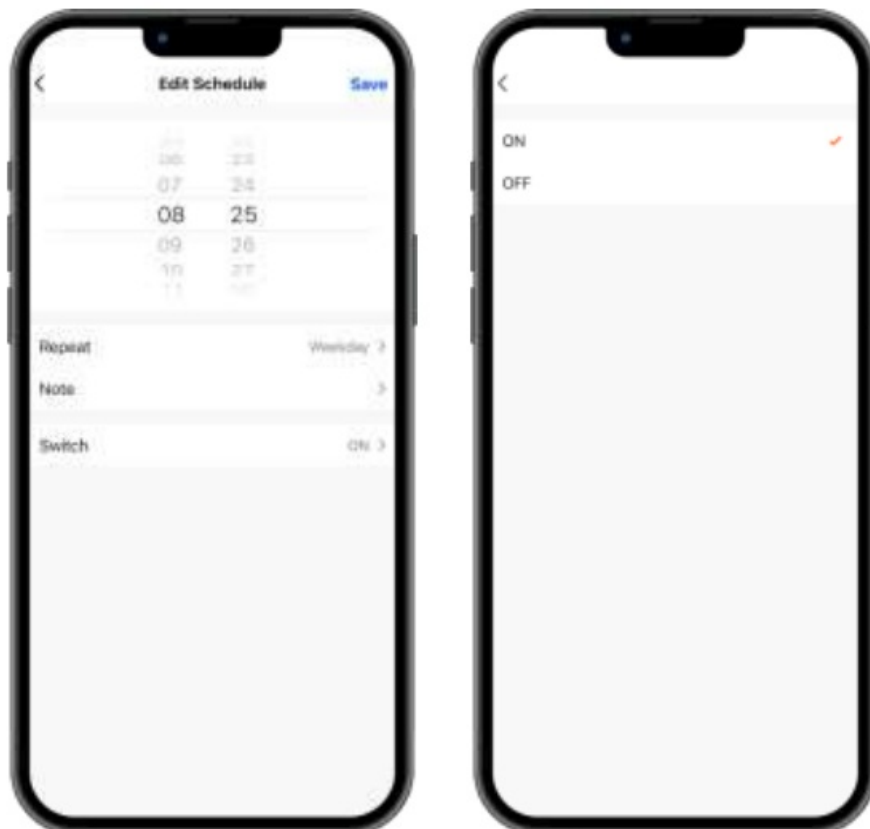


To turn the heater off, press the repeat button to show the list of days.  
Tick the same day(s) you selected to turn the heater on.  
Press the < button on top left hand of the screen.

 Select the time you want the heater to turn off.

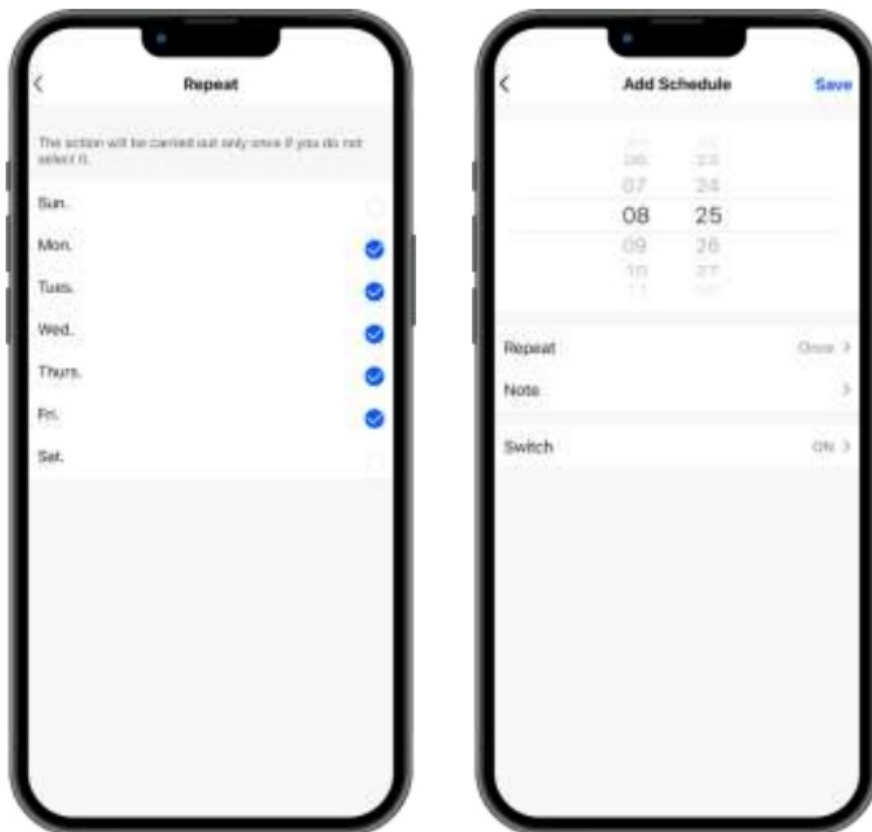

 Press Switch followed by off.  
Press Done followed by Save.

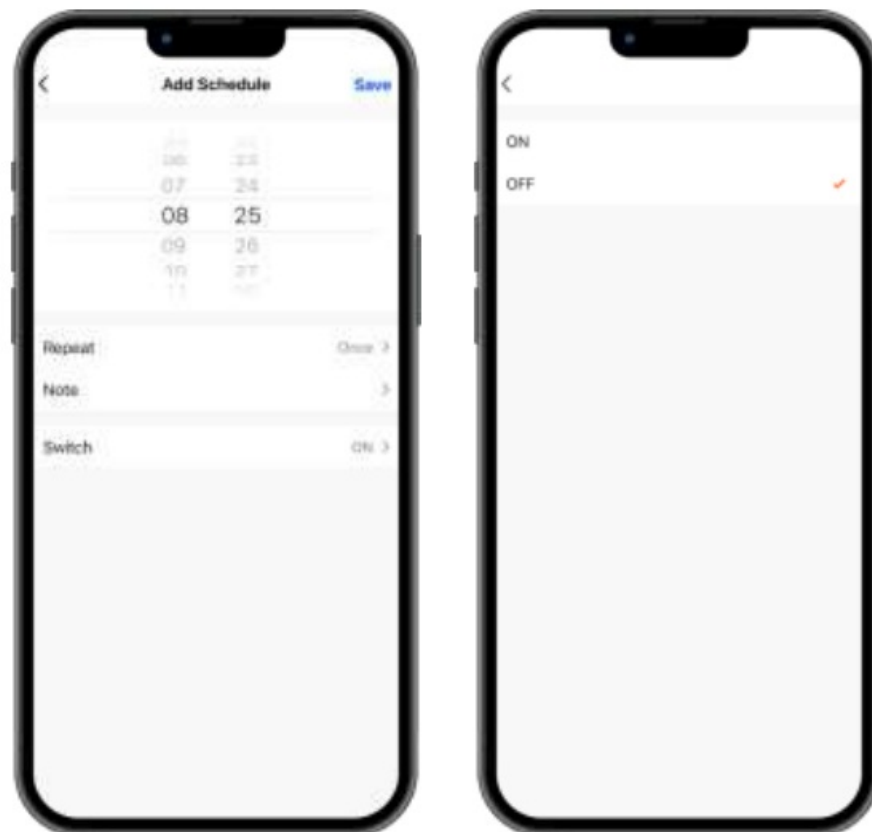

This screen will list the times and dates you have selected to turn the heater on and off.  
Press < button to return to the previous screen.



## Documents / Resources

<p><b>TCP Smart</b> WiFi Fan Heater</p> <p><b>USER INSTRUCTIONS</b> IP24 ELECTRONIC SERIES</p> <p>Model: SMABLFAN1500WBHN1903</p> <p><b>SAFETY INSTRUCTIONS</b></p> <ol style="list-style-type: none"> <li>1. Read and understand all safety instructions before using the heater.</li> <li>2. Do not use the heater in a room with a flammable atmosphere.</li> <li>3. Do not use the heater in a room with a flammable atmosphere.</li> <li>4. Do not use the heater in a room with a flammable atmosphere.</li> <li>5. Do not use the heater in a room with a flammable atmosphere.</li> <li>6. Do not use the heater in a room with a flammable atmosphere.</li> <li>7. Do not use the heater in a room with a flammable atmosphere.</li> <li>8. Do not use the heater in a room with a flammable atmosphere.</li> <li>9. Do not use the heater in a room with a flammable atmosphere.</li> <li>10. Do not use the heater in a room with a flammable atmosphere.</li> <li>11. Do not use the heater in a room with a flammable atmosphere.</li> <li>12. Do not use the heater in a room with a flammable atmosphere.</li> <li>13. Do not use the heater in a room with a flammable atmosphere.</li> <li>14. Do not use the heater in a room with a flammable atmosphere.</li> <li>15. Do not use the heater in a room with a flammable atmosphere.</li> <li>16. Do not use the heater in a room with a flammable atmosphere.</li> <li>17. Do not use the heater in a room with a flammable atmosphere.</li> <li>18. Do not use the heater in a room with a flammable atmosphere.</li> <li>19. Do not use the heater in a room with a flammable atmosphere.</li> <li>20. Do not use the heater in a room with a flammable atmosphere.</li> </ol>	<p><b><a href="#">TCP Smart SMABLFAN1500WBHN1903 WiFi Fan Heater</a> [pdf] User Manual</b></p> <p>SMABLFAN1500WBHN1903 WiFi Fan Heater, SMABLFAN1500WBHN1903, WiFi Fan Heater, Heater</p>
---	---

## References

- [FAQ – TCP Smart](#)
- [Homepage | TCP](#)
- [Homepage | TCP](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.