

TCP SmartStuff SmartBox + Panel Sensor SMBOXPLBT **Installation Guide**

Home » TCP » TCP SmartStuff SmartBox + Panel Sensor SMBOXPLBT Installation Guide Table 1



Contents

- 1 TCP SmartStuff SmartBox + Panel Sensor SMBOXPLBT Installation Guide
 - 1.1 Warning
 - 1.2 Specifications
 - 1.3 SmartBox + Panel Sensor Setting
 - 1.4 Regulatory Approvals
 - 1.5 Installation of the SmartBox + Panel Sensor
 - **1.6 Electrical Connections**
 - 1.7 TCP SmartStuff App
- 2 Documents / Resources
- **3 Related Posts**

TCP SmartStuff SmartBox + Panel Sensor SMBOXPLBT Installation Guide

Warning



NOTE: Please read the instructions before proceeding with the installation.



WARNING: DANGER-RISK OF SHOCK- DISCONNECT POWER BEFORE INSTALLATION!



NOTE: This device is suitable for damp locations only.

- This product is used to control lighting luminaires with 0-10V dim to off drivers/ballast.
- This product must be installed in accordance with local and national electrical codes. Please consult with a qualified electrician before installation.

Specifications

Input Voltage

• 120 - 277VAC @ 15mA

Input Line Frequency

• 50/60Hz

Maximum Power

• 1W

Output Voltage

• 0-10VDC

Operating Temperature

• -23°F to 113°F

Humidity

• <80% RH

Radio Protocol

• Bluetooth Signal Mesh

Communication Range

• 150 ft / 46 m

SmartBox + Panel Sensor Setting

Microwave Maximum Height: 10 feet / 3m Microwave Maximum Diameter: 33 feet / 10m

PIR Maximum Height: 10 feet / 3m PIR Maximum Diameter: 16 feet / 5.0m

Sensor Detection Angle: 360° Hold Time: 1 min. –1092 min.

Daylight Sensor Setpoint: 0 - 300 lux

Regulatory Approvals

• ETL Listed


• Contains FCC ID: NIR-MESH8269

• Contains IC: 9486A-MESH8269

- Conforms to UL 8750
- Certified to CSA C22.2 No. 250.13


Installation of the SmartBox + Panel Sensor


Check the label on the SmartBox for correct orientation and Install as shown. The junction box needs a 1/2" knockout for the SmartBox + Panel Sensor to fit securely. Use double-sided tape if needed.

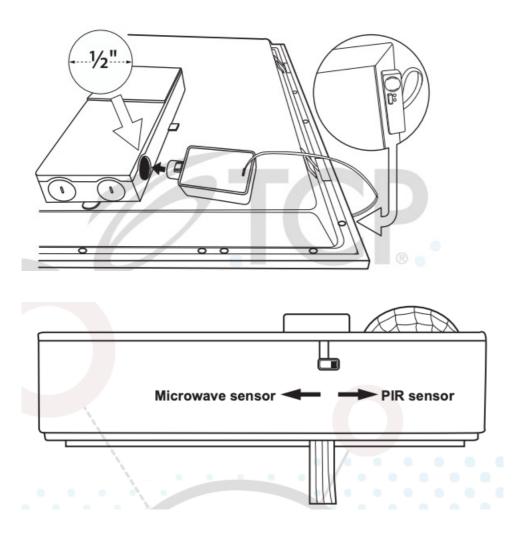

Switch between Microwave Sensor and PIR Sensor.

Electrical Connections

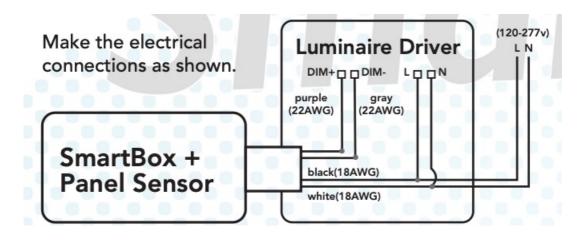

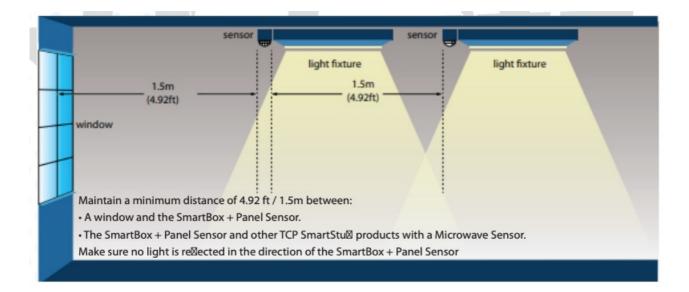

TCP SmartStuff App

The TCP SmartStuff App is used to configure the Bluetooth® Signal Mesh and TCP SmartStuff devices.

Download the TCP SmartStuff App using the following options:

- Download the SmartStuff App from the Apple App Store or Google Play Store
- · Use the QR Codes here:



Instructions for configuring TCP Smart App and SmartStuff devices are at https://www.tcpi.com/tcp-smartstuff/

LIMITED WARRANTY: This product is warranted for a period of 5 YEARS* from date of original purchase against defects in materials and workmanship. If this product should fail to operate due to defects in material or workmanship, simply call 1-800-771-9335 within 5 YEARS of purchase. This product will be repaired or replaced, at TCP's option. This warranty is expressly limited to repair or replacement of the product. This warranty gives the consumer specific legal rights, which vary from state to state. WARRANTY IS VOID IF PRODUCT IS NOT USED FOR THE PURPOSE FOR WHICH THIS PRODUCT IS MANUFACTURED.

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in an installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 8 inches between the radiator & your body.

IC

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The "Android" name, the Android logo, Google Play and the Google Play logo are trademarks of Google LLC. Apple, the Apple logo, and the App Store are trademarks of Apple Inc., registered in the U.S. and other countries. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by TCP Inc. is under license.

Documents / Resources



<u>TCP SmartStuff SmartBox + Panel Sensor SMBOXPLBT</u> [pdf] Installation Guide TCP, SmartStuff, SmartBox, Panel Sensor, SMBOXPLBT

Manuals+,