


TCS
Basys QD2040
Panel Gateway



TCS Basys QD2040 Panel Gateway Installation Guide

[Home](#) » [TCS Basys](#) » TCS Basys QD2040 Panel Gateway Installation Guide 

Contents

- [1 TCS Basys QD2040 Panel Gateway](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Installation](#)
- [6 Installation of Replacement Gateway](#)
- [7 CONTACT](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)



TCS Basys QD2040 Panel Gateway



Specifications

- **Product Name:** QD2040 Panel Gateway
- **Model Number:** 202403
- **Power Supply:** 12VDC
- **Connection Interfaces:** Cloud Ethernet, USB Port 1, Fan, Power/reset wire, COM bus

Product Usage Instructions

- Disconnect external power before starting.
- Remove five connections from the motherboard: Power (12VDC), Cloud Ethernet, USB Port 1, fan, and power/reset wire connection.
- Remove the four screws holding the Panel Gateway device onto the QWL Building Manager.
- Install the new Panel Gateway QWL 4.0 into the QWL Building Manager and fasten it with the screws.
- Reattach the five connections to the Mother Board: Power (12VDC), USB Port 1, Cloud Ethernet, fan, and LED power/reset wire connections.
- Reattach any connections for the COM bus to the Serial Board.
- Replace the old 12VDC power supply with the new one that came with the new Panel Gateway.
- Plug the new 12VDC power supply into an outlet and the power receptacle on the side two-port wall plate to power the QWL2040 Panel.

FAQ

- **Q:** Can I reuse the terminal plugs from my old connections?
- **A:** The new Gateway comes with fresh terminal plugs. You can use them or re-use the existing plugs if they are still in good condition.

- **Q:** What should I do with the old power supply?
- **A:** Remove and recycle/discard the old 12VDC power supply and replace it with the fresh 12VDC power supply that came with the new Panel Gateway. Do not reuse the old power supply.


Installation

- These instructions detail the removal and replacement of the QWL2040 Panel Gateway.
- Disconnect external power before beginning the replacement of the Gateway.


Note: Components may differ slightly in their appearance. Except where stated otherwise, all instructions are the same.

Removal of Previous Gateway

1. Remove five connections from the motherboard: Power (12VDC), Cloud Ethernet, USB Port 1, fan and power/reset wire connection.

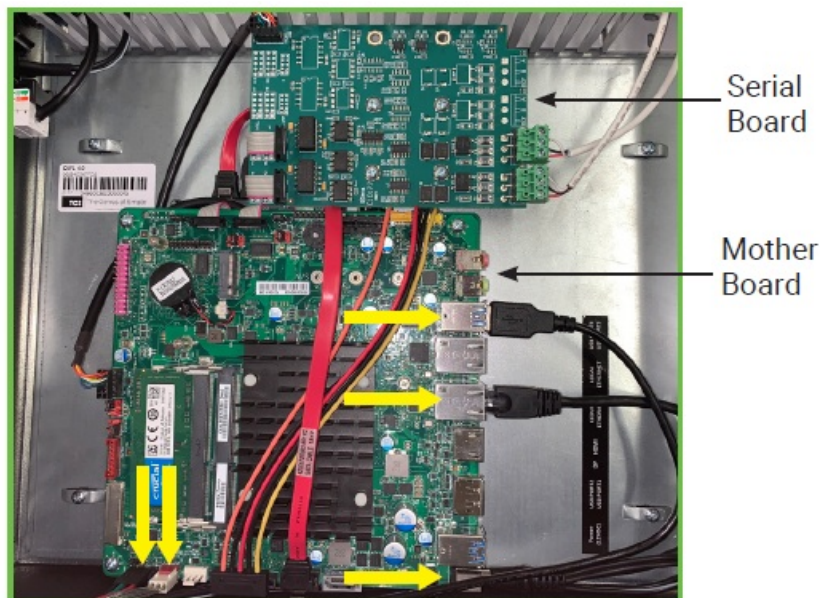

Mother Board Style 1

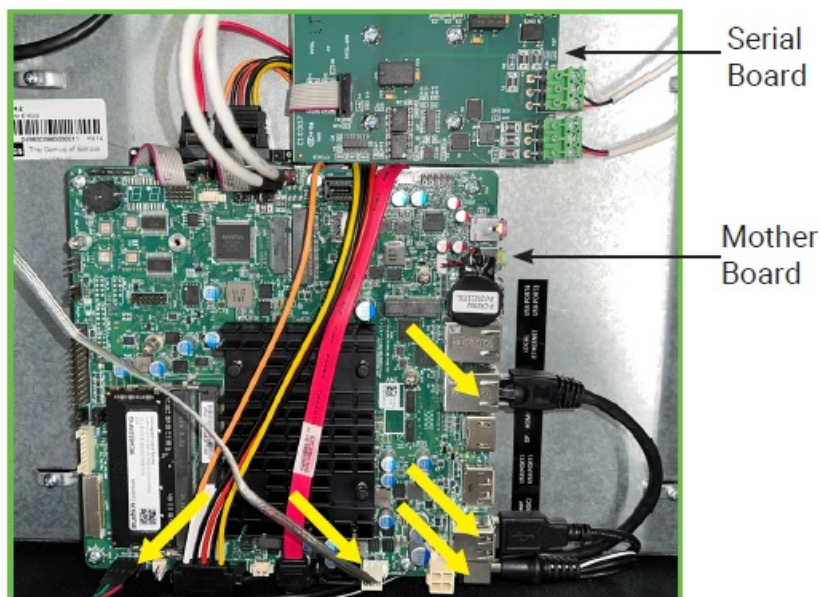


Mother Board Style 2

NOTE: If your RS485 COM bus is not connected to the Serial Board, you may skip step 2.


2. Do one of the following:

- Pull off the green terminal plug(s) that connect the RS485 COM bus to the connector on the serial board and move the wires out of the way. Note the orientation and location so the terminal plug(s) can be reconnected on the new board in the same orientation.
- Disconnect the RS485 wiring plugs from the terminals and move them out of the way. Note which COM port was being used so you reconnect the RS485 wiring to the same port on the replacement board.

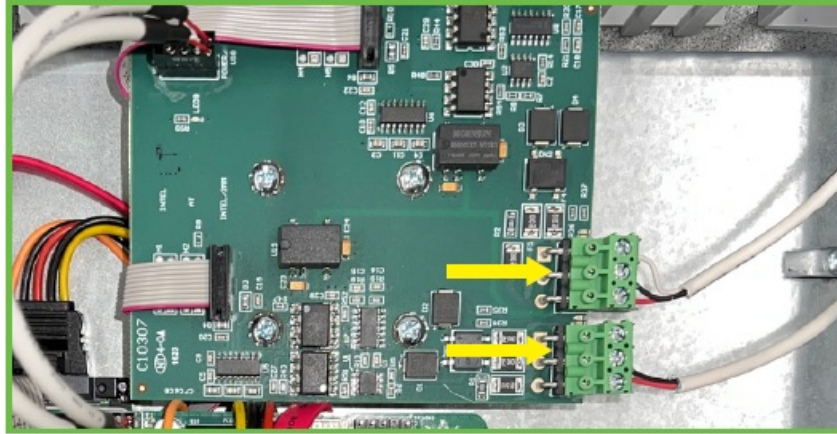

Location of the terminal plugs for the COM bus

3. Remove the four screws in the metal plate that hold the Panel Gateway device onto the QWL Building Manager. Once the last screw is removed, carefully remove the old Panel Gateway assembly from the QWL Building Manager. Save the screws as they will be needed later.

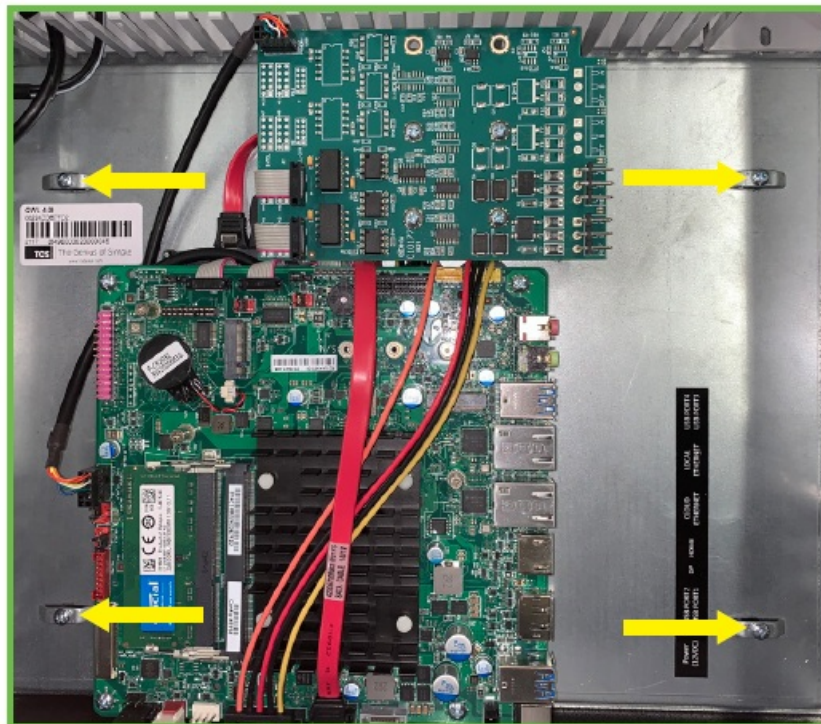


Remove the four screws

Installation of Replacement Gateway

The installation of the replacement Gateway is mostly the reverse of the removal of the old device:


1. Move or hold the wiring and cables out of the way and install the new Panel Gateway QWL 4.0 into the QWL

Building Manager. With the Panel Gateway QWL 4.0 seated correctly, all four screw locations will line up with the holes in the metal plate. Use the screws that you set aside earlier to fasten the new Panel Gateway to the QWL Building Manager.

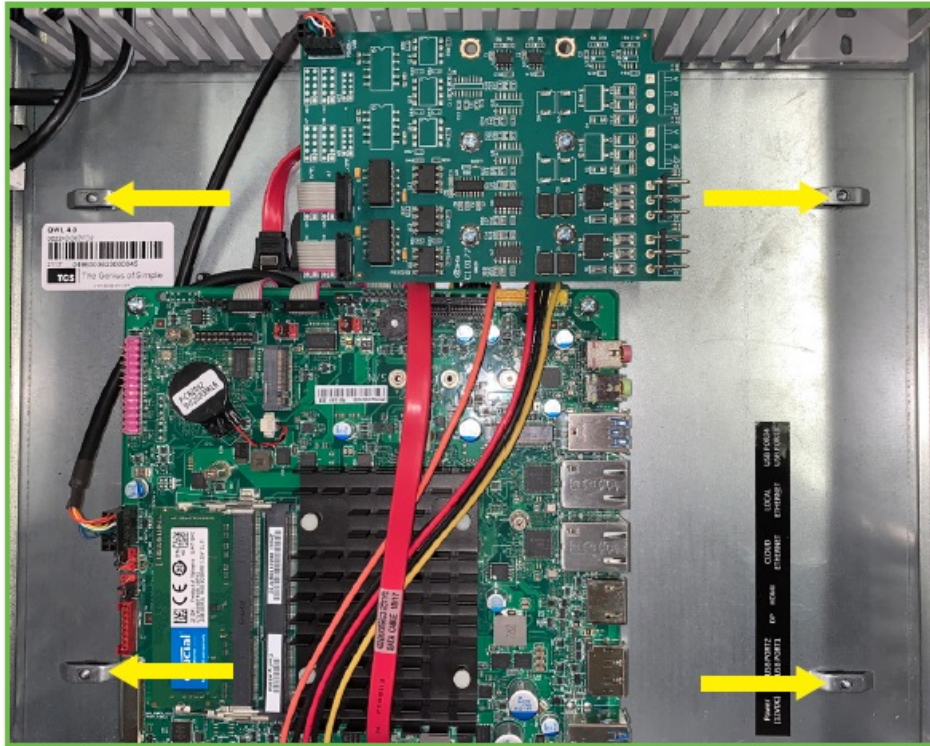


Install the four screws


2. Reattach the five connections to the motherboard – Power (12VDC), USB Port 1, Cloud Ethernet, fan, and LED power/reset wire connections.

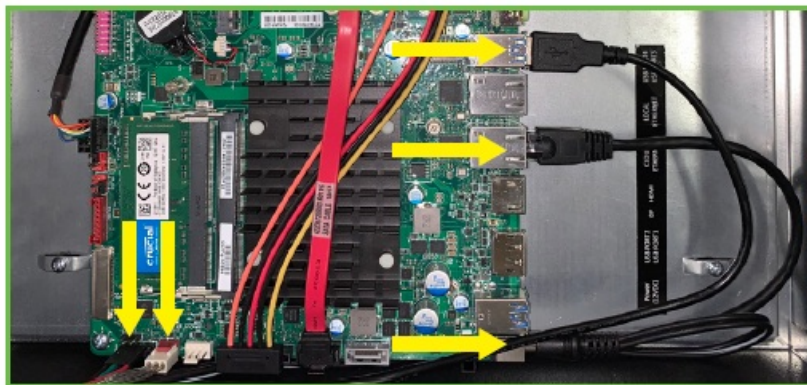

Connection locations (board style 1)

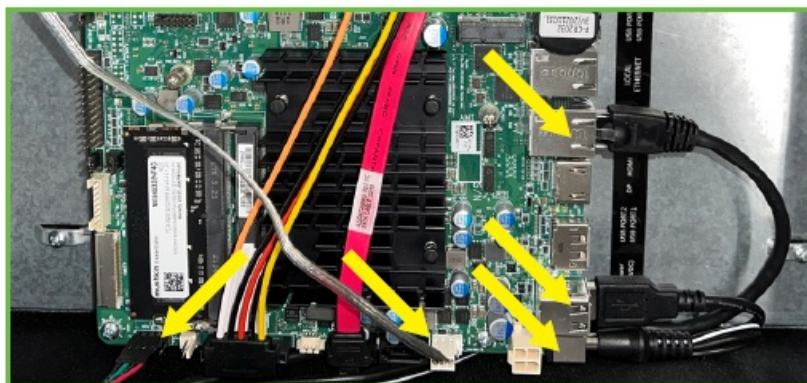

Connection locations (board style 2)

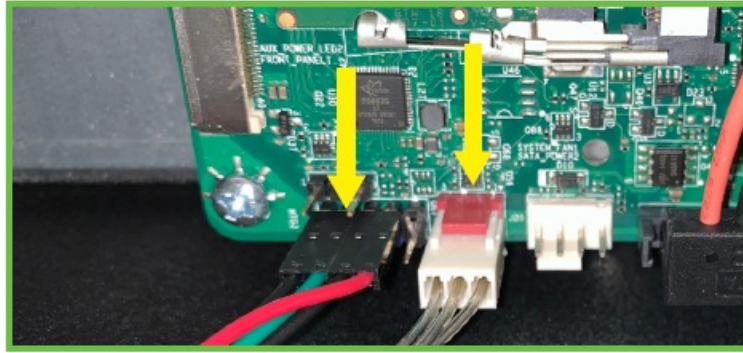

Closeup of LED power/reset and fan connections (board style 1)



Closeup of LED power/reset and fan connections (board style 2)




Closeup of Mother Board Power, Cloud Ethernet, and USB connections

3. Reattach any connections for the COM bus to the Serial Board in the same orientation that they were when removed from the old Panel Gateway.

NOTE: The new Gateway comes with fresh terminal plugs.

You can use the fresh plugs or re-use the existing plugs from your original connections if they are still in good condition.

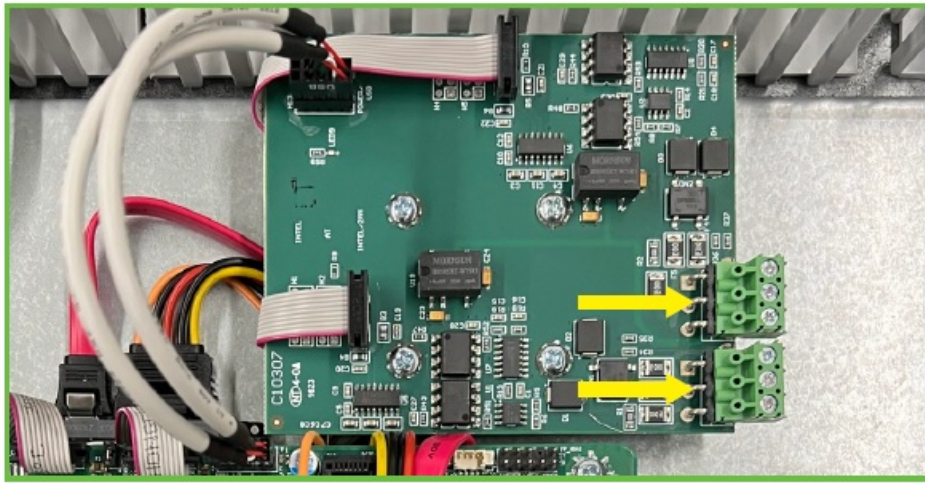

Location on serial board to reconnect the COM bus

4. Remove and recycle/discard the old 12VDC power supply and replace it with the fresh 12VDC power supply that came with the new Panel Gateway. Do not reuse the old power supply.



Replacement power supply

5. Plug the new 12VDC power supply into an outlet and the power receptacle on the side two-port wall plate to power the QWL2040 Panel.
6. Attach the included label to the outside of the QWL2040 Panel on the top of the side two-port wall plate as shown.



Placement of replacement Gateway label

CONTACT

- 2800 Laura Lane
- Middleton, WI 53562
- 800.288.9383
- www.tcsbasys.com

Documents / Resources

	TCS Basys QD2040 Panel Gateway [pdf] Installation Guide QWL2040, QWL 4.0, QD2040 Panel Gateway, QD2040, Panel Gateway, Gateway
---	---

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.