




tech inc H10 Karaoke Microphone User Manual

[Home](#) » [tech inc](#) » tech inc H10 Karaoke Microphone User Manual 

tech.inc® Karaoke Microphone User Manual

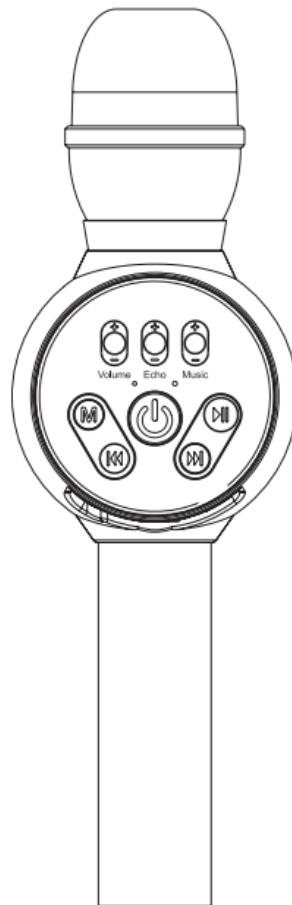

Thank you for purchasing our product. Please read the instruction carefully before use.

Contents

- [1 Important Safety Instructions](#)
- [2 Product Features](#)
- [3 RECORDING WITH MICROPHONE](#)
- [4 The function of the buttons](#)
- [5 Function description](#)
- [6 Common Problems](#)
- [7 Product specification](#)
- [8 WARRANTY CARD](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)


Important Safety Instructions

All the safety and operating instructions should be read before this product is operated. The safety and operating instructions should be retained for future reference. All warnings on the product and in the operating instructions should be adhered to.

- **Caution:** To reduce the risk of fire or electric shaking, do not expose this apparatus to rain or moisture. Do not immerse in any liquid.
- **Damage:** Discard this apparatus if it is damaged. Do not use the apparatus immediately.
- Do not attempt to open the apparatus. Opening voids warranty.
- The apparatus is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction by a person responsible for their safety.
- Young children should be supervised to ensure they do not play with the apparatus. Close supervision is always necessary when any appliance is used by or near children. •The apparatus is designed for indoor use in dry places only.
- **Warning:** Only use the suitable supply power DC 5V 2A to charge the built-in battery.
- Cleaning the apparatus only with a soft and dry cloth only.

Product Features

Structural Representation

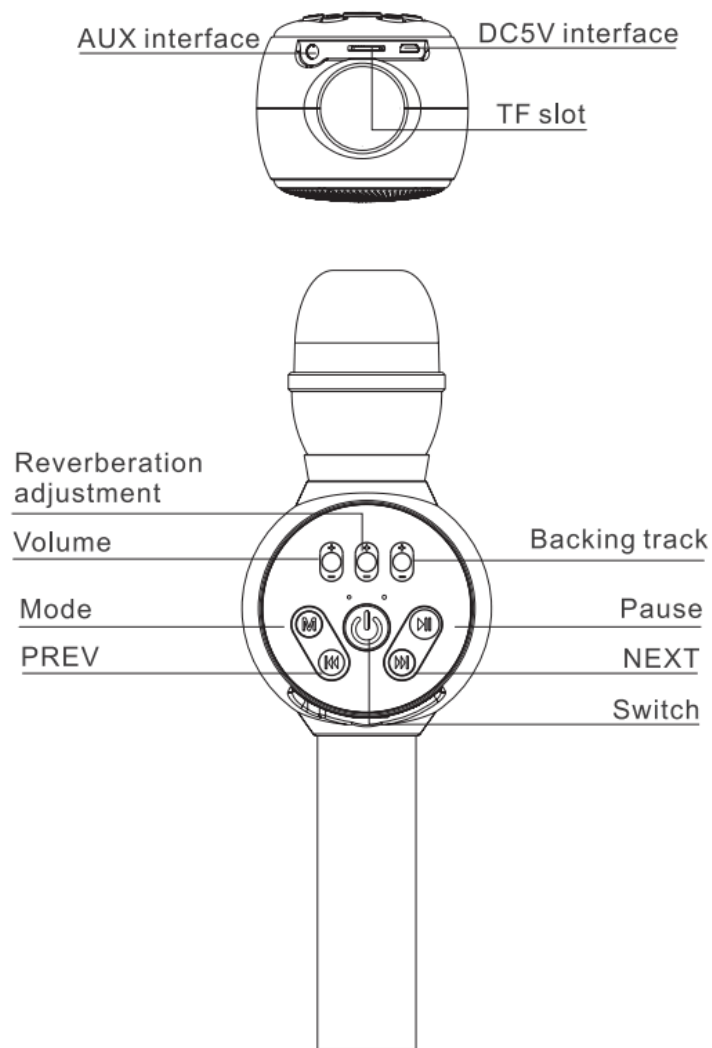

Connect via Bluetooth on your Android /ISO device

To connect via Bluetooth, first, turn on your device's Bluetooth. When you use a new Bluetooth accessory, pair it with your device. After pairing, devices can connect with each other automatically.

1. Open your device's Settings app.
2. Tap Connected devices. (Connection preferences for this model are " H10 " Bluetooth.

Tips: To save battery, turn off Bluetooth when you're not using it. Bluetooth is off in Airplane mode

RECORDING WITH MICROPHONE

1. Keep the audio cable connected to your smartphone, and plug the micro USB port into the H10.
2. Open the recording app, follow the instruction in the app and start recording.
3. When you finish the recording, click "save" on the smartphone to save the recording.

There are 2 ways to listen to your video.

(1). Listen through the microphone speaker Connect the smartphone and the microphone H10 (by Bluetooth or audio cable)and replay your video.

(2). Listen through your smartphone Unplug your smartphone, turn the microphone off and replay the video directly.

Please note for iPhone if the model is over 7, it may not have an auxiliary jack. You will need your APPLE-supplied

adaptor to use this feature.

The function of the buttons

1. Turn on/Mode button: 1. Long press to turn on/off the headset.
2. When the product is turned on, click to start/exit the original audio mute mode. II. Mode button: 1. Click to switch mode. 2. Press and hold to start/exit magic sound mode; in magic sound mode, click to switch magic sound mode.
3. PREV button: 1. Click to play the last song. IV. Play/Pause button: 1. Click to pause/play.
4. NEXT button: 1. Click to play the next song.
5. Volume push button: Adjust the volume of the microphone.
6. Reverberation push button: Adjust the reverberation effect of the microphone. VIII. Backing track push button: Adjust the volume of the backing track.

Function description

DC5V interface:

1. Charging interface
2. Cable audio input: Independent stereo function
3. Cable audio record

TF card port: Support reading MP3 files from TF card AUX interface: 3.5MM audio output

Common Problems

1. Fail to turn on:
 - Check for battery status or try again after charging
2. Noise when using
 - Check for battery status or try again after charging
 - Open the grille, and check whether the sensor comes into contact with the grille, in this case, lower the sensor
3. No sound:
 - Check whether the “microphone volume” push button and “volume” push button are turned on
4. No reverberation: ‘Check whether the “reverberation” push button is turned on
5. Microphone squeal: ‘Keep the loudspeaker away from other objects when using the microphone to avoid self-excitation
 - The high sensitivity of the microphone may it squeal slightly when you’re holding onto the grille, but it’s normal if there is no abnormal sound when singing or emceeing
- No device is found: ‘Check for connection of TF card or USB drive. Pull it out or switch mode and try again
6. Music stutters when connecting through Bluetooth:
 - Move your device and remove current and magnetic field interference
7. No sound or volume: ‘Check whether the “volume” push button is turned on Press and hold the “NEXT” button to increase the volume

8. Fail to read TF/USB drive: 'Make sure TF/USB drive is intact, and MP3 files are saved in TF/USB drive 10. Fail to charge or no cable audio input: Replace charger or USB cable, do not use incompatible charging device
9. Noise in headset output:
- AUX supports 3.5mm audio output, use a three-port headset plug instead of four-port

Product specification

| | |
|---|--|
| Product name: Karaoke microphone | Dimension: 75*64*245mm |
| Charging voltage: DC5V | Product net weight: 0.40KG |
| Working voltage: 3.6-4.2V | Soundtrack: Singletrack |
| Power supply mode: Rechargeable lithium batteries | Supporting devices: Cellphone, PC (cable independent stereo) |
| Battery capacity: 2000mAH | Output sensitivity: 400mV |
| Charging interface: Micro USB | Resolution: 90DB |
| Output power: 5W | SNR: .80DB |
| Bluetooth version: 4.2 | Frequency range: 100HZ-10KHZ |
| Bluetooth range: <15m | Continuous Play Time: about 4-5 hours (*The playing time will be different based on different playing files and volume.) |

WARRANTY CARD

This product is guaranteed against faulty materials and workmanship for a period of 2 years from the date of purchase with proof of purchase. Under this warranty, the warrantor's obligation to the purchaser is to remedy manufacturing faults by repairing or replacing faulty parts or, if unable to be remedied, replacing or refunding the product with proof of purchase. This warranty becomes void if the product has been tampered with or damaged in any other way by improper use. This product has been quality inspected. In the unlikely event of a deficiency, please contact the retailer from which this product was purchased.

WARRANTY FOR PRODUCTS USED COMMERCIALY UNITED TO 90 DAYS

Please fill this in upon purchase in case you lose your receipt. Model Number: H10 Serial Number: Date of Purchase: Receipt Number Store Purchased from:

IMPORTANT

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer or importer. If service is required, both of these documents are to be returned with the product to your retailer, otherwise, a fee may be charged.

Customer support line 0800 422 274
For assistance during normal working hours
Monday — Friday, 9 am — 5 pm, New Zealand local time

Documents / Resources



[tech inc H10 Karaoke Microphone](#) [pdf] User Manual
H10 Karaoke Microphone, H10, Karaoke Microphone