

TECH Sinum R-S2 Przewodowy Regulator Temperatury R-S2 User Manual

Home » TECH Sinum » TECH Sinum R-S2 Przewodowy Regulator Temperatury R-S2 User Manual



Contents

- 1 TECH Sinum R-S2 Przewodowy Regulator **Temperatury**
- 2 Opis
- 3 How to register the device in the sinus system
- 4 How to identify the device in the Sinum system
- **5 Operation**
- 6 Menu
- 7 Technical data
- **8 EU Declaration of Conformity**
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts



TECH Sinum R-S2 Przewodowy Regulator Temperatury



The R-S2 room regulator is equipped with a temperature and air humidity sensor. Current measurements are displayed on the device and sent to the Sinum Central device, where they can be freely used to create various automation. Communication with the Sinum Central device is done by wire. The regulator is mounted to an

electrical box with a diameter of 60 mm.

Opis

- 1. Registration button
- 2. Main button
- 3. Navigation buttons
- 4. SBUS communication connector
- 5. Terminating resistor

How to register the device in the sinus system

The device should be connected to the Sinum central device using the SBUS connector 4, and then enter the address of the Sinum central device in the browser and log in to the device. In the main panel, click the Settings > Devices > SBUS devices > + > Add device. Then briefly press the registration button 1 on the device. After a properly completed registration process, an appropriate message will appear on the screen. Additionally, the user can name the device and assign it to a specific room. INFO: When registering the regulator, the humidity sensor will also be registered automatically.

How to identify the device in the Sinum system

To identify the device in the Sinum Central, activate the Identification Mode in the Settings > Devices > SBUS Devices > + > Identification Mode tab and hold the registration button on the device for 3-4 seconds. The device used will be highlighted on the screen.

Operation

- Heating/cooling control * (icon *) is possible after assigning the controller in the Sinum Central device to a virtual thermostat. On the display, the icon * can have different meanings:
 - The icon is on permanently heating of the room (heating mode)
 - The icon is blinking room cooling (cooling mode)
 - No icon no need for heating/cooling
- Changing the preset temperature with the buttons and confirming with the Main button
- The set temperature will be permanent. If the regulator is assigned to a virtual thermostat, after changing the temperature, use the and to specify the time range of the set temperature [0 ÷ 24h, Con (permanently) or Off (inactive change)], confirm with the Main button of the set temperature [0 · 24h, Con (permanently) or Off (inactive change)].
- Button lock pressing the Main button will activate the function;
- Use the or to select "yes" or "no" (automatic lock on/off). Confirm with the Main button or wait approx. 5 sec. Holding simultaneously until the padlock icon disappears unlocks the buttons.
- Controller connection the system has a terminating connection. The position of the regulator on the transmission line with the Sinum Central is determined by the position of the terminating switch 5 set to ON position (regulator at the end of the line) or position 1 (regulator in the middle of the line).

option available depending on the program version

Menu

Hold down the Main buttton O until appears [AL option. change options with and ,confirm with Main button O. Options available: [AL - temperature sensor calibration, Loc - activation/deactivation of the button lock; to unlock, hold down the

✓ and > buttons simultaneously for 3 seconds, rEG - device registration, InF - software information. Sru-service menu, dEF - factory reset, rEL - exit from the Menu,

Technical data

- Power supply 24V DC ±10%
- Max. power consumption 0,2W
- Operation temperature5 ÷ 50°C

Notes

TECH Controllers is not responsible for any damages resulting from improper use of the system. The manufacturer reserves the right to improve devices, update software and related documentation. The graphics are provided for illustration purposes only and may differ slightly from the actual look. The diagrams serve as examples. All changes are updated on an ongoing basis on the manufacturer's website. Before using the device for the first time, read the following regulations carefully. Not obeying these instructions may lead to personal injuries or controller damage. The device should be installed by a qualified person. It is not intended to be operated by children. It is a live electrical device. Make sure the device is disconnected from the mains before performing any activities involving the power supply (plugging cables, installing the device etc.). The device is not water resistant.

The product may not be disposed of in household waste containers. The user is obliged to transfer their used equipment to a collection point where all electric and electronic components will be recycled

EU Declaration of Conformity

Tech Sterowniki II Sp. z o.o., ul. Biała Droga 34, Wieprz (34-122) Hereby, we declare under our sole responsibility that the room regulator R-S2 is compliant with Directive :

- 2014/35/UE
- 2014/30/UE
- 2009/125/WE
- 2017/2102/UE

For compliance assessment, harmonized standards were used

- PN-EN IEC 60730-2-9:2019-06
- PN-EN 60730-1:2016-10

Pawel Jura

EN IEC 63000:2018 RoHS

The full text of the EU Declaration of Conformity and the user manual are available after scanning the QR code or at www.tech-controllers.com/manuals



Made in Poland

tel: +48 33 875 93 80 <u>www.tech-controllers.com</u> <u>support.sinum@techsterowniki.pl</u>

Documents / Resources



TECH Sinum R-S2 Przewodowy Regulator Temperatury R-S2 [pdf] User Manual R-S2 Przewodowy Regulator Temperatury R-S2, R-S2, Przewodowy Regulator Temperatury R-S2, Regulator Temperatury R-S2, Temperatury R-S2

References

- © controllers.com
- Intelligens fűtés, intelligens fűtési megoldások vezérlők gyártója | TECH vezérlők
- w sinum.eu
- Ontrollers | TECH Controllers
- Manuals TECH Controllers
- <u>STECH Controllers Teplo ve Vašem domě</u>
- O TECH Controllers Teplo vo Vašom dome
- Instrukcje TECH Sterowniki
- Soluția de acasă de economisire a energiei producător de controlere I Tech-Controllers

Manuals+,