



TECHKO LF283B High Speed Paper Folder Instruction Manual

[Home](#) » [TECHKO](#) » TECHKO LF283B High Speed Paper Folder Instruction Manual 

Contents

- [1 TECHKO LF283B High-Speed Paper Folder](#)
- [2 Operation](#)
- [3 Safety Instructions](#)
- [4 Installation](#)
- [5 Features](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)



TECHKO LF283B High-Speed Paper Folder



Operation

NOTE: The folder is preset and tested for a standard 8 1/2"x11" letter fold. Make sure that the ON/OFF switch is in the OFF position before the machine is plugged in.

Setting the fold position:

1. This folder is designed to fold three sizes of paper. They are:
USA standard (8 1/2"x 11"), A4(8 1/4"x 11 5/8") and 8 1/2"x 14". The folding guide scale is located on each folding guide using letters (A,B,C, etc ..) to make fold set-ups quick and easy. Refer to the following folding chart (Fig. B) to choose one of the four folds. Choose one of the three paper sizes. Loosen the knobs on the paper folding guides and slide them to the desired set of letters, aligning the top edge of the guide with the arrows next to the letters. For example: If you want to fold A4 paper into a "Z" shape fold, just set the knob on the 1st folding guide to "N" position and set the knob on the 2nd folding guide to the "K" position.
2. Place a stack of paper in the center of the paper tray (not more than 80 sheets of 20 lb. bond plain paper, 60 sheets of bright-white paper, 50 sheets of heavy bond paper) and slide the paper guides on paper tray together until the paper is firmly positioned in the center for straight and smooth feeding into the machine. Make sure that the paper is under the feed wheel. Push the ON/OFF switch to the ON position to begin folding.

PAPER FOLDING CHART

TYPE OF FOLD		PAPER SIZE		
		USA(8 1/2" X 11")	A4(8 1/4" X 11 5/8")	(8 1/2" X 14")
6	1ST	A	J	H
	2ND	s	K	y
<	1ST	B	N	
	2ND	s	K	y
<J	1ST	C	R	D
	2ND	u	V	z
>	1ST	C	R	D
	2ND	REVERSE SECOND FOLD GUIDE		

This chart is also found on the unit.

Fig. B

REMARKS:

1. 1ST IS THE LONGER FOLDING GUIDE;
2. 2ND IS THE SHORT FOLDING GUIDE.

If the paper jams

If the paper becomes jammed always turn off and unplug the folder first.

You can attempt to remove the paper by hand. If this is unsuccessful the de-jamming handle is located on the bottom of the folder, remove it and insert the handle in the circular opening on the side of the unit near the ON/OFF switch. Turn the handle in either direction while pulling on the paper.

ALWAYS REPLACE THE DE-JAMMING HANDLE IN THE SLOT ON THE BOTTOM OF THE UNIT – DO NOT LEAVE IT IN THE DE-JAMMING POSITION ON THE SIDE OF THE UNIT -THIS UNIT OPERATES AT A HIGH RATE OF SPEED. THE HANDLE WILL TURN AT THE SAME SPEED AS THE ROLLERS AND COULD CAUSE INJURY IF CONTACT IS MADE BETWEEN THE HANDLE AND A HAND OR OTHER BODY PART.

To avoid electrical shock do not open the housing on any product, this action will void the warranty.

Warning:

1. Moisture and humid environment will affect the performance of this unit. Paper can become difficult to fold in humid conditions or where heavy moisture may be present. Do not use a paper folding machine under these conditions.
2. You must power off the paper folding machine by pressing the rocker power switch(see Fig. A) to OFF position immediately after the last paper is completely ejected from the folding machine. If you fail to do so, the friction between the rubber rollers and the lower paper guide (see Fig. A) may create heat that will damage the surfaces of the 2 rubber rollers.

If you have questions or need more information on any of our products please contact customer service.

This product has a 1 year warranty from the date of purchase. To have your warranty fulfilled please place the product in its original box or similar, and pack in such a way as to prevent shipping damage to the product. Enclose a letter describing the problem, include your name, address (no P.O. boxes) a phone number where you can be reached, a copy of your sales receipt showing the date of purchase, and a check or money order in the amount of \$10.00 to cover shipping and handling. The unit will be replaced (Techko discretion) and will be returned via UPS ground. Should you require other methods of shipment please contact Techko prior to sending your unit back.

Caution



1. **DO NOT OVERLOAD PAPER FOLDER :**

DO NOT PLACE MORE THAN 80 SHEETS OF 20LB BOND(75GSM), 60 SHEETS OF 28LB BOND(104GSM). OR 40 SHEETS OF 31 LB BOND(118GSM) PAPER IN THE FEED TRAY



2. **DO NOT ATTEMPT TO FOLD PAPER THAT CONTAINS PAPER CLIPS OR OTHER HARD MATERIALS AS DAMAGE TO THE FOLDING SYSTEM MAY RESULT.**



 
3. **KEEP LOOSE CLOTHING, FINGERS, HAIR, JEWELRY AND OTHER FOREIGN OBJECTS AWAY FROM PAPER FOLDING ENTRY.**




4. **NEVER OPERATE FOLDER WITHOUT PAPER IN THE FEED TRAY. THIS WILL RESULT IN DAMAGE TO THE FEED PADS AND CAUSE THE FOLDER TO FOLD INCORRECTLY.**



5. **NEVER OPERATE THE FOLDER WITH THE DEJAMMING HANDLE INSERTED IN THE DEJAMMING SLOT. SERIOUS INJURY MAY RESULT. ALWAYS REMOVE IT BEFORE TURNING FOLDER ON.**



 6. **ALWAYS TURN OFF AND UNPLUG THE MACHINE BEFORE MOVING, REMOVING JAMMED PAPER, SERVICING, CLEANING, OR ANY CONTACT OTHER THAN NORMAL OPERATION. SERIOUS INJURY MAY RESULT. DO NOT INSERT OR SPRAY ANY OILS OR LUBRICANTS INTO OR AROUND THE MACHINE, SOME AGENTS MAY COMBUST CAUSING SERIOUS INJURY.**



7. **STANDARD DO NOT OPERATE THE UNIT WITH A DAMAGED POWER CORD. SOCKET OUTLET SHALL BE INSTALLED NEAR THE EQUIPMENT AND SHALL BE EASILY ACCESSIBLE.**



8. **OPERATE THE LETTER FOLDER WITH 8-15 MINUTES ON AND 15-25 MINUTES OFF CYCLE.**

Safety Instructions

1. Your safety as well as the safety of others is important to Techko. In this manual as well as on the product are important safety instructions. Please read and retain these instructions.
2. Read all instructions before use. Save these instructions for later use.
3. Follow all warnings and instructions marked on the product.
4. Unplug this product from the wall outlet before cleaning. If needed the housing can be cleaned with a cloth and dampened with a mild soap and water solution.
5. Folder should never be placed near or over a radiator, heat register or water.
6. Operate folder from the power source indicated on the marking label. If you are unsure of the power source, consult your dealer or local power company.
7. Do not rest anything on the power cord. Do not place a machine where people may walk on the cord.
8. If an extension cord is used, make sure that the total ampere ratings of the products plugged into the extension cord do not exceed the extension cord ampere rating and that the total of all products plugged into the wall outlet does not exceed 15 amperes.
9. Do not alter the unit or power cord in any way. Do not operate the unit if it or the power cord appears damaged in any way.
10. Do not service this product yourself. Opening/removing covers may expose you to dangerous voltage points or other risks, and will void the manufacturer's warranty. Unplug the product from the outlet and refer servicing to qualified service personnel.
11. Keep out of reach of children and pets.
12. This folder should be operated only with an operator in attendance.
13. BE SURE THE ON/OFF ROCKER SWITCH IS IN THE "OFF" POSITION BEFORE PLUGGING IN THE FOLDER.

Installation

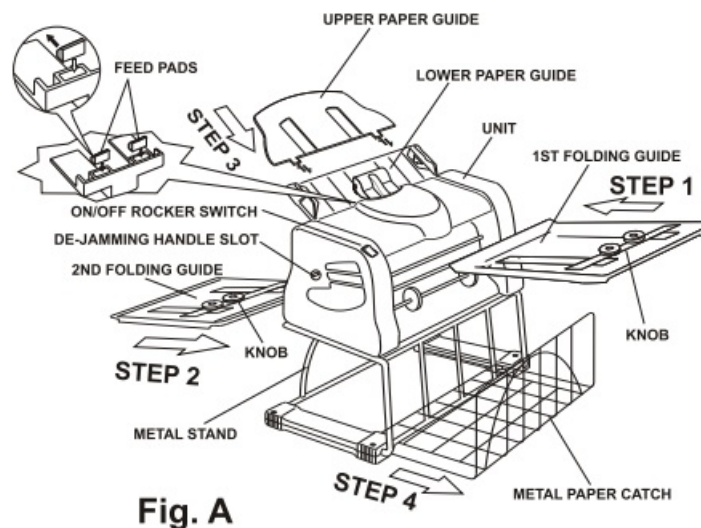 


Fig. A

1. Carefully unpack the machine and inspect all contents for damage. Place the metal stand on a flat, level work surface and place the folder on top of it.
2. Insert the folding guides. (Step 1) The long guide (1st) is inserted in the front of the machine, its placement is indicated on the inner sides of the front of the folder. The guide must be inserted so that the "C" shaped ends fit firmly onto the silver cylinders. You will know it is securely seated when it does not move or shift when pressed. (Step 2) The smaller guide (2nd) is inserted in the back of the unit, make sure it fits firmly into the silver

cylinders and magnets are in contact with the silver cylinders.

3. The paper tray consists of 2 parts, the lower paper tray should already be installed in your folder, if it is not please refer to Fig for instructions. (Step 3)The upper paper tray should be carefully snapped into the lower tray with the tabs on the bottom of the tray. Please note the upper paper tray will be slightly flexible once it is snapped in place.
4. (Step 4)To adjust the depth of the metal wire paper catch, simply pull the catch out to the desired depth.
5. Once the folding guides are inserted properly and the paper tray is installed, plug the power cord into an AC outlet. The ON/OFF switch is located next to the slot for the de-jamming handle. If it is in ON position the unit will run continuously until switched off, even if there is no paper in the folding tray or in the unit.

Replacing the feed pads:

5 pairs of replacement pads are included with your folding machine should you need to replace worn pads. Turn off the unit and unplug it before changing the feed pads.

Pull out the lower paper guide from the unit and use a flat-head screwdriver or similar type tool to pry the worn pads out. Replace both feed pads at the same time. Place fresh pads in the receptacles and press firmly to make sure the feed pads are both secured and have even height. Make sure the slanted surfaces are face out(see Fig. A). Then insert a lower paper guide back to the unit by pressing the springs on the lower part. If you require additional pads please contact Techko Customer Service for pricing and availability.

Features

- Folds up to 60 sheets of 20 lb. bond(75gsm) paper per minute in four popular folding styles.
- Paper tray holds up to 80 sheets of 20 lb. bond(75gsm)plain paper.
- The paper tray holds up to 60 sheets of 28lb bond(104 gsm) paper.
- The paper tray holds up to 40 sheets of 31 lb bond(118 gsm) paper.

Customer Service :

- 1-888-8TECHKO(1-888-883-2456)
- M – F, 9:00 am – 4:00 pm
- Pacific Standard Time
- **Website:** www.techkomaids.com.

Documents / Resources



[TECHKO LF283B High Speed Paper Folder](#) [pdf] Instruction Manual
LF283B High Speed Paper Folder, LF283B, High Speed Paper Folder, Speed Paper Folder, Paper Folder, Folder