



TECHNEMA TE3219SM Replacement Remote Control Instructions

[Home](#) » [TECHNEMA](#) » TECHNEMA TE3219SM Replacement Remote Control Instructions 

Contents

- [1 TECHNEMA TE3219SM Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Overview](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

TECHNEMA

TECHNEMA TE3219SM Replacement Remote Control



Product Information

The TECHNEMA TE3219SM is a television model that offers a range of features for an enhanced viewing experience. It comes with a remote control for easy operation and has various inputs and modes to customize your settings. The TV also supports different audio and video formats, allowing you to enjoy your favorite content in high quality.

Specifications

- **Model:** TECHNEMA TE3219SM
- **Power Input:** AC 100-240V, 50/60Hz
- **Sleep Timer:** Yes
- **Nicam:** Yes
- **Picture Mode:** Standard, Dynamic, Movie, User
- **Sound Mode:** Standard, Music, Movie, User

Product Usage Instructions

Power On/Off

- To turn on the TV, press the Power button on the remote control.

- To turn off the TV, press the Power button again.

Input Selection

To switch between different input sources (e.g., HDMI, AV), press the AV/Input button on the remote control. Use the arrow buttons to navigate through the available options and press OK to select.

Sleep Timer

The Sleep Timer function allows you to set a specific time for the TV to automatically turn off. Press the Sleep/Timer button on the remote control, use the arrow buttons to adjust the timer duration, and press OK to confirm.

Audio and Language Settings

To adjust the audio settings, press the Audio/Lang I/II button on the remote control. Use the arrow buttons to select the desired audio mode (e.g., Standard, Music, Movie) and press OK to confirm. Similarly, you can change the language settings by selecting the Lang I/II option.

Picture and Format Settings

To adjust the picture settings, press the Picture/Format button on the remote control. Use the arrow buttons to select the desired picture mode (e.g., Standard, Dynamic, Movie) and press OK to confirm. Additionally, you can change the picture format to fit the screen by selecting the Format option.

Sound and Title Settings

To adjust the sound settings, press the Sound/Title button on the remote control. Use the arrow buttons to select the desired sound mode (e.g., Standard, Music, Movie) and press OK to confirm. You can also change the title settings by selecting the Title option.

FAQ

Q: Where can I find a replacement remote control for TECHNEMA TE3219SM?

A: You can find a replacement remote control for TECHNEMA TE3219SM on this [website](#).

[TECHNEMA TE3219SM](#)

Overview



Original	Replacement	Original	Replacement
	Power		Power
	Input		AV / Input / RDS
	Sleep		Sleep / Timer
	Nicam		Audio / Lang I/II
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		Shift + Guide / EPG / -/-
	0		0

Original	Replacement	Original	Replacement
	Recall		Back / Return
	Del		Shift + Exit / Cancel / Clear
	Subtitle		Subtitle / EQ
	EPG		Guide / EPG / -/-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Up		Up
	Info		Info / Angle
	Left		Left
	OK / CH List		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear



<https://all-remote-controls.co.uk/en/TECHNEMA/1066948-92286-replacement-remote-control-for-TECHNEMA-TE3219SM.html>



Original	Replacement	Original	Replacement
	Vol+		Vol+
	Home		D.Menu / Top
	CH+		CH+ / Page+
	Vol-		Vol-
	Browser		Smart / List
	CH-		CH- / Page-
	Rec		Rec / Rec Mode
	Fav / Goto		Fav / Marker / PC
	Fav / Goto		Shift + Text /
	T.Shift		Setup / OPT /
	PVR List		Display / Media
	S.Page		Eject / Surround
	Zoom		Zoom / Size
	Play/Pause / TTX		Pause / Step / Freeze
	Play/Pause / TTX		Text / Goto
	Play/Pause / TTX		Play / Slow
	<< / TV/Radio		<< / Tune-

Original	Replacement	Original	Replacement
	<< / TV/Radio		TV/Radio /
	>> / Hold		>> / Tune+
	>> / Hold		Shift + Stop /
	Stop / Reveal		Stop / Hold
	I<< / Size		I<< / Preset-
	>>I / Index		>>I / Preset+



<https://all-remote-controls.co.uk/en/TECHNEMA/1066948-92286-replacement-remote-control-for-TECHNEMA-TE3219SM.html>

Documents / Resources



[TECHNEMA TE3219SM Replacement Remote Control](#) [pdf] Instructions
TE3219SM Replacement Remote Control, TE3219SM, Replacement Remote Control, Remote Control

References

- [User Manual](#)