



TECHNEMA TE3219SM Replacement Remote Control Instructions

[Home](#) » [TECHNEMA](#) » TECHNEMA TE3219SM Replacement Remote Control Instructions 

Contents

- [1 TECHNEMA TE3219SM Replacement Remote Control](#)
- [2 Product Usage Instructions](#)
- [3 OVERVIEW](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

TECHNEMA

TECHNEMA TE3219SM Replacement Remote Control



TECHNEMA TE3219SM Specifications

- **Power Input:** Original
- **Sleep:** Yes
- **Nicam:** Yes
- **P.Mode:** Yes
- **S.Mode:** Yes

Product Usage Instructions

- **Power**
 - To turn on the TV, press the Power button.
- **AV / Input / RDS**
 - Use the AV / Input / RDS button to switch between different input sources or access RDS functions.
- **Sleep / Timer**
 - To set a sleep timer, press the Sleep / Timer button and use the navigation buttons to select the desired time. The TV will automatically turn off after the set time.
- **Audio / Lang I/II**
 - Use the Audio / Lang I/II button to adjust the audio settings and select different audio languages when available.
- **Picture / Format**
 - Press the Picture / Format button to adjust the picture settings and select different picture formats, such as widescreen or zoom.

- **Sound / Title**
 - Use the Sound / Title button to adjust the sound settings and access the title menu when available.
- **Guide / EPG / -/-**
 - Press the Guide / EPG / -/- button to access the electronic program guide (EPG) or navigate through different options using the navigation buttons.
- **Recall Del**
 - The Recall Del button allows you to recall the last channel or delete a selected item.
- **Subtitle EPG**
 - Use the Subtitle EPG button to enable or disable subtitles and= access the EPG when available.
- **Red, Green, Yellow, Blue**
 - The colored buttons have different functions depending on the context. Refer to the user manual for detailed information.
- **Mute**
 - Press the Mute button to temporarily mute the TV audio. Press it again to unmute.
- **Up, Info, Left, OK / CH List, Right, Menu, Down, Exit**
 - These navigation buttons allow you to navigate through menus, select options, and control the TV's functions. Use the OK / CH List button to access the channel list.
- **Back / Return**
 - Press the Back / Return button to go back to the previous menu or screen.
- **Shift + Exit**
 - Press Shift + Exit to exit a menu or function without saving any changes.
- **Clear**
 - Use the Clear button to clear any entered text or cancel an operation.

Frequently Asked Questions (FAQ)

- **Q: Where can I find a replacement remote control for TECHNEMA TE3219SM?**
A: You can find a replacement remote control for TECHNEMA TE3219S [here](#).

OVERVEIW



Original	Replacement	Original	Replacement
	Power		Recall
	Input		Del
	Sleep		Subtitle
	Nicam		EPG
	P.Mode		Red
	S.Mode		Green
	1		Yellow
	2		Blue
	3		Mute
	4		Up
	5		Info
	6		Left
	7		OK / CH List
	8		Right
	9		Menu
	0		Down
	Exit		Exit / Cancel / Clear



- <https://all-remote-controls.co.uk/en/TECHNEMA/1066948-92286-replacement-remote-control-for-TECHNEMA-TE3219SM.html>



Original	Replacement	Original	Replacement
	Vol+		<< / TV/Radio
	Home		>> / Tune+
	CH+ / Page+		>> / Hold
	Vol-		>> / Hold
	Browser		Stop / Reveal
	CH- / Page-		I<< / Size
	Rec / Rec Mode		>>I / Index
	Fav / Marker / PC		
	Fav / Goto		
	T.Shift		
	PVR List		
	S.Page		
	Zoom		
	Play/Pause / TTX		
	Play/Pause / TTX		
	Play/Pause / TTX		
	<< / TV/Radio		



- <https://all-remote-controls.co.uk/en/TECHNEMA/1066948-92286-replacement-remote-control-for-TECHNEMA-TE3219SM.html>



[TECHNEMA TECHNEMA TE3219SM Replacement Remote Control](#) [pdf] Instructions
TECHNEMA TE3219SM Replacement Remote Control, TECHNEMA TE3219SM, Replacement
Remote Control, Remote Control

References

- [User Manual](#)