



RAK-CH144WH Technics Remote Control Instructions

[Home](#) » [Technics](#) » RAK-CH144WH Technics Remote Control Instructions 

Contents

- [1 RAK-CH144WH Technics Remote Control](#)
- [2 Technics RAK-CH144WH](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 OVERVIEW](#)
- [6 REMOTE FUNCTION](#)
- [7 FAQ](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

Technics

RAK-CH144WH Technics Remote Control



Technics RAK-CH144WH

The Technics RAK-CH144WH is a remote control designed for use with compatible Technics audio devices. It allows users to control various functions and settings of the connected device.

For more information and to purchase a replacement remote control, please visit

<https://tout-telecommandes.fr/fr/Technics/1056147-78952-telecommande-de-remplacement-pour-Technics-RAKCH144WH.html>

Specifications

- **Model:** RAK-CH144WH
- **Colour:** White
- **Compatibility:** Technics audio devices
- **Buttons:** Power, Sleep, Tuner/Band, Auto/Mono, CD Play, Recharge, Pre Ch, Guide, Yellow Play, Pause, Stop, Program Cancel, Deck 1/2, Rec Pause, Flat EQ, Space Balance, R Balance L, Exit, Blue, Right, Left, Ok, Options, Dual, Ch +, Ch -, Vol +, Vol Mute

Product Usage Instructions

• Power and Sleep Functions

To turn on the device, press the Power button. To put the device into sleep mode, press the Sleep button.

• Tuner and Band Selection

Use the Tuner/Band button to switch between different radio bands and modes such as Auto and Mono.

• CD Playback

Use the numbered buttons (1-0) to enter the desired track number. Press the +10 button followed by the

desired single-digit track number for tracks above 9. Press the CD Play button to start playback.

- **Recharging**

If your device supports recharging, use the Recharge button to initiate the recharging process.

- **Program Playback**

Press the Program Cancel button to clear any previously programmed tracks. Use the Deck 1/2 buttons to select the desired deck. Press the > or < buttons to navigate through tracks. Press the Stop button to stop playback.

- **Recording**

Press the Rec button to start recording. Use the Pause button to pause recording temporarily.

- **Equalizer and Balance**

Use the Flat EQ button to reset the equalizer settings. The Space Balance, R Balance L buttons can be used to adjust the sound balance.

- **Additional Functions**

Explore additional functions such as Shift, Exit, Blue, Right, Left, Ok, Options, Dual, Ch +, Ch -, Vol +, and Vol Mute for more control over your Technics audio device.

OVERVIEW



 
 


REMOTE FUNCTION

	Power		Power
	Sleep		Sleep
	Tuner/Band		Green
	Auto/Mono		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	CD		Yellow
	Play		Play
	Pause		Pause
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Program		Shift + Sleep
	Cancel		Exit
	Deck 1/2		Blue
	> Deck 1/2		Right
	< Deck 1/2		Left
	Stop Deck 1/2		Ok
	<< Deck 1/2		<<
	>> Deck 1/2		>>
	Rec Pause		Rec
	Flat		Options
	EQ Space		Dual
	Balance R		Ch +
	Balance L		Ch -

Original

Recharge

	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute

FAQ

Frequently Asked Questions

- Where can I purchase a replacement remote control for Technics RAK-CH144WH?
- You can purchase a replacement remote control for Technics RAK-CH144WH from <https://tout-telecommandes.fr/fr/Technics/1056147-78952-telecommande-de-remplacement-pour-Technics-RAKCH144WH.html>

<https://tout-telecommandes.fr/fr/Technics/1056147-78952-telecommande-de-remplacement-pour-Technics-RAKCH144WH.html>

Documents / Resources



[Technics RAK-CH144WH Technics Remote Control](#) [pdf] Instructions

RAK-CH144WH Technics Remote Control, RAK-CH144WH, Technics Remote Control, Remote Control, Control

References

- [M Télécommande qui remplace TECHNICS RAKCH144WH](#)
- [User Manual](#)