

Technics SC-CX700 Wireless Speaker System Instruction Manual

Specifications:

- Primary speaker: SC-CX700P
- Secondary speaker: SC-CX700S
- Accessories:
 - AC mains lead (2) K2CT3YY00096
 - Remote control (1) N2QAYA000257
 - Batteries for remote control (2)
 - Speaker Link cable (Approx. 3 m) (1) K1HY08YY0059
 - Speaker nets (2) TTJ0068

Contents

- [1 Product Usage Instructions](#)
- [2 Safety precautions](#)
- [3 About this unit](#)
- [4 Attaching and removing the speaker nets](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Product Usage Instructions

Safety Precautions:

Warning Unit:

- Do not expose the unit to rain, moisture, or dripping.
- Avoid placing objects filled with liquids on the unit.
- Use recommended accessories only.
- Avoid playing sound at high levels for extended periods.

Placement:

- Avoid placing the unit in a confined space; ensure proper ventilation.
- Avoid obstructing ventilation openings.
- Ensure correct power supply voltage and proper insertion of the mains plug.

Battery:

- Remove the battery if not using the remote control for a long time.
- Avoid exposure to heat, flame, or direct sunlight in closed vehicles.
- Avoid exposure to low air pressure or extremely low air pressure.

FAQ:

1. Q: Where can I find the detailed operating instructions?

A: A more detailed operating instruction is available in Operating Instructions (PDF format). You can download it from the website.

2. Q: How can I get support for this product?

A: For sales and support information, refer to the provided contact details in the manual.

Music is borderless and timeless, touching people's hearts across cultures and generations. Each day the discovery of a truly emotive experience from an unencountered sound awaits. Let us take you on your journey to rediscover music.

Delivering the Ultimate Emotive Musical Experience to All

At Technics we understand that the listening experience is not purely about technology but the magical and emotional relationship between people and music. We want people to experience music as it was originally intended and enable them to feel the emotional impact that enthuses and delights them. Through delivering this experience we want to support the development and enjoyment of the world's many musical cultures. This is our philosophy. With a combination of our love of music and the vast high- end audio experience of the Technics team, we stand committed to building a brand that provides the ultimate emotive musical experience by music lovers, for music lovers.

Director Michiko Ogawa

Thank you for purchasing this product.

Please read these instructions carefully before using this product, and save this manual for future use.

- About descriptions in these operating instructions
 - Pages to be referred to are indicated as "⇒ ○○".
 - The illustrations shown may differ from your unit.
 - Unless otherwise indicated, operations are described using the remote control.
- Illustrations and figures in this manual are of the black main body.
- These operating instructions are applicable to the following system.
 - Primary speaker: SC-CX700P, Secondary speaker: SC-CX700S

A more detailed operating instruction is available in "Operating Instructions" (PDF format). To read it, download it from the website.



- You will need Adobe Reader to browse or print “Operating Instructions” (PDF format). You can download and install a version of Adobe Reader that you can use with your OS from the following website.

<https://get.adobe.com/reader/>

- You will need Adobe Reader to browse or print “Operating Instructions” (PDF format). You can download and install a version of Adobe Reader that you can use with your OS from the following website.

 
<https://get.adobe.com/reader/>

Sales and Support Information Customer Communications Centre

- For customers within the UK: 0333 222 8777
- For customers within Ireland: +353 1 912 4460
- Monday–Friday 9:00 am – 5:00 pm, (Excluding public holidays).
- For further support on your product, please visit our website: www.technics.com/uk/


Accessories

AC mains lead (2)
K2CT3YY00096




Speaker nets (2)

 
Remote control (1)
N2QAYA000257

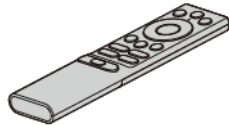

Batteries for
remote control (2)

 

 Speaker Link cable (Approx. 3 m) (1)
K1HY08YY0059

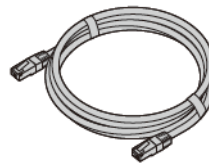

Speaker nets (2)
TTJ0068



- Product numbers provided in these operating instructions are correct as of July 2024.
- These may be subject to change.
- Do not use AC mains lead with other equipment.

Safety precautions

Warning Unit

- To reduce the risk of fire, electric shock or product damage,
 - Do not expose this unit to rain, moisture, dripping or splashing.
 - Do not place objects filled with liquids, such as vases, on this unit.

- Use only the recommended accessories.
- Do not remove covers.
- Do not repair this unit by yourself. Refer servicing to qualified service personnel.
- Do not let metal objects fall inside this unit.
- Do not place heavy items on this unit.
- Put the speakers on a flat safe surface.
- Do not hang the speakers from the ceiling or on the wall. Doing so may cause the speaker to fall off, causing personal injury.
- Do not place any objects in the bass reflex ports on the front of the speakers. Doing so may cause fire or personal injury. Pay close attention to children.

AC mains lead

- To reduce the risk of fire, electric shock or product damage,
 - Ensure that the power supply voltage corresponds to the voltage printed on this unit.
 - Insert the mains plug fully into the socket outlet.
 - Do not pull, bend, or place heavy items on the lead.
 - Do not handle the plug with wet hands.
 - Hold onto the mains plug body when disconnecting the plug.
 - Do not use a damaged mains plug or socket outlet.
- The mains plug is the disconnecting device. Install this unit so that the mains plug can be unplugged from the socket outlet immediately.
- Ensure the earth pin on the mains plug is securely connected to prevent electrical shock.
 - An apparatus with CLASS I construction shall be connected to a mains socket outlet with a protective earth connection.

Caution Unit

- Do not place sources of naked flames, such as lighted candles, on this unit.
- This unit may receive radio interference caused by mobile telephones during use. If such interference occurs, please increase separation between this unit and the mobile telephone.
- This unit is intended for use in moderate and tropical climates.
- Do not put any objects on this unit. This unit becomes hot while it is on.
- Do not stand on the speakers.
- Do not place heavy items on the speakers.
- Do not hold the speaker in one hand to avoid injury by dropping the speaker when carrying.
- The speakers and speaker nets use powerful magnets. Do not put them near TVs, PCs or other equipment easily influenced by magnetism.
- You can damage your speakers and shorten their useful life if you play sound at high levels over extended periods.
- Do not touch the diaphragms. Doing so may deform the diaphragms, and as a result, sound may not be output correctly.
- Be cautious when children are near.

- Do not insert a finger into the bass reflex ports on the front of the speakers. Pay close attention to children as doing so may cause personal injury.

Placement

- Place this unit on an even surface.
- To reduce the risk of fire, electric shock or product damage,
 - Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure this unit is well ventilated.
 - Do not obstruct this unit's ventilation openings with newspapers, tablecloths, curtains, and similar items.
 - Do not expose this unit to direct sunlight, high temperatures, high humidity, and excessive vibration.



Battery

- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
- Mishandling of batteries can cause electrolyte leakage and may cause a fire.
 - Remove the battery if you do not intend to use the remote control for a long period of time. Store in a cool, dark place.
 - Do not heat or expose to flame.
 - Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.
 - Do not expose to low air pressure at high altitudes.
 - Do not expose to extremely low air pressure, as this may result in explosions or leakage of flammable liquids and gases.
 - Do not take apart or short circuit.
 - Do not recharge alkaline or manganese batteries.
 - Do not use batteries if the covering has been peeled off.
 - Do not mix old and new batteries or different types at the same time.
- When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.
- Avoid the use in the following condition
 - High or low extreme temperatures during use, storage or transportation.
 - Replacement of a battery with an incorrect type.
 - Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
 - Extremely high temperature and/or extremely low air pressure that can result in an explosion or the leakage of flammable liquid or gas.

Caution for AC Mains Lead

(For the AC mains plug of three pins)

For your safety, please read the following text carefully. This appliance is supplied with a moulded three pin mains plug for your safety and convenience. A 10-ampere fuse is fitted in this plug. Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 10-ampere and that it is approved by ASTA or BSI to

BS1362. Check for the ASTA mark  or the BSI mark  on the body of the fuse. If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced. If you lose the fuse cover the plug must not be used until a replacement cover is obtained. A replacement fuse cover can be purchased from your local dealer.

 
Before use

Remove the connector cover.


How to replace the fuse

The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below. Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.
- 2.

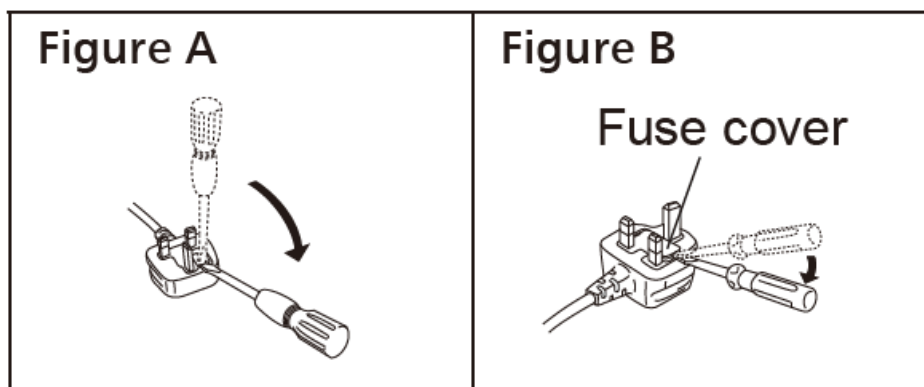

 Replace the fuse and close or attach the fuse cover.

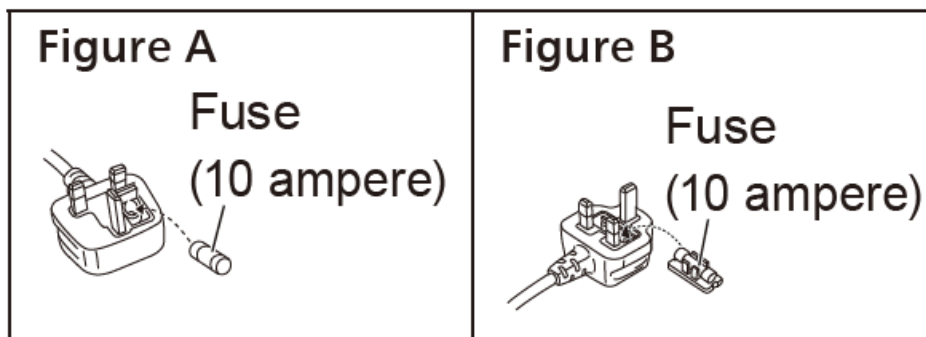

Disposal of Old Equipment and Batteries

Only for European Union and countries with recycling systems



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries must not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points in accordance with your national legislation. By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment.

For more information about collection and recycling, please contact your local authority. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.



Note for the battery symbol (bottom symbol):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Panasonic Corporation, a company having its registered office of 1006, Oaza Kadoma, Kadoma City, Osaka 571-8501, Japan, automatically collects personal data such as IP address and/or Device ID from your device as soon as you connect it to the Internet. We do this to protect our customers and the integrity of our Service as well as to protect the rights or property of Panasonic.

You have a right of access, rectification and objection to in certain circumstances, a right of erasure, restriction of processing, data portability and a right to object to other forms of processing. If you wish to exercise any of the above rights and/or wish to know more about the processing of your personal data in this context, please refer to the full text of our privacy policy displayed at the support page of your device, <http://panasonic.jp/support/global/cs/audio/>, <http://www.technics.com/support/> or contact our customer communications/support number or address described in the Pan European Guarantee included in your device box to send you the full text of our privacy policy.

 
About this unit

Installation

- Turn this unit off and disconnect all the equipment before moving this unit. Be sure to raise this unit when moving, and do not drag this unit.
- Confirm the installation location can sustain the weight of this unit.
- For the dimensions of this unit

Attaching and removing the speaker nets

The speaker nets protect the speaker units from dust. Use the magnets to fix the speaker nets to the speakers.

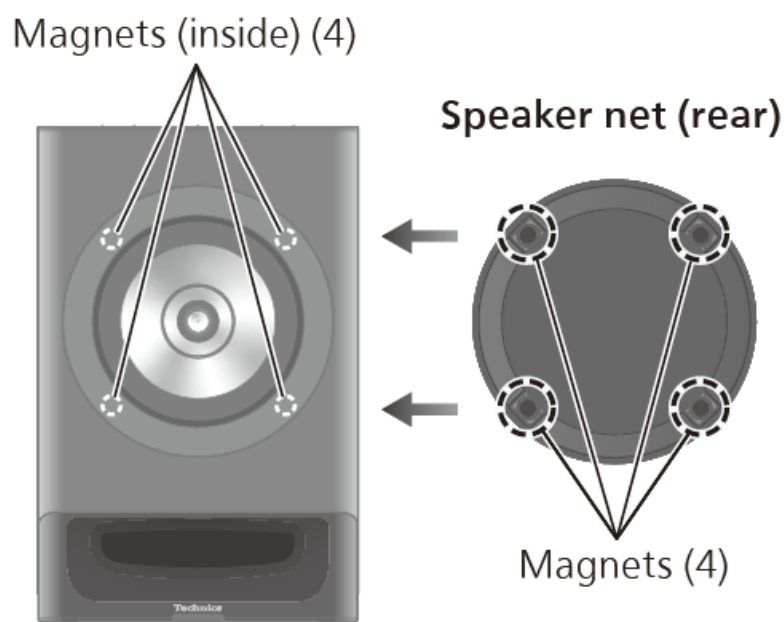

- Attach the speaker nets so that they fully cover the speaker units.
- Attach the speaker nets at the positions to meet the magnets and there is no specific direction of up and down,

left and right.

- The superior sound quality can be delivered when playing back without the speaker nets.
- When carrying this unit, do not hold the speaker net.

To dispose of or transfer this unit

- Before disposing of or transferring this unit, be sure to erase all setting information by restoring the settings to factory default .
- Before you dispose of or transfer this unit to a third party, be sure to log out of your music streaming services accounts to prevent unauthorised use of your accounts.

Notes on use

To protect the speakers from damage caused by excessive input, observe the following precautions:

- Reduce the volume in the following cases to avoid damage:
 - When playing distorted sound.
 - When the speakers are receiving howling from a microphone or record player, noise from FM broadcasts, or continuous signals from an oscillator, test disc, or electronic instrument.
 - When adjusting the sound quality.
- You can damage your speakers and shorten their useful life if you play sound at high levels over extended periods.

Unit care

Pull out the AC mains lead from the socket before maintenance.

Top / Rear of this unit

- Lightly brush with a clothing brush.
- If the dirt is severe, dampen a soft, clean cloth with lukewarm water, wring it out tightly, and gently wipe the surface to remove stains.

Note

- Do not touch the front diaphragm of the speaker when cleaning.
- Do not use solvents including benzine, thinner, alcohol, kitchen detergent, chemical wiper, etc. Doing so may cause the exterior case to be deformed or the coating to come off.
- Stains from oil-based markers or special chemicals cannot be removed.

Front/Left and Right Sides (Suede-Like Artificial Leather)

- Dampen a soft, clean cloth with lukewarm water (approximately 40 °C), wring it out tightly, and gently pat the surface to remove stains. After cleaning, smooth the surface using a soft, dry brush.

Note

- Avoid vigorous rubbing as it may cause discoloration or damage to the surface.
- If stains persist after patting, lightly brush the surface to remove them.

Using “Technics Audio Center”

If you install the dedicated app “Technics Audio Center” (free of charge) on your tablet/smartphone, you can stream music files from the device on your network to this unit and configure the settings of sound quality, etc.

- You can set up the sound adjustment and other settings from the “Technics Audio Center” app.
- For details, visit: www.technics.com/support/



For United Kingdom



For Australia



For New Zealand



- This application is subject to change or be discontinued with notice.

 
Firmware updates

From time to time, Panasonic may release updated firmware for this unit, enhancing or adding new features. These updates are available at no additional cost.

- For the update information, refer to the following website. www.technics.com/support/firmware/

Initialisation (To restore all the settings to the factory defaults)

1. Disconnect the AC mains lead from the primary speaker.
 - Wait 30 seconds before you continue with step 2.
2. While pressing and holding [] on the top of the primary speaker, connect the AC mains lead again.
 - Keep holding down [] until the two LED indicators (NET/) on top left end light up and a beep sounds.
 -

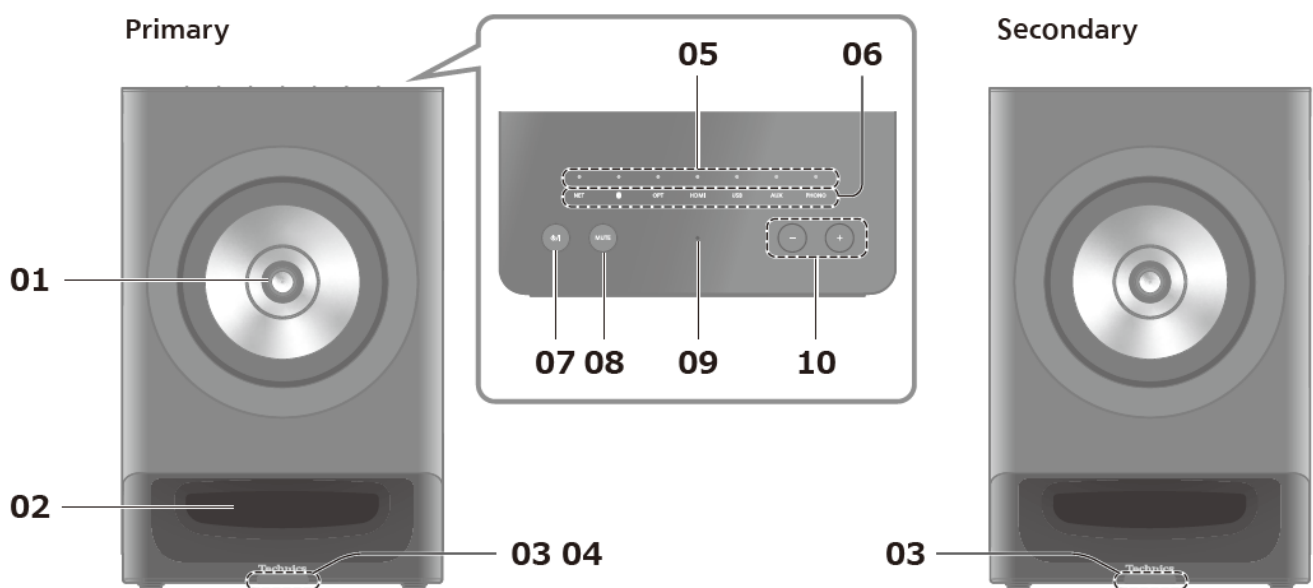

Off



 
On

 
 


 
Blinking




Softly flickering

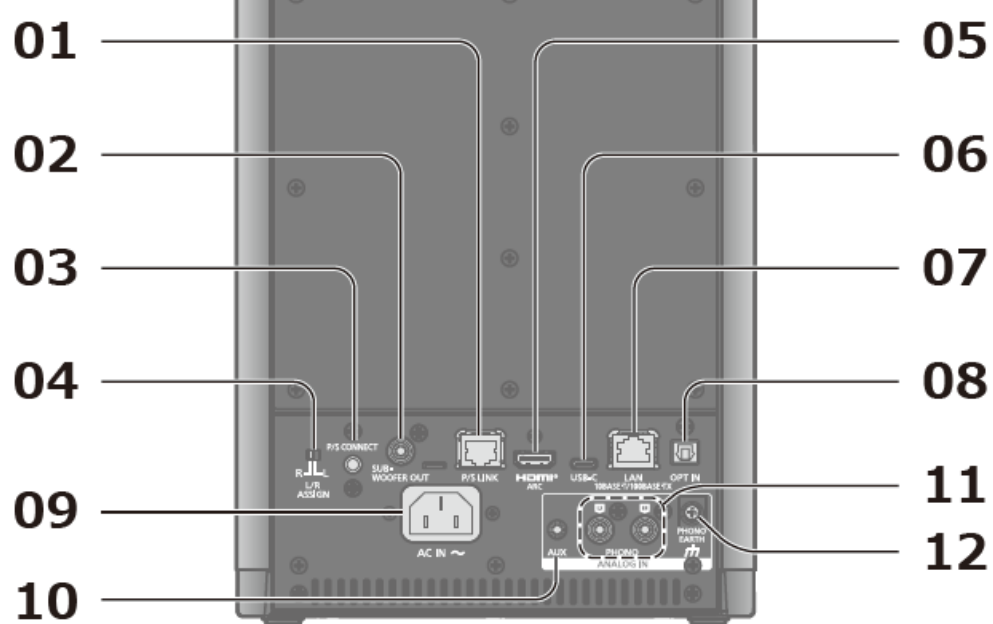


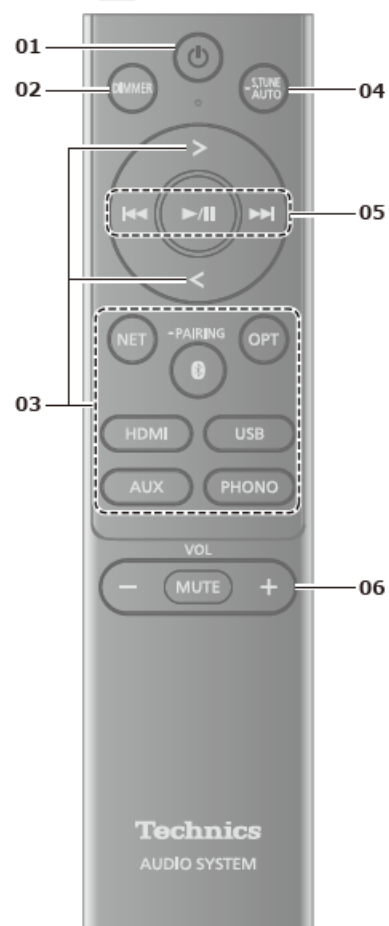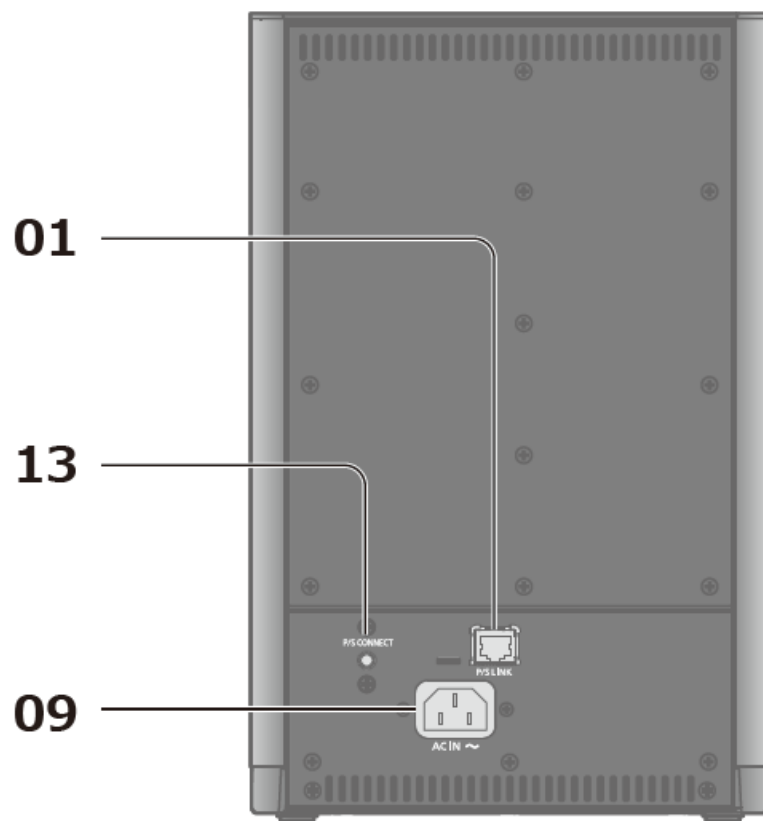

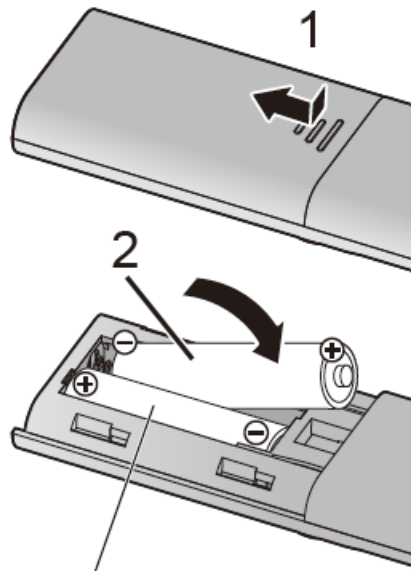


R03/LR03, AAA

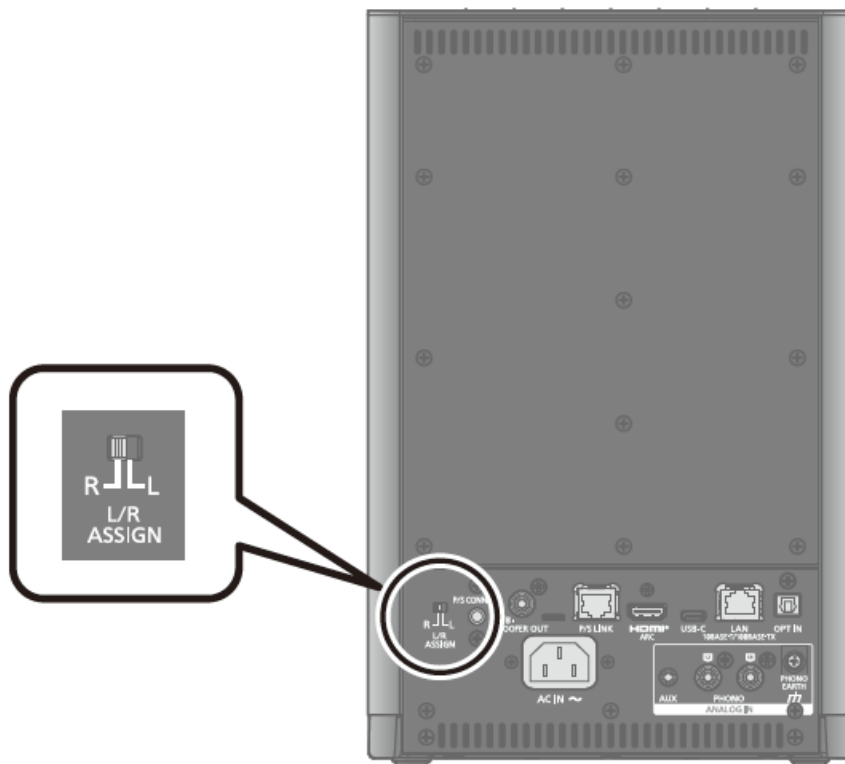 


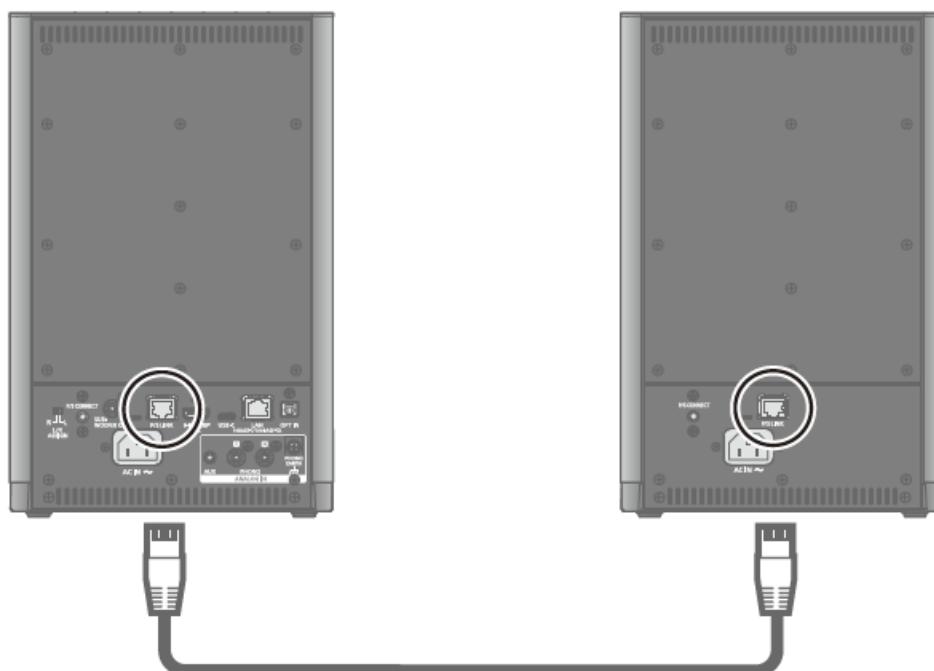 



Speaker Link cable
(supplied)

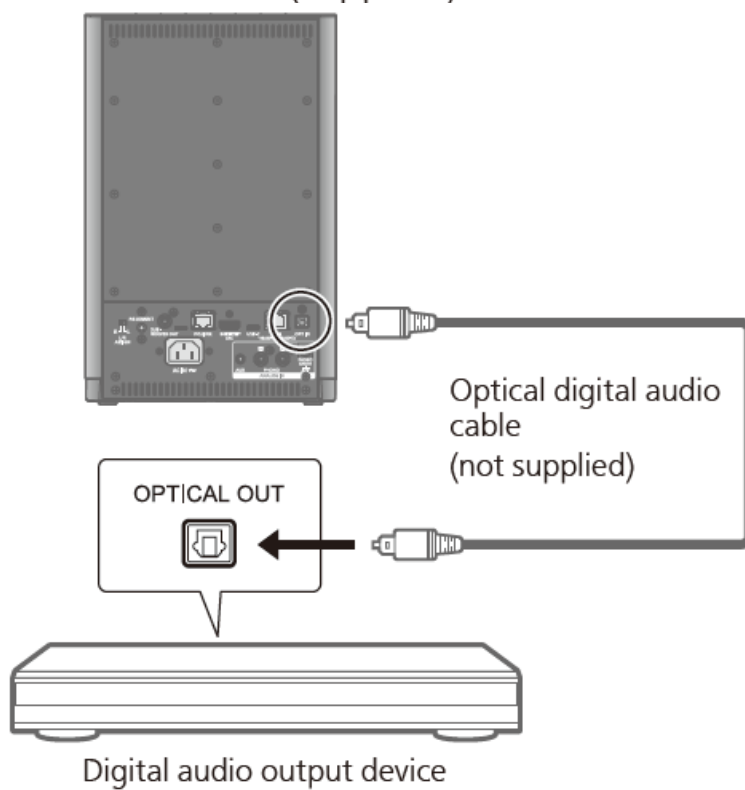 


Optical digital audio cable
(not supplied)

   Digital audio output device

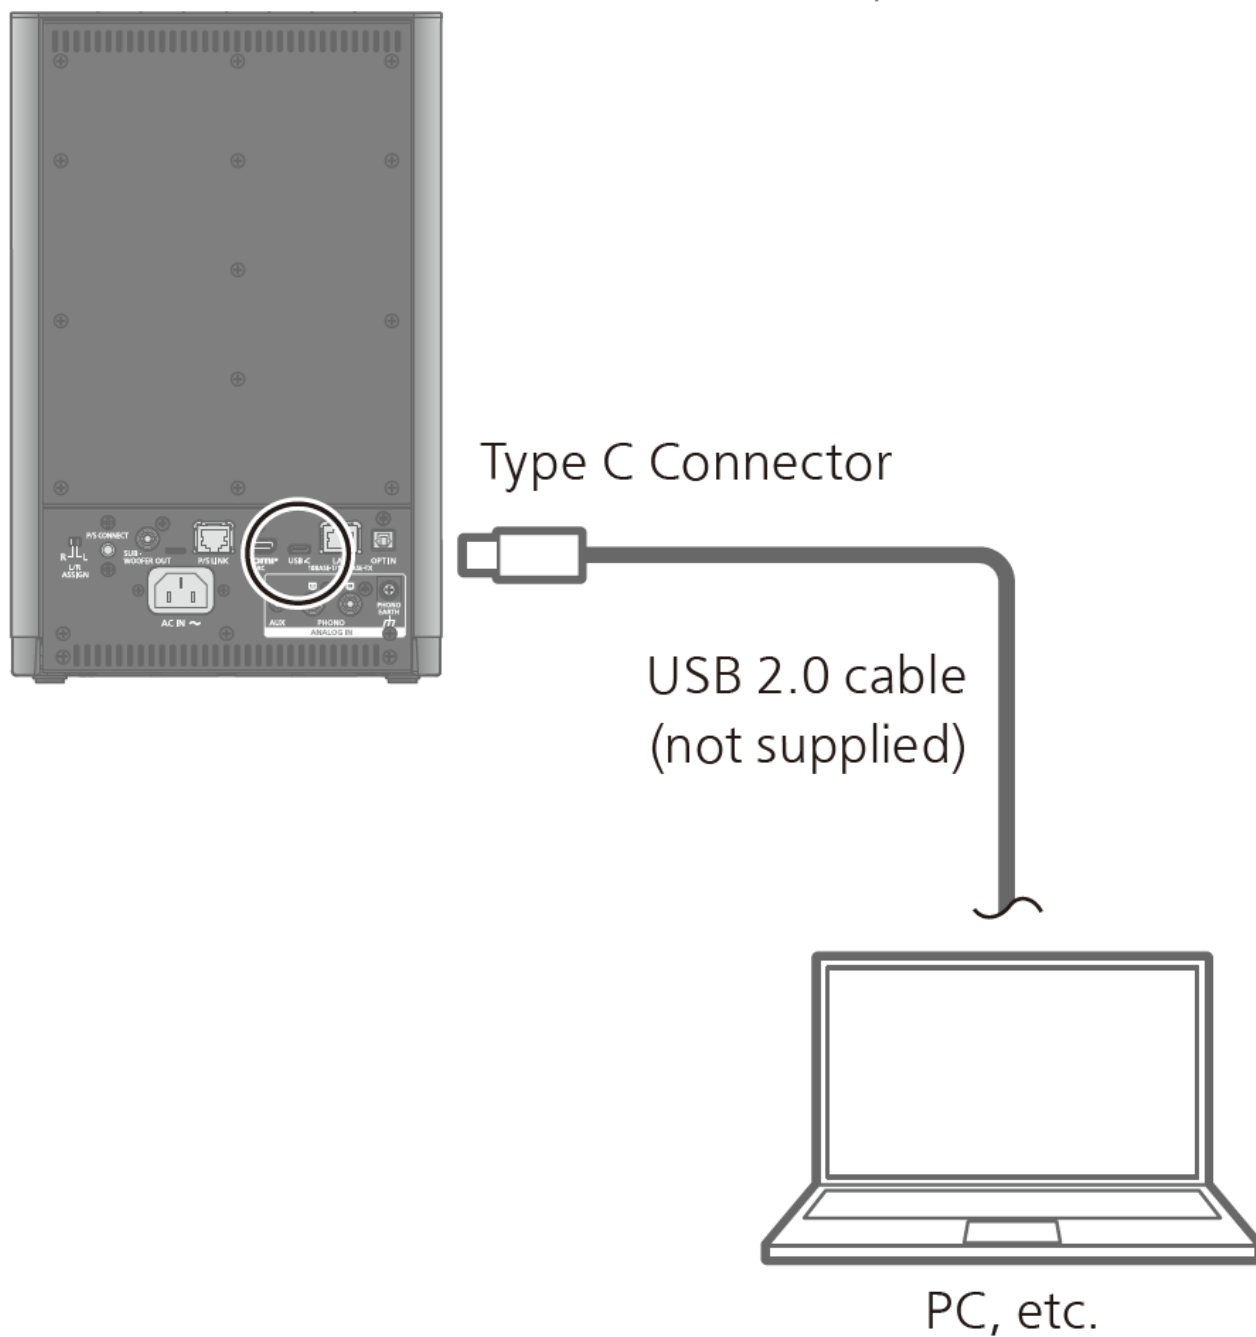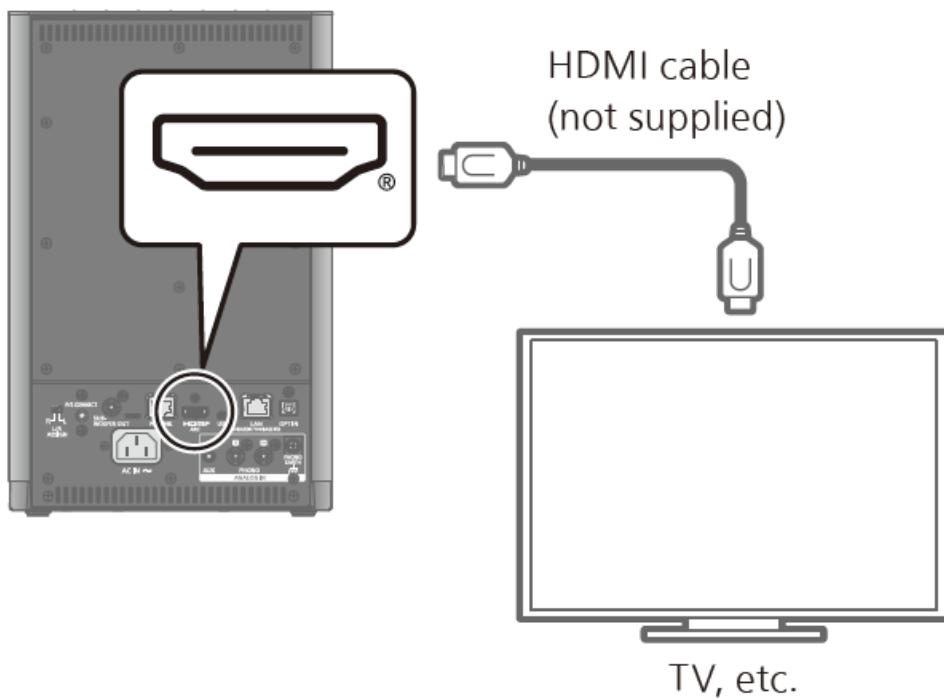


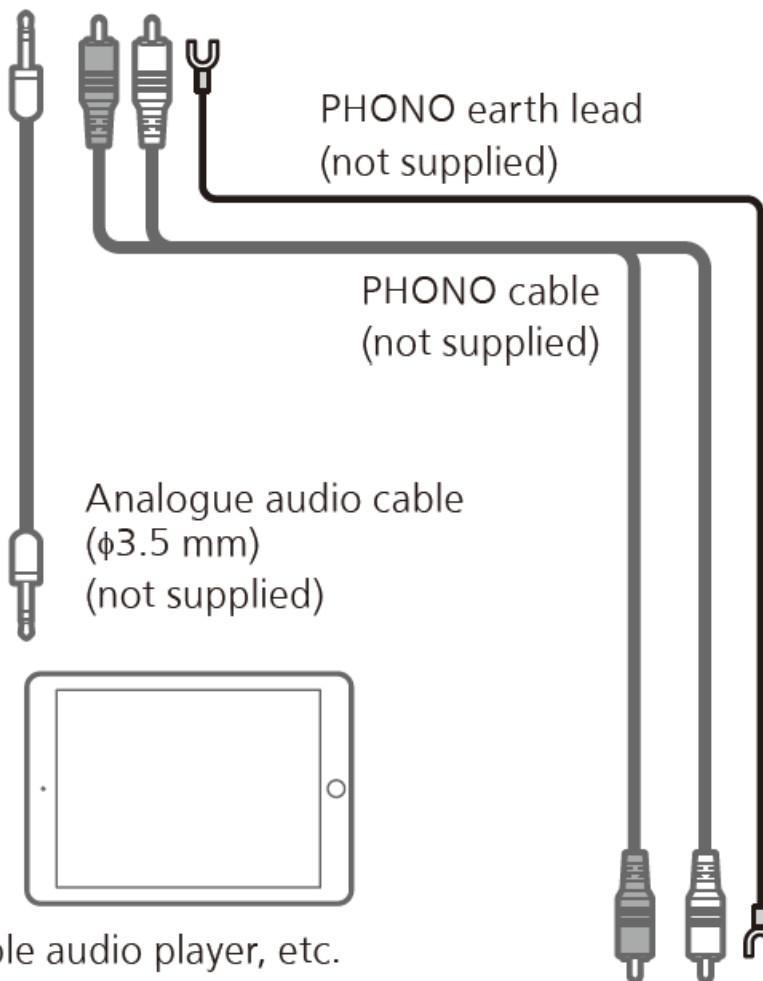



Portable audio player, etc.

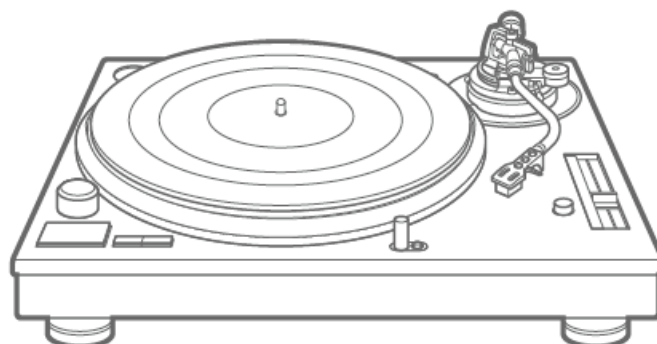 


Turntable

   AC IN terminal

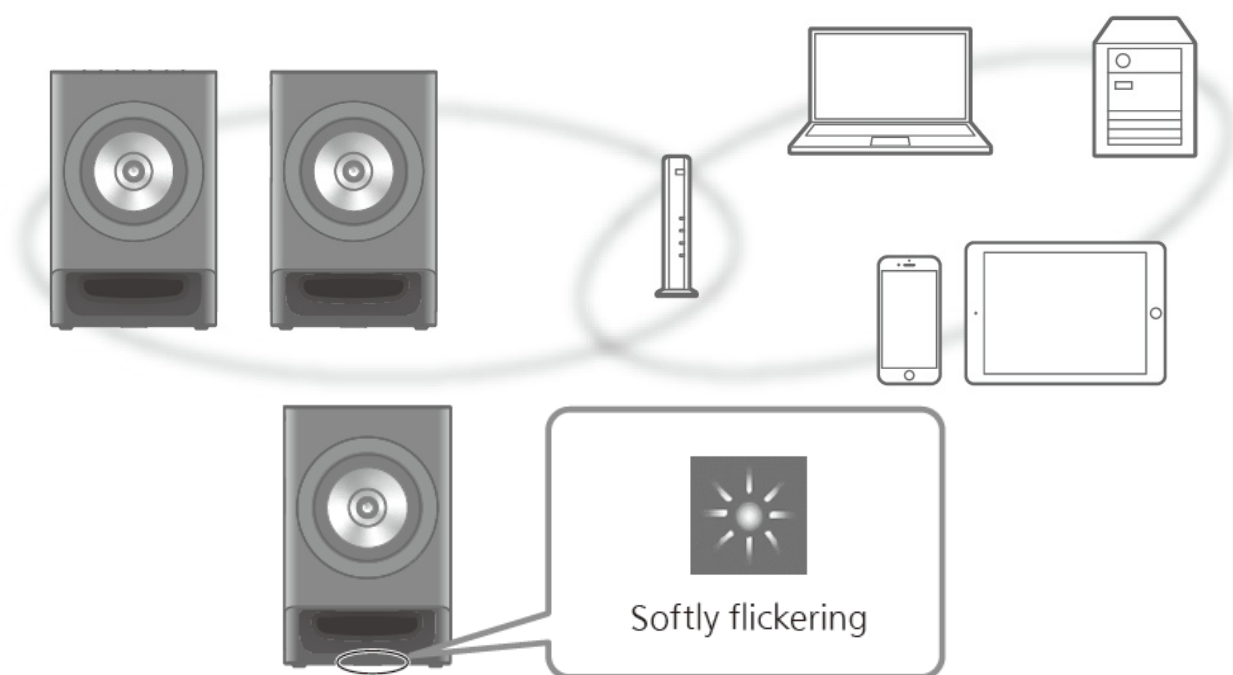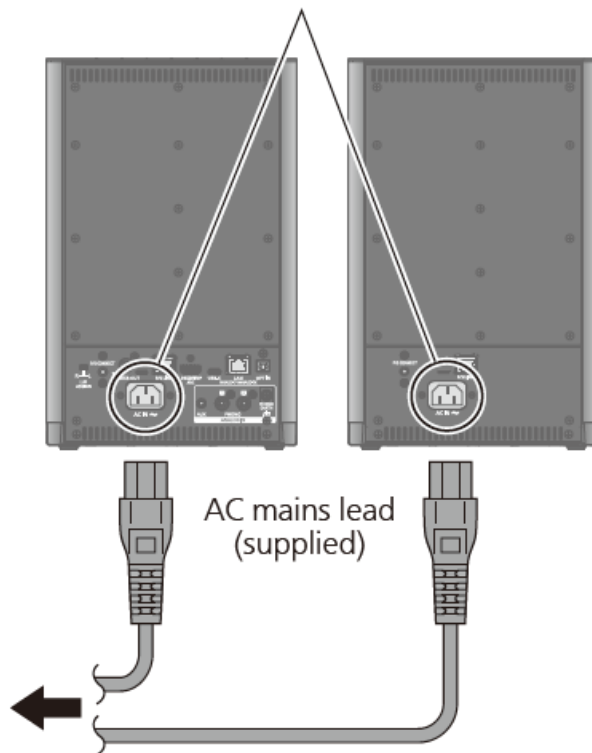

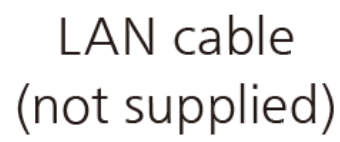


Broadband router, etc.

 



Network settings

 Cancel

I'm looking for main units. 

*If the main unit is connected by wire,
please cancel the search.

Technics-SC-CX700-1234

 
Main unit not found

Main unit list

If you can't find your main unit, check the following:

- ▶ Main units cannot connect to the network
- ▶ No main units detected

[Click here for wireless setup for your new main unit](#)

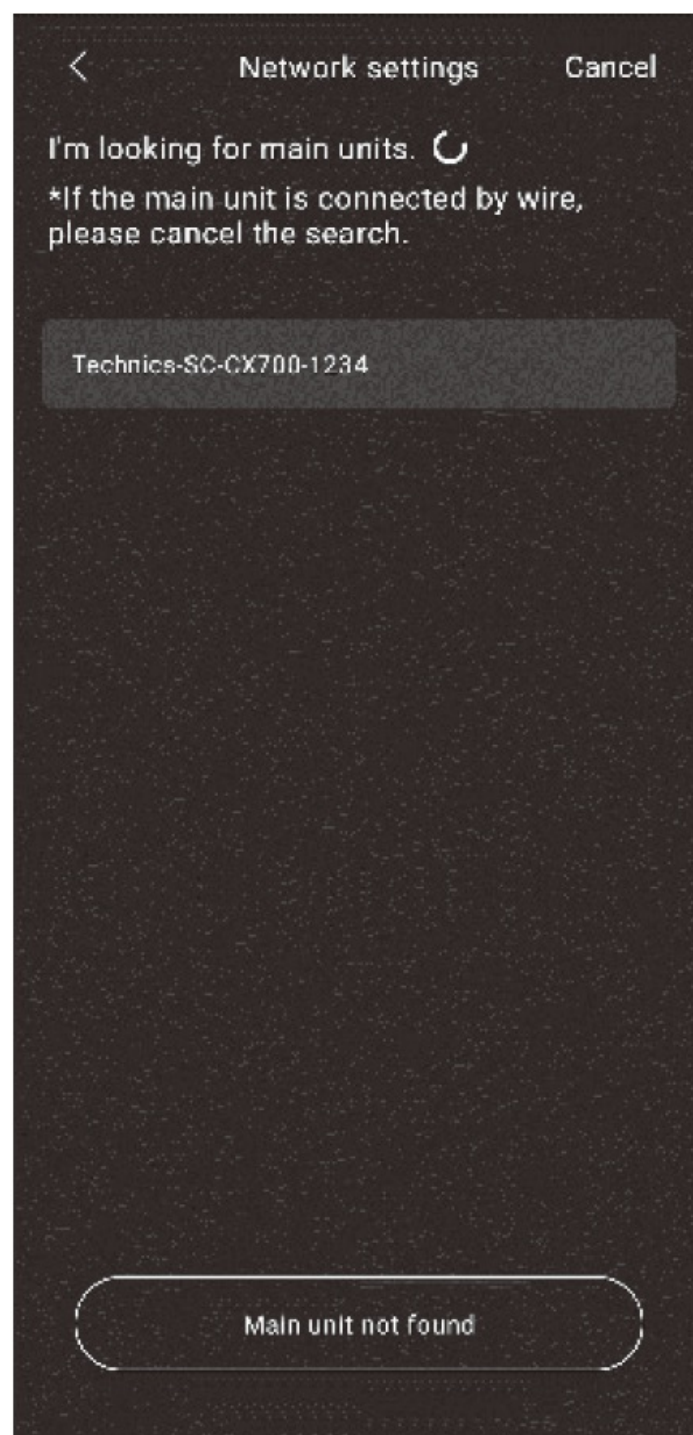

CERTIFIED




Works with










Apple AirPlay



Documents / Resources

 <p>Technics Basic Operating Instructions Wireless Speaker System SC-CX700</p>	<p>Technics SC-CX700 Wireless Speaker System [pdf] Instruction Manual SC-CX700 Wireless Speaker System, SC-CX700, Wireless Speaker System, Speaker System, System</p>
---	---

References

-  [Audio | Digital AV | Support | Panasonic Global](#)
-  [Support | Technics](#)
-  [Firmware Update | Technics](#)
-  [Hi-Fi Audio | Technics UK](#)
-  [Adobe - Download Adobe Acrobat Reader](#)
-  [Panasonic Product Security Incident Response Team - Panasonic Holdings](#)
-  [Panasonic Australia | Air Con | Cameras | Home Appliances](#)
-  [Spotify - Web Player: Music for everyone](#)
-  [Support | Technics](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.