



## TECHNIKA TGC6IND-5 Induction Cooktop Instruction Manual

[Home](#) » [TECHNIKA](#) » **TECHNIKA TGC6IND-5 Induction Cooktop Instruction Manual** 




## Contents


- 1 TGC6IND-5 Induction Cooktop
- 2 SAFETY WARNINGS
- 3 Installation
- 4 Operation and maintenance
- 5 Product Overview
- 6 A Word on Induction Cooking
- 7 Before using your new cooktop
- 8 Using the Touch Controls
- 9 Choosing the right Cookware
- 10 Using your Hob
- 11 Using Boost function
- 12 Locking the Controls (Child lock)
- 13 Residual Heat Warning
- 14 Auto Shutdown
- 15 Using the Timer
- 16 Cooking Guidelines
- 17 Heat Settings
- 18 Care and Cleaning
- 19 Troubleshooting
- 20 Failure Display and Inspection
- 21 Technical Specification
- 22 Installation
- 23 Disposal
- 24 Documents / Resources

## TGC6IND-5 Induction Cooktop

60cm induction cooktop  
TGC6IND-5

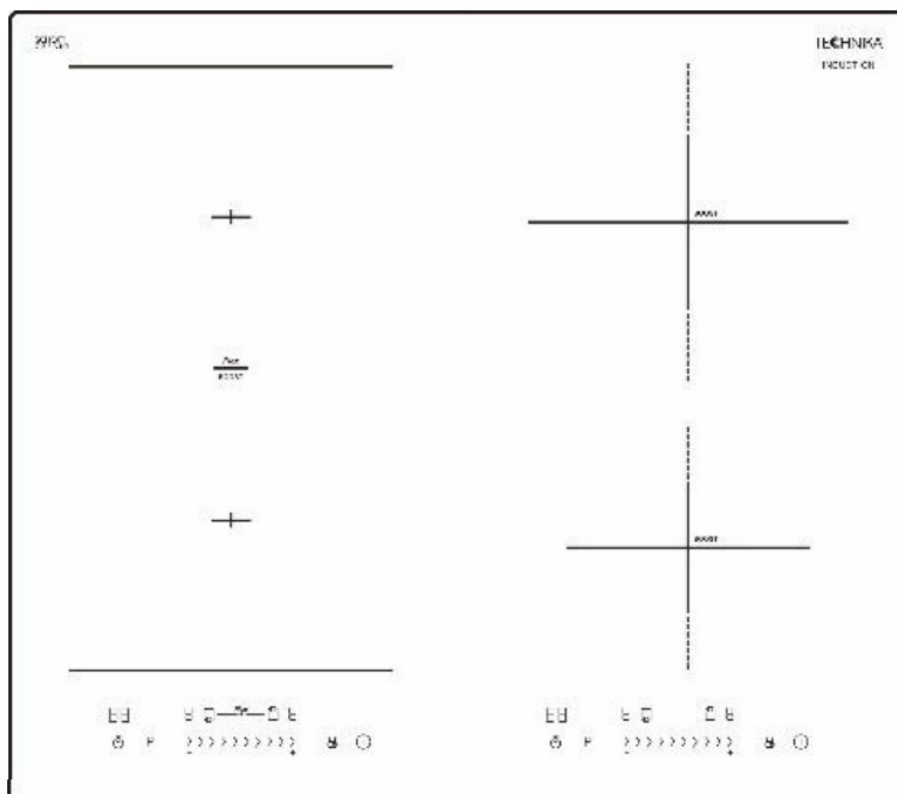

## 90cm induction cooktop TGC9IND-5

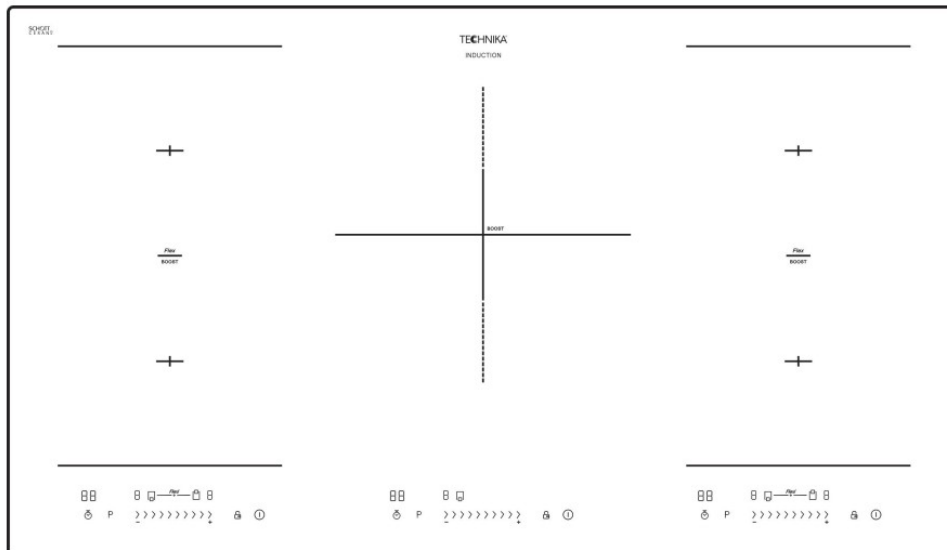

### SAFETY WARNINGS

PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE.

#### Installation

##### Electrical Shock Hazard

- Disconnect the appliance from the mains electricity supply before carrying out any work or maintenance on it.
- Connection to a properly earthed wiring system is essential and mandatory.
- Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
- Alterations to the domestic wiring system must only be made by a qualified electrician.
- Failure to follow this advice may result in electrical shock or death.

##### Cut Hazard

- Take care – panel edges are sharp.
- Failure to use caution could result in injury or cuts.

#### Important safety instructions

- Read these instructions carefully before installing or using this appliance.
- No combustible material or products should be placed on this appliance at any time.
- Please make this information available to the person responsible for installing the appliance as it could reduce your installation costs.
- In order to avoid a hazard, this appliance must be installed according to these instructions for installation.
- This appliance is to be properly installed and earthed only by a suitably qualified person.
- This appliance should be connected to a circuit which incorporates an isolating switch providing full disconnection from the power supply.

- **WARNING:** Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.
- Failure to install the appliance correctly could invalidate any warranty or liability claims.
- Regarding the details of installation, please refer to the section <Installation>.

## Operation and maintenance

### Electrical Shock Hazard

- Do not cook on a broken or cracked cooktop. If the cooktop surface is broken or cracked switch the appliance off immediately at the mains power supply (wall switch) and contact a qualified technician.
- Switch the cooktop off at the wall before cleaning or maintenance.
- Failure to follow this advice may result in electrical shock or death.

### Health Hazard

- This appliance complies with electromagnetic safety standards.

### Hot Surface Hazard

- **WARNING:** Accessible parts may become hot during use. Young children should be kept away
- Do not let your body, clothing or any item other than suitable cookware contact the ceramic glass until the surface is cool.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot
- Children shall be kept away unless continuously supervised.
- Handles of saucepans may be hot to touch. Check saucepan handles do not overhang other cooking zones that are on. Keep handles out of reach of children.
- Failure to follow this advice could result in burns and scalds.

### Cut Hazard

- The razor-sharp blade of a cooktop scraper is exposed when the safety cover is retracted. Use with extreme care and always store safely and out of reach of children.
- Failure to use caution could result in injury or cuts.

### Important safety instructions


- Never leave the appliance unattended when in use. Boil overs cause smoking and greasy spillovers that may ignite.
- Never use your appliance as a work or storage surface.
- Never leave any objects or utensils on the appliance.
- Never use your appliance for warming or heating the room.

- After use, always turn off the cooking zones and the cooktop as described in this manual (i.e. by using the touch controls).
- Do not allow children to play with the appliance or sit, stand, or climb on it.
- Do not store items of interest to children in cabinets above the appliance. Children climbing on the cooktop could be seriously injured.
- Do not leave children alone or unattended in the area where the appliance is in use.
- Do not repair or replace any part of the appliance unless specifically recommended in the manual. All other servicing should be done by a qualified technician.
- Do not use a steam cleaner to clean your cooktop.
- Do not place or drop heavy objects on your cooktop.
- Do not stand on your cooktop.
- Do not use pans with jagged edges or drag pans across the glass surface as this can scratch the glass.
- Do not use scourers or any other harsh abrasive cleaning agents to clean your cooktop, as these can scratch the ceramic glass which may result in shattering of the glass.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is intended to be used in a domestic household environment only! Commercial use of any kind is not covered under the manufacturer's warranty!
- **WARNING:** The appliance and its accessible parts become hot during use.
- Care should be taken to avoid touching heating elements.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- **WARNING:** Unattended cooking on a hob with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
- **WARNING:** Danger of fire: do not store items on the cooking surfaces.
- **WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock, for hob surfaces of glass-ceramic or similar material which protect live parts.
- A steam cleaner is not to be used.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- **CAUTION:** The cooking process has to be supervised. A short term cooking process has to be supervised continuously.
- The power cord must not be accessible after installation.

**Congratulations** on the purchase of your new induction cooktop. We recommend that you spend some time to read this Instruction / Installation manual in order to fully understand how to correctly install and operate this appliance. Read all the safety instructions carefully before use and keep this Instruction / Installation Manual for future reference.


## Product Overview

### Top View

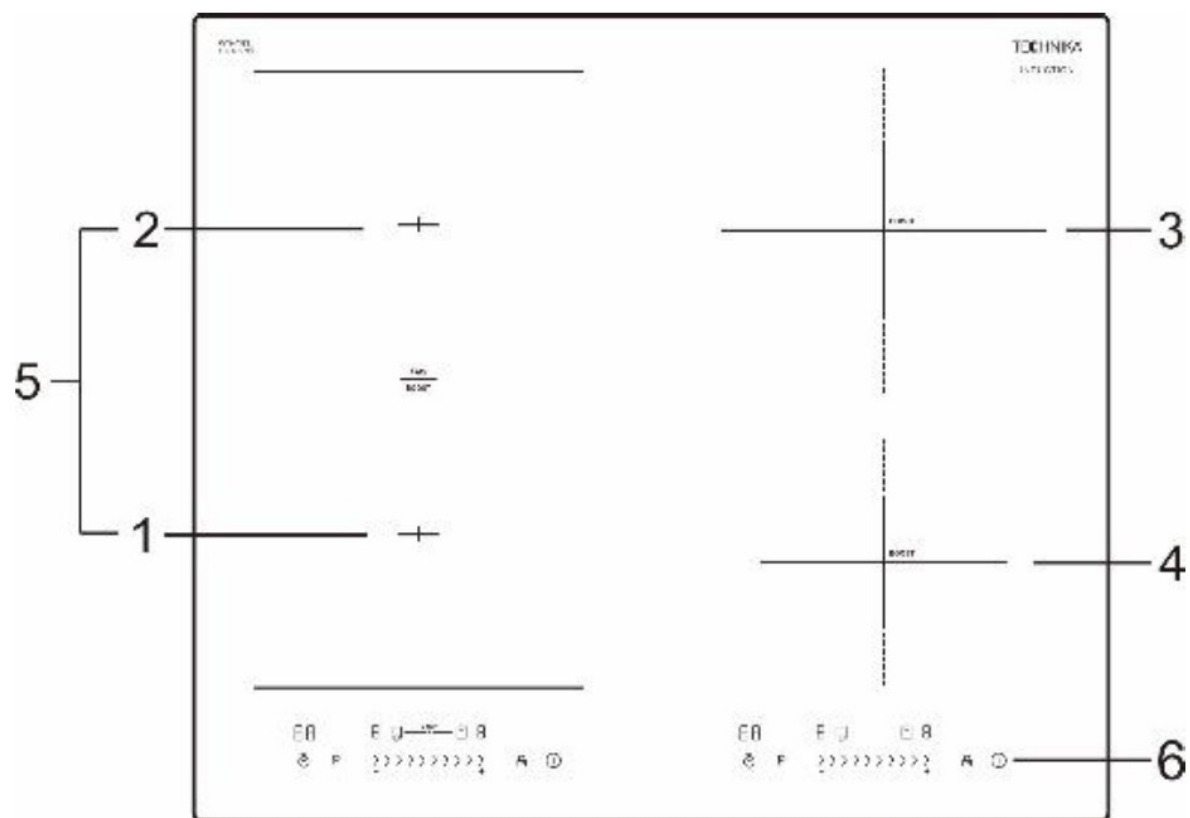

**TGC6IND-5**


1. 210 x 190mm, max. 1800 / 2100 W zone
2. 210 x 190mm, max. 1800 / 2100 W zone
3. 210mm, max. 2300 / 3000 W zone
4. 160mm, max. 1200 / 1500 W zone
5. 210 x 400mm, max. 3000 / 3600 W zone
6. Control panel

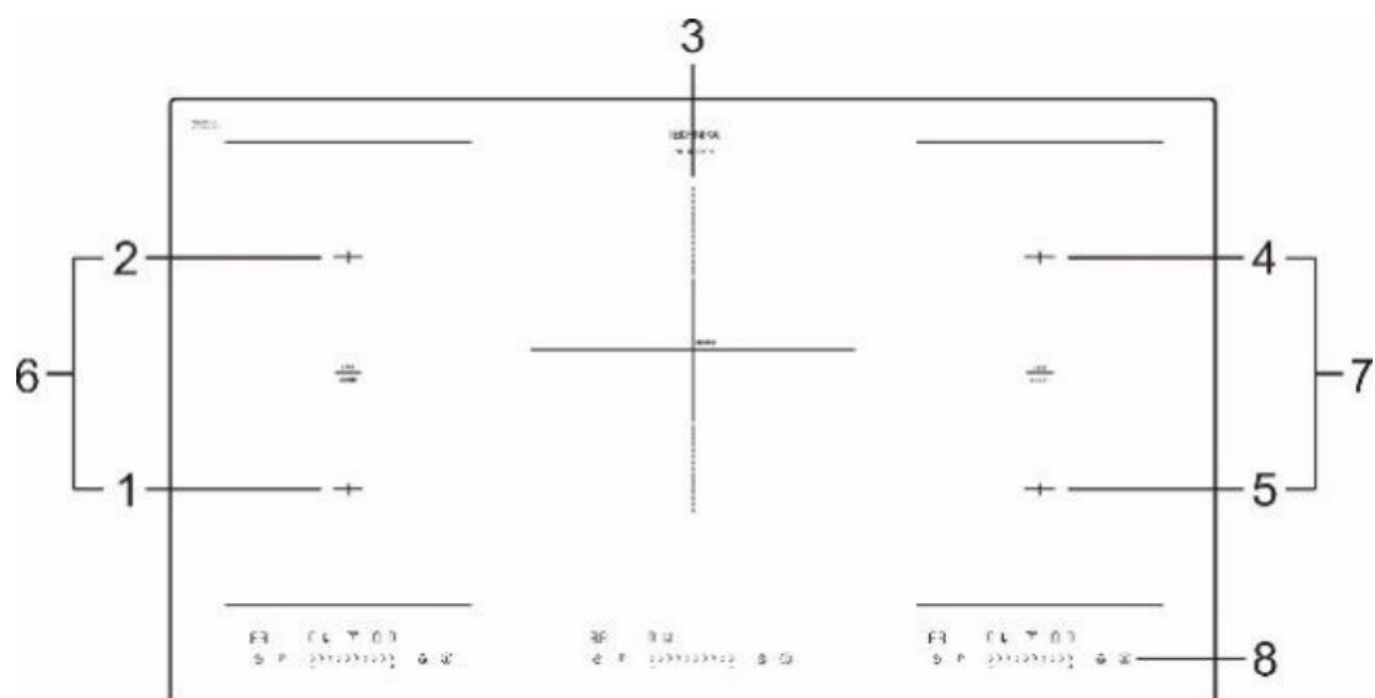


**TGC9IND-5**

1. 210 x 190mm, max. 1800 / 2100 W zone
2. 210 x 190mm, max. 1800 / 2100 W zone
3. 280mm, max. 3000 / 4000 W zone
4. 210 x 190mm, max. 1800 / 2100 W zone
5. 210 x 190mm, max. 1800 / 2100 W zone
6. 210 x 400mm, max. 3000 / 3600 W zone
7. 210 x 400mm, max. 3000 / 3600 W zone
8. Control panel

### The Control Panel TGC6IND-5

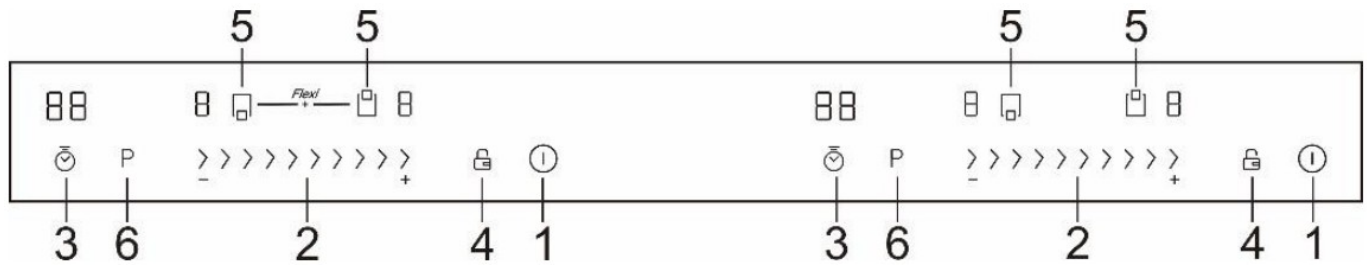

### TGC9IND-5

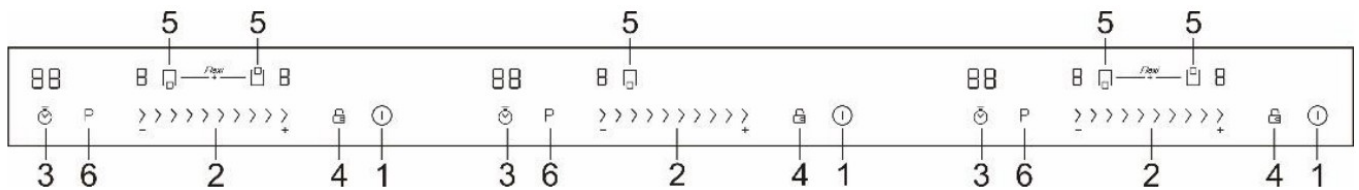


**NOTE:** The hob is divided into separate segments, each with its own ON/OFF key.

1. ON/OFF key
2. Power level selection (slider control)
3. Timer key
4. Child lock key
5. Heating zone selection key
6. Boost control key

### A Word on Induction Cooking

Induction cooking is a safe, advanced, efficient, and economical cooking technology.

It works by electromagnetic vibrations generating heat directly in the pan, rather than indirectly through heating the glass surface. The glass becomes hot only because the pan eventually warms it up.

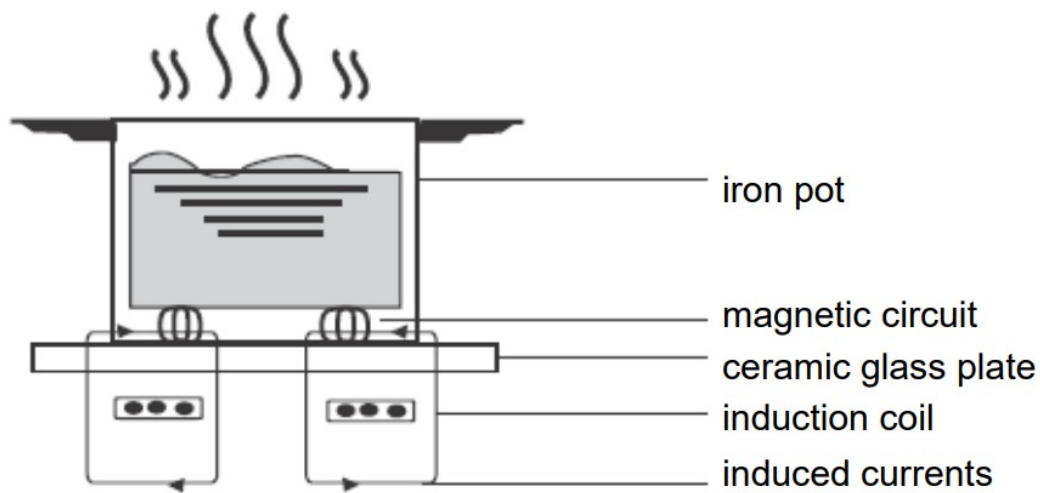


## Before using your new cooktop


- Read this guide, taking special note of the 'Safety Warnings' section.
- Remove any protective film that may still be on your Induction hob.

## Using the Touch Controls

- The controls respond to touch, so you don't need to apply any pressure.
- Use the ball of your finger, not its tip.
- You will hear a beep each time a touch is registered.
- Make sure the controls are always clean, dry, and that there are no objects (e.g. a utensil or a cloth) covering them. Even a thin film of water may make the controls difficult to operate.

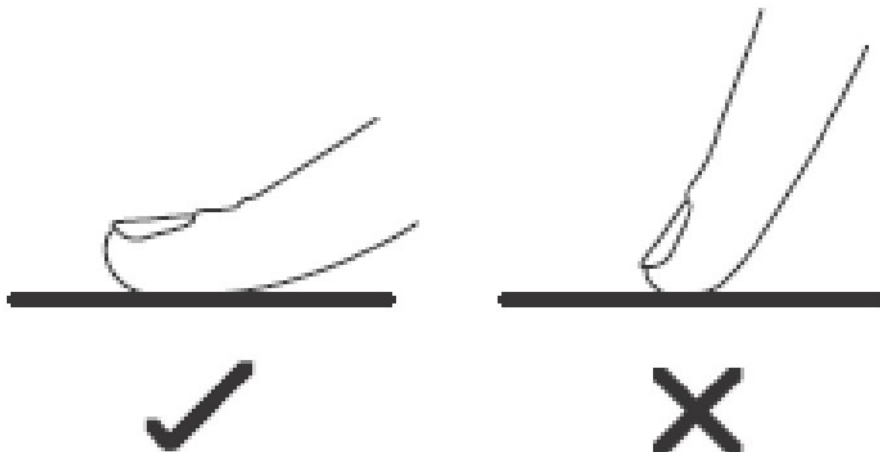


## Choosing the right Cookware

-  Only use cookware with a base suitable for induction cooking. Look for the induction symbol on the packaging or on the bottom of the pan.
- You can check whether your cookware is suitable by carrying out a magnet test. Move a magnet towards the base of the pan. If it is attracted, the pan is suitable for induction.
- If you do not have a magnet:
  1. Put some water in the pan you want to check.



2. Follow the steps under ‘To start cooking’ on page 12

3. If does not flash in the display and the water is heating, the pan is suitable.

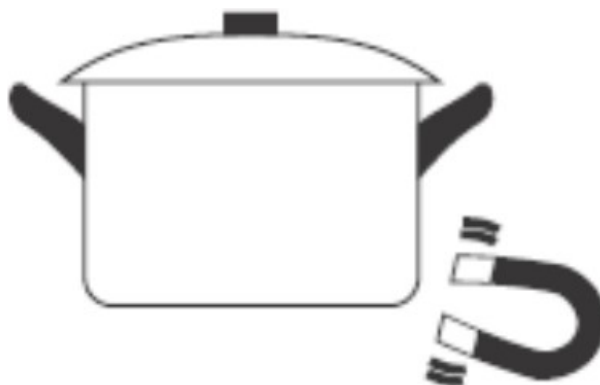


- Cookware made by the following materials is not suitable: pure stainless steel, aluminum or copper without a magnetic base, glass, wood, porcelain, ceramic, and earthenware.

Size of element (mm) 160	Minimum cookware diameter (mm)
180	120
210	140
x 190	160
280	180
Combined Flexible zone	250


Do not use cookware with jagged edges or a curved base.



Make sure that the base of your pan is smooth, sits flat against the glass, and is the same size as the cooking zone. Always centre your pan on the cooking zone.

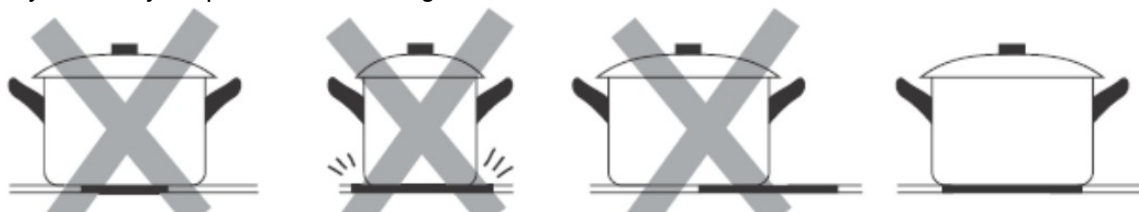

Always lift pans off the ceramic hob – do not slide, or they may scratch the glass.

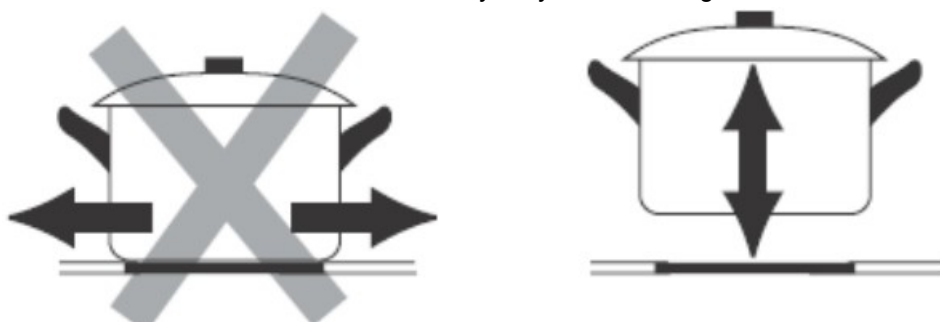

## Using your Hob


### To start cooking

- Please note, the hob is divided into separate segments, each with its own ON/OFF key. After powering on, the hob beeps once, all the indicators light up for 1 second then go out, indicating that the segment has entered standby mode.

1. Touch the ON/OFF  key, all the indicators show “— “




2. Place a suitable pan on the cooking zone that you wish to use. Make sure the bottom of the pan and the surface of the cooking zone are clean and dry.

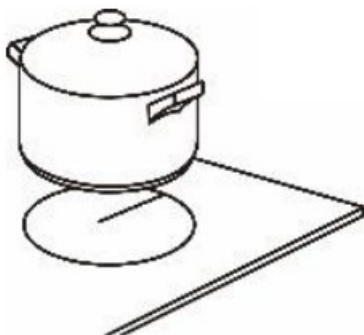

3. Select the heating zone you wish to use. The indicator next to the key will flash “5”. (This is the default power level when switching on a zone)



4. Adjust the heat setting as required by touching the “Slider” control.

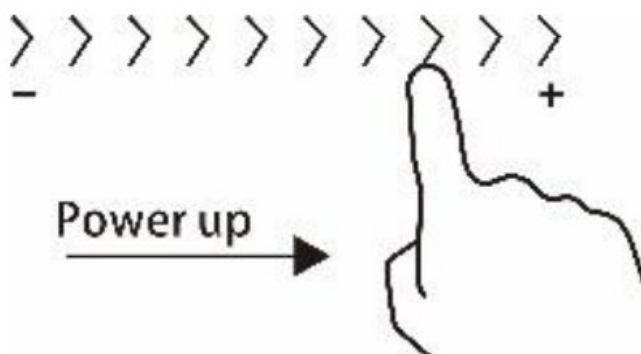


- If you don't choose a heat setting within 1 minute, the Induction hob will automatically switch off. You will need

to start again at step 1.


- You can modify the heat setting at any time during cooking by selecting the heating zone, then touching the “Slider” control

### When you have finished cooking

1. Select the heating zone that you wish to switch off

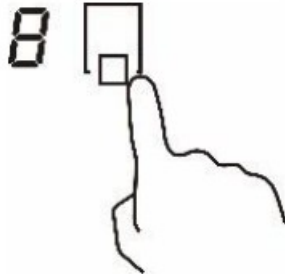

2. Turn the cooking zone off by scrolling down to “0” on the “Slider” control. Make sure the display shows “0”.

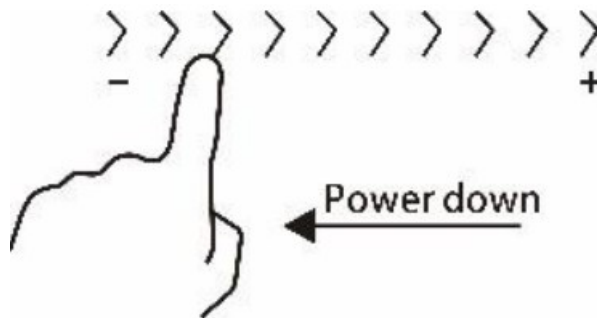

3. Turn the whole segment off by touching the ON/OFF key .




### Beware of hot surfaces

When “H” is displayed: the **H** cooking zone is too hot to touch. It will disappear when the surface has cooled down to a safe temperature. It can also be used as an energy saving function if you want to heat further pans, use the hotplate that is still hot.


### Using Boost function

#### Activating the boost function

1. Select the heating zone you wish to use.

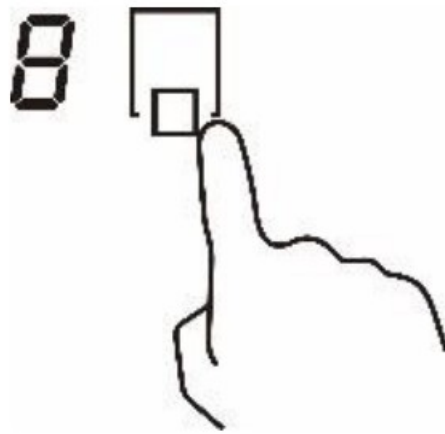


2. Touch the “Boost” key **P** and the power level indication will show “P”.

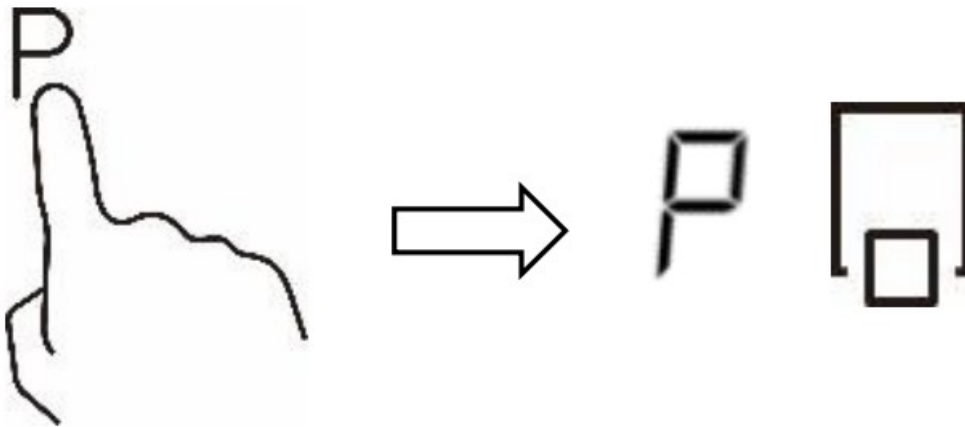

### Canceling the Boost function

1. Select the heating zone with the boost function activated.

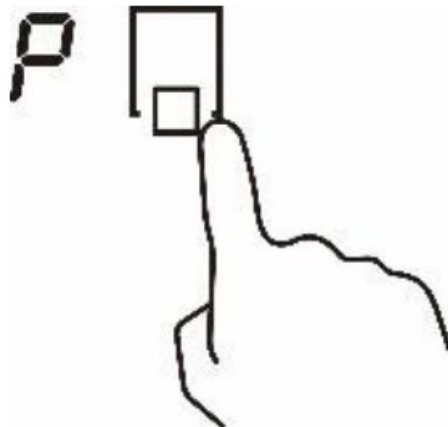

2. Touch the “boost” key **P** or “Slider” control to cancel the Boost function, and select the level you want to set.




- The Boost function will remain on for 5 minutes, after that the zone will set to level 9 automatically.


## Locking the Controls (Child lock)

- You can lock the controls to prevent unintended use (for example children accidentally turning the cooking zones on).
- When the controls are locked, all the controls except the ON/OFF key are disabled.
- Each segment of the hob has its own control lock.

### To lock the controls

Touch the lock key . The timer indicator will show “Lo “(Lock).

### To unlock the controls


1. Make sure the locked segment of the hob is turned on.
2. Touch and hold the lock key  for 5 seconds.
3. You can now start using your hob.



When the segment is in lock mode, all the controls are disabled except the ON/OFF key. You can always turn the segment off with the ON/OFF key in an emergency, but you will need to unlock the segment first before further operation.

## Residual Heat Warning

Although the hob itself does not heat, when a heating zone has been operating for some time, there will be some residual heat. The letter “H” appears to warn you to keep away from the particular zone until it has returned to a safe temperature.

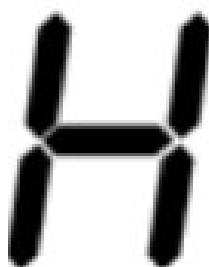

## Auto Shutdown

A safety feature of the hob is auto shut down. This occurs whenever you forget to switch off a cooking zone. The default shutdown times are shown in the table below:

Power level	1	2	3	4	5	6	7	8	9
Default working timer (hours)	8	8	8	4	4	4	2	2	2

## Using the Timer

You can use the timer in two different ways:


- You can use it as a minute minder. In this case, the timer will not turn any cooking zone off when the set time has expired.
- You can use it as cut-off timer to turn one or more cooking zones off after the set time has expired. \*You can set the timer for up to 99 minutes.

### Using the Timer as a Minute Minder


1. Make sure the hob segment you wish to use is turned on, and the heating zone selection key is not activated (Timer and power level indicators display “-“)

**Note:** You can also set the minute minder whilst the cooking zone is on as long as the power level indicator is not blinking.


2. Touch the timer key, “00” will show in the timer display and “0” will blink.

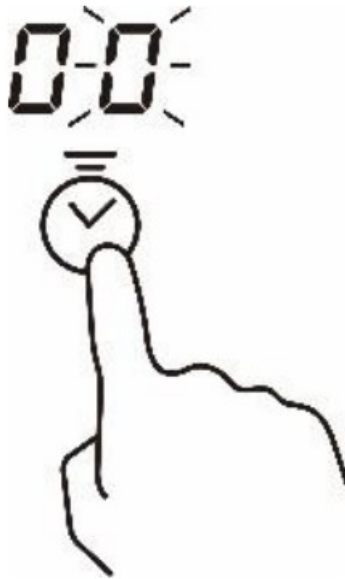


 
3. Set the time by touching the “Slider” control (e.g. 5)



4. Touch timer key again, then “0” will blink.

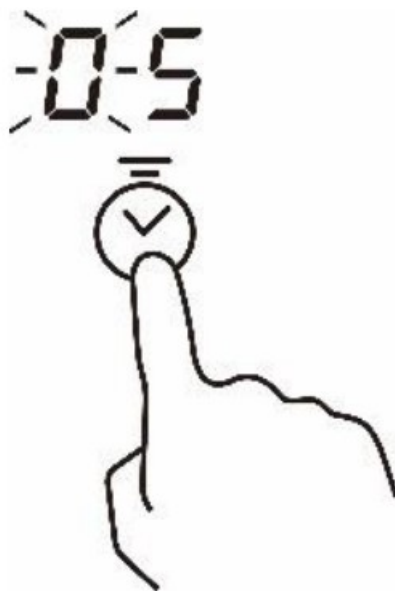

 5. Set the time by touching the “Slider” control (e.g. 9)

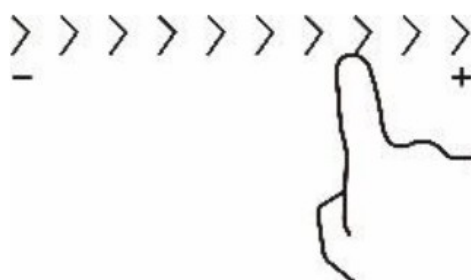

6. Touch the timer key again. Now the timer is set for 95 minutes.


7. When the time is set, it will begin to count down immediately. The display will show the remaining time.

8. When the time has expired, the timer will sound for 30 seconds and the timer indicator will show “- -”




### Using the timer to switch off one or more cooking zones


1. Select the heating zone that you wish to set the timer for.

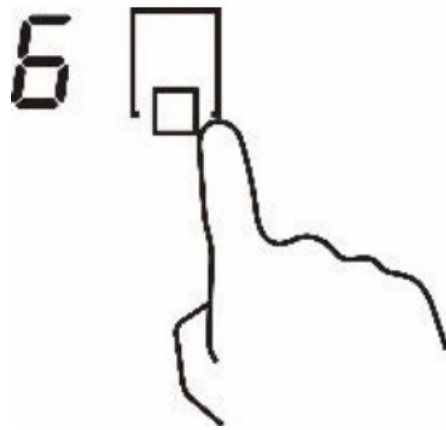


2. Touch the timer key, "00" will show in the timer display and the "0" will blink.

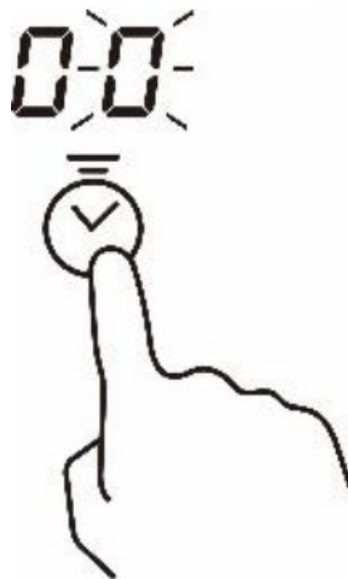

3. Set the time by touching the "slider" control (e.g. 5)

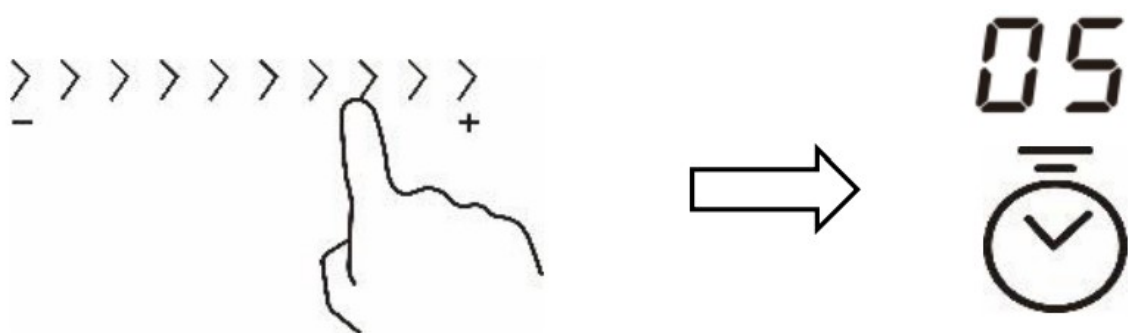


4. Touch the timer key again, then "0" will blink.

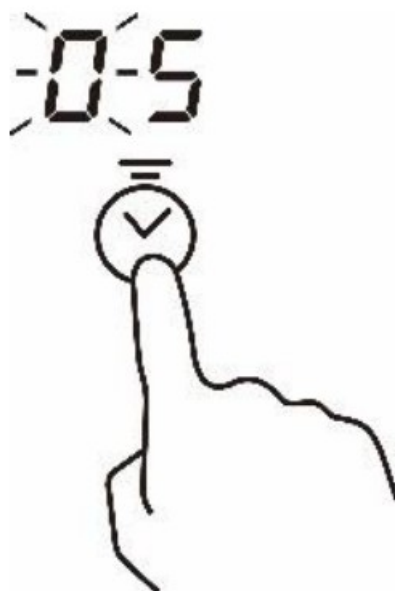




- Set the time by touching the "slider" control (e.g.9)

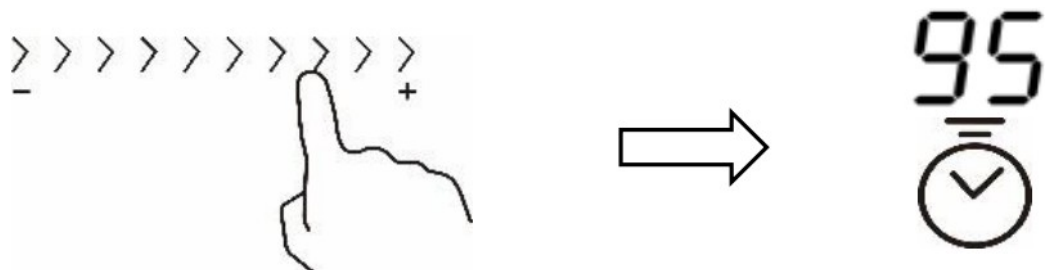

- Touch the timer key again. Now the timer is set for 95 minutes
- When the time is set, it will begin to count down immediately. The display will show the remaining time.

**Note:** There will be a red dot in the right bottom corner of the power level indicator which shows the timer is set for that zone.

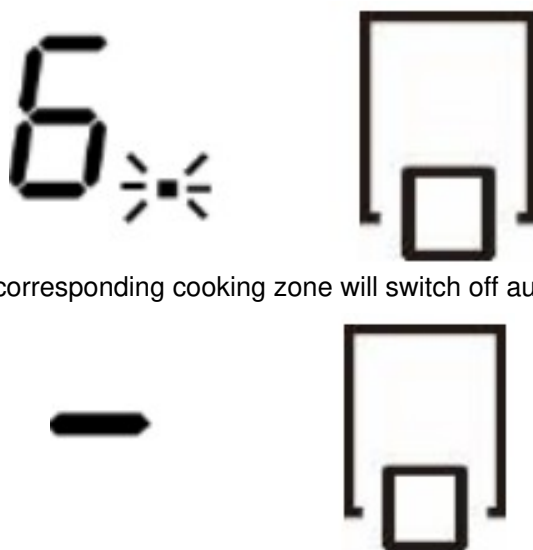


- When the set time expires, the corresponding cooking zone will switch off automatically.

**Note:** Other cooking zones will keep operating if they were turned on previously.


#### If the timer is set on more than one zone:

- When you set the timer for several cooking zones, red dots of the relevant cooking zones are indicated. The timer display shows the remaining time. The dot for the corresponding zone blinks.

**Note:** You can check the remaining time for the other zones by touching the corresponding heating zone selection key.

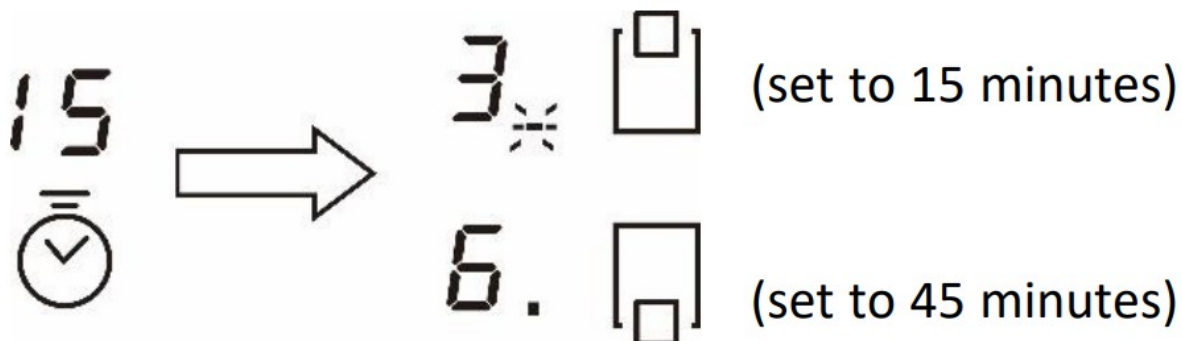


- Once the set time expires, the corresponding zone will switch off. Then it will show the remaining time for the other heating zone and the dot for that zone will blink.

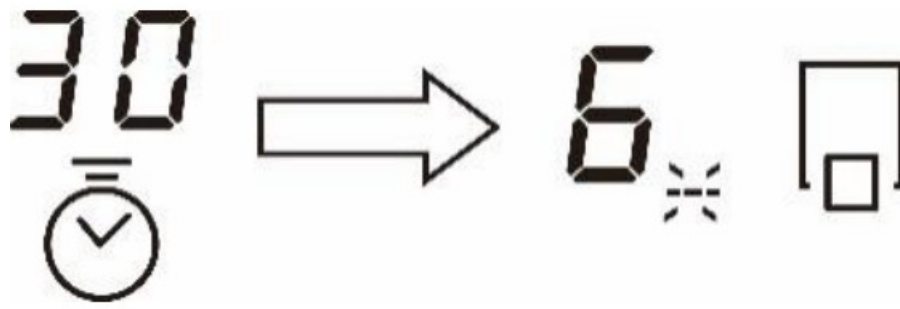


### Cancelling the timer

1. Touch the heating zone selection key for the timer that you wish to cancel.

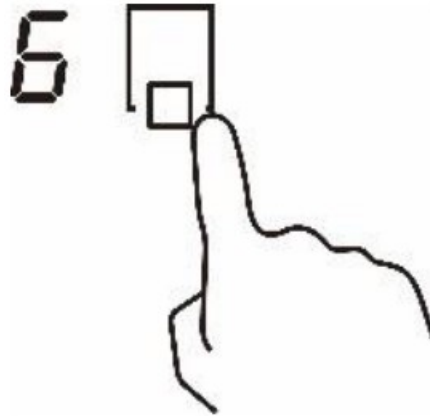

2. Touch the timer key, the first indicator will flash (e.g. "5")
3. Touch the "-" on the "Slider" control to set the timer to "90"

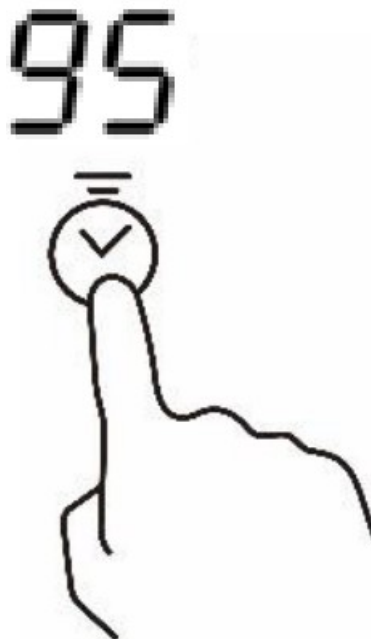

4. Touch the timer key again, the second indicator will flash (e.g. "9") Touch the "-" on the "Slider" control to set the timer to "00" The timer is now cancelled.

**Note:** Turning off the heating zone or hob segment will also cancel the timer.

### Cooking Guidelines

Take care when frying as oil and fat heat up very quickly, particularly if you're using the Boost setting. At extremely high temperatures oil and fat may ignite spontaneously which could present a serious fire risk.

## **Cooking Tips**

- When food comes to the boil, reduce the power setting.
- Using a lid will reduce cooking times and save energy by retaining heat.
- Minimise the amount of liquid or fat to reduce cooking times.
- Start cooking on a high setting and reduce the setting when the food has heated through.

## **Simmering, cooking rice**

- Simmering occurs below boiling point, at around 85°C, when bubbles are just rising occasionally to the surface of the water or sauce. It is the key to delicious soups and tender stews because the flavours develop without overcooking the food. You should also cook egg-based and flour thickened sauces below boiling point.
- Some tasks, including cooking rice by the absorption method, may require a setting higher than the lowest setting to ensure the food is cooked properly in the time recommended.

## **Searing steak**

To cook juicy flavoursome steaks:

1. Stand the meat at room temperature for about 20 minutes before cooking.
2. Heat up a heavy-based frying pan.
3. Brush both sides of the steak with oil. Drizzle a small amount of oil into the hot pan and then lower the meat onto the hot pan.
4. Turn the steak only once during cooking. The exact cooking time will depend on the thickness of the steak and how “well done” you want it. Times may vary from about 2 – 8 minutes per side. Press the steak to gauge how cooked it is – the firmer it feels the more ‘well done’ it will be.
5. Leave the steak to rest on a warm plate for a few minutes to allow it to relax and become tender before serving.

## **For stir-frying**

1. Choose an Induction compatible flat-based wok or a large frying pan.
2. Have all the ingredients and equipment ready. Stir-frying should be quick. If cooking large quantities, cook the food in several smaller batches.
3. Preheat the pan briefly and add two tablespoons of oil.
4. Cook any meat first, and then put it aside and keep warm.
5. Stir-fry the vegetables. When they are hot but still crisp, turn the cooking zone to a lower setting, return the meat to the pan and add your sauce.
6. Stir the ingredients gently to make sure they are heated through.
7. Serve immediately.

## **Heat Settings**

Heat setting	Suitability
1-2	<ul style="list-style-type: none"> <li>• delicate warming for small amounts of food</li> <li>• melting chocolate, butter, and foods that burn quickly</li> <li>• gentle simmering</li> <li>• slow warming</li> </ul>
3 – 4	<ul style="list-style-type: none"> <li>• reheating</li> <li>• rapid simmering</li> <li>• cooking rice</li> </ul>
5 – 6	<ul style="list-style-type: none"> <li>• pancakes</li> </ul>
7 – 8	<ul style="list-style-type: none"> <li>• sauteing</li> <li>• cooking pasta</li> </ul>
9	<ul style="list-style-type: none"> <li>• stir-frying</li> <li>• searing</li> <li>• bringing soup to the boil</li> <li>• boiling water</li> </ul>

## Care and Cleaning

What?	How?	Important!
Everyday soiling on glass (fingerprints, marks, stains left by food or non-sugary spills on the glass)	<ol style="list-style-type: none"> <li>1. Switch the power to the cooktop off.</li> <li>2. Apply a cooktop cleaner while the glass is still warm (but not hot!)</li> <li>3. Rinse and wipe dry with a clean cloth or paper towel.</li> <li>4. Switch the power to the cooktop back on.</li> </ol>	<ul style="list-style-type: none"> <li>• When the power to the cooktop is switched off, there will be no 'hot surface' indication but the cooking zone may still be hot! Take extreme care.</li> <li>• Heavy-duty scourers, some nylon scourers and harsh/abrasive cleaning agents may scratch the glass. Always read the label to check if your cleaner or scourer is suitable.</li> <li>• Never leave cleaning residue on the cooktop: the glass may become stained.</li> </ul>
Boil overs, melts, and hot sugary spills on the glass	<p>Remove these immediately with a fish slice, palette knife or razor blade scraper suitable for ceramic glass cooktops, but beware of hot cooking zone surfaces:</p> <ol style="list-style-type: none"> <li>1. Switch the power to the cooktop off at the wall.</li> <li>2. Hold the blade or utensil at a 30° angle and scrape the soiling or spill to a cool area of the cooktop.</li> <li>3. Clean the soiling or spill up with a dish cloth or paper towel.</li> <li>4. Follow steps 2 to 4 for 'Everyday soiling' on glass above.</li> </ol>	<ul style="list-style-type: none"> <li>• Remove stains left by melted and sugary food or spills as soon as possible. If left to cool on the glass, they may be difficult to remove or even permanently damage the glass surface.</li> <li>• Cut hazard: when the safety cover is retracted, the blade in a scraper is razor-sharp. Use with extreme care and always store safely and out of reach of children.</li> </ul>
Spillovers on the touch controls	<ol style="list-style-type: none"> <li>1. Switch the power to the cooktop off.</li> <li>2. Soak up the spill</li> <li>3. Wipe the touch control area with a clean damp sponge or cloth.</li> <li>4. Wipe the area completely dry with a paper towel.</li> <li>5. Switch the power to the cooktop back on.</li> </ol>	<ul style="list-style-type: none"> <li>• The cooktop may beep and turn itself off, and the touch controls may not function while there is liquid on them. Make sure you wipe the touch control area dry before turning the cooktop back on.</li> </ul>

## Troubleshooting

Problem	Possible causes	What to do
Condensation forming on rangehood or surrounding surfaces.	Induction cooking does not directly heat the air around the vessel which can cause condensation to form on colder surfaces surrounding the appliance. This is not a fault	Use rangehoods with larger filter areas. Check rangehood installation height. Turn rangehood on 10mins prior to cooking and use lower speeds when boiling.
The cooktop cannot be turned on.	No power.	Make sure the cooktop is connected to the power supply and that it is switched on. Check whether there is a power outage in your home or area. If you've checked everything and the problem persists, contact the Technika service department. Unlock the controls. See section 'Locking the controls' for instructions.
The touch controls are unresponsive.	The controls are locked.	Unlock the controls. See section 'Locking the controls' for instructions.

The touch controls are unresponsive.	The controls are locked.	Unlock the controls. See section 'Locking the controls' for instructions.
The touch controls are difficult to operate.	There may be a slight film of water over the controls or you may be using the tip of your finger when touching the controls.	Make sure the touch control area is dry and use the ball of your finger when touching the controls.
The glass is being scratched.	Rough-edged cookware. Unsuitable, abrasive scourer or cleaning products being used.	Use cookware with flat and smooth bases. See 'Choosing the right cookware'. Do not slide any cookware on the hob.
Some pans make crackling or clicking noises.	This may be caused by the construction of your cookware (layers of different metals vibrating differently).	This is normal for cookware and does not indicate a fault.
The induction hob makes a low humming noise when used on a high heat setting.	This is caused by the technology of induction cooking.	This is normal, but the noise should quieten down or disappear completely when you decrease the heat setting.
Fan noise coming from the induction hob.	A cooling fan built into your induction hob has come on to prevent the electronics from overheating. It may continue to run even after you've turned the induction hob off.	This is normal and needs no action. Do not switch the power to the induction hob off at the wall while the fan is running.
Pans do not become hot and appears in the display.	The induction hob cannot detect the pan because it is not suitable for induction cooking. The induction hob cannot detect the pan because it is too small for the cooking zone or not properly centered on it.	Use cookware suitable for induction cooking. See section 'Choosing the right cookware'. Centre the pan and make sure that its base matches the size of the cooking zone.
The induction hob or a cooking zone has turned itself off unexpectedly, a tone sounds and an error code is displayed (typically alternating with one or two digits in the cooking timer display).	Technical fault.	Please note down the error letters and numbers, switch the power to the induction hob off at the wall, and contact the Technika service department

## Failure Display and Inspection

If an abnormality occurs, the induction hob will enter a protective state automatically and display corresponding protective codes:

Problem	Possible causes	What to do
E4/E5	Temperature sensor failure	Please contact the Technika service department.
E7/E8	Temperature sensor of the IGBT failure.	Please contact the Technika service department.
E2/E3	Abnormal supply voltage	Please inspect whether power supply is normal. Power the hob on after the power supply is back to normal.
E6/E9	Bad induction hob heat radiation	Please restart after the induction hob cools down.

## Technical Specification



<b>Induction Hob</b>	<b>TGC6IND-5</b>
Cooking Zones	4 Zones
Supply Voltage	220-240V~ 50 Hz or 60Hz
Installed Electric Power	7200W
Product Size D×W×H(mm)	590×520×58
Building-in Dimensions A×B (mm)	565×495
<b>Induction Hob</b>	<b>TGC9IND-5</b>
Cooking Zones	5 Zones
Supply Voltage	220-240V~ 50 Hz or 60Hz
Installed Electric Power	10800W
Product Size D×W×H(mm)	900×520×58
Building-in Dimensions A×B (mm)	860×495

Weight and Dimensions are approximate. Because we continually strive to improve our products we may change specifications and designs without prior notice.



## Installation

### Preparation of the work surface

- Cut out the work surface according to the sizes shown in the drawing.
- For the purpose of installation and use, a minimum of 50mm space shall be preserved around the hole.
- Be sure the thickness of the work surface is at least 30mm. and suitable for the application.

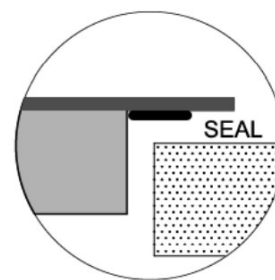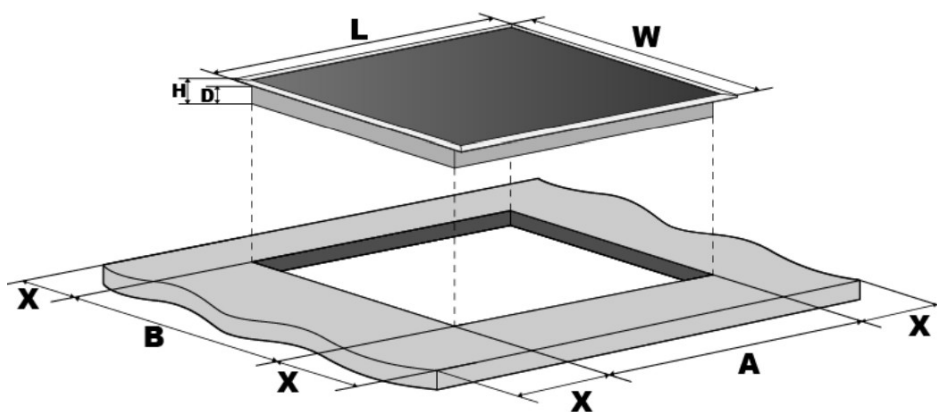

	L(mm)	W(mm)	H(mm)	D(mm)	A(mm)	B(mm)	X(mm)
TGC6IND-5	590	520	58	54	565	495	50 min
TGC9IND-5	900	520	58	54	860	495	50 min

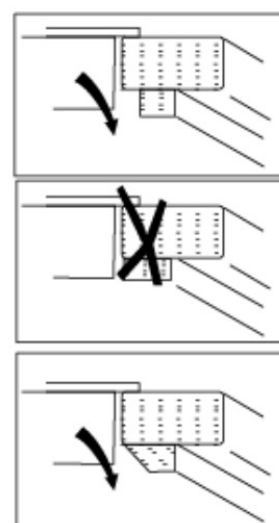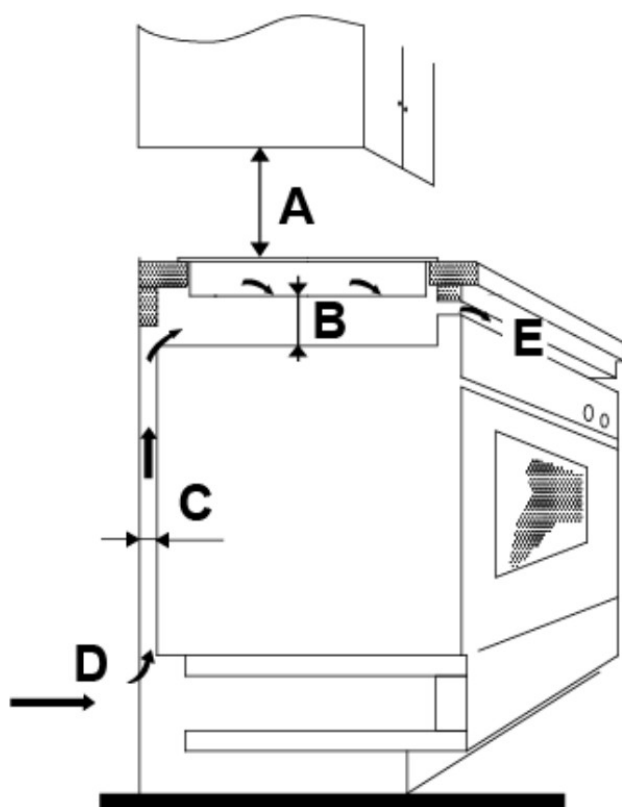

A(mm)	B(mm)	C(mm)	D	E
600min	50 min	20 min	Air intake	Air exit 5mm

#### Before you install the hob, make sure that

- The work surface is square and level, and no structural members interfere with space requirements.
- The work surface is made of a suitable material.
- If the hob is installed above an oven, the oven has a built-in cooling fan.
- Installation is completed by a suitably qualified person.
- The installation will comply with all clearance requirements and applicable local standards and regulations.



- A suitable isolating switch providing full disconnection from the mains power supply is incorporated in the permanent wiring and is mounted and positioned to comply with the local wiring rules and regulations.
- The isolating switch will be easily accessible to the customer with the hob installed.
- You consult local building authorities and by-laws if in doubt regarding installation.
- You use heat-resistant and easy-to-clean finishes (such as ceramic tiles) for the wall surfaces surrounding the hob.

#### **When you have installed the hob, make sure that**




- The power supply cable is not accessible through cupboard doors or drawers.
- There is adequate flow of air from outside the cabinetry to the base of the hob.
- If the hob is installed above a drawer or cupboard space, a thermal protection barrier is installed below the base of the hob.
- The isolating switch is easily accessible by the customer.

#### **Fitting the foam seal**


Turn the unit over and carefully attach the foam seal to the underside edge of the glass.

#### **Locating the fixing brackets**

- Fix the hob on the work surface by screwing the four brackets on the bottom of hob after installation.
- Adjust the bracket position to suit for different work surface's thickness.
- Ensure the hob sits flat and square to the work surface and doesn't slide around.

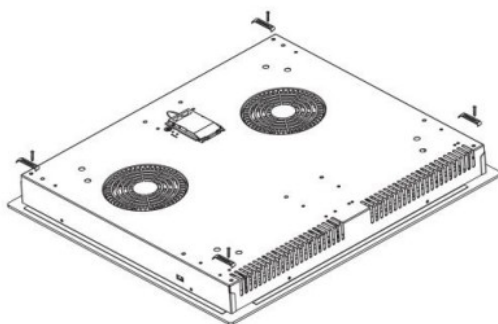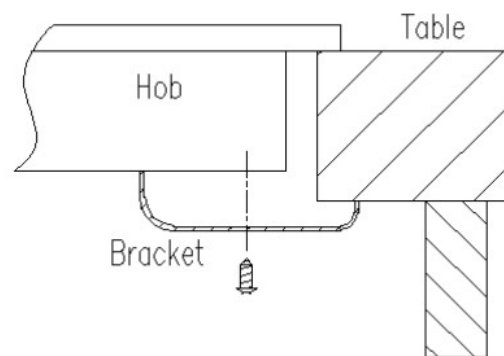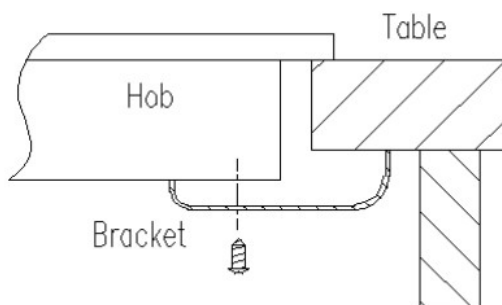

**TGC6IND-5**

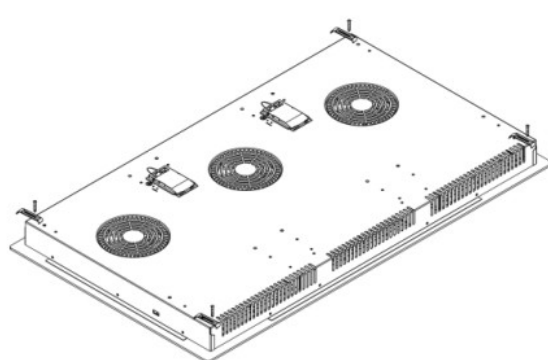

**TGC9IND-5**

#### **Cautions**

- The hob must be installed by a suitably qualified person. Please never conduct the operation by yourself.
- The hob shall not be mounted to cooling equipment, dishwashers and rotary dryers.
- The hob shall be installed in a way that ensures correct ventilation and clearances.
- Any surrounding surfaces will meet requirements in regards to temperature resistance.
- A steam cleaner is not to be used.

### Connecting the hob to the mains power supply

If connecting the cable directly to the mains, install a suitable isolating switch with a minimum contact opening of 3mm between the appliance and the mains. The isolating switch should be sized according to the load on the appliance rating label and should


comply with current regulations (the earth wire should not be interrupted by the circuit breaker)

Connection to the electricity supply must be made by an authorized person in accordance with the wiring rules AS/NZS3000. Ensure the supply cable cannot contact any hot surfaces.


Immediately after installation, carry out a thorough inspection and test of the appliance. If the appliance fails to operate correctly, after checking that you have followed the user instructions correctly, disconnect the appliance and contact the

Technika Service department. Never attempt to repair the appliance.

### TGC9IND-5

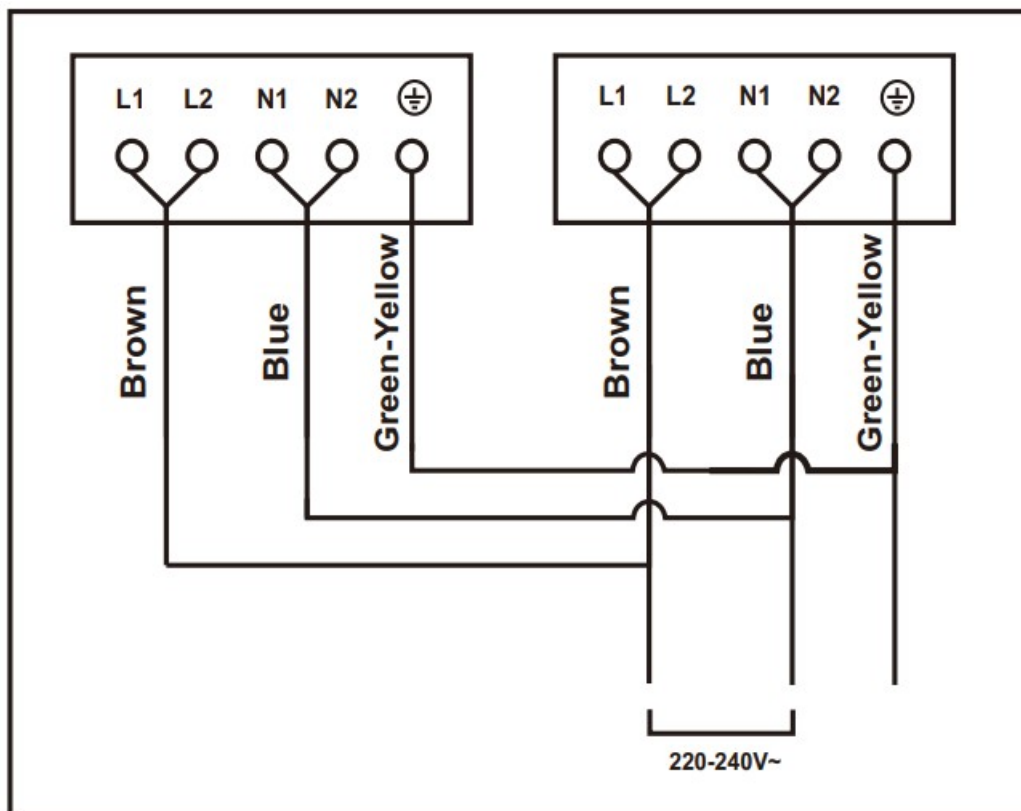


### TGC6IND-5

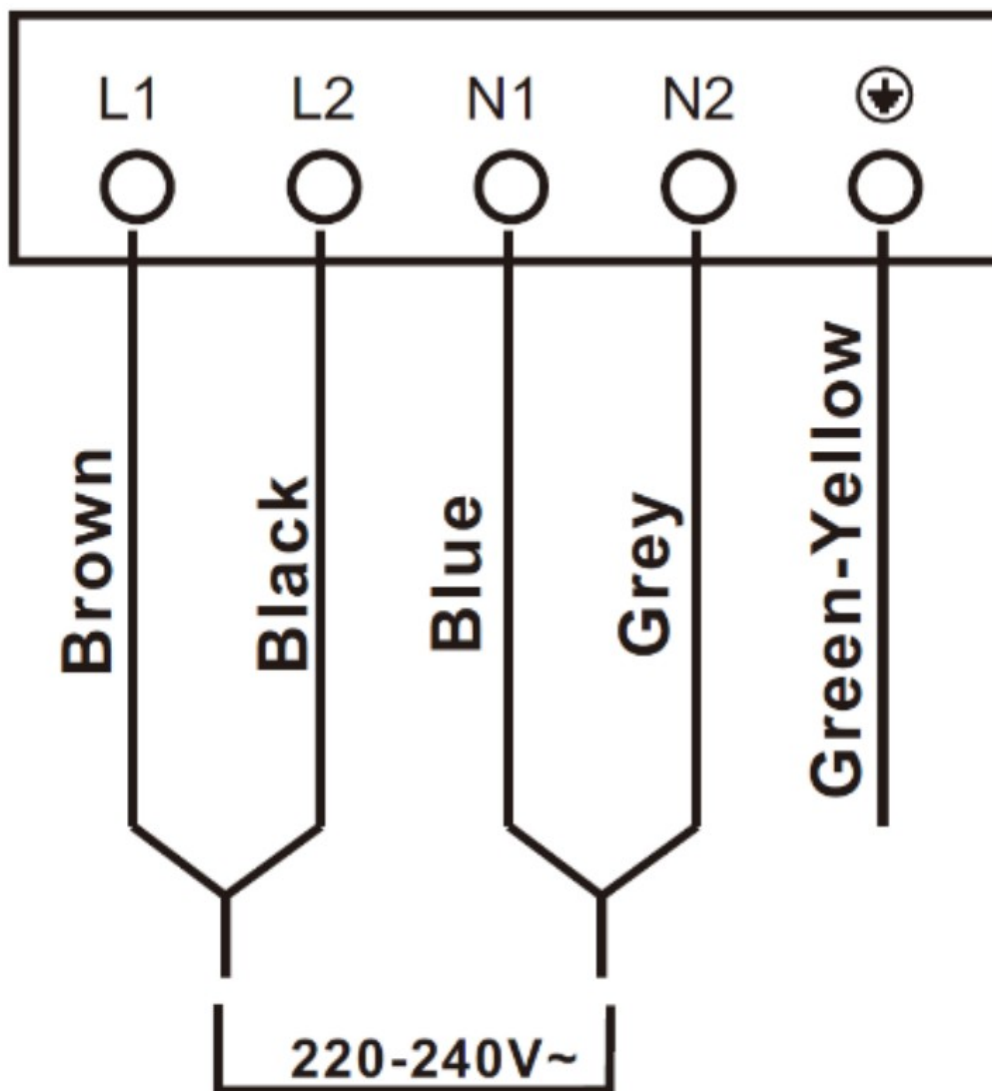

- If the cable is damaged or needs replacing, this must be done by the manufacturer or suitably qualified person.
- The installer must ensure that the correct electrical connection has been made and that it complies with safety regulations.
- The cable must not be bent or compressed.
- The cable must not be accessible after installation

## Disposal

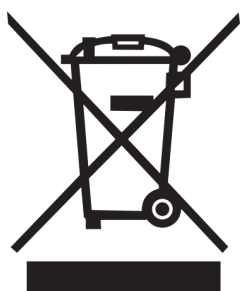

**DISPOSAL:** Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

This appliance is labeled in compliance with European directive 2002/96/EC for Waste Electrical and Electronic Equipment (WEEE). By ensuring that this appliance is disposed of correctly, you will help prevent any possible damage to the environment and to human health, which might otherwise be caused if it were disposed of in the wrong way.

The symbol on the product indicates that it may not be treated as normal household waste. It should be taken to a collection point for the recycling of electrical and electronic goods.

This appliance requires specialist waste disposal. For further information regarding the treatment, recovery and recycling of this product please contact your local council, your household waste disposal service, or the shop where you purchased it.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## READ THE INSTRUCTION BOOKLET BEFORE INSTALLING AND USING THE APPLIANCE.

The manufacturer will not be responsible for any damage to property or to persons caused by incorrect installation or improper use of the appliance. The manufacturer is not responsible for any inaccuracies, due to printing or transcription errors, contained in this handout. In addition, the appearance of the figures reported is also purely indicative.

The manufacturer reserves the right to make changes to its products when considered necessary and useful, without affecting the essential safety and operating characteristics. Technika constantly seeks ways to improve the specifications and designs of their products. Whilst every effort is made to produce up to date literature, this document should not be regarded as an infallible guide. Actual product only should be used to derive cut out sizes. All Technika Appliances must be installed by a qualified person/s with adherence to the relevant electrical, plumbing and gas safety codes, with compliance being issued as required by state or national legislation.

Additionally all Technika Upright cookers must have chains installed correctly in adherence to the relevant gas safety and plumbing codes by the Licenced installer.

For maximum effectiveness and efficiency all rangehoods should be installed with the use of ductwork, by a licenced installer with adherence to the relevant state and national building codes and regulations.

All Technika appliances are for Domestic use only, and must be installed by a licenced installer for Domestic Applications only, without exception and to the required Authorities guidelines.

Any installation outside of this will VOID warranty.

Alfresco areas are not a Domestic application.



TECHNIKA PTY LTD ACN 069 686 326

77 Fillo Drive Somerton Victoria 3062

General: 1800 649 969


Service & Spare Parts: 1800 333 244

Technika After Sales Service

RO. Box 543 SOMERTON VIC 3062

Version 1 Revision 20230620

## Documents / Resources

	<p><a href="#">TECHNIKA TGC6IND-5 Induction Cooktop</a> [pdf] Instruction Manual TGC6IND-5, TGC9IND-5, TGC6IND-5 Induction Cooktop, Induction Cooktop, Cooktop</p>
---	--