



TechnoLine WT 460 LED Digital FM Clock Radio with Dual Alarm User Manual

[Home](#) » [TECHNOLINE](#) » TechnoLine WT 460 LED Digital FM Clock Radio with Dual Alarm User Manual 

Contents

- [1 TechnoLine WT 460 LED Digital FM Clock Radio with Dual Alarm](#)
- [2 OVERVIEW](#)
- [3 INSTALLATION](#)
- [4 SETTINGS](#)
- [5 USING THE PRESET MEMORY](#)
- [6 TROUBLESHOOTING](#)
- [7 SPECIFICATIONS](#)
 - [7.1 Default settings](#)
- [8 Precautions](#)
- [9 Batteries safety warnings](#)
- [10 INFORMATION](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)



TechnoLine WT 460 LED Digital FM Clock Radio with Dual Alarm



OVERVIEW

FIG 1

 
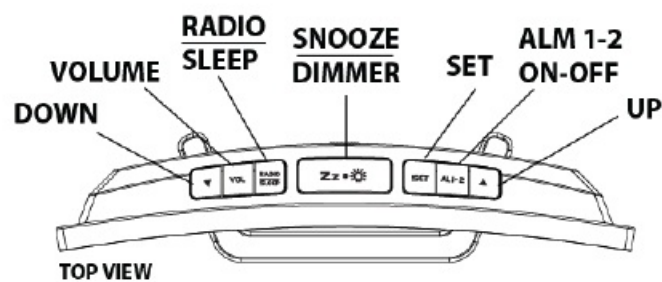 


FIG 2



FIG 3

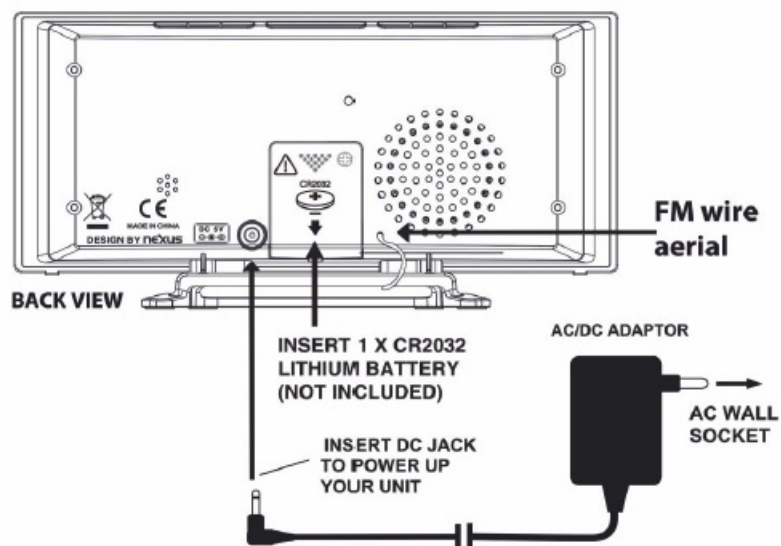

INSTALLATION

Plug the AC/DC power adapter AS0601A-0500600EUL into an AC household outlet and then plug the DC jack into the backside of the clock. Your radio clock is powered now.

BACKUP BATTERY INSTALLATION









Your clock radio requires one CR2032 lithium battery (not included) to provide backup power to the clock in the event of a temporary power interruption.

1. Place your clock face down on a flat surface.
2. Remove the screw from the battery compartment cover. Slide and remove the cover from the bottom of your clock.
3. Insert one new CR2032 lithium battery into the battery compartment with the + side facing up as indicated.
4. Slide the cover back on the battery compartment and retighten the screw.

Note: If AC power is interrupted, the LED display will go off and both the radio and the alarm will not function. The backup battery will keep the time and all settings of your unit. Make sure a fresh CR2032 lithium battery is used. A fresh CR2032 battery could backup your clock continuously for around 3 days.




 


SETTINGS



SETTING TIME, 12/24HR TIME AND THE SNOOZE DURATION

1. Press SET once, the hour digits flash. Press  or  to set the current hour (hold to advance rapidly).
2. Press SET again, the minute digits flash. Press  or  to set minutes. (hold to advance rapidly).
3. Press SET again, the display shows "24H" and flashes. Press  or  to select "12H" or "24H" time format.
4. Press SET again, the display shows "05" and flashes. Press  or  to select your snooze time from 5 to 60 minutes.
5. Press SET again or if no key is pressed in approx. 10 seconds to exit the setting mode.

Note: when 12-hour time format is selected, the P (PM) LED will appear at the lower middle part of the time display to indicate the afternoon time; there is no AM indicator.

SETTING THE ALARMS

1. Press AL 1.2 once, the A1 LED and the hour digits flash. Press  or  to set the alarm 1 hour. (hold to advance rapidly).
2. Press AL 1.2 again to adjust minutes. Press  or  to set the alarm 1 minutes. (hold to advance rapidly).
3. Press AL 1.2 again, LED displays "OFF" (alarm off). To select wake to sound sources, press  or  to select :
 - rd = wake-by-radio
 - bu = wake-by-buzzer
 - OFF = alarm off



4. Press AL 1.2 again, the A2 LED and the hour digits flash. Press  or  to set the alarm 2 hour. Repeat step 2) and 3) to set alarm 2.
5. Press AL1.2 again or no button is pressed in around 10 seconds to exit alarm setting mode. When wake-by-radio or wake-by-buzzer is selected, the related alarm is turned on, indicated by appearance of the A1 and / or the A2 LED on the left side of the display.

Note: Alarm function can only be operated at AC mode only.



STOP AND RESET THE ALARM TO COME ON THE NEXT DAY

When alarm 1 or 2 is sounding, the related A1 or A2 LED flashes. Press the RADIO/ SLEEP or AL 1.2 once to stop the alarm and reset it to come on the following day. After that, A1 or A2 icon stays on the display.

SNOOZE OPERATION (default snooze duration is 5 minutes)

When alarm is sounding, press   once, the alarm will be silenced and come on again after the set snooze duration. Note: If your second alarm activates while the first alarm is sounding or it is in the snooze mode, the second alarm overrides the first alarm (the first alarm is reset to come on the next day).









USING THE H I-LO DIMMER

- Press   to adjust the brightness (HI/ LO/OFF) of the LED display. This can only be done when the radio is off or the unit is not sounding.

SETTING UP THE F M ANTENNA

- Extend the FM wire antenna fully and vary the direction for the best FM reception. Do not strip, alter or attach to other antennas.





LISTENING TO THE FM RADIO

1. To turn on the radio, press RADIO/SLEEP once, the display shows "ON" and then shows the radio frequency readings in Mhz.
2. Press  or  to tune the radio to a desired station. Press and hold  or  to scan for the next clear station.
3. To adjust the volume, press VOL once, the display shows "L07", press  or  to adjust volume from L01 (minimum) to L15 (maximum)
4. Press   to turn off the radio.



Remark: Keep your radio away from fluorescent lamps or other electronic devices, which may cause interference to the radio.

USING THE PRESET MEMORY

This clock radio features 10 preset memories of FM stations. These allow you to preset your favorite stations and access them quickly.

1. Turn on the radio and select a radio station you like to memorize.
2. Press and hold the SET until MEM LED appears and "01" flashes. Press SET once to store Memory 1.
3. Press  or  to select another station you like to memorize. Then press and hold SET until MEM LED appears and "01" flashes. Press  or  once, "02" appears. Press SET once to store Memory 02.
4. Repeat Steps 2 to 3 to preset memories 3 through 10.
5. To access a preset station at any time, simply press the SET once at a time while the radio is on.
6. To edit a preset station, select another station and then repeat Step 2 to 4. This overrides the original settings.

USING THE SLEEP TIMER

1. Press the RADIO/SLEEP twice to enter the sleep mode. The SL (SLEEP) LED and the sleep time "05" (5 minutes) and will flash on the display.
2. Press the RADIO/SLEEP again as needed to adjust the sleep timer from 5, 15, 30, 45, 60, 75, 90 or OFF.
3. When the display changes back to show the time, simply press the RADIO/SLEEP twice to show the sleep time remaining.
4. The radio will play for the programmed sleep time and then turn off automatically.
5. To turn off the radio before the sleep time has elapsed, press   once.

TROUBLESHOOTING

If your clock displays irrelevant time or does not function properly, which maybe caused by electrostatic discharge or other interference, unplug the DC jack to disconnect the AC power (and remove the backup battery). The clock radio will be reset to default settings and you need to set it again. Hereby, Technotrade declares that this product WT460 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU and ROHS 2011/65/EC. The original EU declaration of conformity may be found at:

www.technoline.de/doc/4029665004600

SPECIFICATIONS

- **Alarm duration:** 1 hour (3-minute on, 9-minute off interval)
- **Snooze duration:** 5 to 60 minutes
- **Sleep timer selections:** 5, 15, 30, 45, 60, 75, 90 minutes to OFF
- **Volume:** L01 (minimum) to L15 (maximum)
- **Preset Memories of radio:** 10

Default settings

- **Time format:** 24 hour
- **Time:** 0:00
- **Alarm 1 and 2:** 6:00
- **Volume:** L07 (Level 7)
- **Snooze duration:** 05 (5 minutes)

- **Max. output power:** 125MW

Precautions

- This main unit is intended to be used only indoors.
- Do not subject the unit to excessive force or shock.
- Do not expose the unit to extreme temperatures, direct sunlight, dust or humidity.
- Do not immerse in water.
- Avoid contact with any corrosive materials.
- Do not dispose this unit in a fire as it may explode.
- Do not open the inner back case or tamper with any components of this unit.

Batteries safety warnings

- Use only alkaline batteries, not rechargeable batteries.
- Install batteries correctly by matching the polarities (+/-).
- Always replace a complete set of batteries.
- Never mix used and new batteries.
Remove exhausted batteries immediately.
- Remove batteries when not in use.
- Do not recharge and do not dispose of batteries in fire as the batteries may explode.
- Ensure batteries are stored away from metal objects as contact may cause a short circuit.
- Avoid exposing batteries to extreme temperature or humidity or direct sunlight.
- Keep all batteries out of reach from children. They are a choking hazard.


Use the product only for its intended purpose!

Consideration of duty according to the battery law Old batteries do not belong to domestic waste because they could cause damages of health and environment. End-users are committed by law to bring back needed batteries to distributors and other collecting points! Electrical devices have to be disposed separately from the general household waste. Take your old electronics to your local waste collection point or recycling centre.

INFORMATION



Documents / Resources

	<p>TechnoLine WT 460 LED Digital FM Clock Radio with Dual Alarm [pdf] User Manual</p> <p>WT 460 LED Digital FM Clock Radio with Dual Alarm, WT 460, LED Digital FM Clock Radio with Dual Alarm, Radio with Dual Alarm, Dual Alarm</p>
--	--

References

- technoline.de/doc/4029665004600