



Technosource Hk TR6 10inches High Clear Board Computer User Manual

[Home](#) » [Technosource Hk](#) » Technosource Hk TR6 10inches High Clear Board Computer User Manual 

Contents

- 1 Technosource Hk TR6 10inches High Clear Board Computer
- 2 Introduction
- 3 Safety Instruction
- 4 USB Connection
- 5 Apps & notification
- 6 Accessibility
- 7 Multi-Media
- 8 Internet
- 9 New gesture navigation
- 10 Other Application Procedures
- 11 Installation of Procedures
- 12 Troubles Shooting
- 13 FCC STATEMENT
- 14 Documents / Resources
 - 14.1 References



Technosource Hk TR6 10inches High Clear Board Computer



Introduction

Acknowledgement

Thanks for your purchase of our product TR6 is a 10inches high clear board computer. Its CPU is A133, it is based on the Android 10 operation system, and it makes it easy to expand the third application procedure. The product is designed with various functions, including WIFI, and BT. It is easy to achieve wireless communication and internet, you have access to surf the internet anytime and anywhere; many sensors offer you brand-new operation and entertainment; besides, it has camera shooting, which leads electronic consumption to enter into a fresh palm internet entertainment time. The manual systemically introduces the functions, use techniques and announcements, please read this manual carefully before your operation.

Announcements

Preventive maintenance

- Please always keep the MID dry. To avoid the device short trouble, corrosion faults and electric short, please protect the device, battery and charger from water and moisture, and don't operate the device or charger with a wet hand.
- To avoid failure of the device, battery and charger, please prevent the device, battery, and charger from violently shaking.
- To avoid failure of device, battery and charger, please prevent the device, battery, and charger from overheating or too cold circumstances
- Never shock, throw, prod the MID, or drop, extrude, bend the MID.
- Never disassemble the device and accessories arbitrarily, otherwise the device and accessories are not in our company warranty scope.

Safety Instruction

Before the operation of the MID, please read this chapter and teach your kids about this information. For further details, please refer to the safety instructions and announcement.

- Never use the MID when driving a car, to ensure safe driving.
- In the medical area, please abide by related rules and regulations. Please shut down the MID when it is near the medical area.
- To avoid the wireless signal interrupting the plane-controlled signal, please shut down the MID or use aeroplane mode when you are boarding a flight,
- To avoid electronic equipment failure, please shut down the MID in the vicinage of high-accuracy electronic

equipment.

- Please don't disassemble the MID and accessories. Only authorized agent has access to service the MID.
- Please keep the MID far away from magnetic pieces of equipment, the radiation of MID may erase the data stored in the magnetic pieces of equipment.
- Never use the MID in the vicinage of high temperature, combustibile gas (gas station).
- Protect the MID and accessories from kids reach scope, and avoid the kids using the MID without parents' supervision.
- Please comply with related rules and regulations, and respect others' privacy and legal rights while using the MID.
- Please strictly adhere to related instructions in the manual when using a USB cable to ensure the safety of the MID or PC.
- Never use the MID in a bathroom or other humid environment, and please protect the MID from liquid wash or wet.

Abbreviation/Terminology

Abbreviation/Terminology	Full Name	Description
MID	Mobile Internet Device	Mobile Internet Terminal
WIFI	Wireless Fidelity	Based on IEEE 802.11b/g/n standard wireless LAN
T F	TransFlash	Alternative name Micro SD, super miniature memory card

MID Operation and Preparation





 

 
 


Battery Charging If this navigator is first used, please use an AV adaptor to fully charge it.

- Apply the power adaptor to charge for MID.

MID Status and Reminder

Reminder icons

When some reminder message appears in your reminder window, please click the column and slip the screen to open the reminder list. Choose the menu you need, and confirm the information. Then you can close the reminder window by clicking the column to slide up. Please refer to below status icons below:

	New email		Airplane Mode on
	USB connected		USB debugging connected
	Return button		Downloading
	Swipe up to show recently used apps		Home button
	Current electric volume.		WIFI connected, internet is available

Reminder Board

- Reminder icons will work while receiving emails, WIFI is open, and you can open the reminder board to view the detailed information.


 
 
 
Open the reminder board

- When the reminder column shows a new reminder icon, please hold the column and slip down your finger, and then the reminder board is opened.

Quick Start Guide

Keys Function

Keys Function Description

Power button	Short press to sleep/wake up, long press to start and shutdown.
Volume + up	increase the volume
Volume - down	decrease the volume
HOME button home 	Click it in any interface will return to the main interface.
Back button back) 	click it in any interface will return to the previous menu
Menu button 	This button will be displayed in the menu interface.
Setting button 	Swipe up to show recently used apps; you can switch between the last two applications

Startup and Shutdown

Startup Long press the POWER key for three seconds, you can enter into the startup picture. The system enters into screen lock status, please unlock it.

Shutdown

1. Long press POWER and it will pop up the shutdown window.
2. The shutdown window contains power-off mode, restart mode and screenshot mode three options.
3. Click power off is the last step.

 
Open and Close the Screen

The screen will be closed on its own when no operation happens.

1. The screen will be closed on its own if no operation happens for some time to save battery power
2. When the screen is open, press the POWER key, and the screen will be closed immediately.

Open the screen when it is closed.

If the screen is closed, short press POWER to open the screen. The screen will be locked open it, and it will show the picture below picture, an upward slide unlocks the screen.

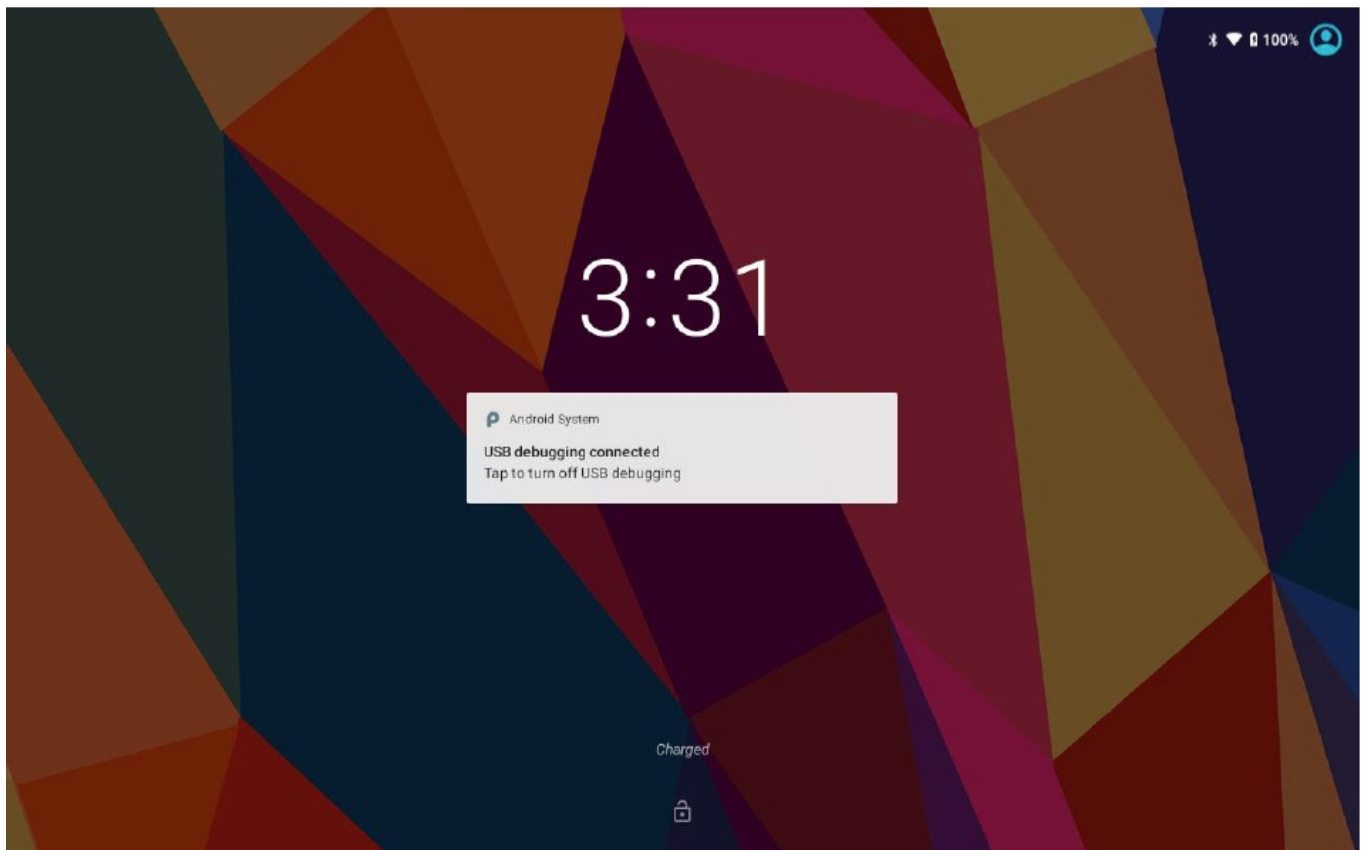

Picture 3.3-1

Usage of Touch Screen

MID operating methods

- There are below methods to view the main screen, menu and application procedure in your MID.

Click

- When you want to use the screen keyboard to type or choose an application in the main interface, you only need to touch it by your finger.

Press on

- If you want to open some item(textbox or the link in the webpage), or shortcut and main procedure move, you can press on this item.

Quickly slide or slide indicates

- Quickly slide or slide indicates to make quick vertical or horizon movement by finger.

Pull

 
- Before you pull, you need to hold it with strength until you pull it into the position you want.

Rotate

- For most pictures, you only need to rotate the MID sideways to change the screen direction from horizon to vertical. For instance, when you are typing words, and watching movies.

Home Page

Main interface as below picture 3.5-1, long press the blank and it will popup windows to set wallpaper, folder, widgets, and shortcut.

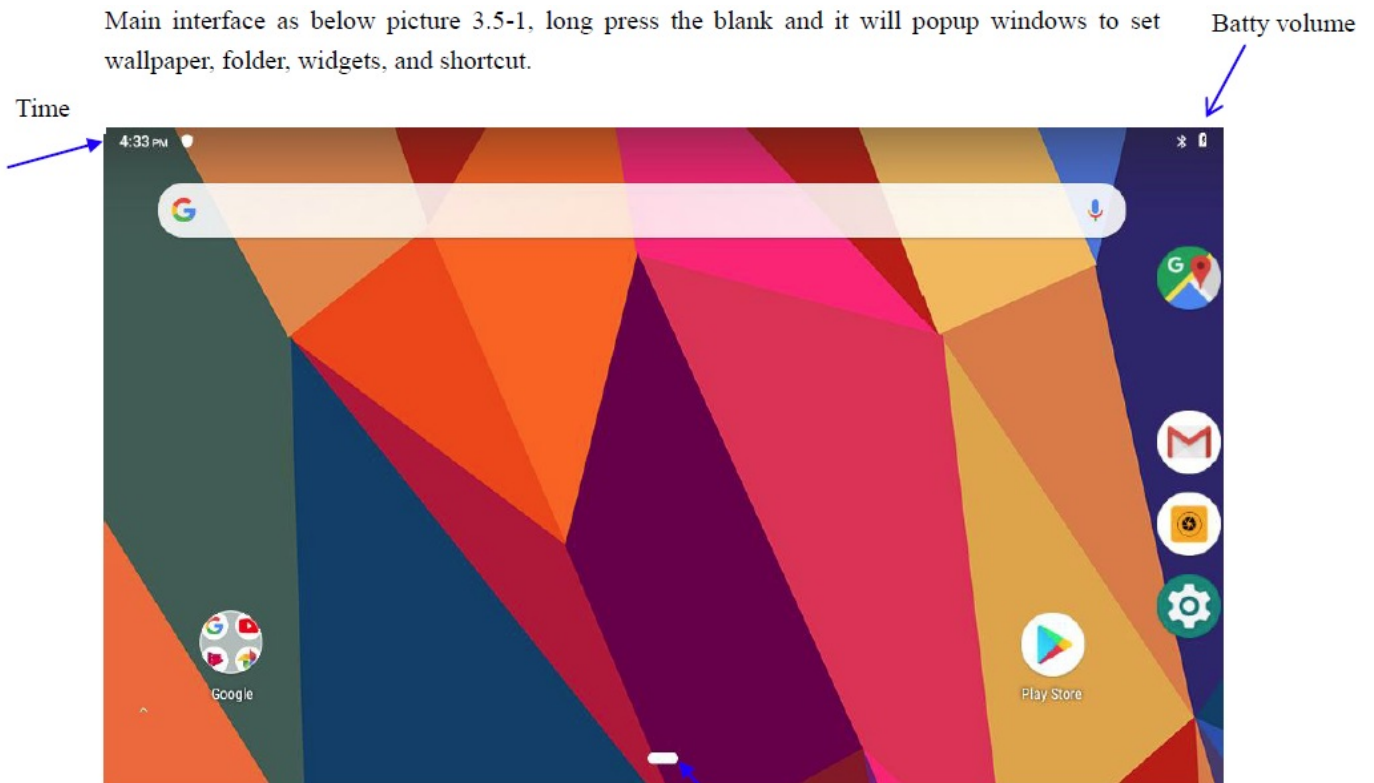

Picture 3.5-1

 
Home

Swipe up once
to show the
most recently
used app

Swipe up twice
to show the main
menu interface

The extended home page

The home page can be extended beyond the wideness of the screen to provide more space, in which you can put new-added shortcuts and widgets. Click the blank space in the home page then slide right or left to extend to the right or left of the screen. On the home page, there are two extended pictures, Picture 3.5-2.

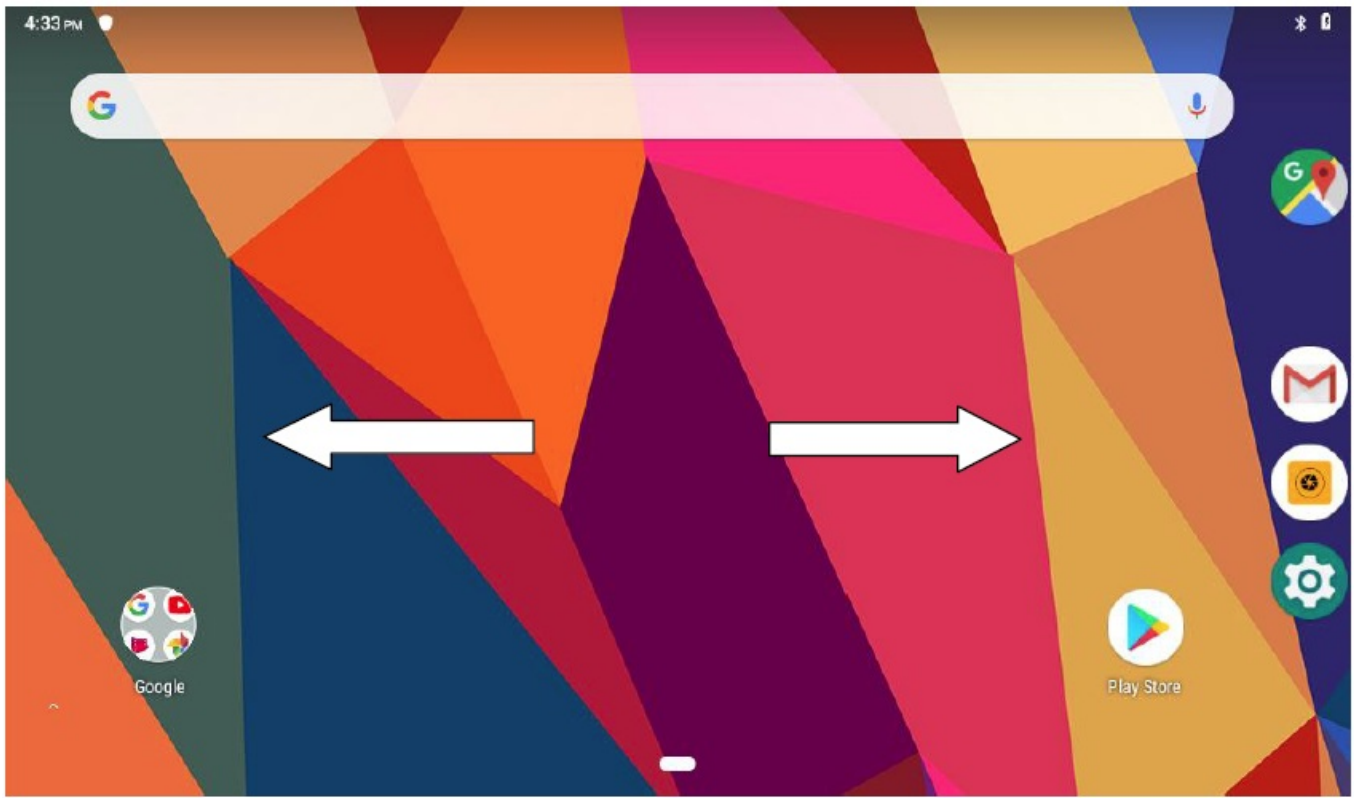


Picture 3.5-2

The shortcut icon management in a desktop application.


Create a folder icon on the desktop

 1. Drag the icons that need to be put together on one icon(can also overlay several icons)as Picture 3.5-3.




2. Then click the overlaid icons, the applications can be folded, as in Picture 3.5-4.

 Click the unnamed folder in the black box, it will pop up the hidden keyboard, the folder name can be renamed (this is similar to the Apple IOS system), and the position of the icon can be changed through the long press.

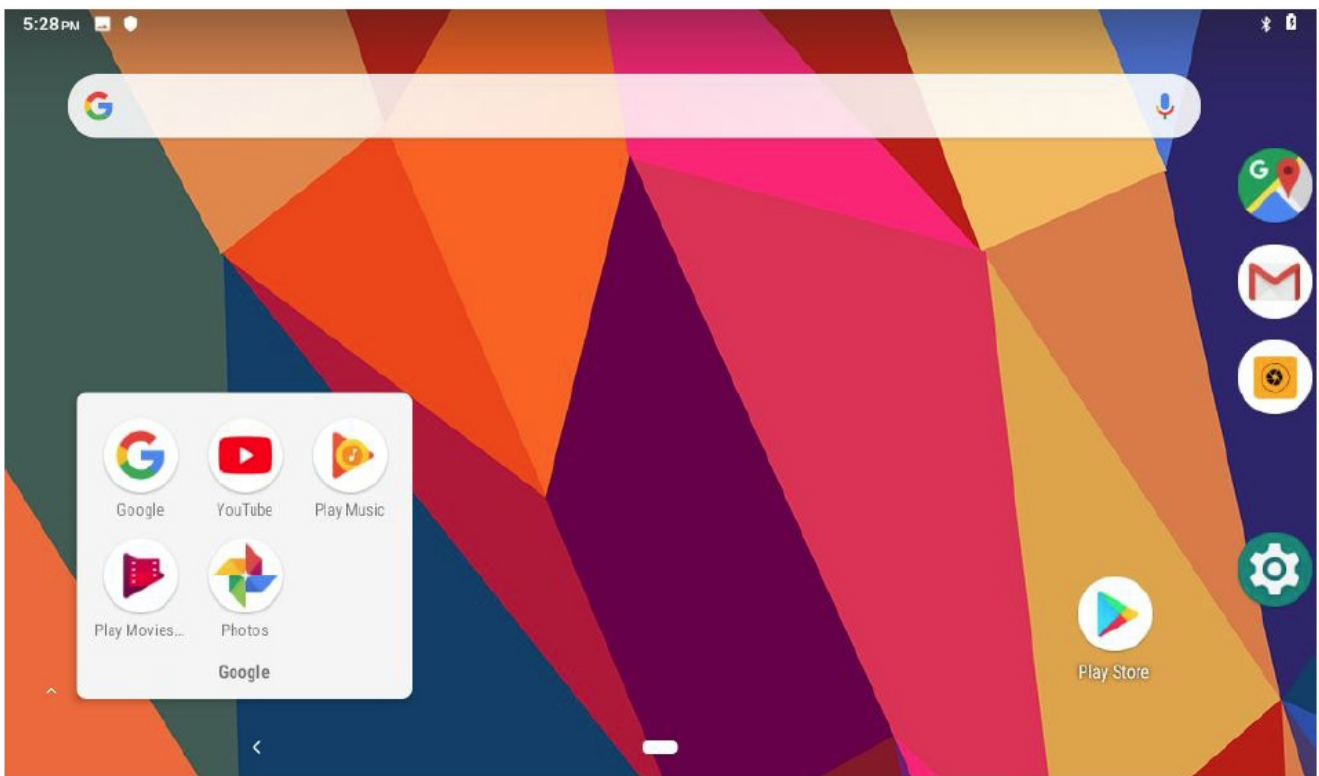


Picture 3.5-4

 3. Long press to enter the home screen settings, as in Picture 3.5-5. you can turn on the notification dots feature, A small circle will appear in the corner of the app icon to let users know which specific apps have new messages, and the long-pressed app will bring up a preview window for viewing messages. The circle's colour also changes as the icon's colour changes, such as On lock screen Allow notification dots Default notification sound Do Not Disturb, Figure 3.5-6 shows the display of notification dots after it is started.

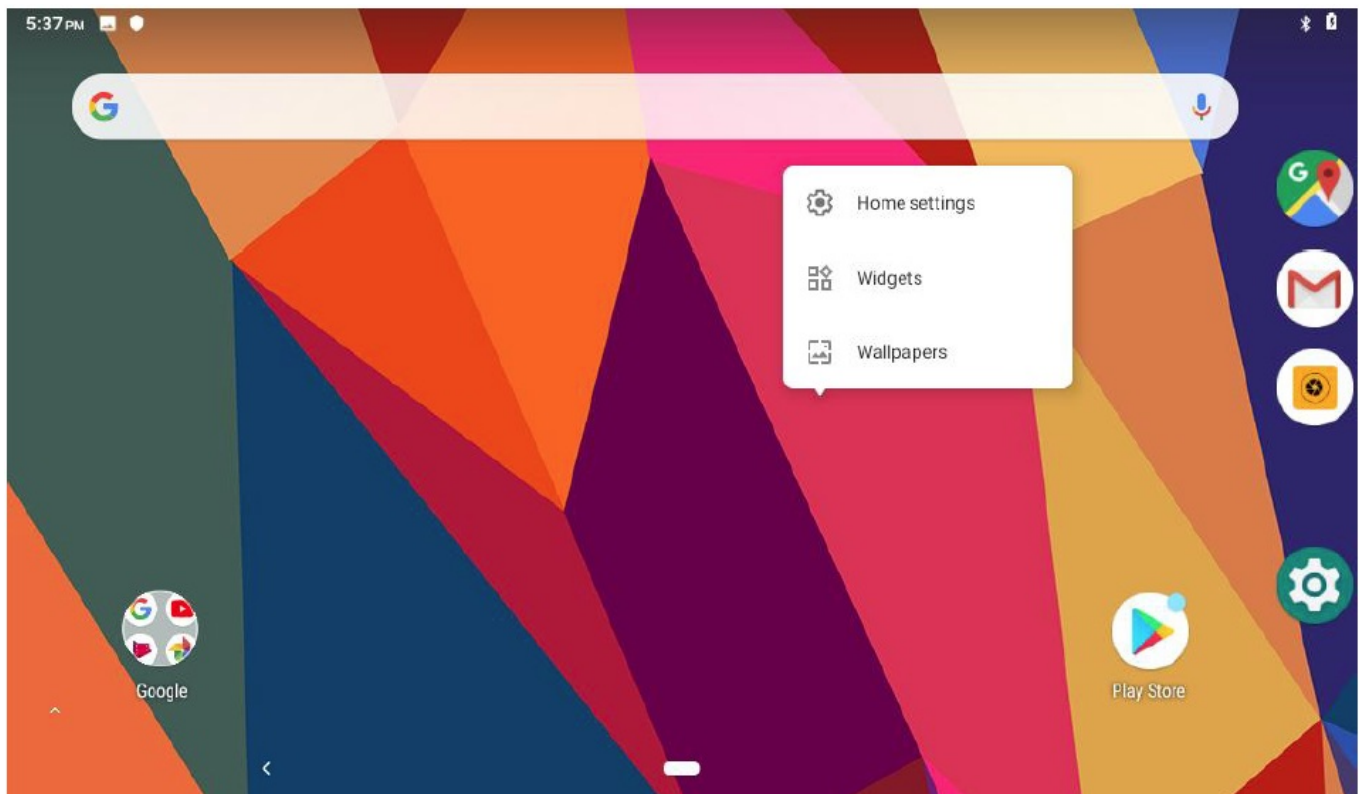


Picture 3.5-5

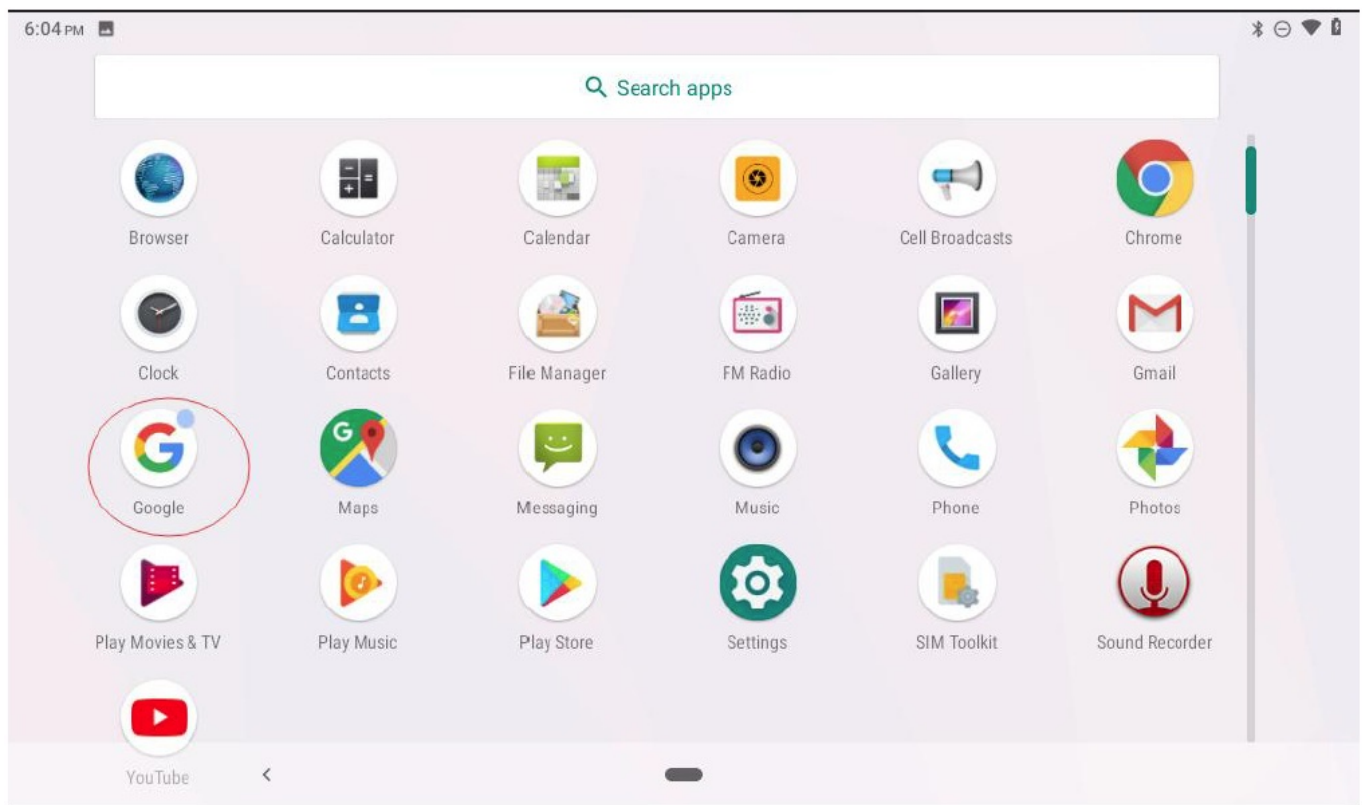 

Picture 3.5-6

 
Remove the icons on the desktop

 
1. Long press the icons that need to be removed, then on the right above the screen, it will appear  icons.
2. Drag the icon to the above of the remove icon, till the icon becomes red, then move your finger to delete the icon.


Change the wallpaper of the desktop

1. On the home page, long press any blank space on the main screen, it will pop up a window to change the wallpaper.
2. Click the gallery or wallpaper gallery to select the wallpaper.

Visit Application Procedures



 Click  on the right top of Picture 3.5-1, enter into the main interface as Picture 3.6-1, and choose the application procedure you want to visit.

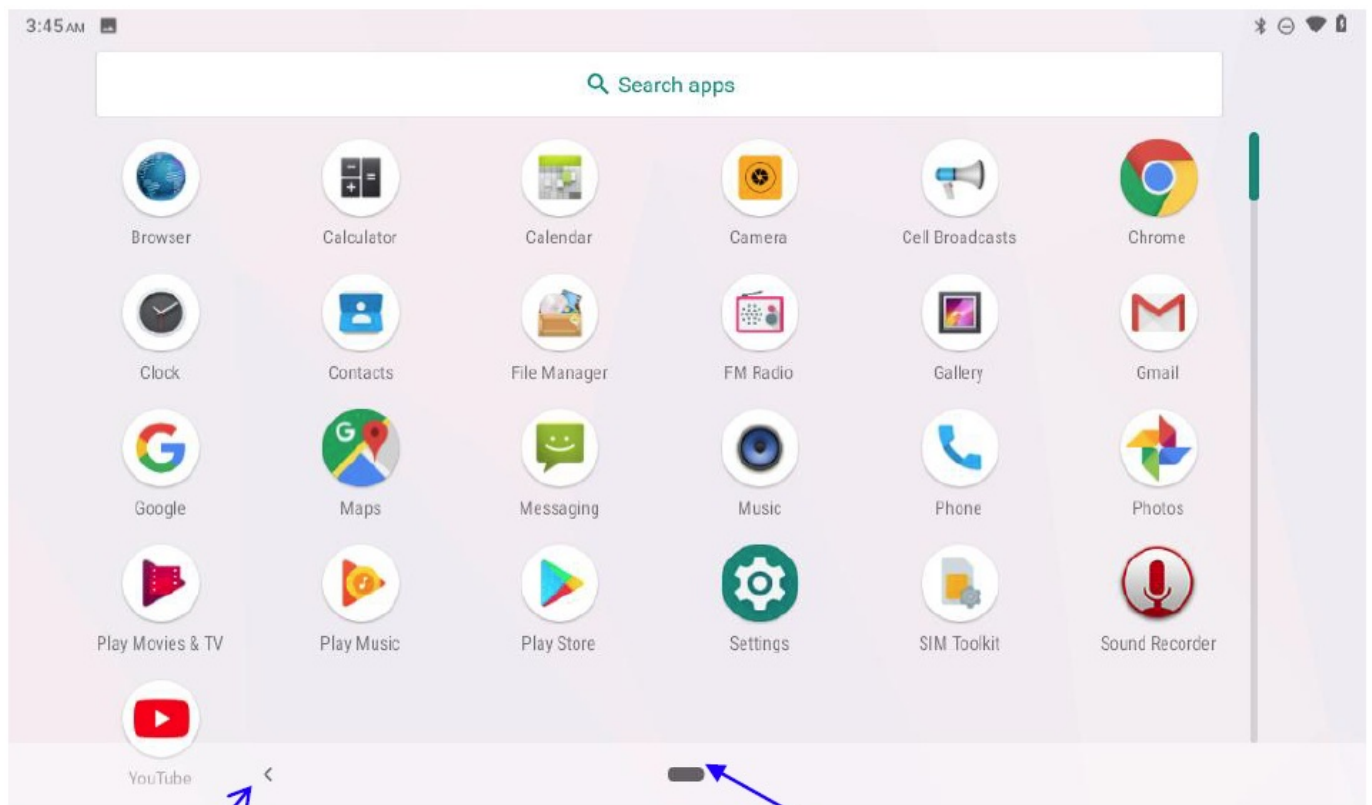


Picture 3.6-1

Return to the
previous
menu

Return to
homepage

PinnedShortcuts

 - If you press an application software, you can pop-up the sub menu, and then you can use this way to use some functions of the application quickly as Picture 3.6-2

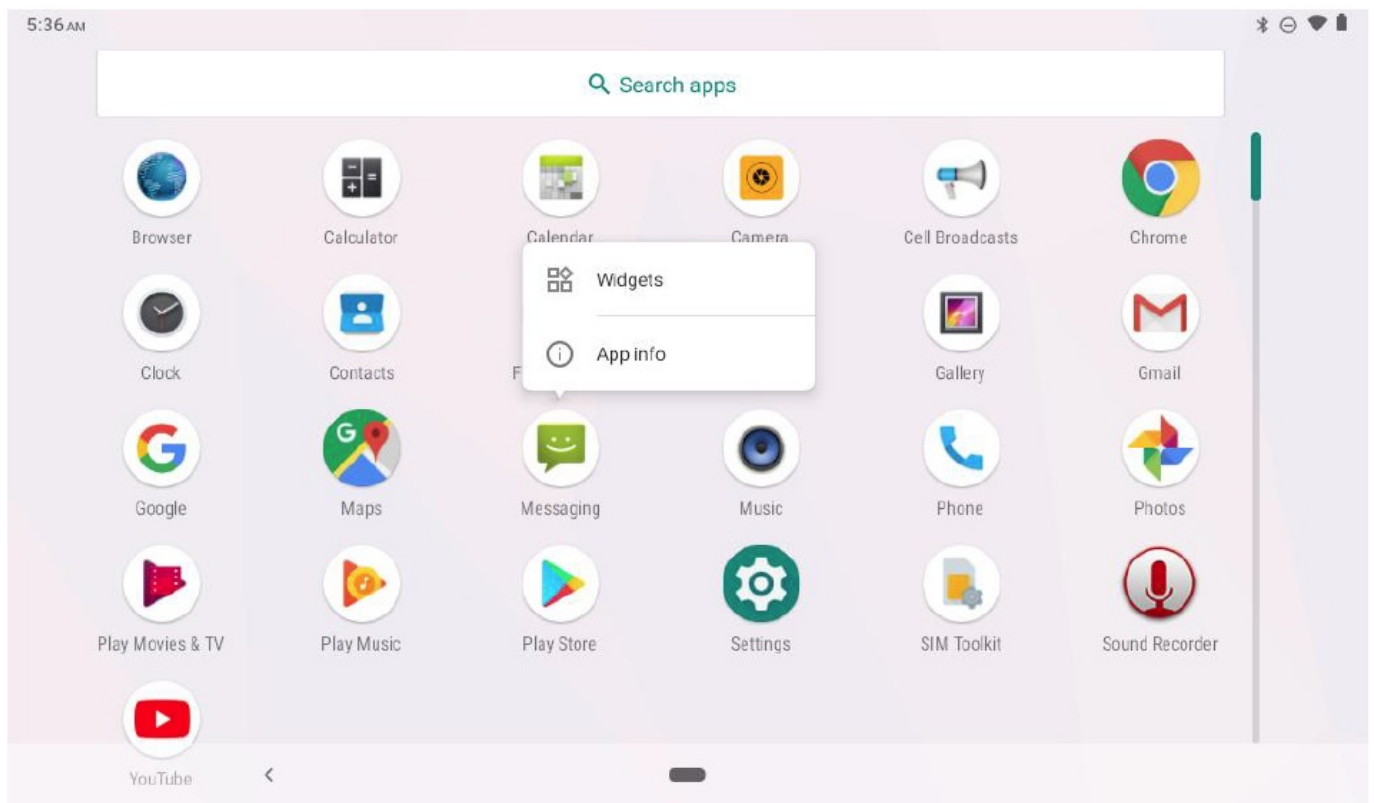


Picture 3.6-2

USB Connection

MID storage configuration

Before transmitting documents, you have to conduct storage configuration for your MID:

 1. Connect the MID and computer by USB cable, the reminder column will show the remind information.
2. Open the reminder board; please view the MID status and reminder to learn how to open the board.
3. In the reminder board, click the "USB for file transfer", it will as below Picture 3.7-1, then click "File transfers".
4. Now the USB is connected successfully.

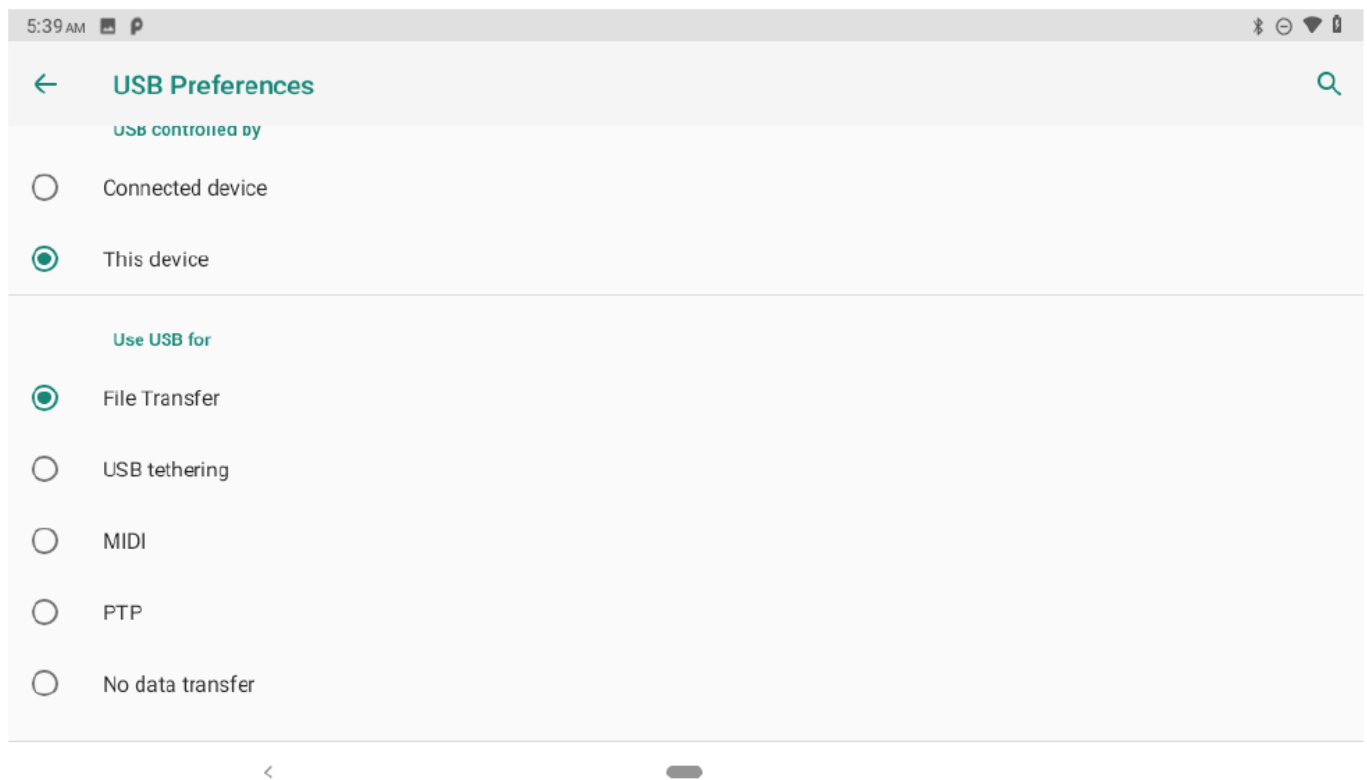

Picture 3.7-1

Copy the document into the memory card

1. Connect the MID to the computer with a USB cable.
2. As a MID storage configuration, it is connected to the computer successfully.
3. Open the “My computer” on your computer, and check the items in “MTP devices”.
4. Copy the documents you need into “MTP devices”.
5. After copying finishes, unplug the USB can.

Typing words

Use the screen keyboard

 
When you start the procedure or choose the words or numbers edition, it will show the screen keyboard. The keyboard contains below typing options:

1. Android keyboard

Choose the typing method you want

1. Click the Setting procedure application.
2. Click Language and Keyboard.
3. In the text setting area will reveal all the installed words-typing methods in your MID.
4. Tick the typing method you want.

Use and switch of input method

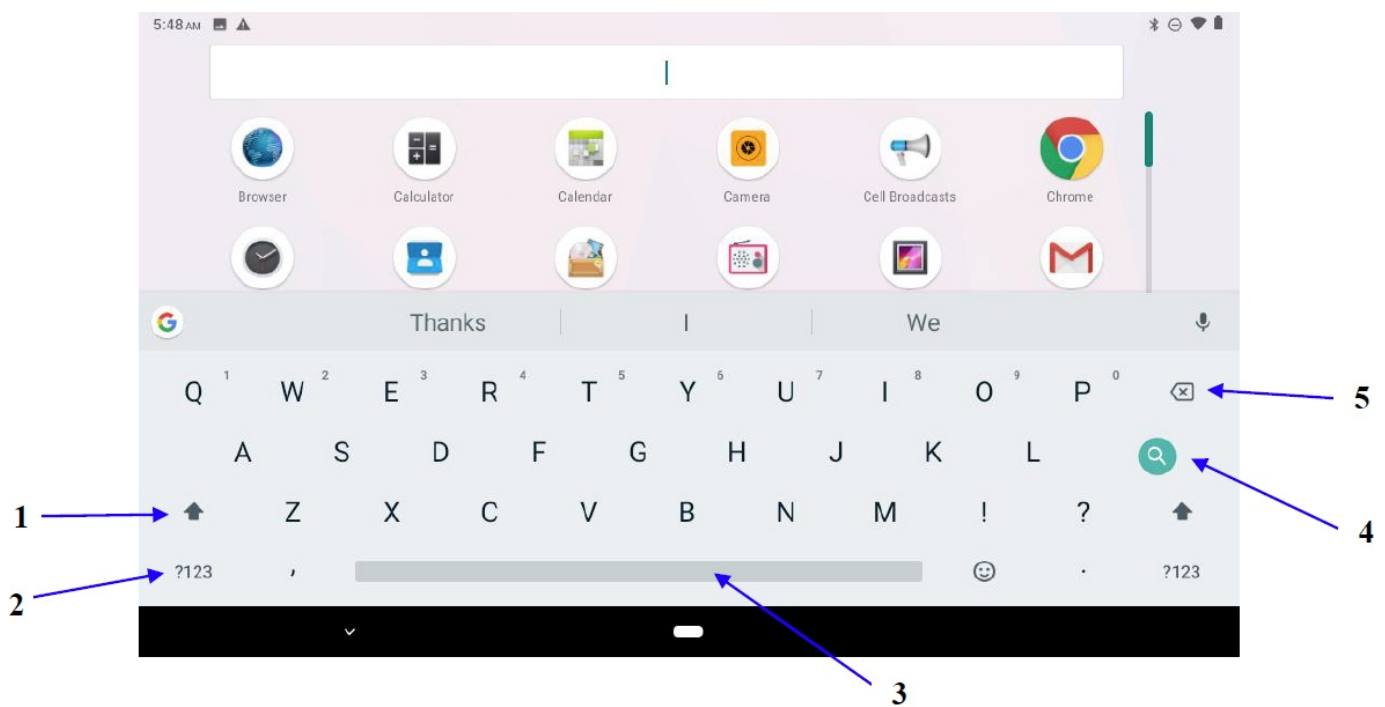

1	switch the capital and small letter
2	switch the mode of word input
3	click to insert the space
4	click input to execute
5	delete the character on the left of the cursor, click and hold to delete all the characters on the left of the cursor.

Operation Technique

 
Enter widgets interface In the application interface, click widgets on the above screen, or slide the screen, it will switch into the widgets interface. Long press any widget to create its shortcut, and then you can enter the application through the shortcut icon.

Create application shortcut icons on the desktop

In the application interface or widgets interface, long press any icon to switch to the desktop automatically, drag and hold the icon, and you can move to any position on the desktop. Remind: If the target position has no space, the widget won't be added in the main screen.


Quick Setting

Swipe-down gesture from the top of the screen, there are nine shortcut icons, such as Wi-Fi, Bluetooth, Auto-rotate, and so on. In the full Quick Settings list you can also tap the edit button at the bottom right to rearrange the tiles or replace them with others, as in Picture 3.10-1. The optional extras list is pretty minimal: Just Hotspot, Data Saver and Invert colours. But developers are now able to create custom Quick Settings tiles for their apps, which will make things a lot more interesting in the coming months.

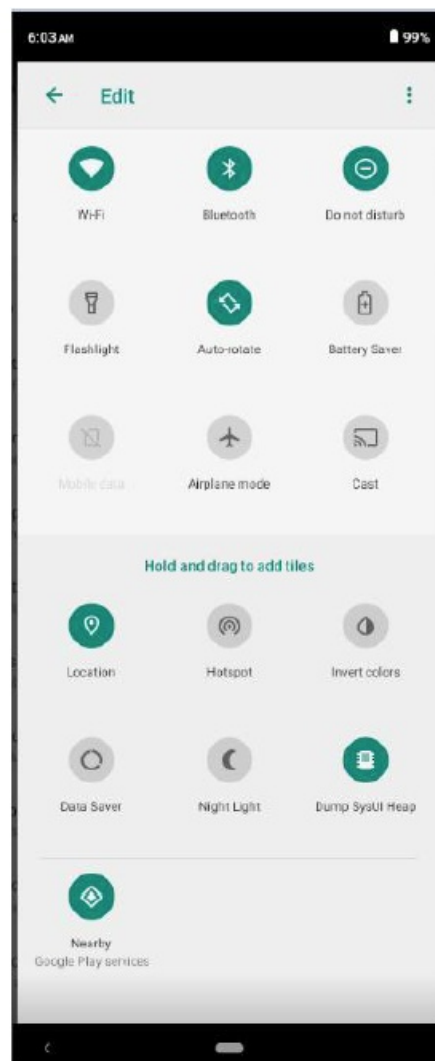

Picture 3.10-1

 - The swipe-down gesture from the top of the screen, Long press push message to see a switch, operate it to open and close the future of this app so all notifications as Picture 3.10-2

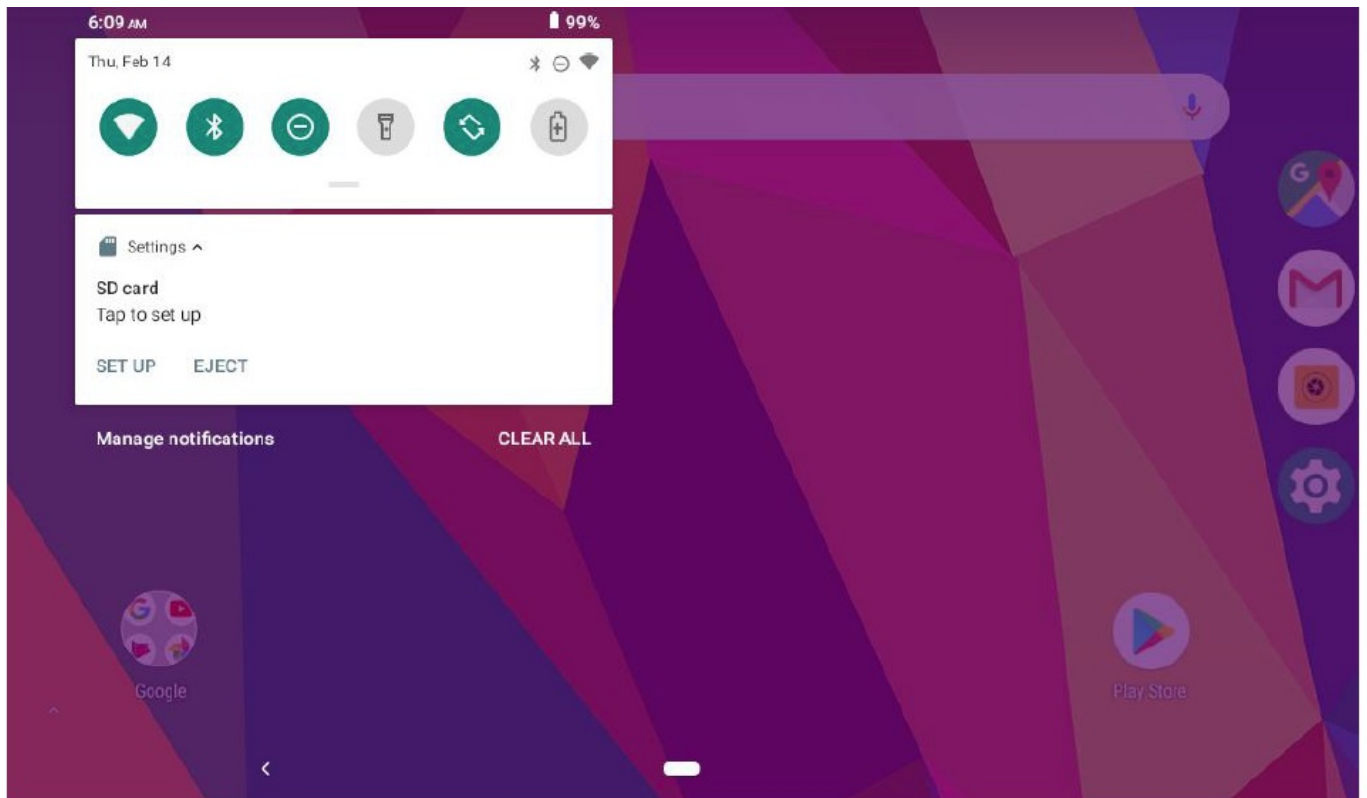



Picture 3.10-2


Basic Setting

Network and Internet

 
Search 搜索框

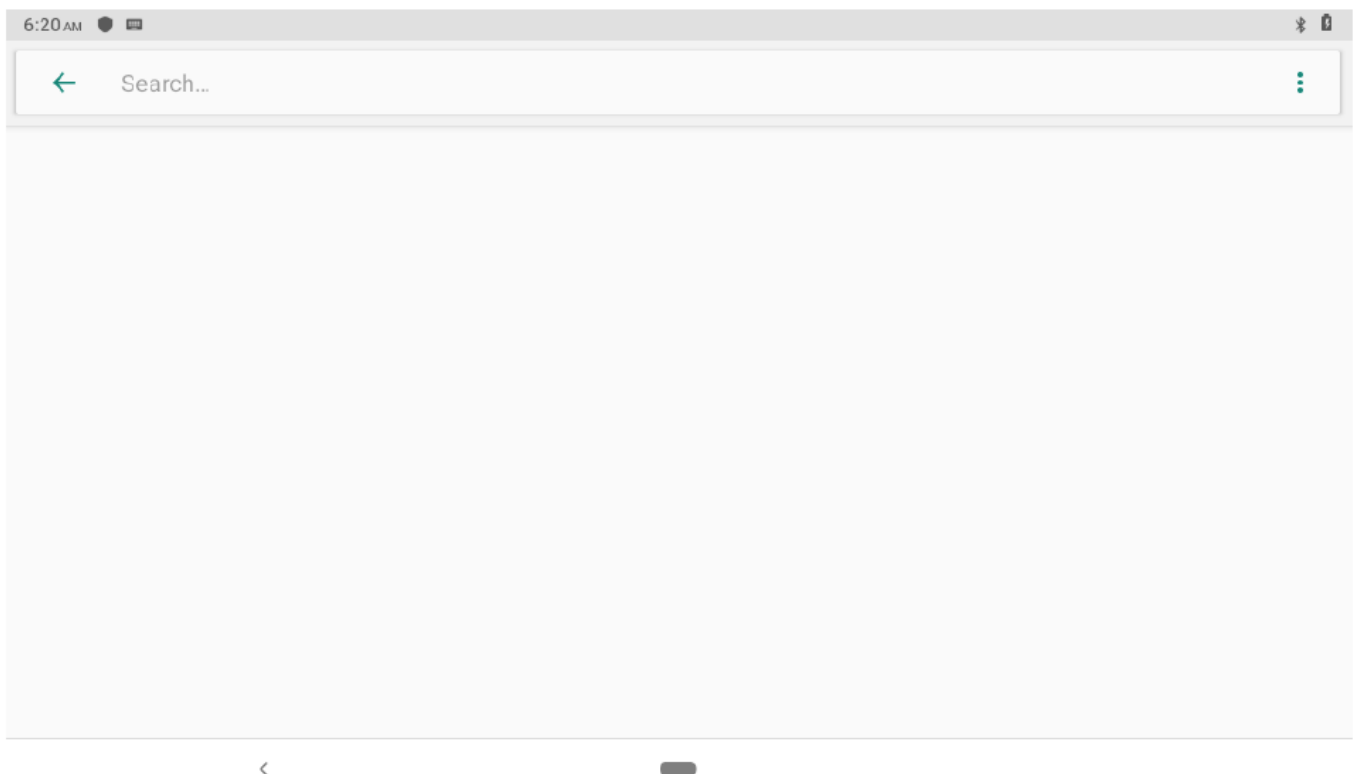

 - Click  the icon on the right top of the Picture, as Picture 4.1-1, You can search for what you want.

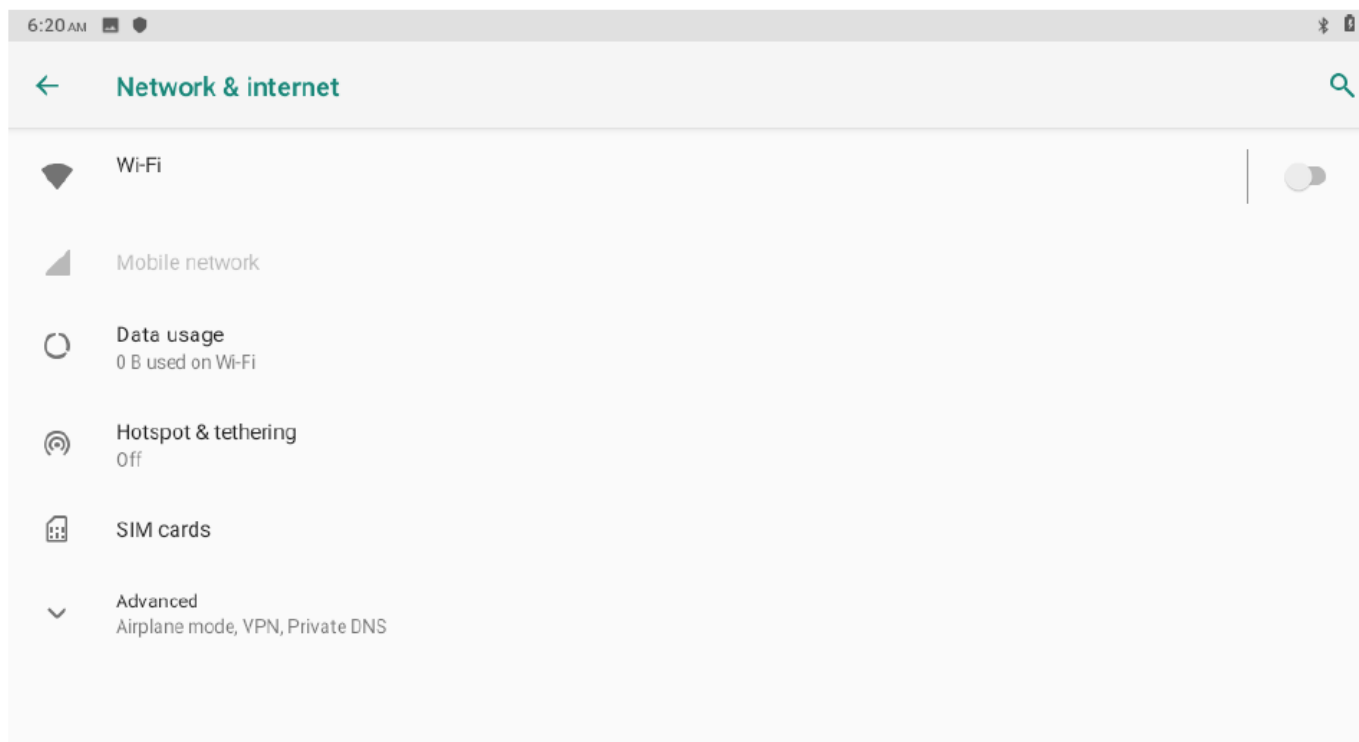

 - You can search for what you want as Picture 4.1-2

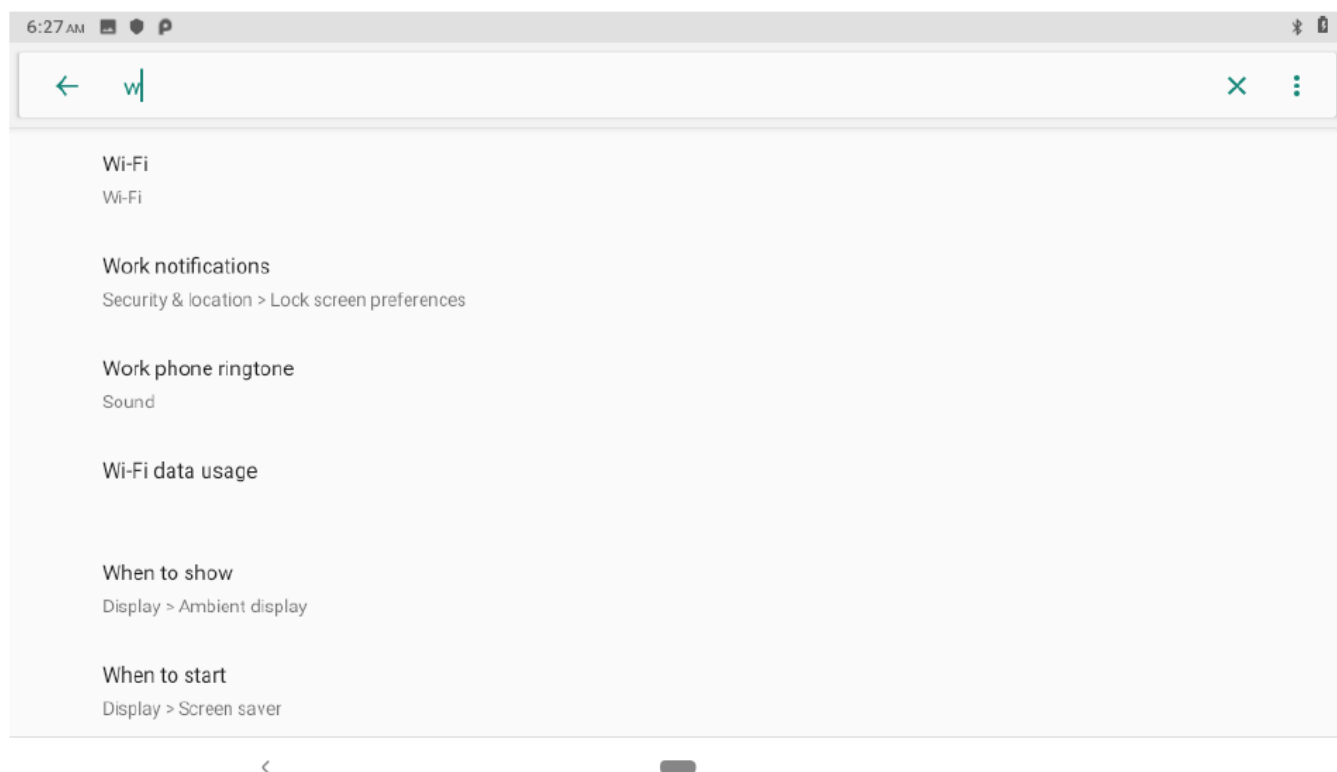


Picture 4.1-2

Connect Wi-Fi

1. In the main menu or interface, choose setting application procedure.
2. Click WLAN, open wifi, MID will automatically search the available Wifi wireless internet. As Picture 4.1-3
3. Choose the Wi-Fi internet you want to connect to, if it has a password, it will pop up the password window, enter

 
a password, and click connect.

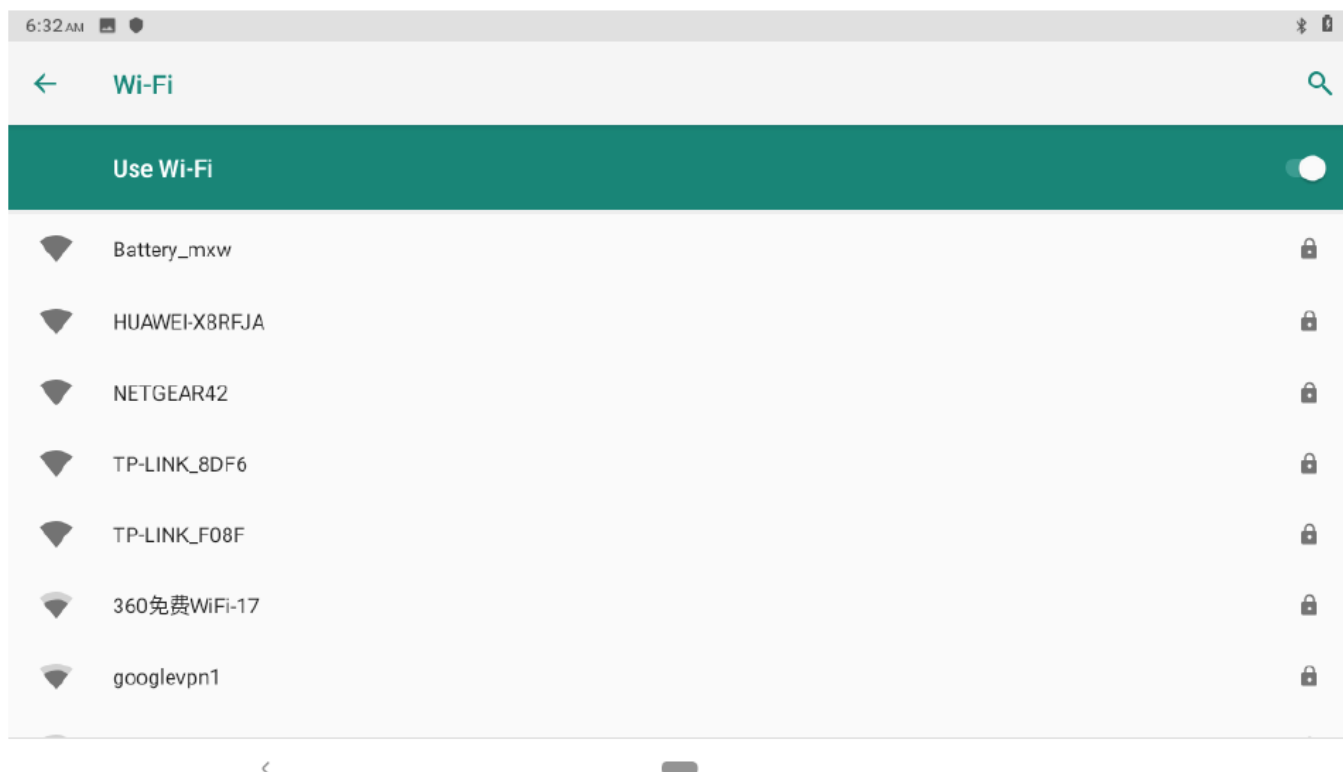

Picture 4.1-3


Add Network

 1. Click **Add network** the icon in the right top, as Picture 4.1-4

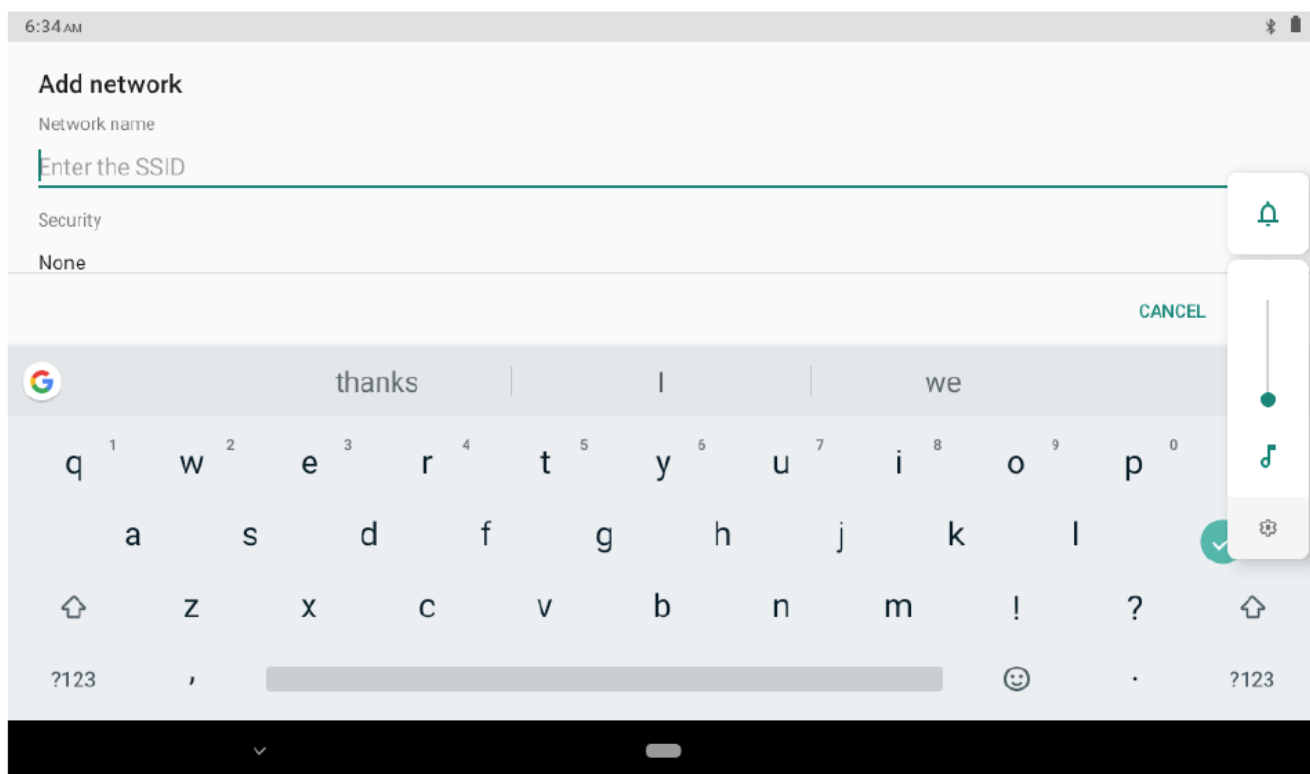

Picture 4.1-4

 2. Input network SSID, the wireless network name, and click save.
3. Click the user name already saved, and click connect to use the network, as Picture 4.1-5

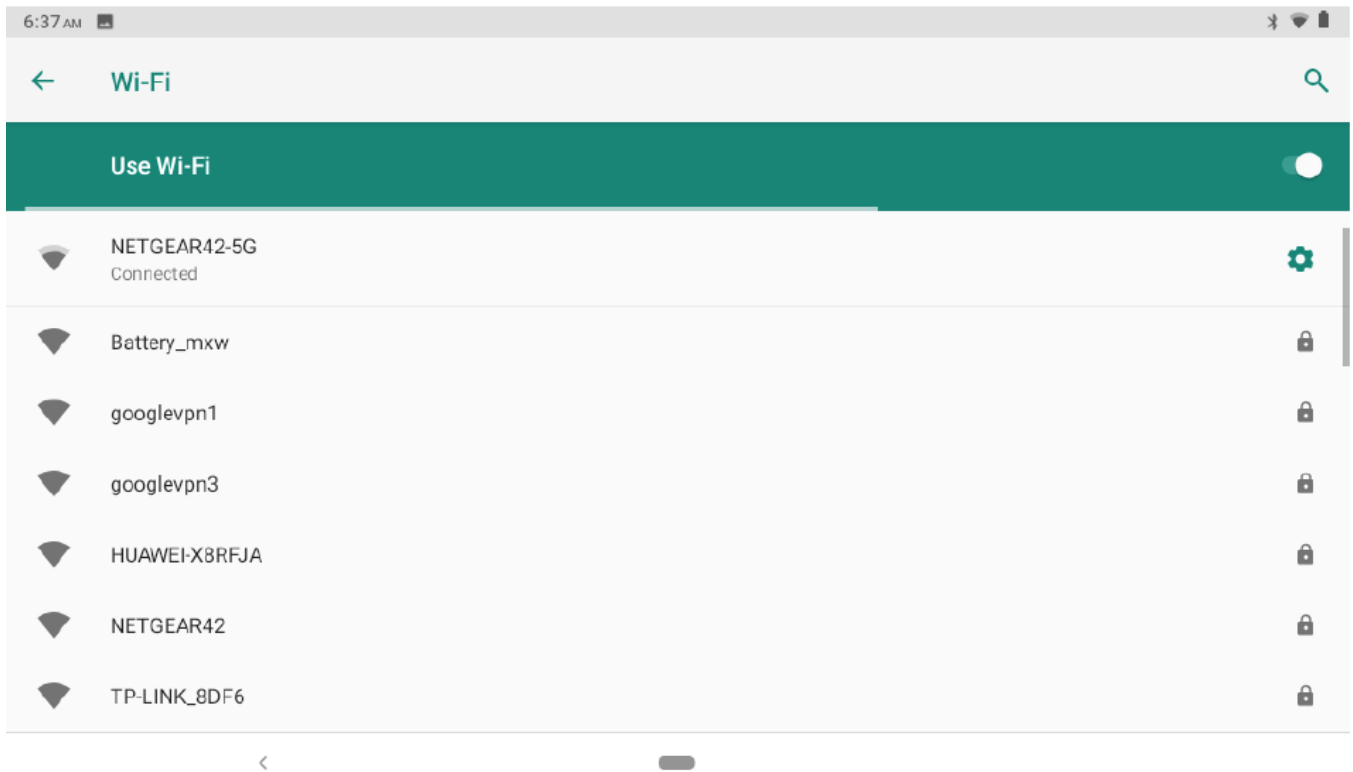


Picture 4.1-5

Network Notice

- If you open Network Notice, when the WIFI signal appears, the right bottom will remind you available WLAN network, as Picture 4.1-3

Check WIFI data usage

 Slide on the data usage page to find “Wi-Fi data usage” and click it, as Picture 4.1-8

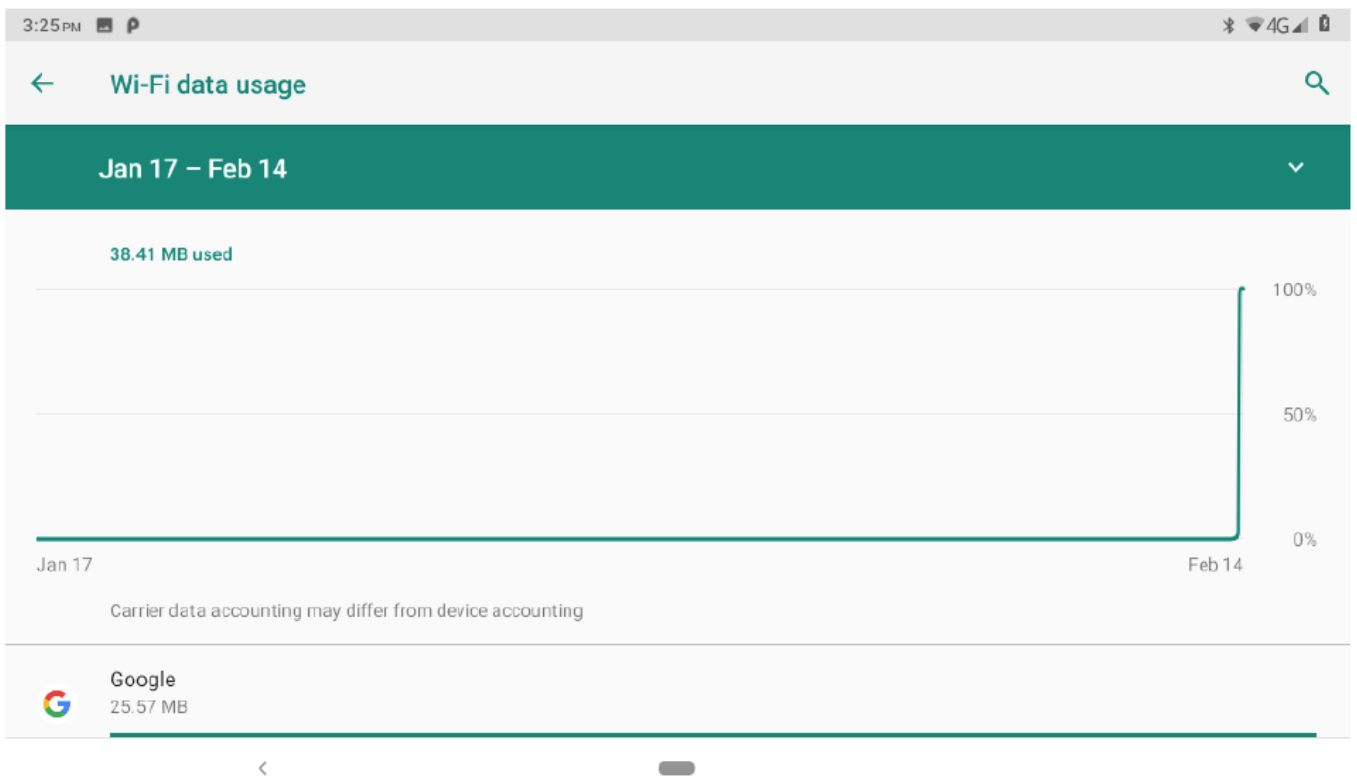


Picture 4.1-8


Network sharing and portable hotspots

Portable WI-FI hotspots

 
1. Click the setting application in the main menu.
2. Click more when wifi is well connected, open network share and portable hotspot

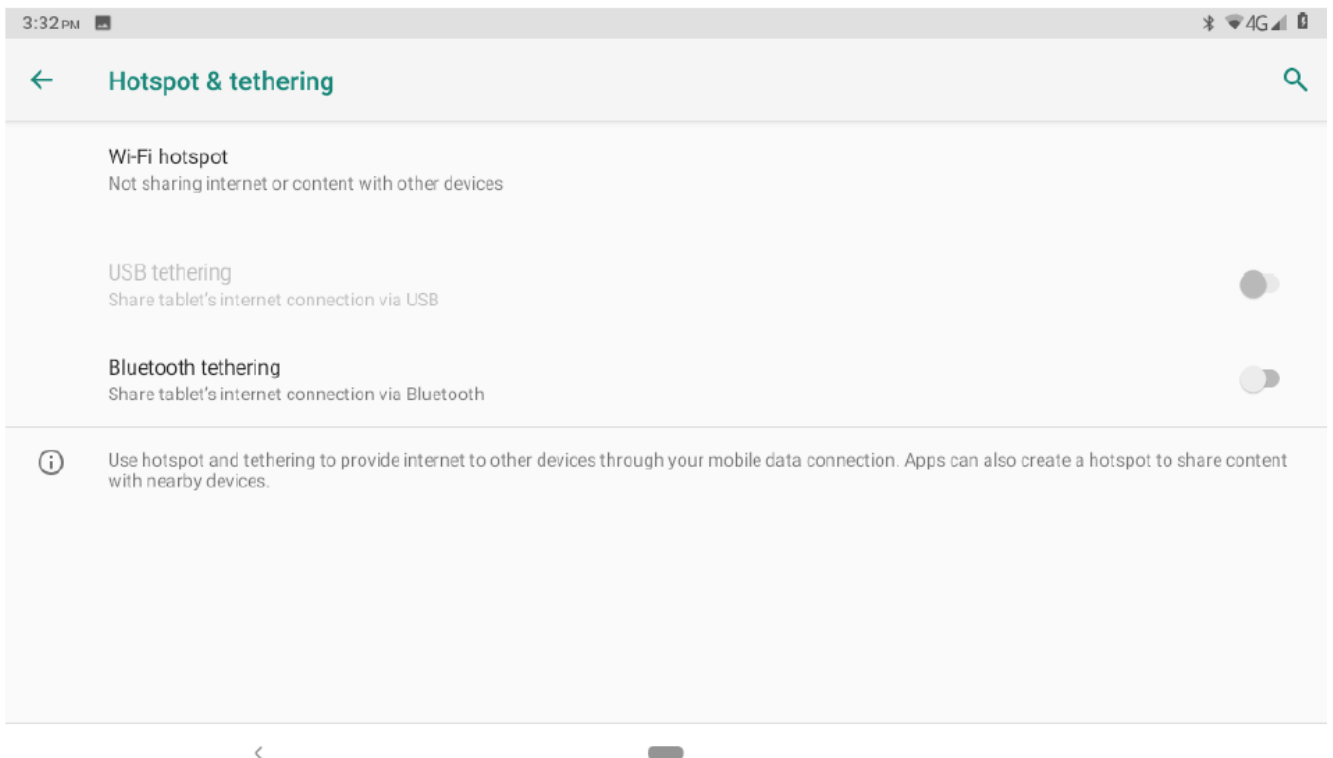

 3. Click Keep Wi-Fi hotspots on, and choose open time.
4. Return to the previous menu, open portable WLAN hotspots, click Set up WI-FI hotspots as Picture 4.1-10

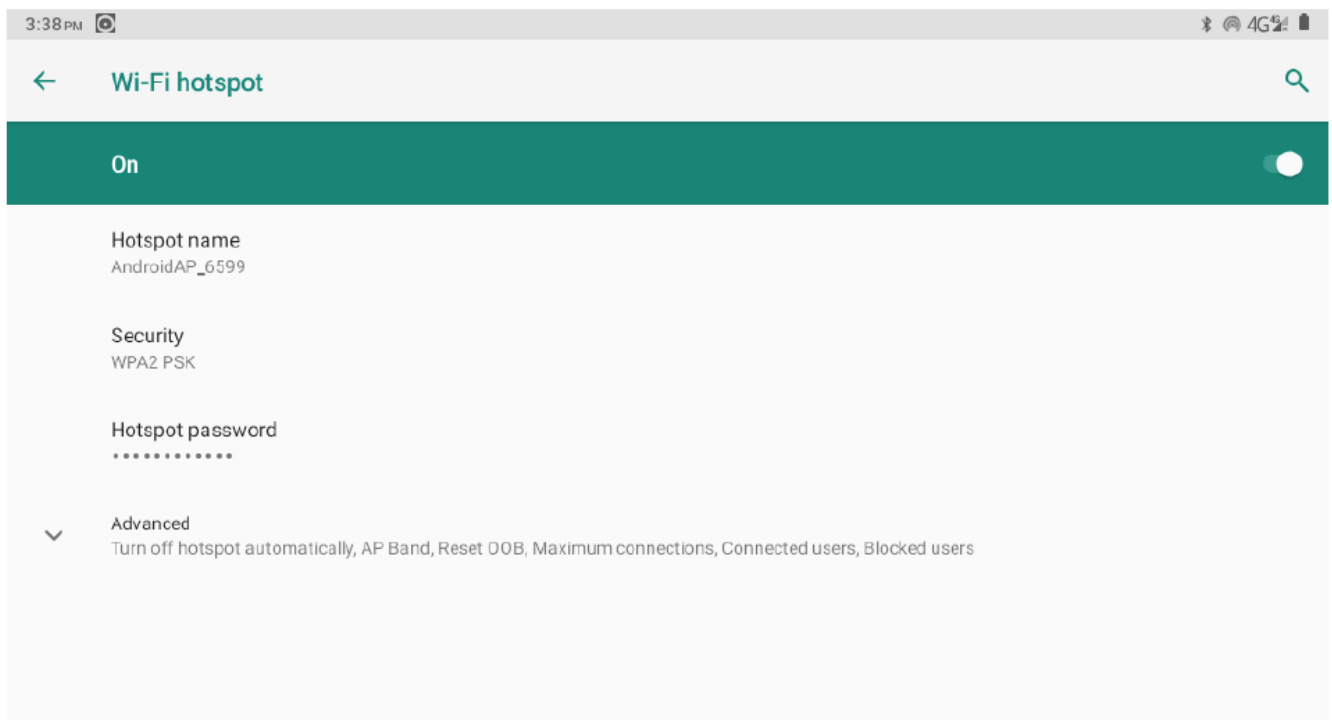


 5. Set the passwords you want to, Passwords should be more than 8 numbers.
6. Set Maximum connections, such as 1 user 2 users 3 users 4 users 5 users 6 users 7 users 8 users 9 users 10 users.

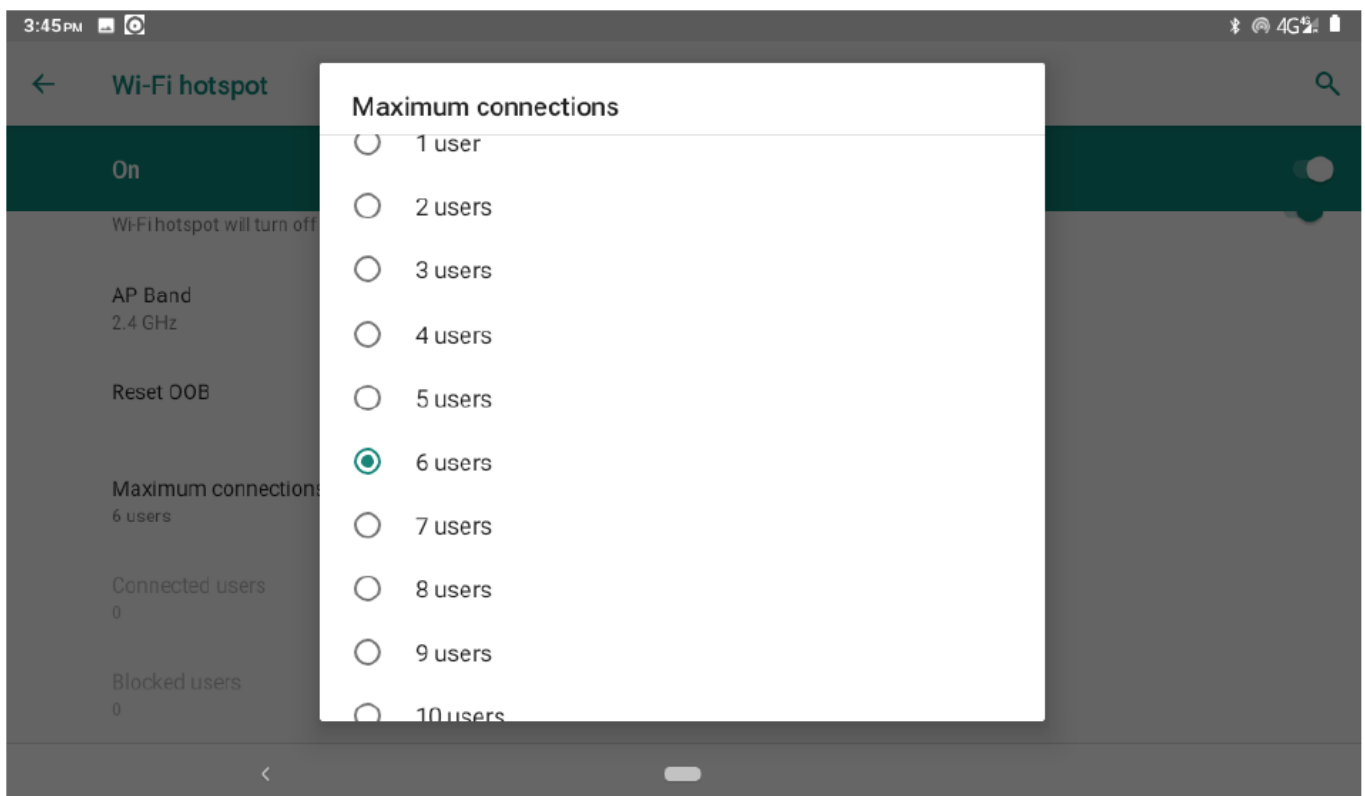


VPN

 - Open the VPN, and click add VPN network, as in Picture 4.1-11. Input name and server address, then save.

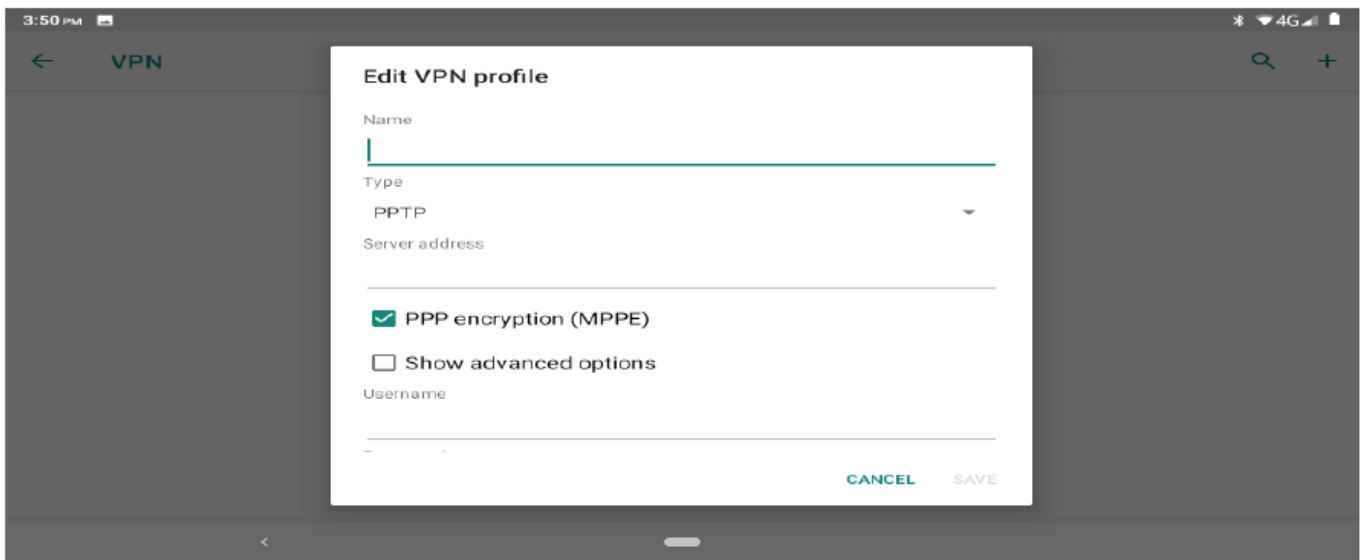

Picture 4.1-11

 - Click VPN, as in Picture 4.1-12, input the VPN user name and password, and click Connect.

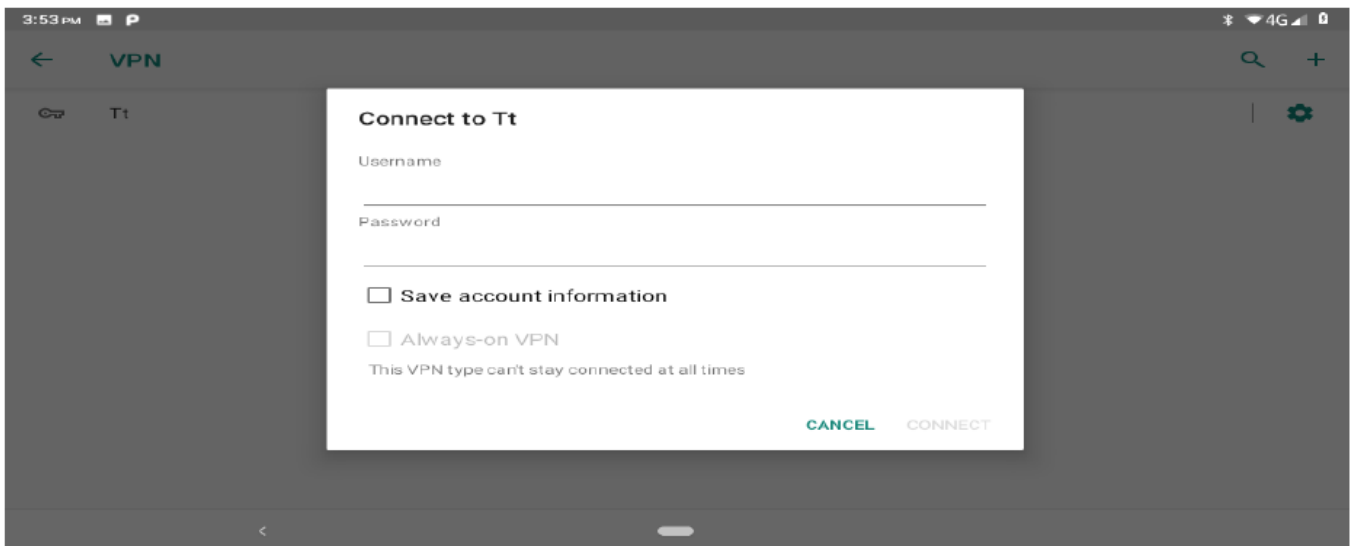

Picture 4.1-12

 
Airplane Mode

Aeroplane Mode can turn off WIFI and Bluetooth function quickly, when aeroplane mode is turned on, WIFI and Bluetooth can't get any signal, then aeroplane mode is turned off, WIFI and Bluetooth module will recover to a previous state.


Bluetooth


Bluetooth function operation

1. Click setting application in the main menu interface
2. Click Bluetooth and open it.
3. If somebody opens Bluetooth in your surroundings, click search device right above, and then MID will automatically search for the Bluetooth device nearby. As picture 4.2-1

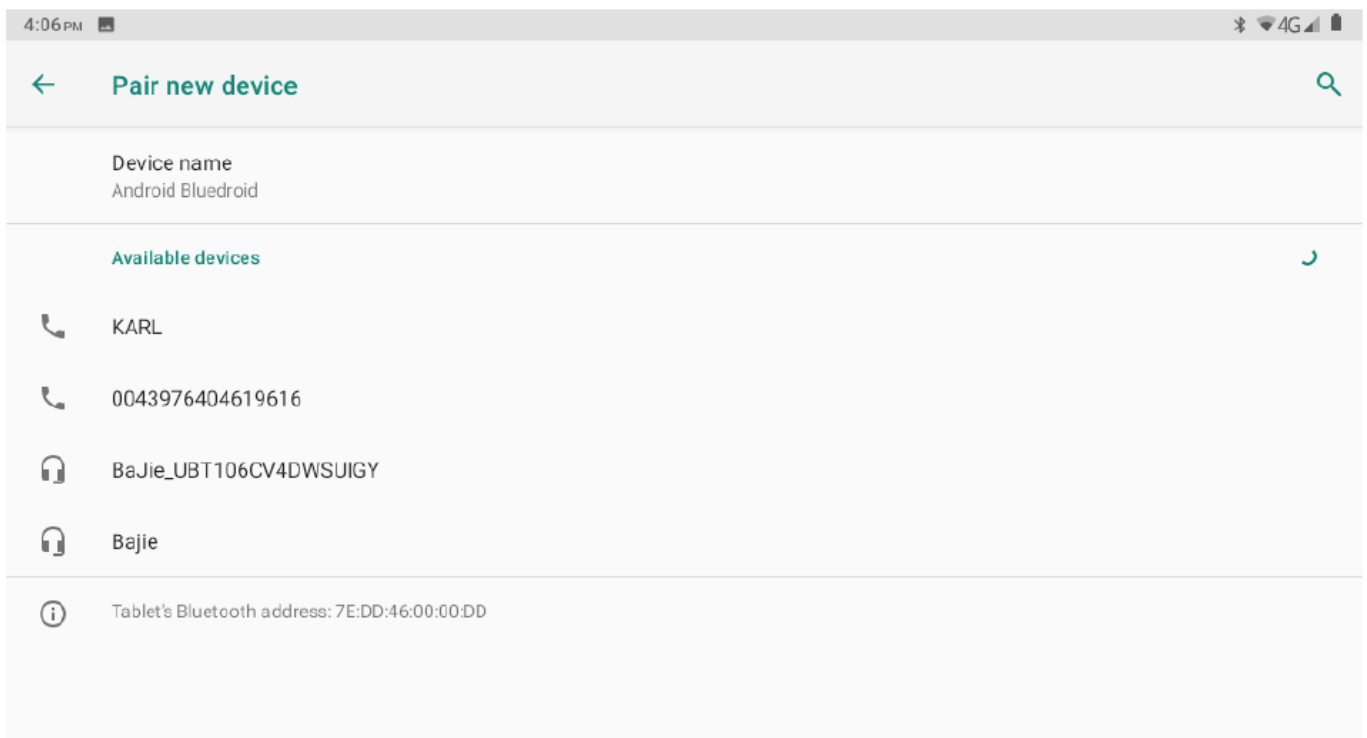

Picture 4.2-1

 
- Click the available Bluetooth device, it will pop up the request window, enter into related password, and match the device to connect.
- After matching successfully, choose the operation you want to, and click  to enter into Picture 4.2-2.

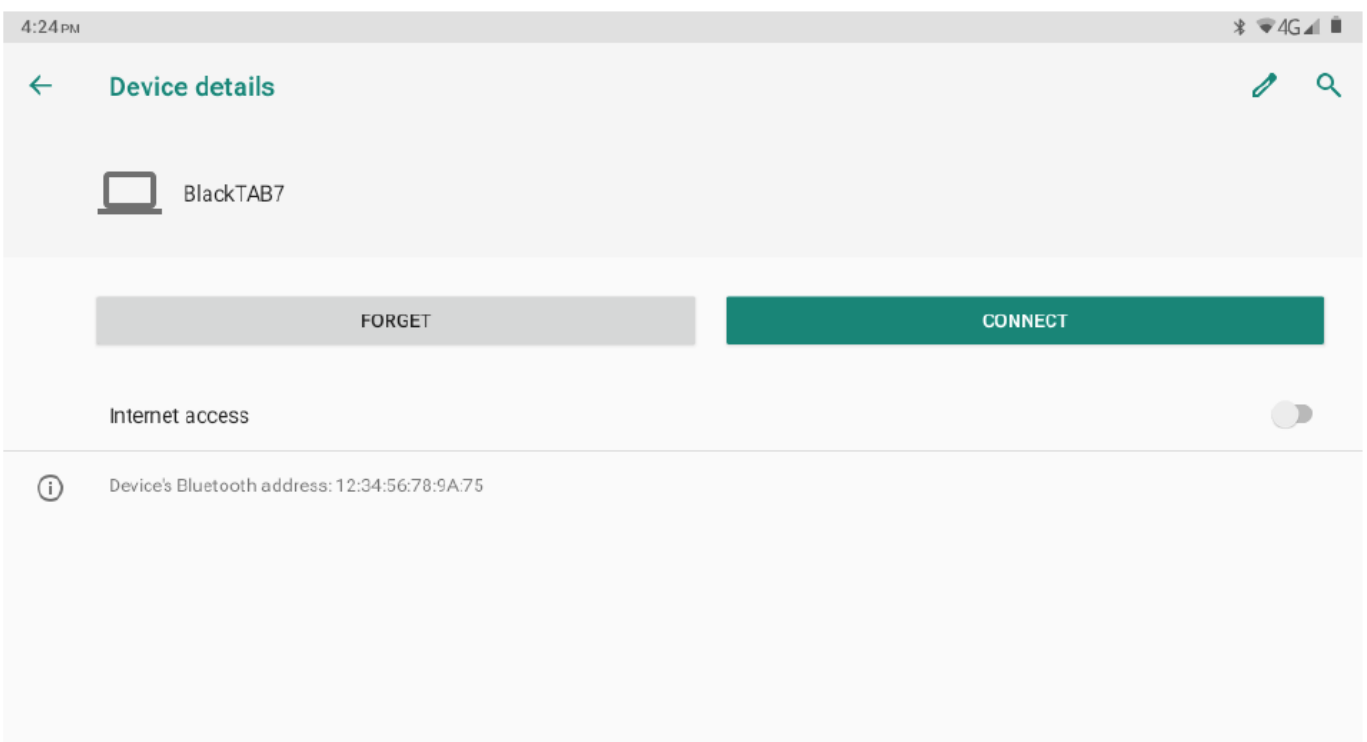

Picture 4.2-2


Bluetooth setting

 1. Rename tablet Click Connected devices new device-Device name as Picture 4.2-3, select rename tablet, you can rename it as you want.

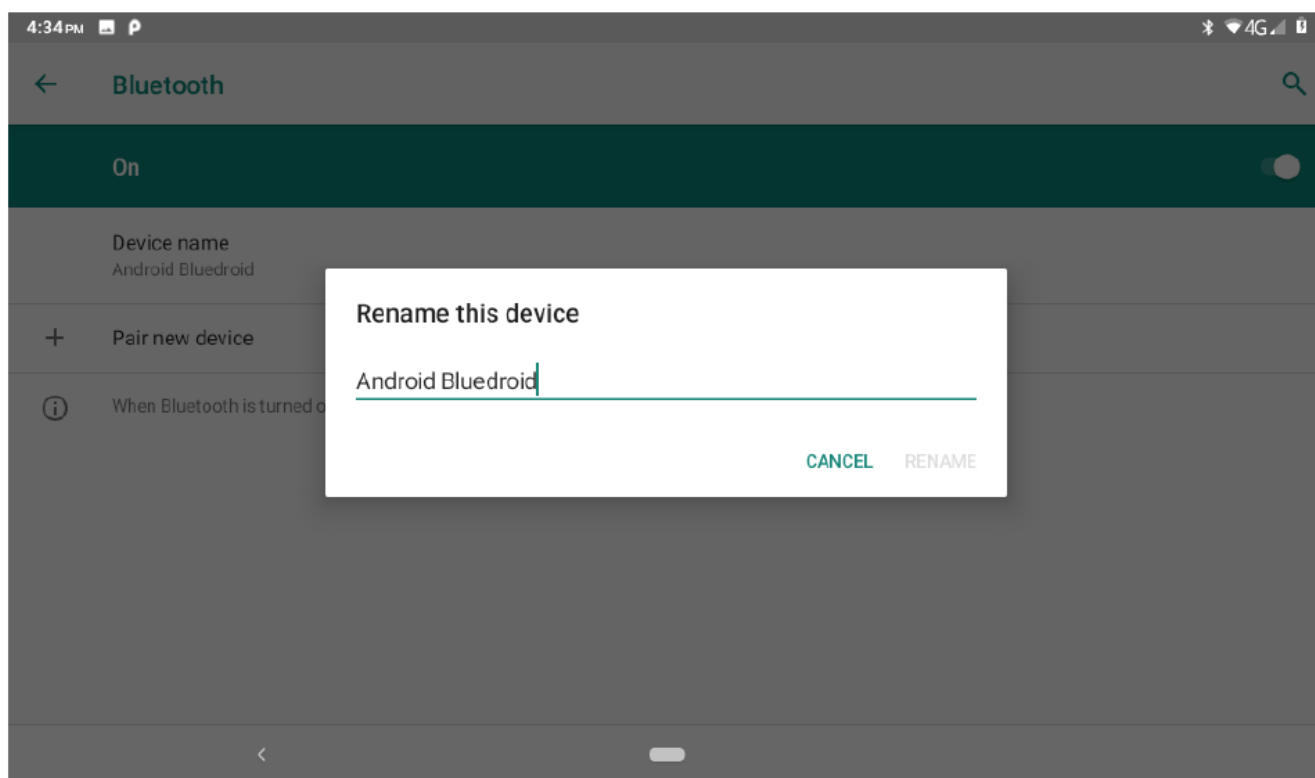

Picture 4.2-3

 2. Display the file you received Choose to display the file you received in Picture 4.2-4, you can view download and upload files.

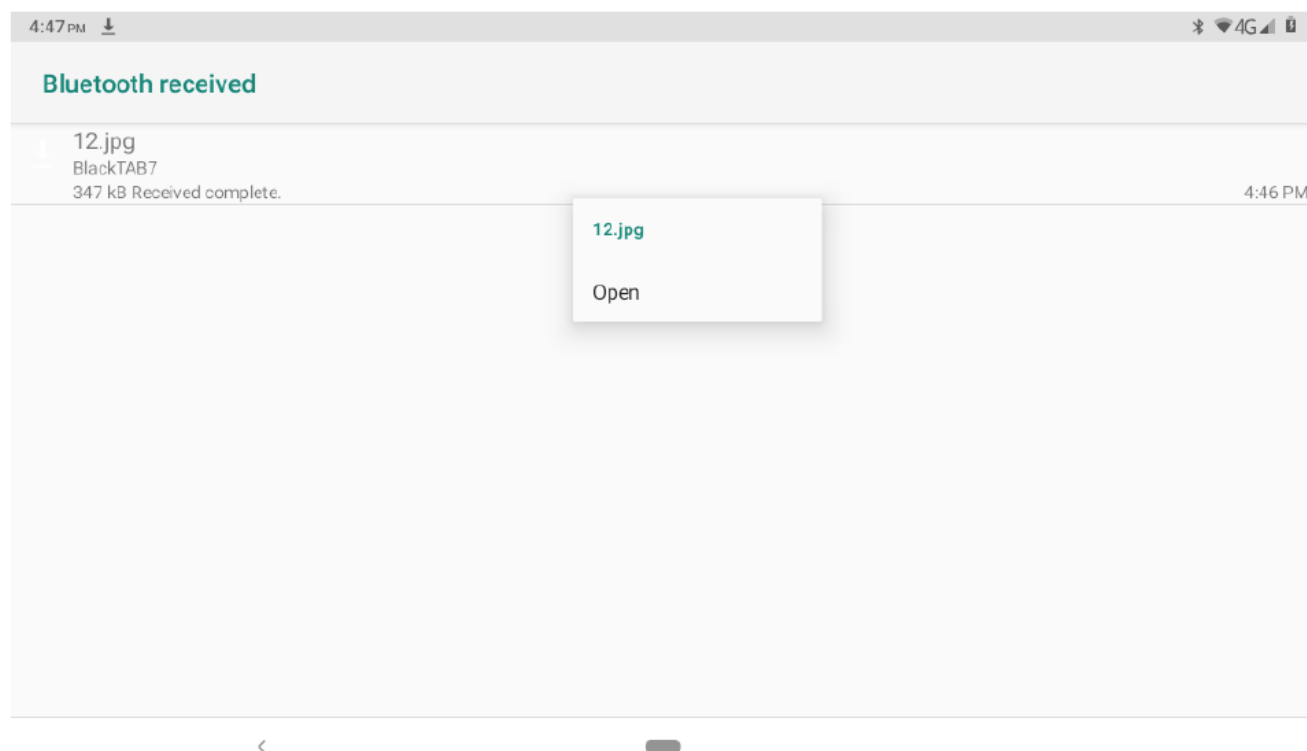


Picture 4.2-4

Apps & notification

APPS

 
1. Click setting application in Apps.
2. Select an application, after entering, you can manage and delete the installed application. (As Picture 4.3-1)

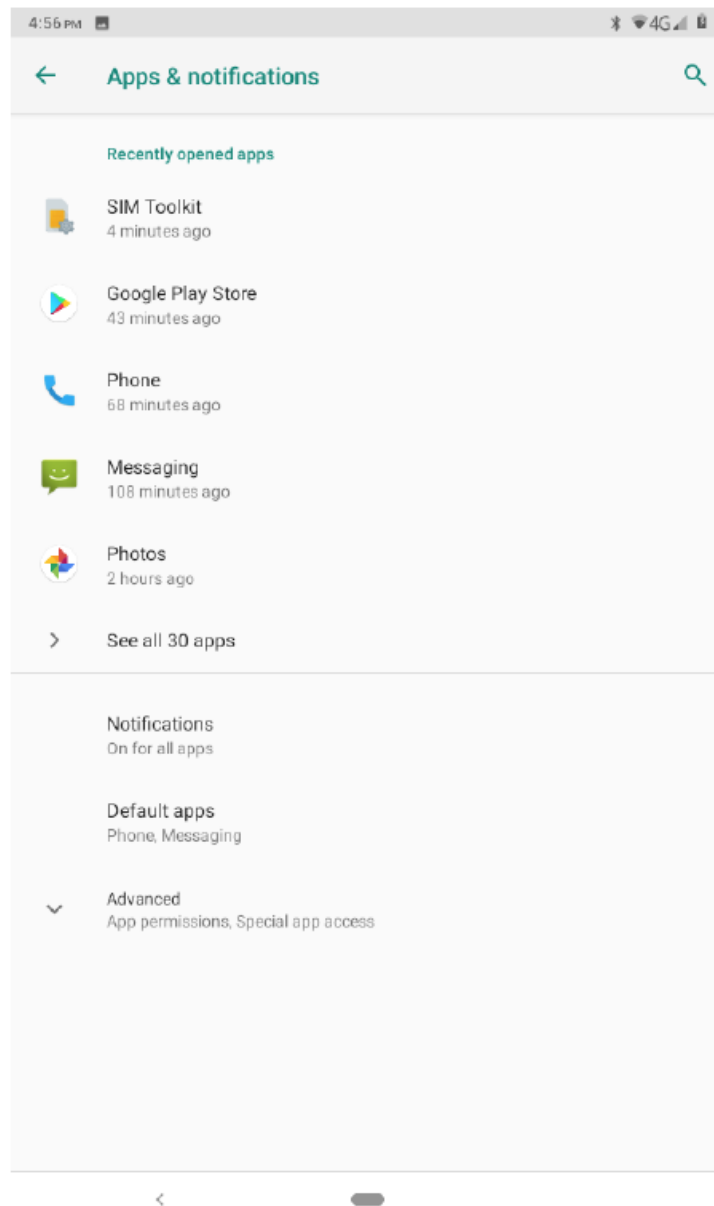

Picture 4.3-1


Notification

 1. Open settings, click Notification, as Picture 4.3-2

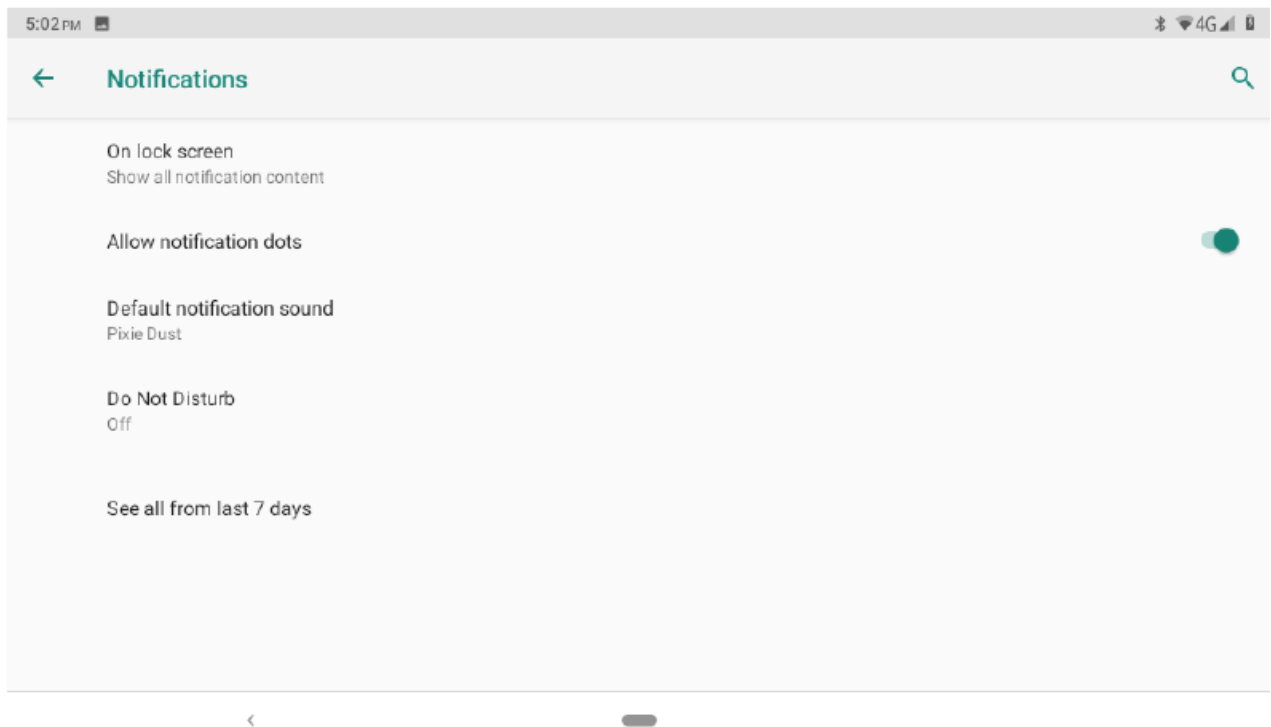

Picture 4.3-2

 
2. Click on any app icon in the list, then you can choose to show notifications silently, block all notifications or not silence or block, as Picture 4.3-3

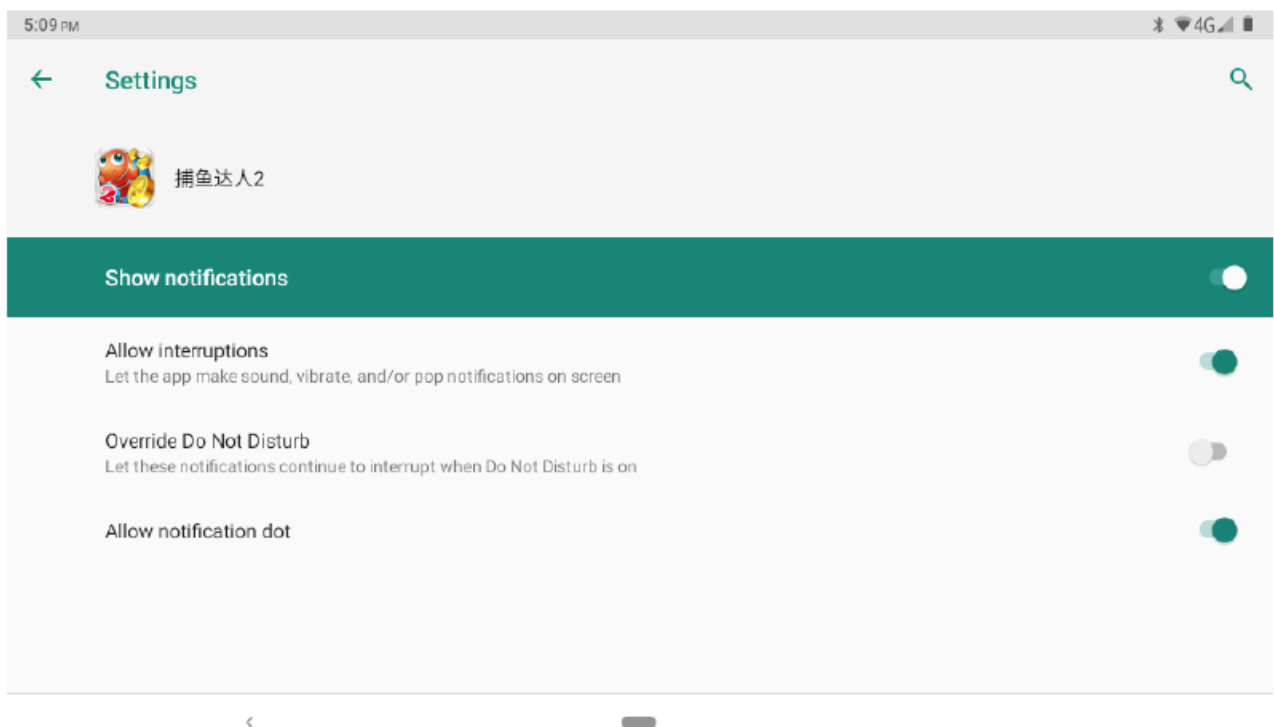

Picture 4.3-3

Battery

 - Click setting function, select battery, you can view the battery situation, as Picture 4.4-1

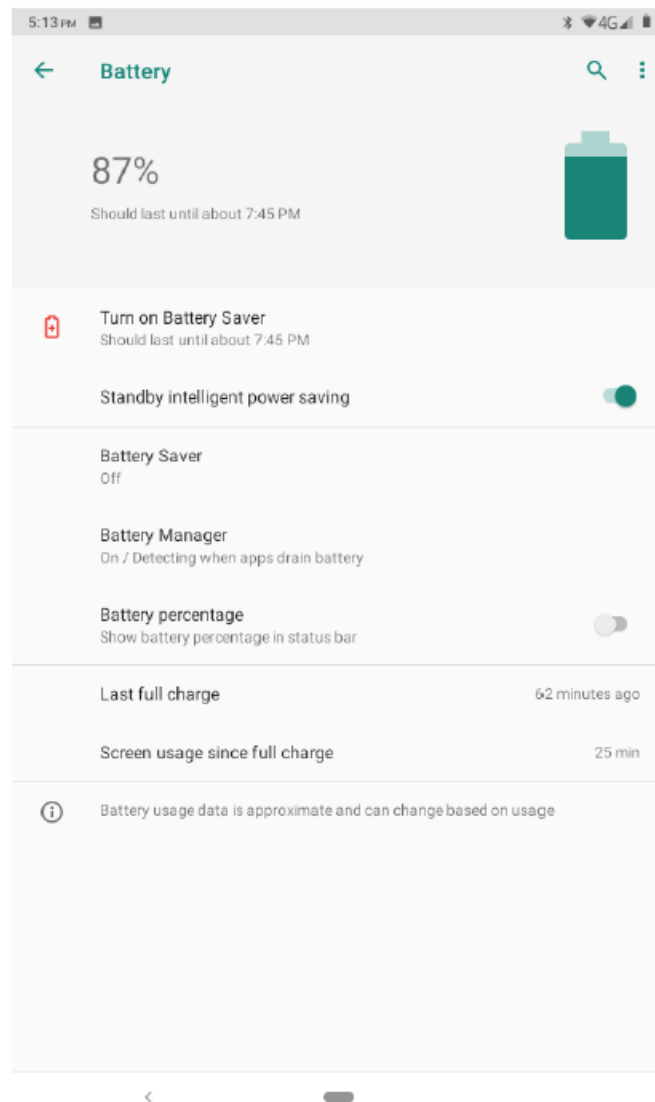


Picture 4.4-1

Display

Night Light Mode

 
1. Click Setting application procedure.
2. Click display, choose Night Light Mode,
3. Click the “Turn on Now” button and it will go into night mode and the backlight turns red, as Picture 4.5-1

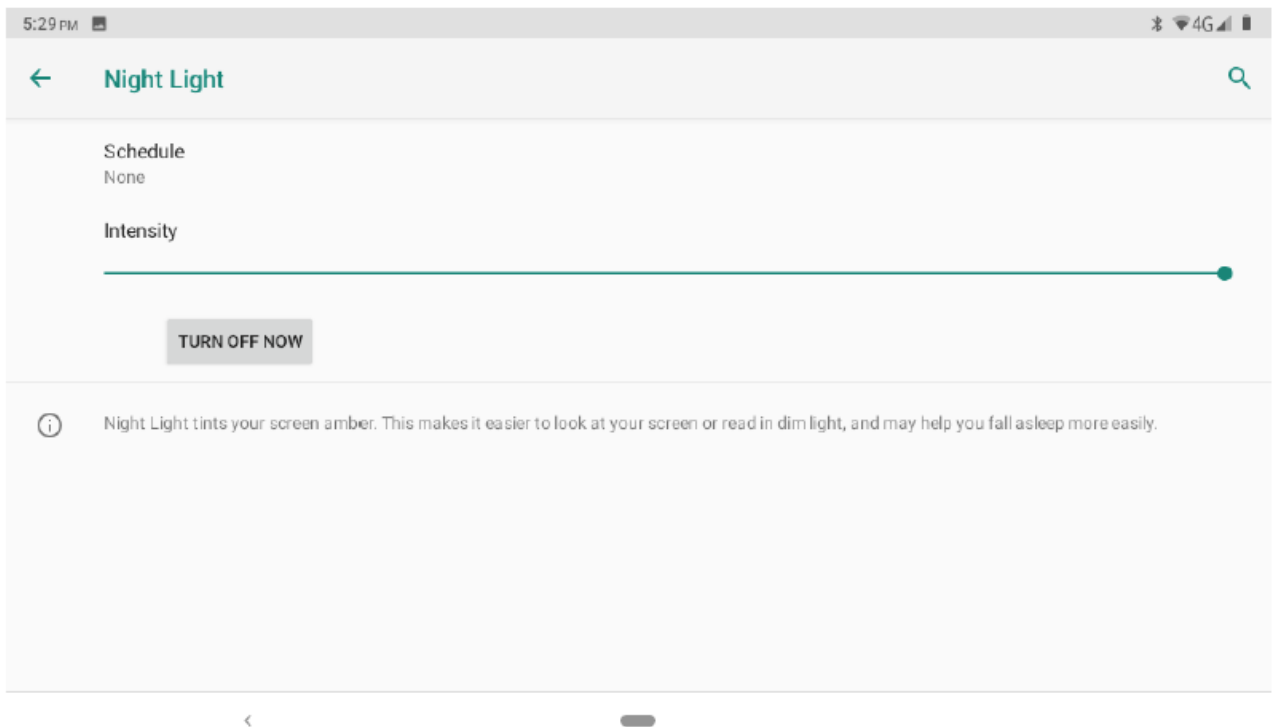

Picture 4.5-1

Wallpapers

 1. Click the setting application.
2. Click display, click wallpaper.
3. You can choose different wallpapers as you like—gallery —photos— wallpapers (system defect), as Picture 4.5-2

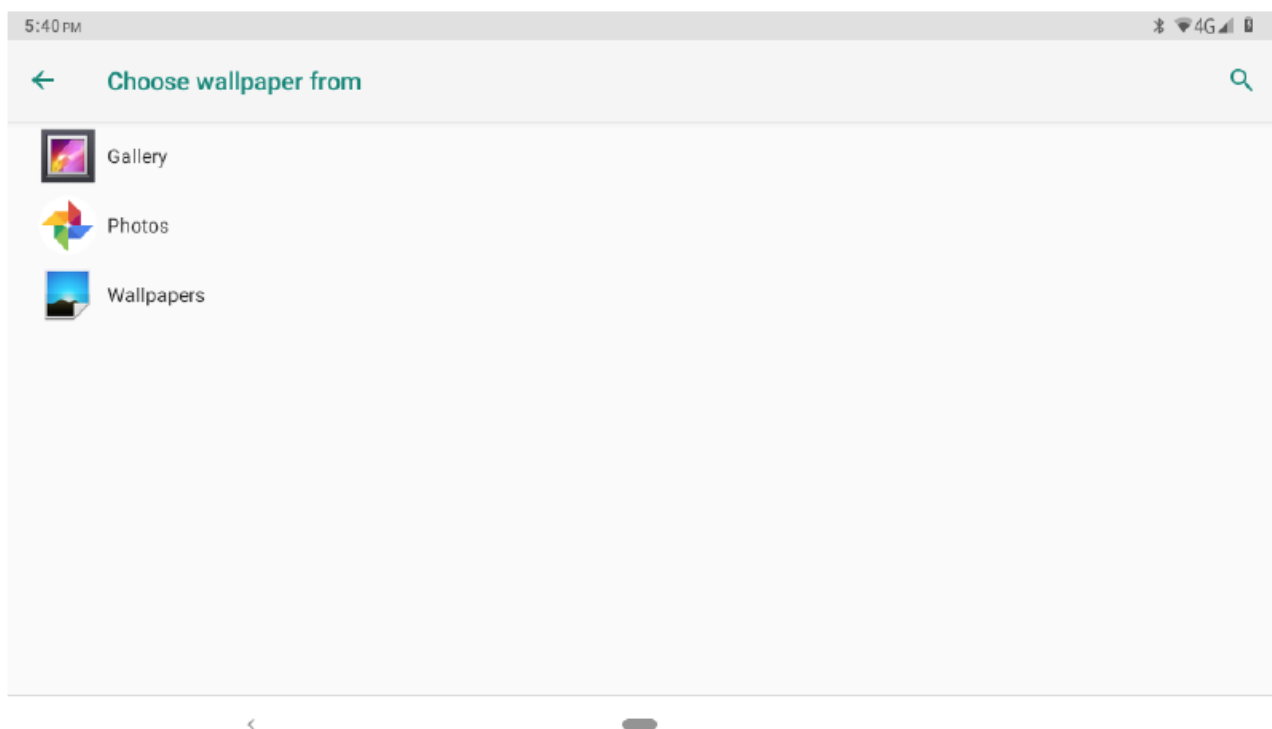


Picture 4.5-2

Auto rotation

- The system defaults to open auto-rotation, when it is turned off, the system won't rotate the MID screen by G-sensor.

Sleep

 
1. Click the setting application.
2. Click display.
3. Click sleep.
4. Set the sleep time as you want, as Picture 4.5-3

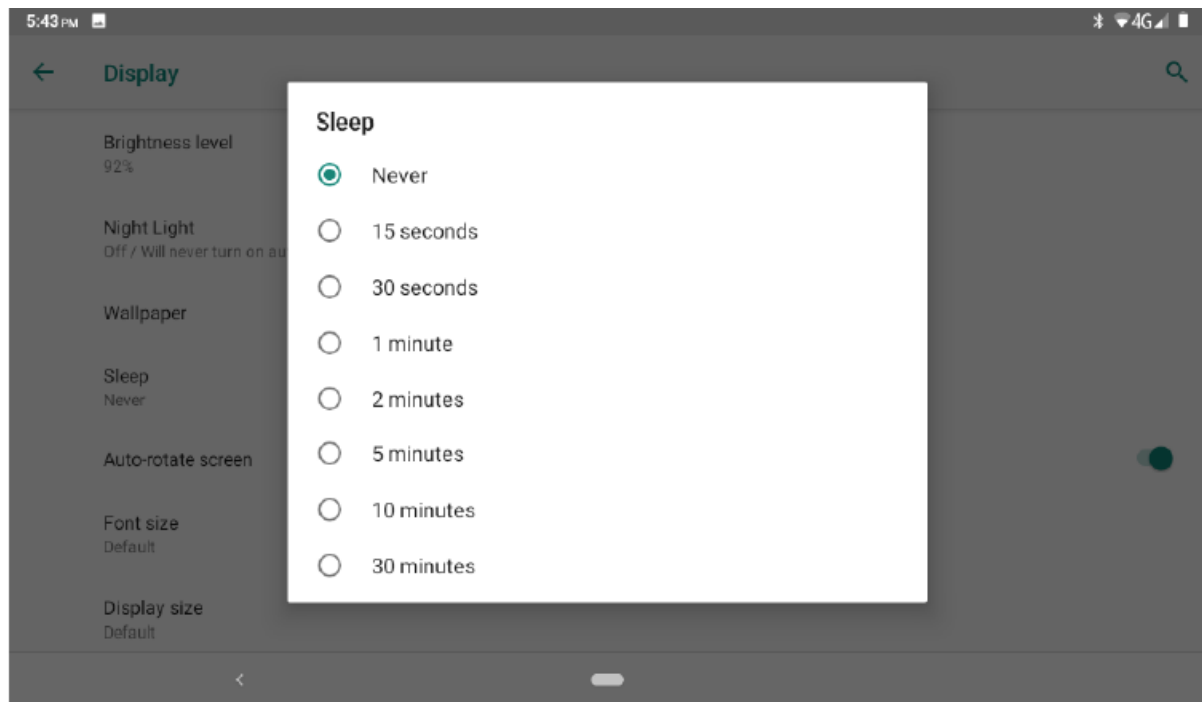

Picture 4.5-3

Font size

 
- Click font size to adjust the size of the text, as Picture 4.5-4

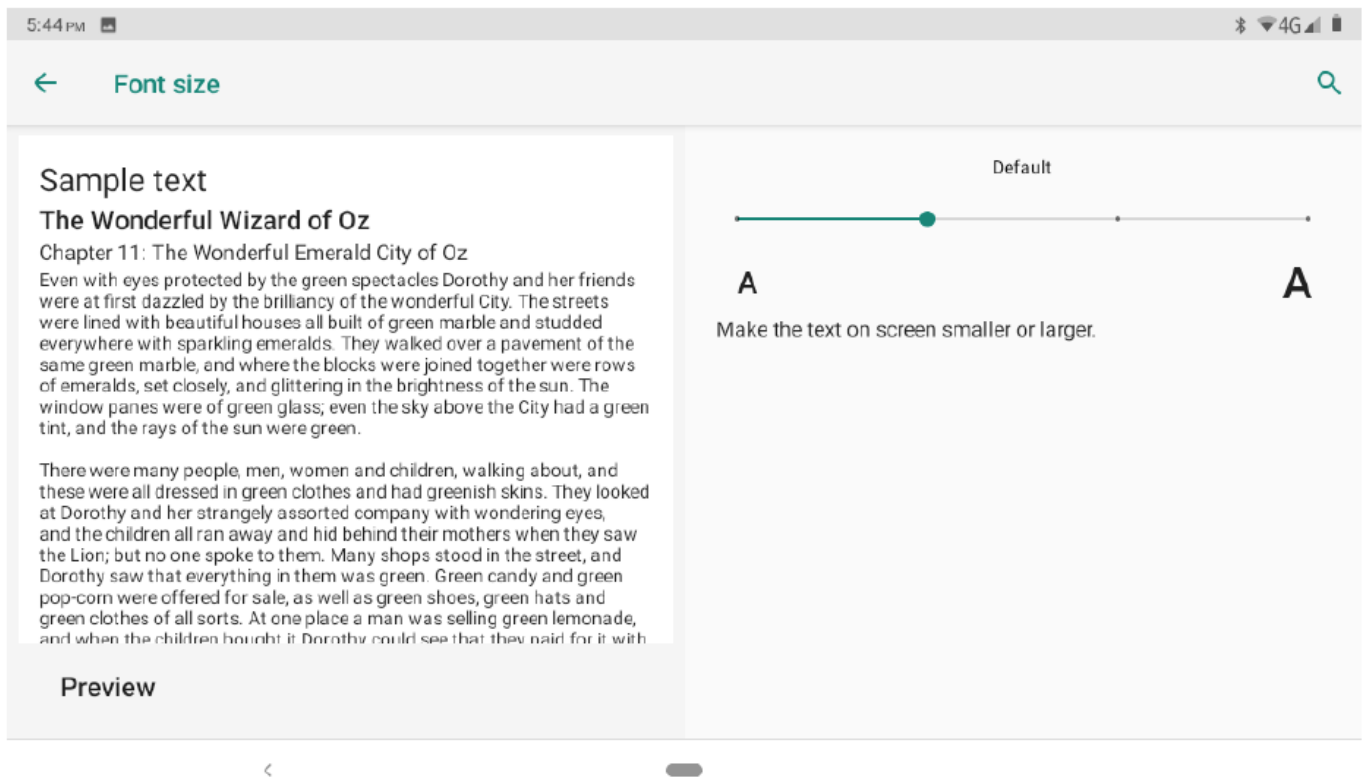

Picture 4.5-4

Display size

 
- Click Display size to adjust the size of the icons, as Picture 4.5-5

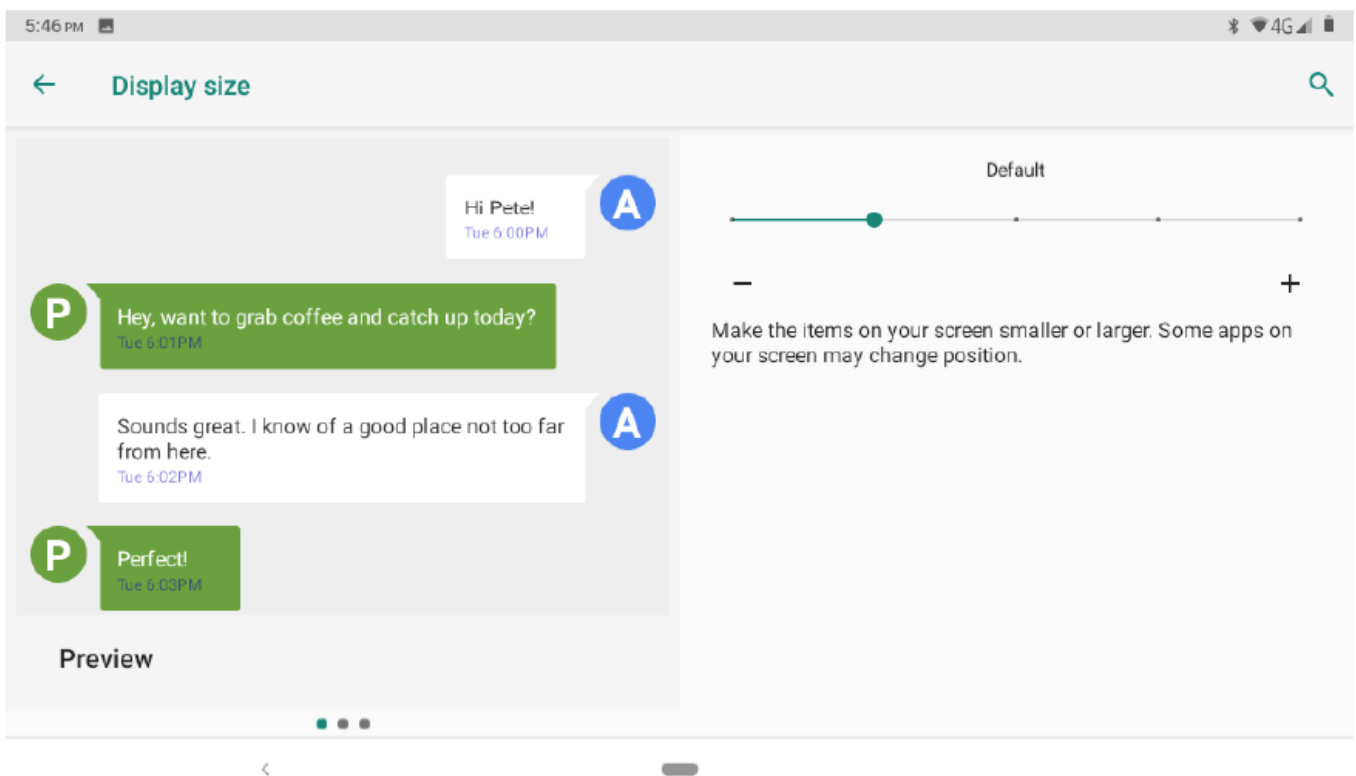

Picture 4.5-5

Screen saver

 
1. Click the setting application.
2. Click display.
3. Click Screen saver.
4. Set the screensaver as you want, as Picture 4.5-6

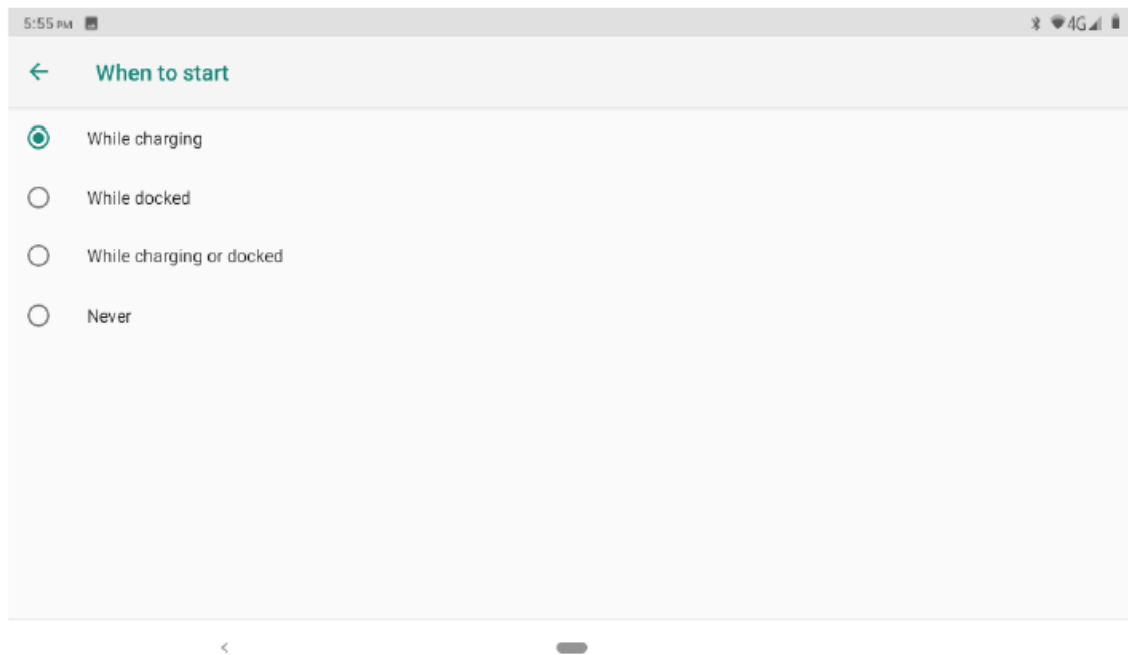

Picture 4.5-6

Device theme

 
- You can turn this feature on by selecting the “Dark” option in Settings> Display > Advanced > Device theme to dim or brighten Android devices,as Picture 4.5-7

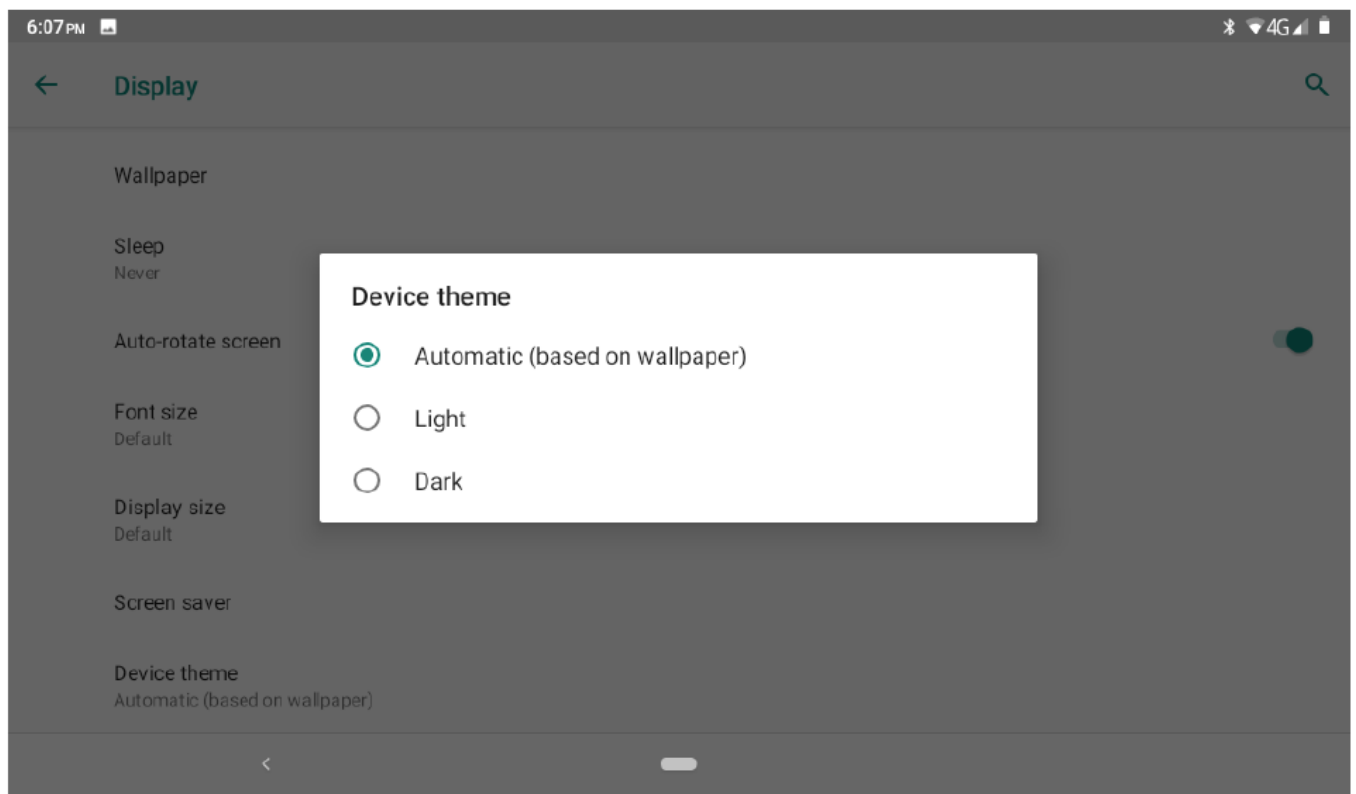

Picture 4.5-7

Sound

 - Open settings, click Sound, as Picture 4.6-1

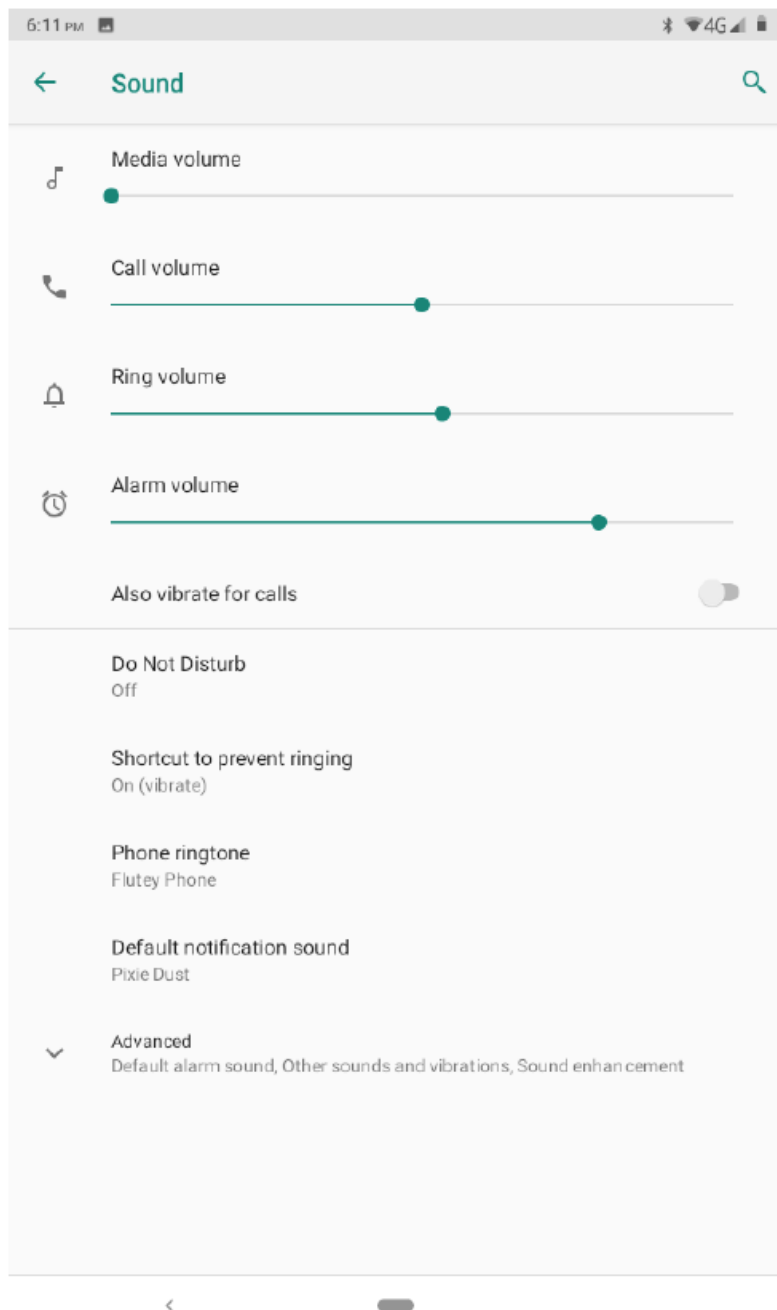

Picture 4.6-1


1. Vibrate In picture click Also vibrate for calls, MID will vibrate when someone calls you.
2. Volume In picture click volume, you can set ringtone, media, and alarm volume, as Picture 4.6-2



Picture 4.6-2

Shortcut to prevent ringing

 - Incoming calls can be controlled by pressing and holding the power and volume buttons together, as Picture 4.6-4

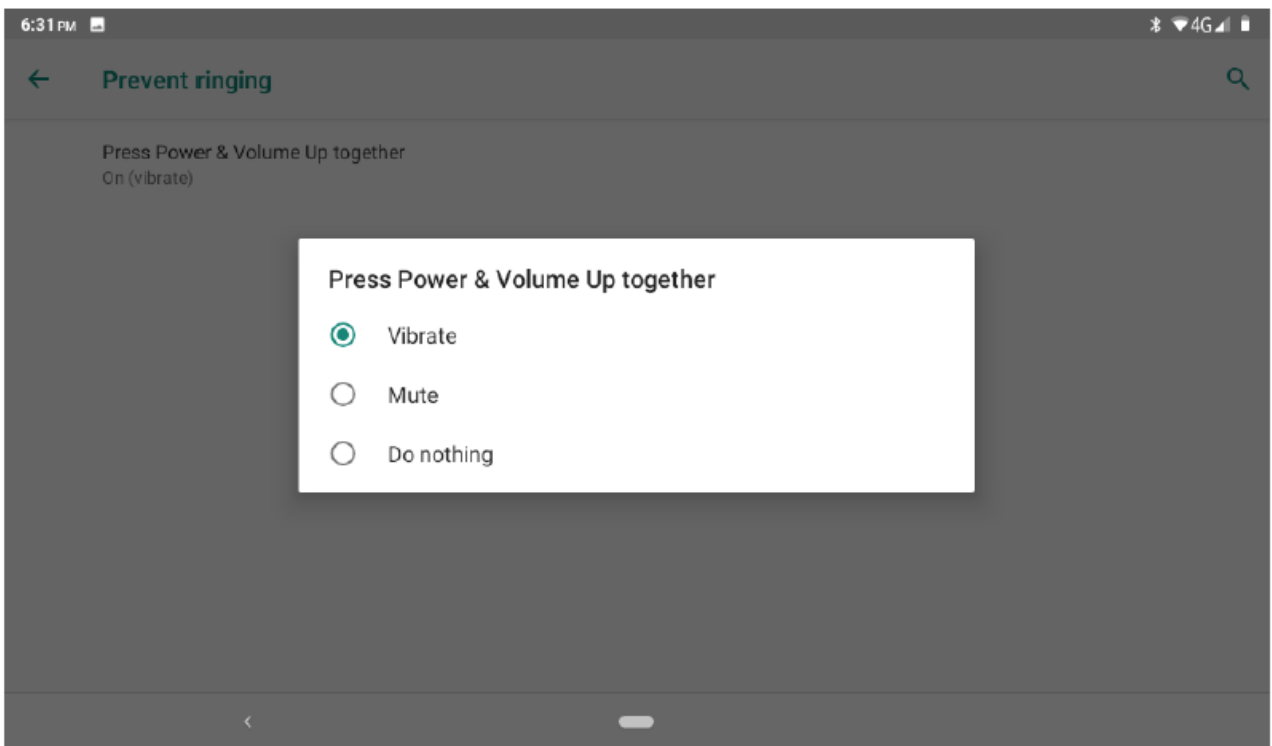

Picture 4.6-4

 
Charging sounds

- Open the setting function, and click the charging sounds button, There will be a prompt sound output when the

charging line is inserted


Storage

- Open setting function, click Storage, as Picture 4.7-1

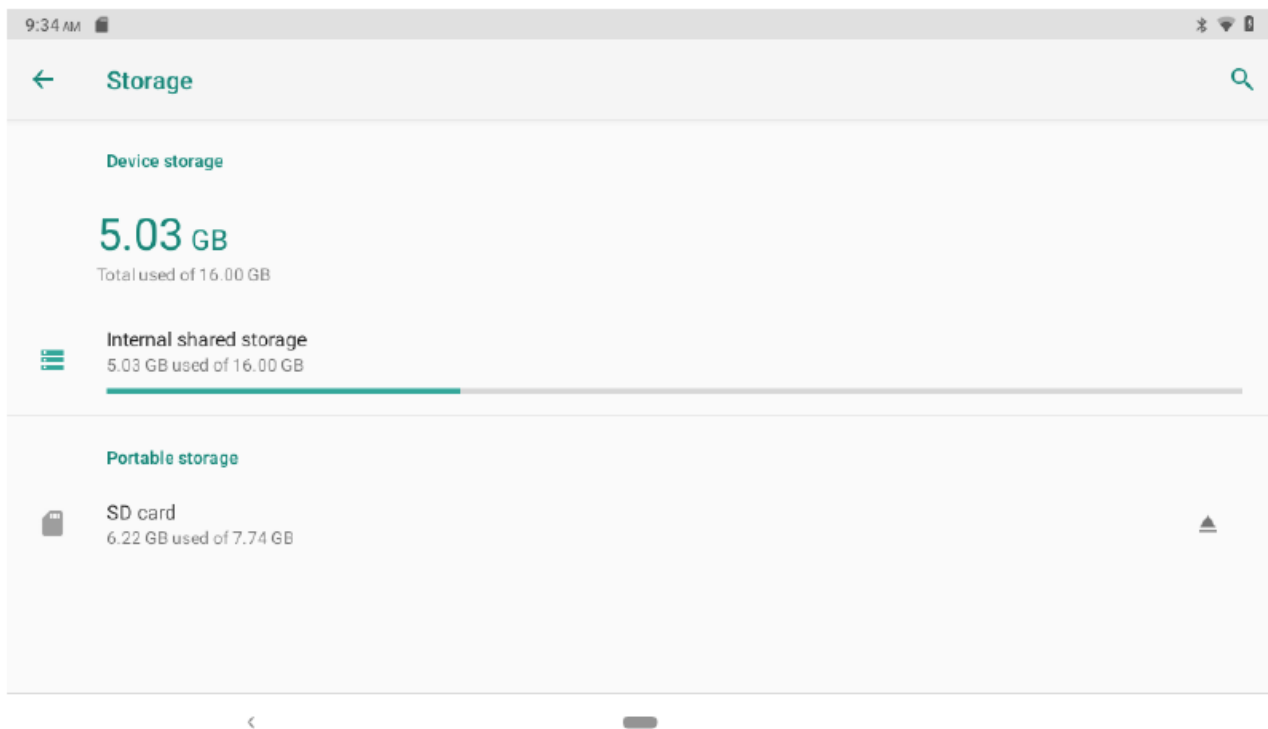

Picture 4.7-1

 
1. Internal storage is MID local NAND storage, as in Picture 4.7-2, if you need to check the storage content, you can check it in the main menu.

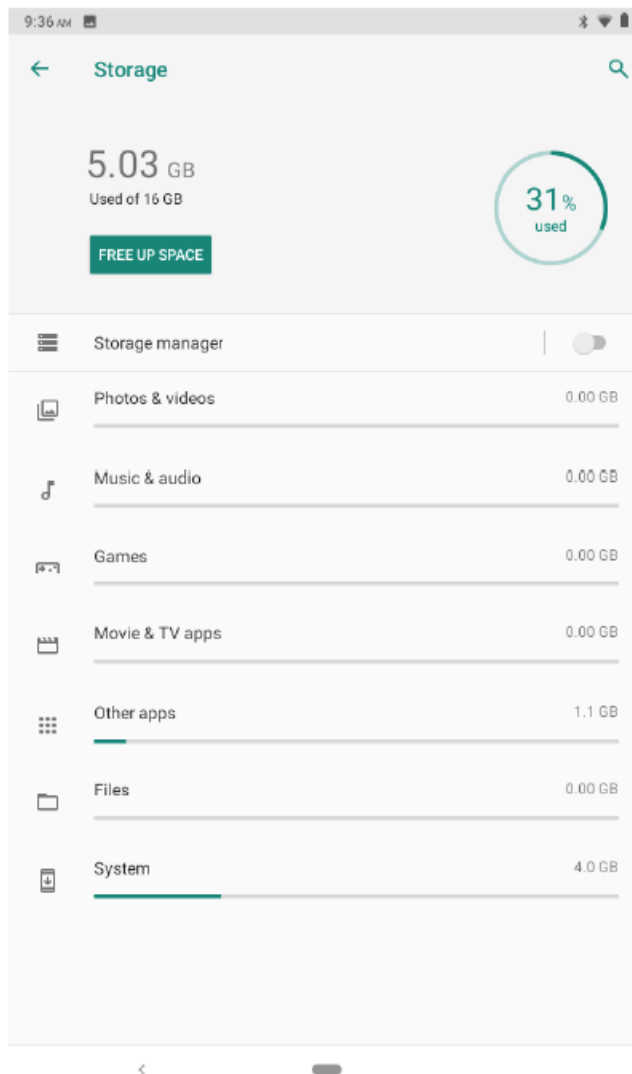

Picture 4.7-2

Storage manager

 
- Storage manager is mainly used to help release storage space, used to delete the device above the backup photos and video files, you can choose the following way to manage, as Picture 4.7-3

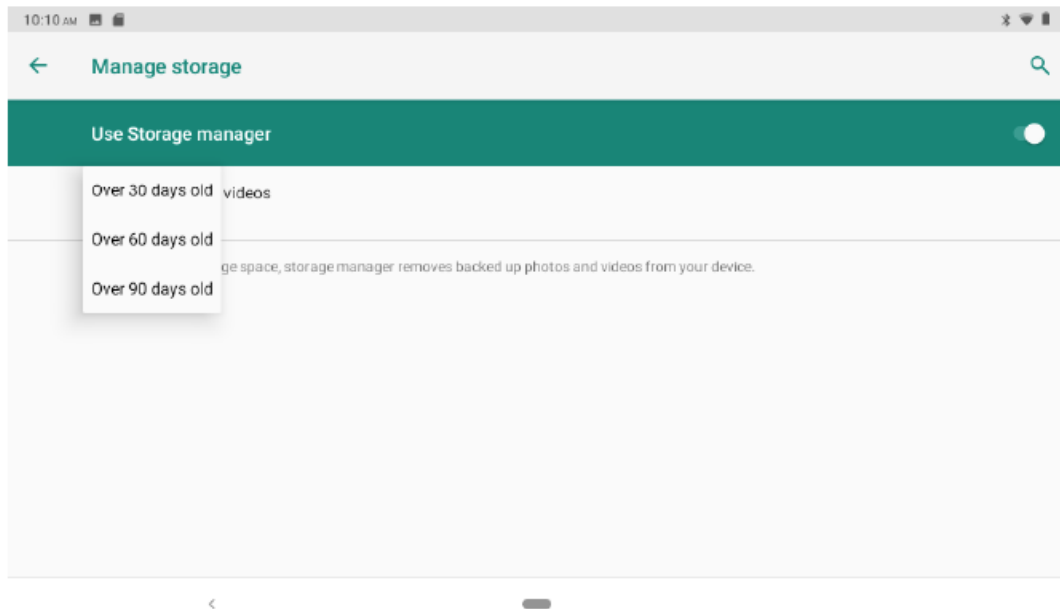

Picture 4.7-3


SD card

 - Click SD card to check the storage content, as Picture 4.7-4

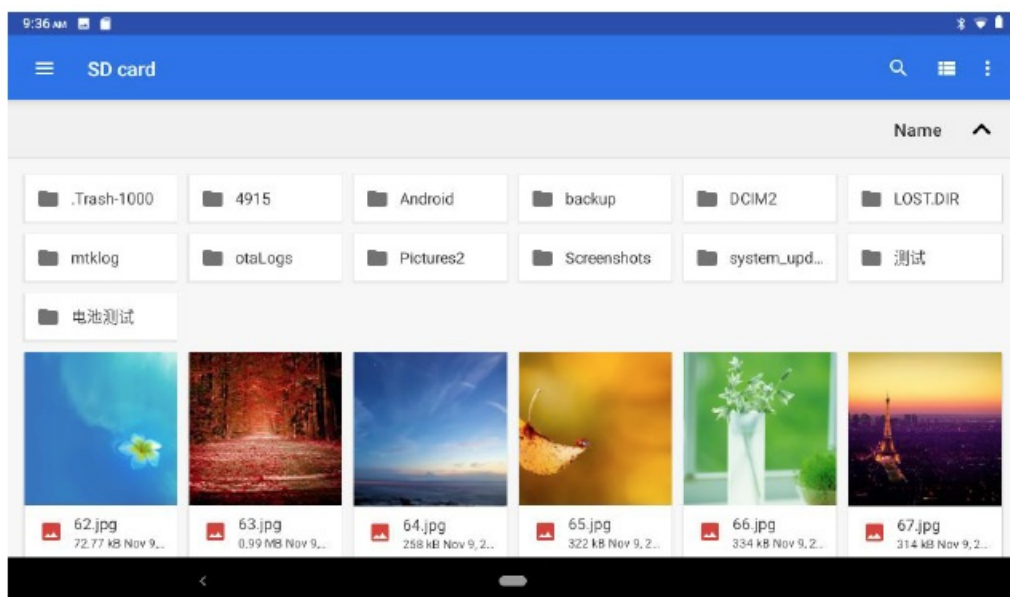


Picture 4.7-4


Safely remove or format SD card

1. Insert SD card
2. Click  Settings ^ on pictures 4.7-5
3. Click Settings
4. After the above two steps, you can choose what you want to do, remove or format the SD card, as Picture 4.7-6

 Note: Removing the SD card safely can protect the SD card and increase its lifetime.

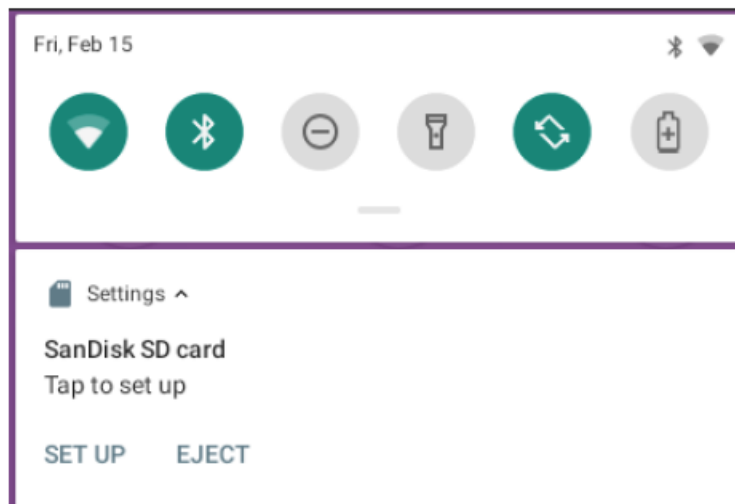

Picture 4.7-5

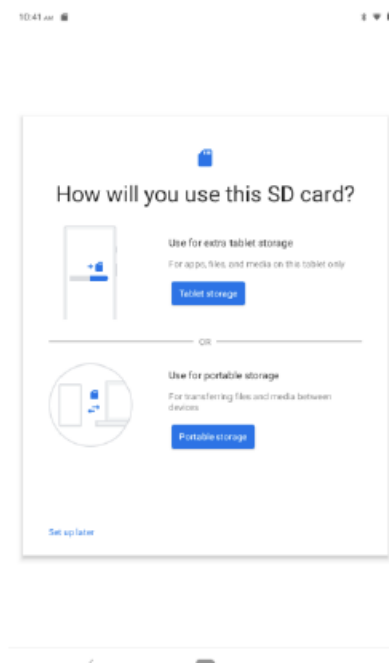 

Picture 4.7-6

Security&location

 
Set a locked screen Lock the touch screen by unlocking the icon or password to protect your MID. Note: After setting the screen locked, you should enter the passcode each time when you start or the screen is locked

Set unlocked picture

1. Click the setting application in the main interface.
2. Click security.
3. Click screen lock.
4. Choose a pattern in the text setting area.
5. Click next following the reminder message.
6. The unlocked pattern board pop up, there are nine touch spots, that connect 4 points from vertical, horizontal or

diagonal directions. As in Picture 4.8-1, move your finger from the screen when finished. The system will record your new unlock pattern.

7. Click continue.
8. When you see the reminder, enter the unlock pattern, then click confirm.

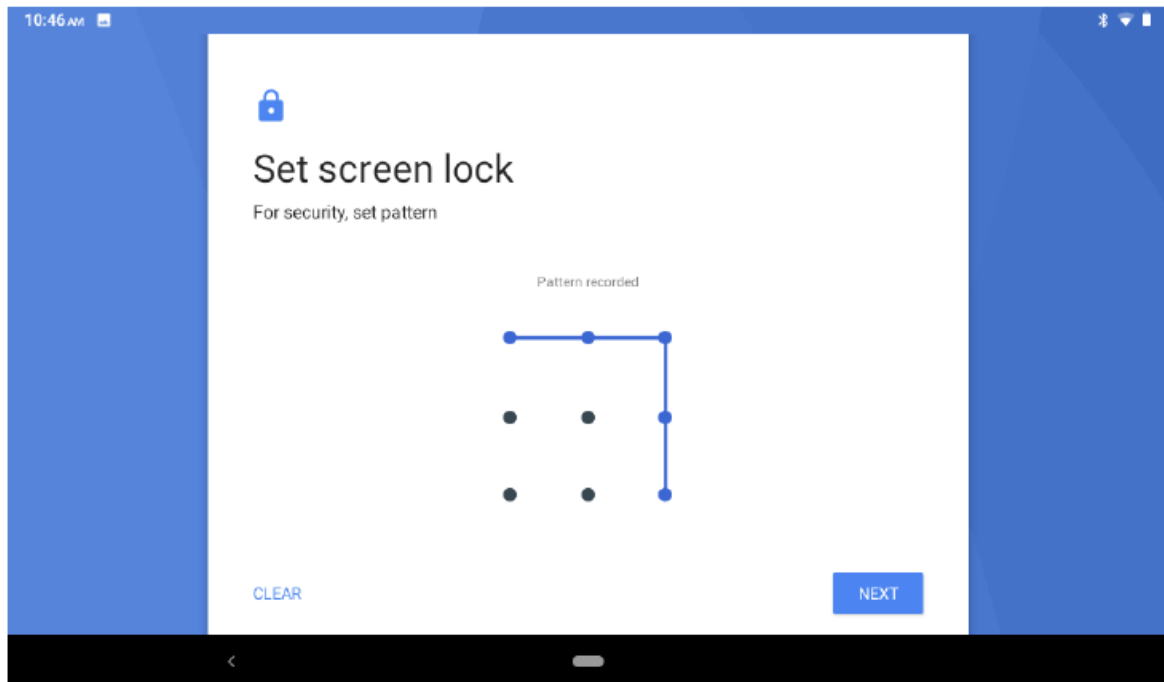

Picture 4.8-1

Set unlock PIN code

 
1. Click the setting application in the main interface.
2. Click Security.
3. Click screen lock.
4. Choose PIN in text setting area.
5. Enter a new PIN code(numbers) and click continue.
6. Enter the new PIN code again and click confirm.

Set unlock password

1. Click the setting application in the main interface.
2. Click safe.
3. Click screen locked.
4. Set password in text setting area.
5. Set a new password(letters and numbers) and then click continue.
6. Enter the password again and click confirm.

Location service


- Click setting, select Location, as Picture 4.8-2

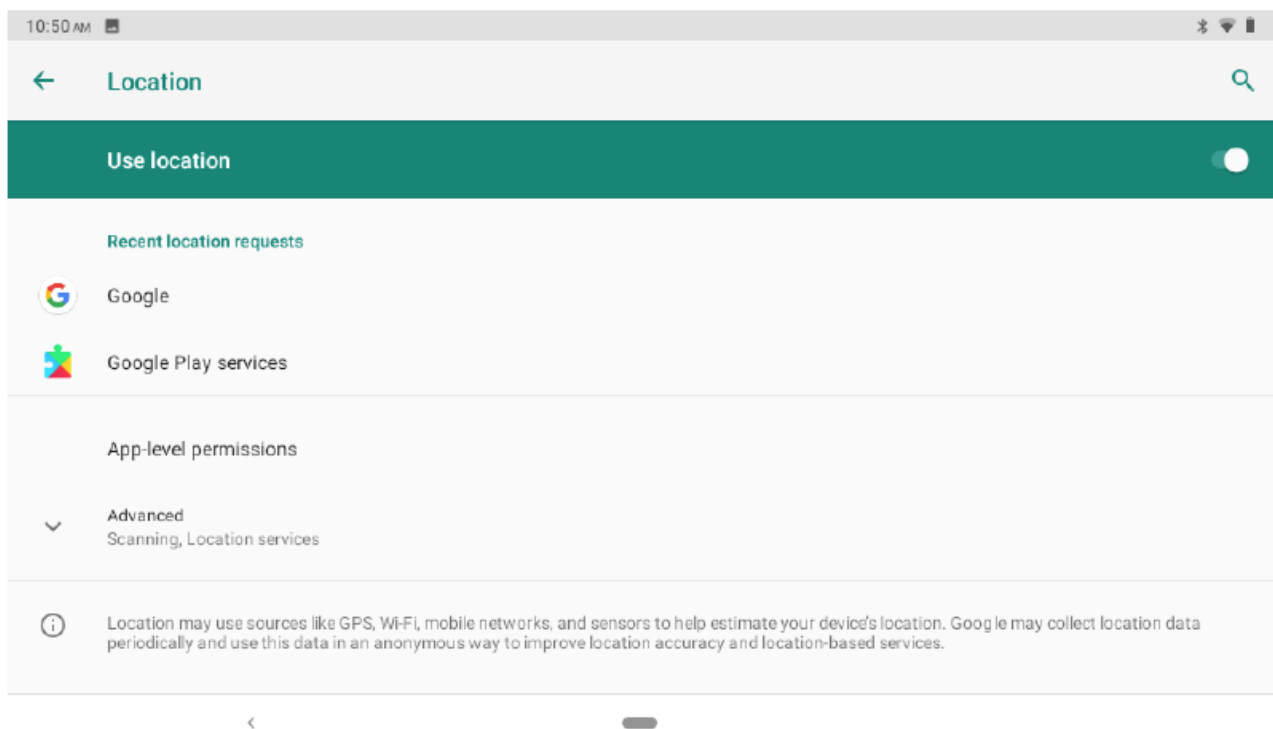

Picture 4.8-2


Users & accounts

 1. Select setting application
2. Open the account and sync, as Picture 4.9-1

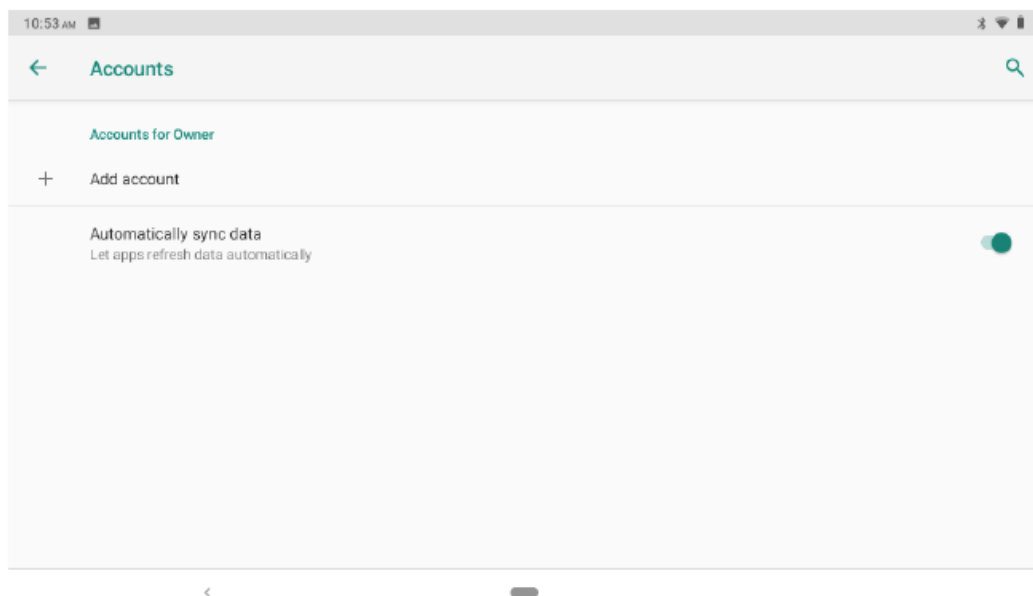


Picture 4.9-1

 3. Click add an account, as Picture 4.9-2

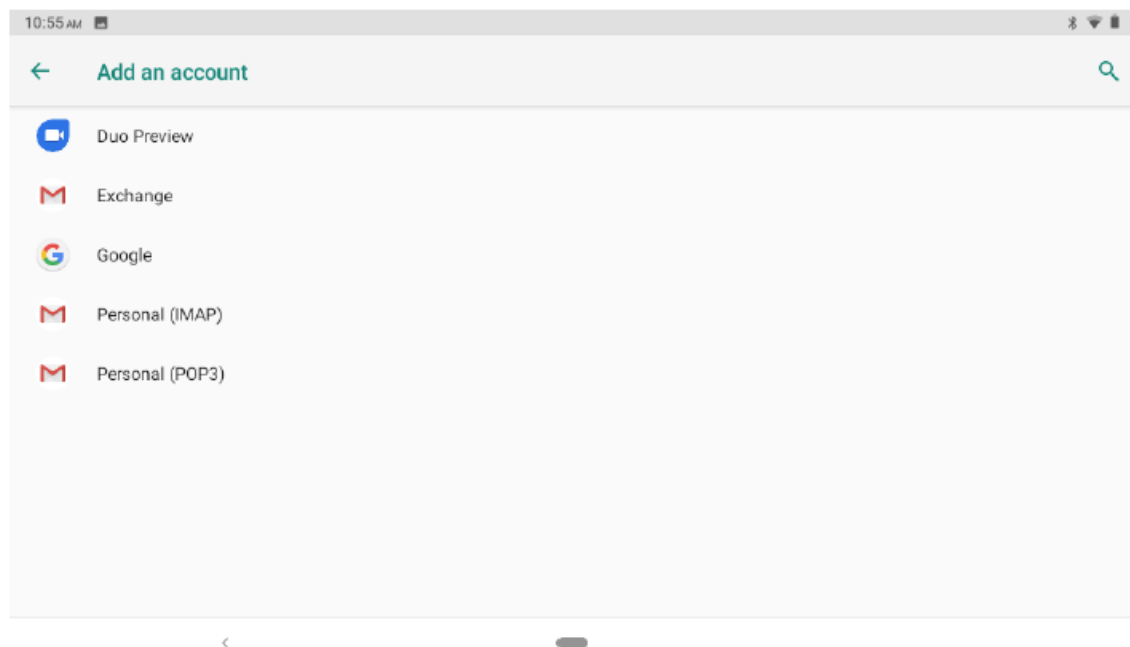

Picture 4.9-2

 4. After successfully loading, it will open the sync function, as Picture 4.9-3

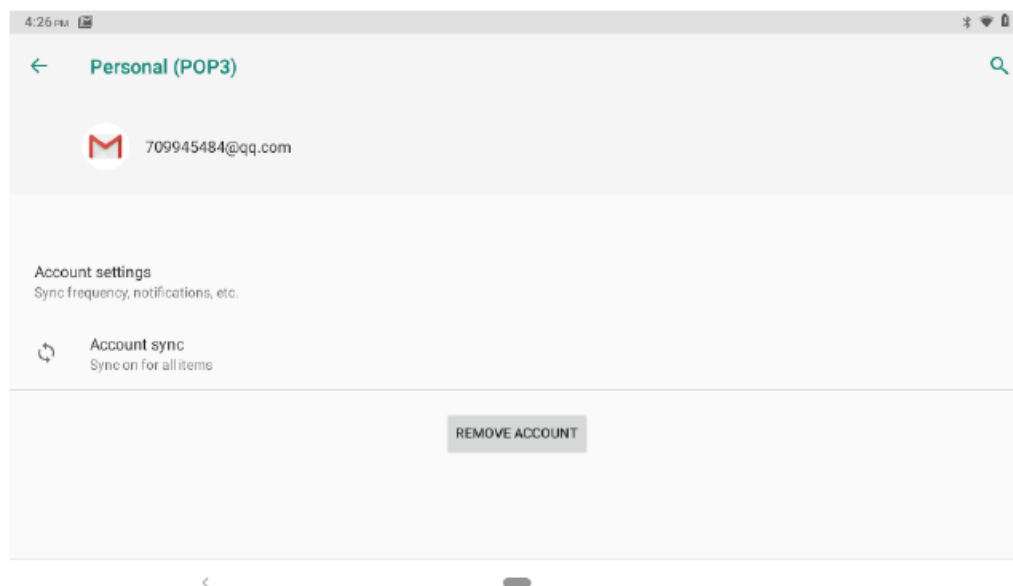

Picture 4.9-3

Accessibility

Font size

 
- Click it to make the system font large-size

Click the power button to end calls

- When Clicking call, press the “power” button, call will end but not hold.

Touch and hold delay

- Click touch and hold delay to increase time, as Picture 4.10-1

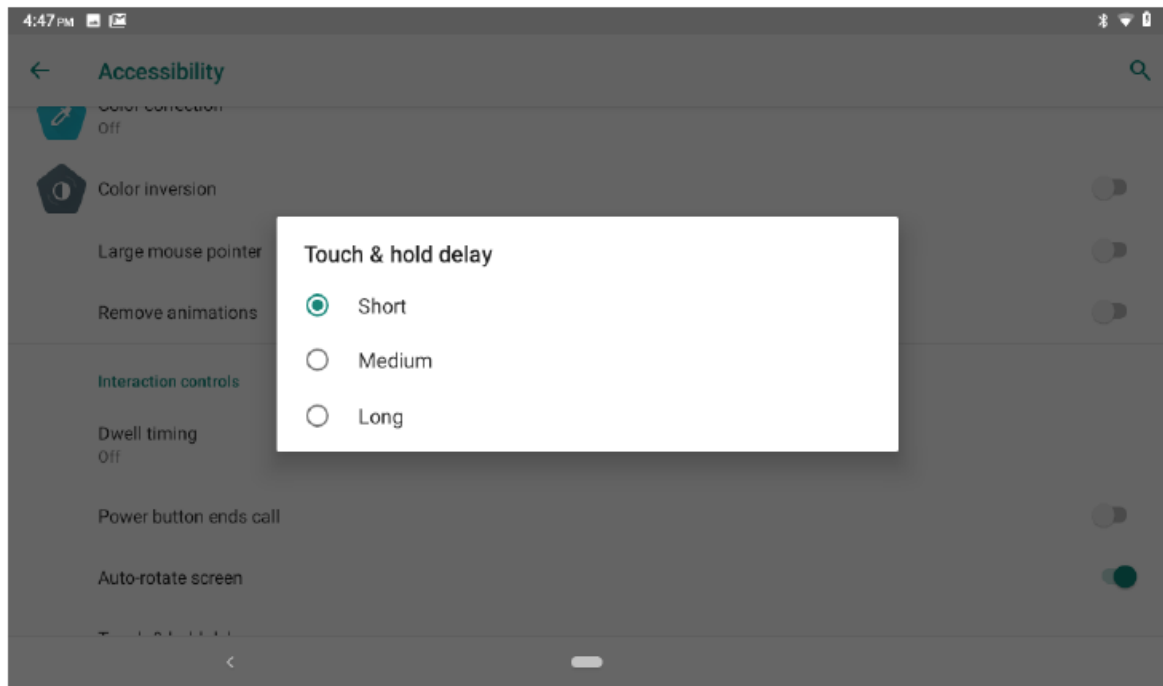


Picture 4.10-1

Install webpage script


- It will allow you to install webpage scrip when you open the system,, but it will increase the risk when you are browsing webpage.

System

 Language and Input Method Click setting, select language and input method, choose language, then click Add a language, and select the language you want to add from the language list, as Picture 4.11-2. Back to the language preferences page, you can drag the language you want to set to the first to switch language.

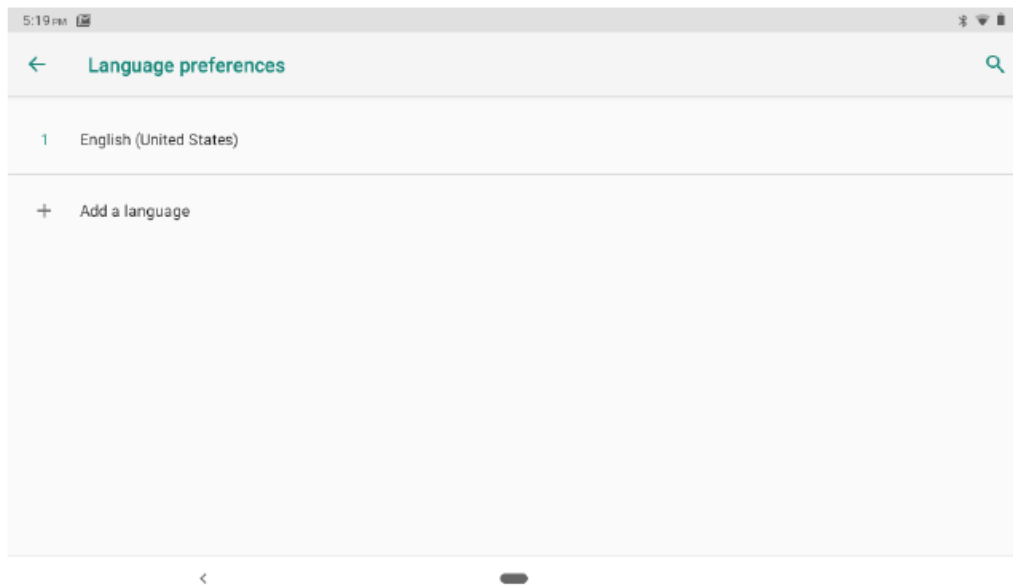


Picture 4.11-1

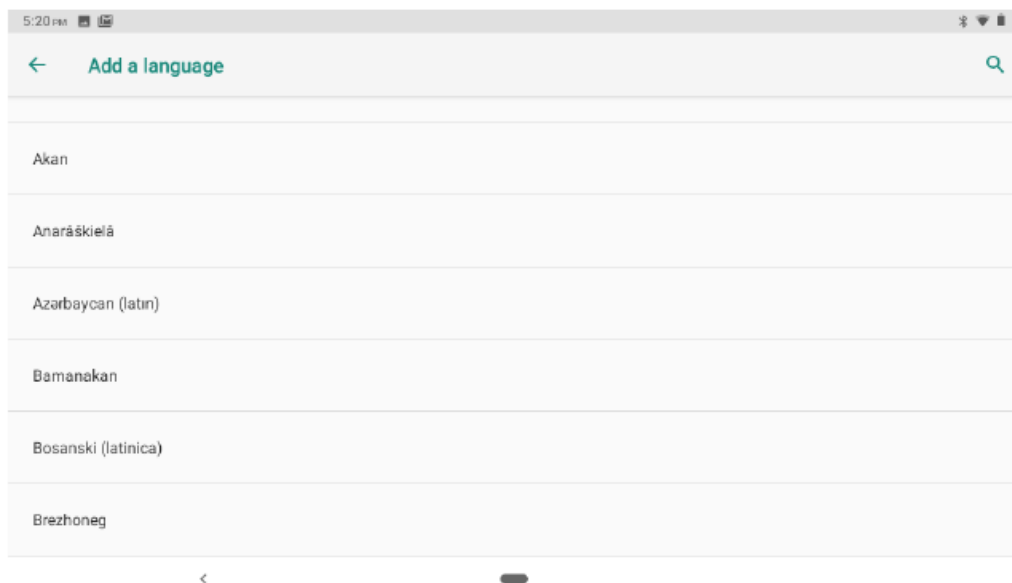 


Picture 4.11-2

 - Click setting, choose language and input, choose Google keyboard setting, click input language, as Picture 4.11-3

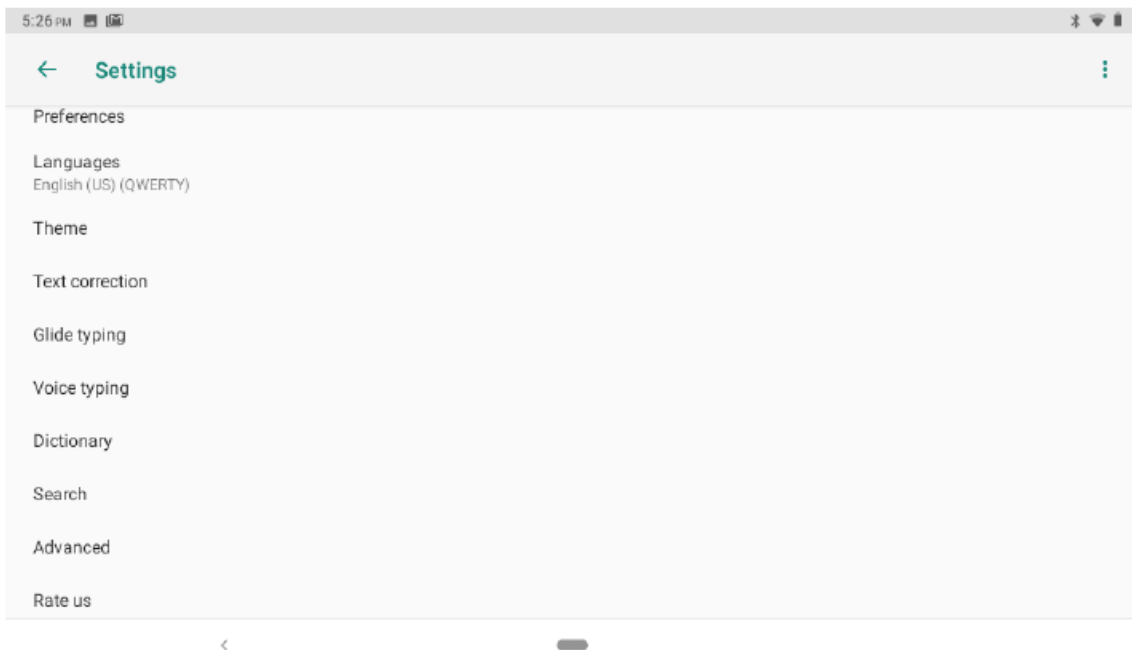

Picture 4.11-3

 
- Choose the language you want to change in the language list, as Picture 4.11-4

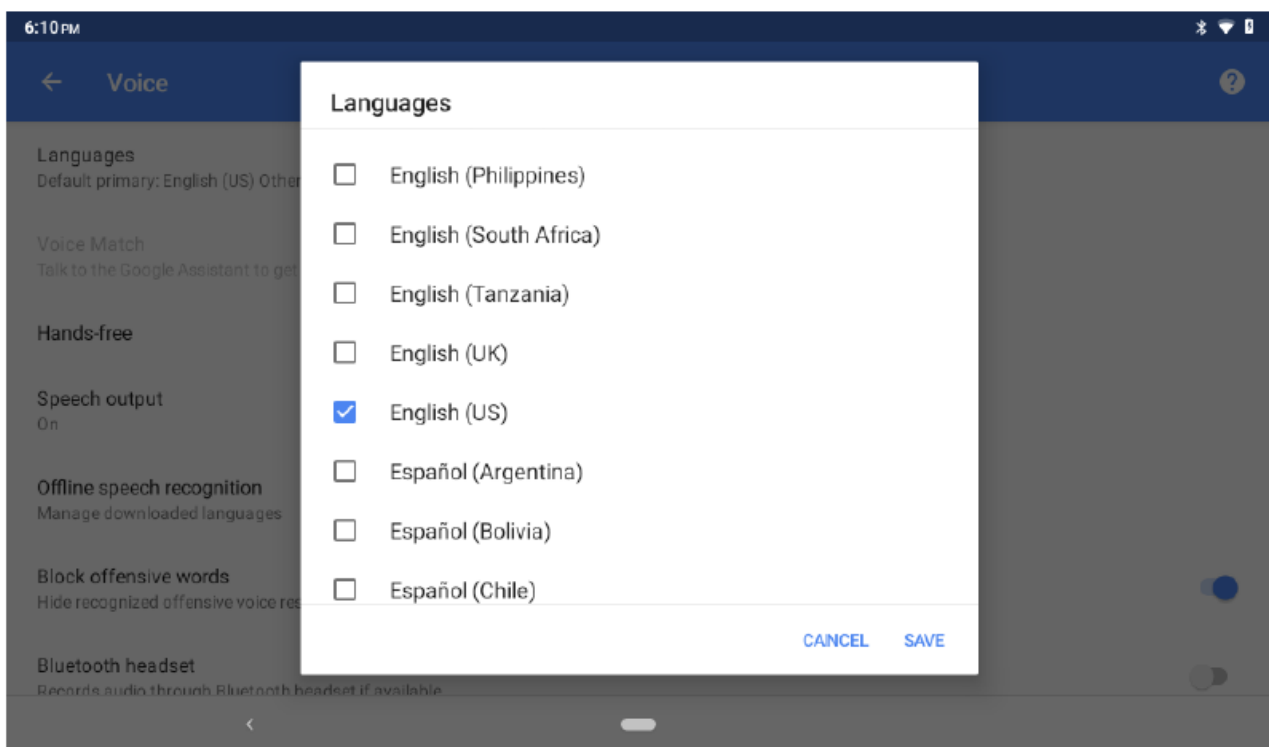

Picture 4.11-4

Gestures

 
- Jump to the camera Operate it to open and close of this app as Picture 4.11-5

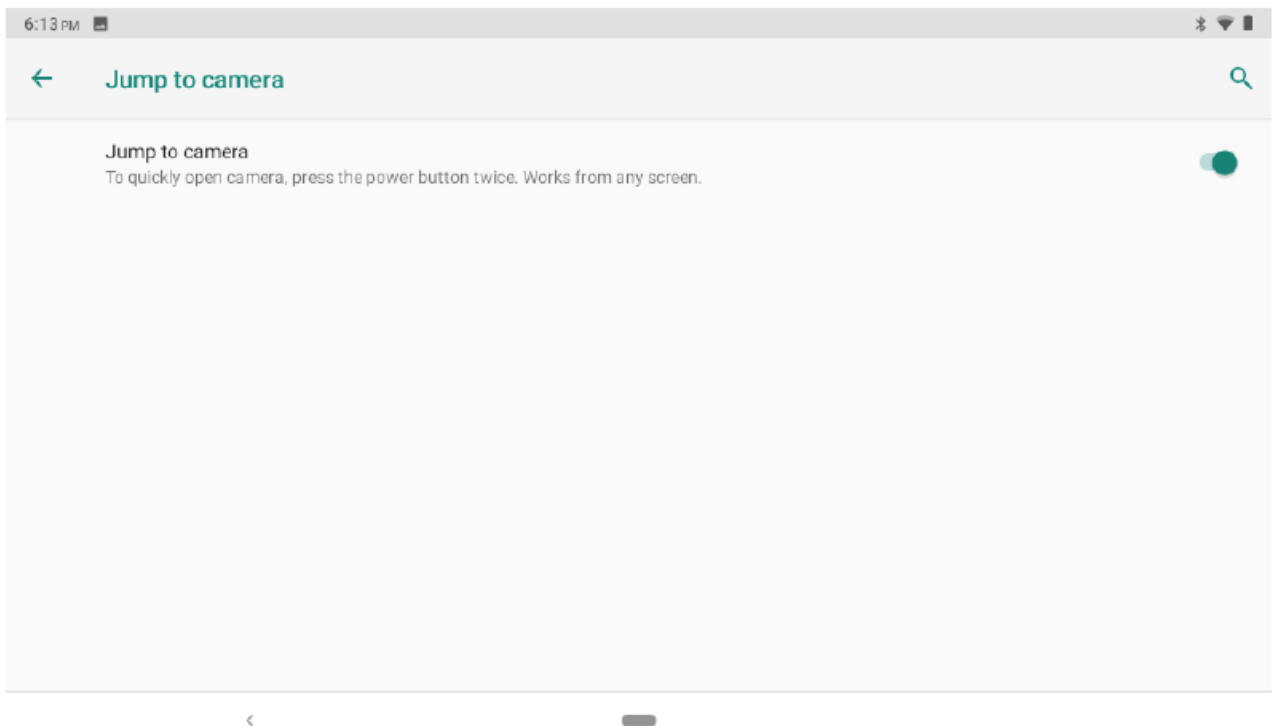

Picture 4.11-5

Swipe up to the Home button

 
- Swipe up on the Home button is mainly used to switch apps. Swipe up once to show the recently opened application interface and up twice to enter the application interface as Picture 4.11-6

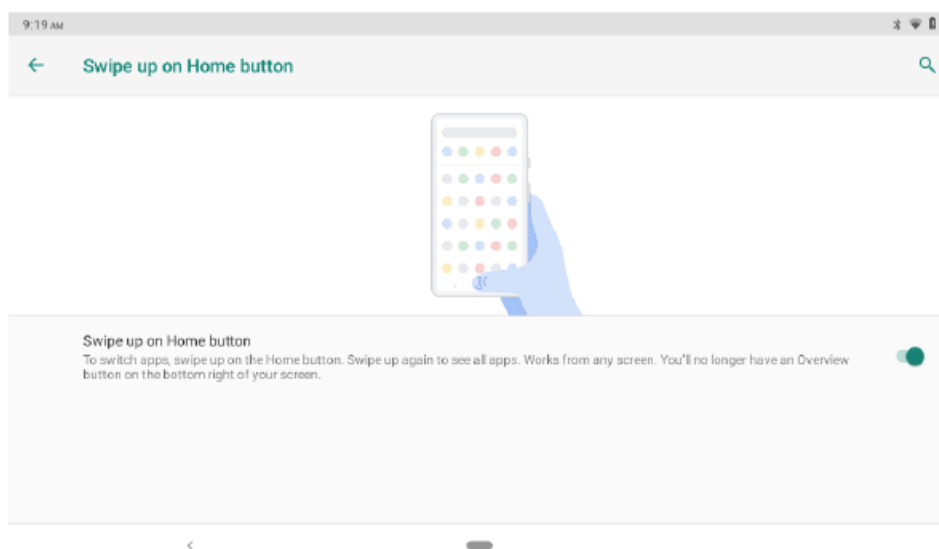

Picture 4.11-6

Prevent ringing function

 - Incoming calls can be controlled by pressing and holding the power and volume buttons together, as Picture 4.11-7

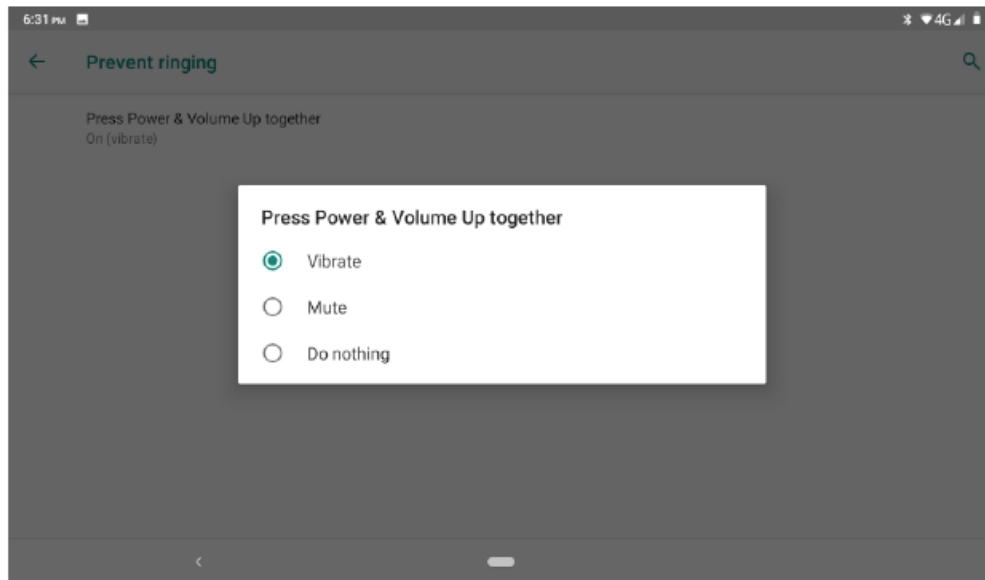


Picture 4.11-7

Date and Time

According to the present, the system will voluntarily apply the date, zone, and time provided by the Internet. As in Picture 4.11-8 Manually set the date, time and zone

 1. Click the Setting application procedure.
2. Slide down the screen, then click date and time.
3. Turn off “auto setting of date and time”.
4. Turn off the “auto setting zone”.
5. Click Zone Selecting, then choose the zone lists. Slide down the list to view more zones.
6. Click Set date, then click the upper or down button to adjust the date, month, and year, click setting when you finish the selection.
7. Click Set Time, then click the upper or down button to adjust the hour and minute, and click AM or PM to change morning or afternoon (there is no such selection when you se 24-hour format). Click Setting to finish.
8. Click the 24-hour format, and switch between the 12-hour or 24-hour format, the time format you choose will be used on the alarm clock.
9. Click the date format setting, then choose the time format you want to show on MID.

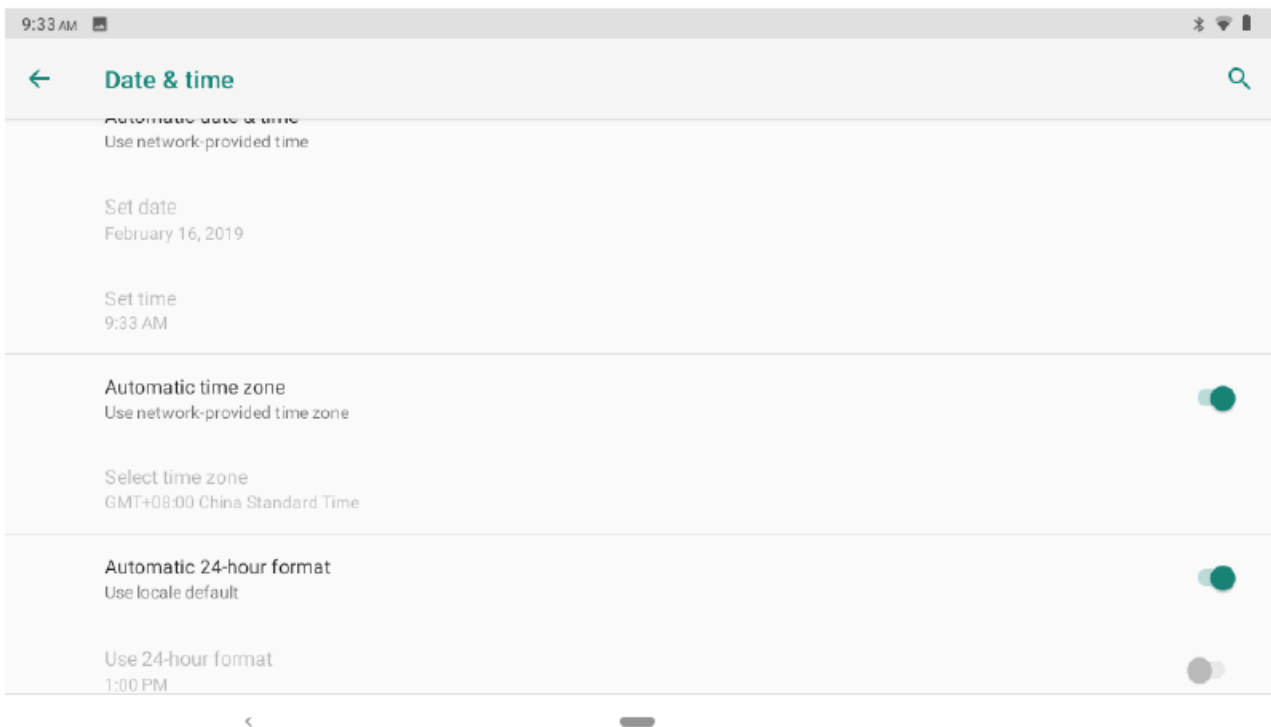


Picture 4.11-8

Note: If you use the time internet provided, you will not be able to set the date, time and time zone.

backup

 
- Connect WIFI and log in to your Google account, choose Backup my data, system will backup your data into the Google server. as Picture 4.11-9

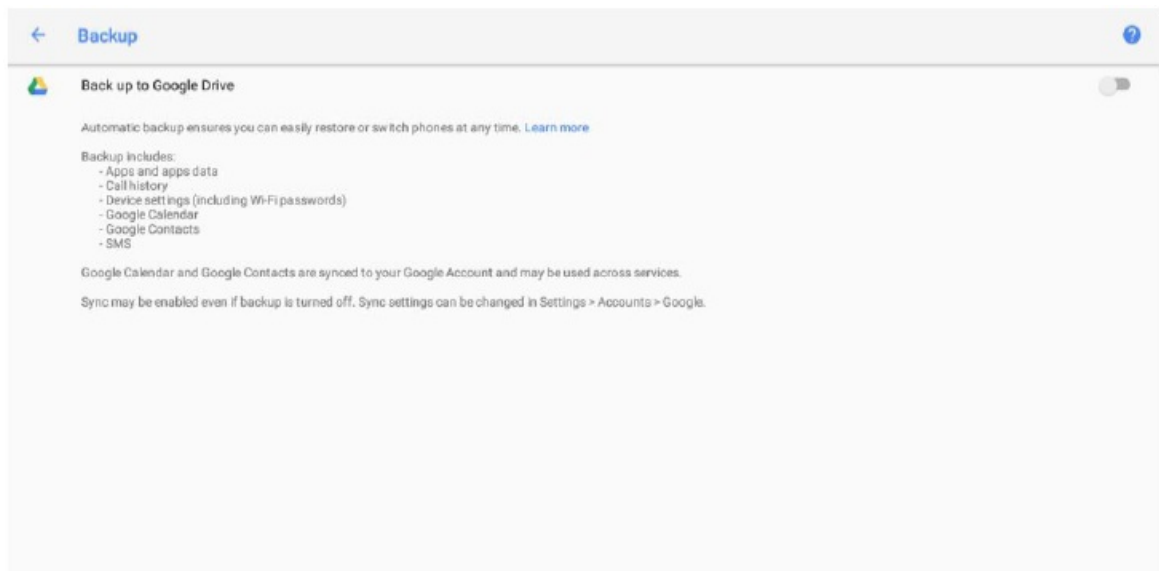

Picture 4.11-9

System update

 
- Check to see if the system is up-to-date, as Picture 4.11-10

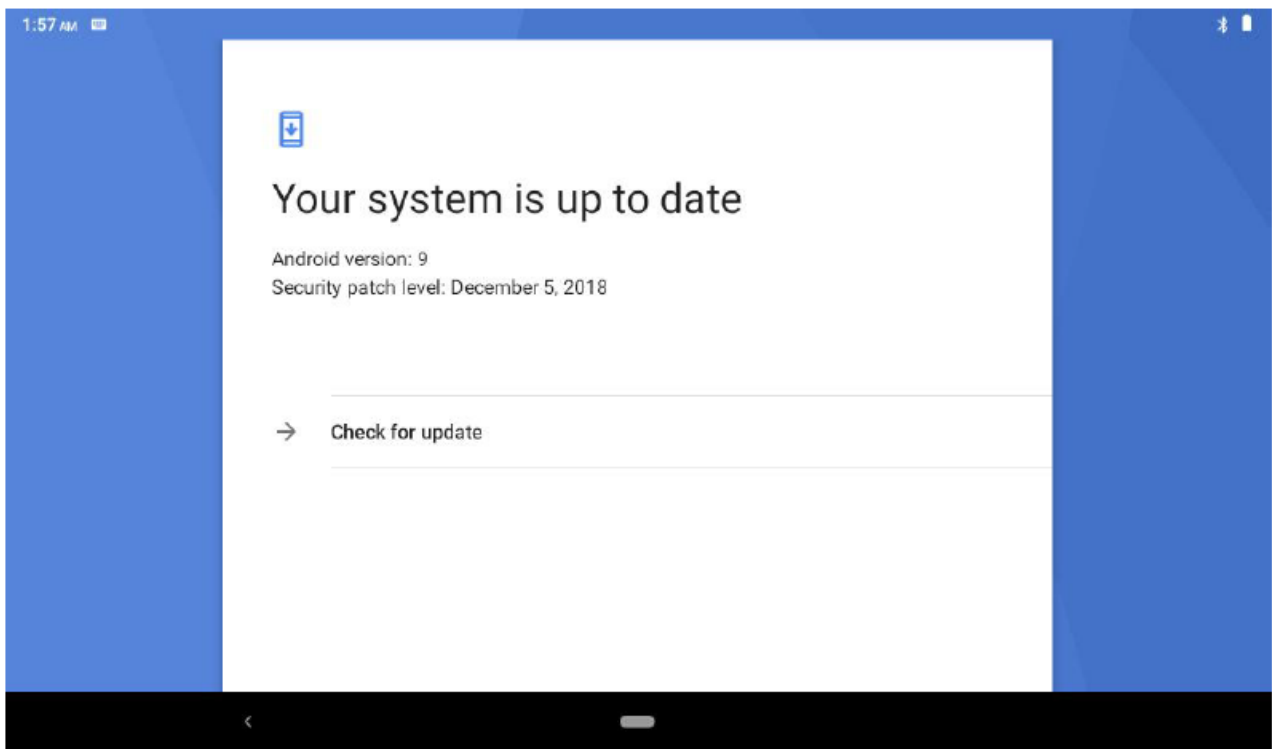

Picture 4.11-10

Reset options

 - If you need to recover the factory reset, please click reset, as in Picture 4.11-11, if you need to formulate NAND, please click reset tablet.

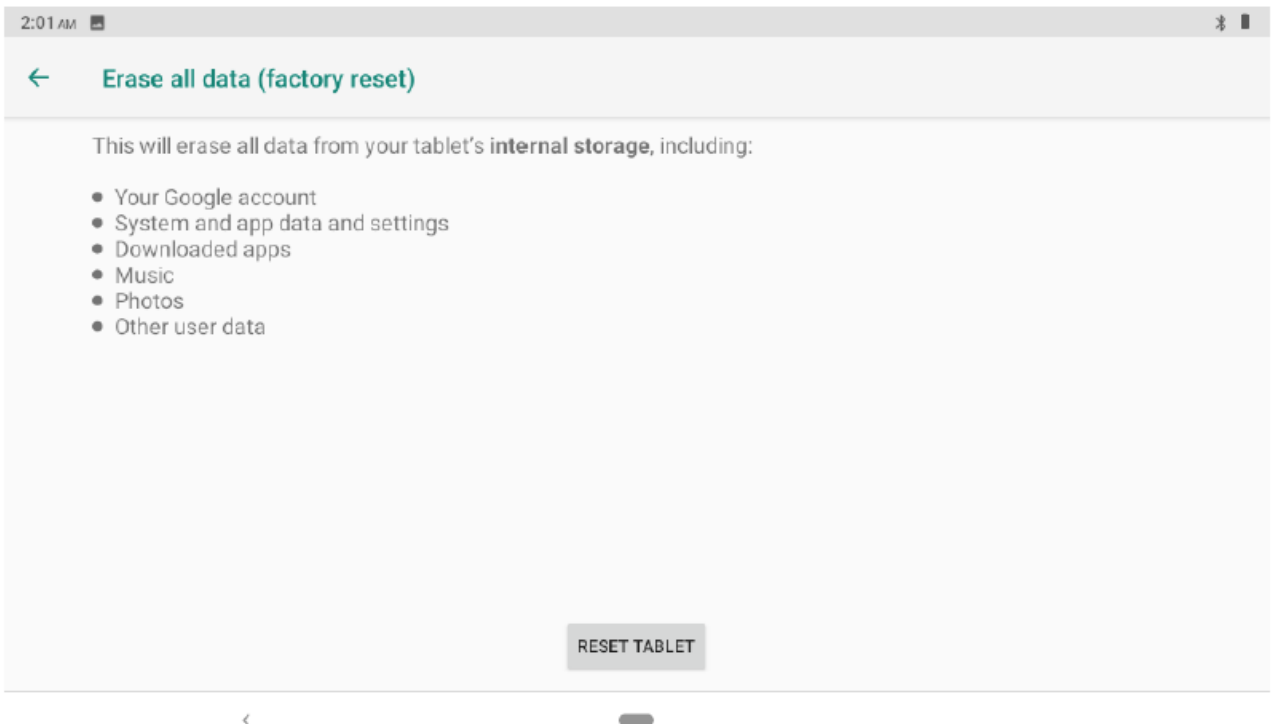


Picture 4.11-11

Multiple users

Multi-user in Android is similar to multi-user in Windows and can support multiple users to use the system.

 
Typically, the first user registered with the system becomes the system administrator by default. You can add and remove users and switch between different users, as in Picture 4.11-12

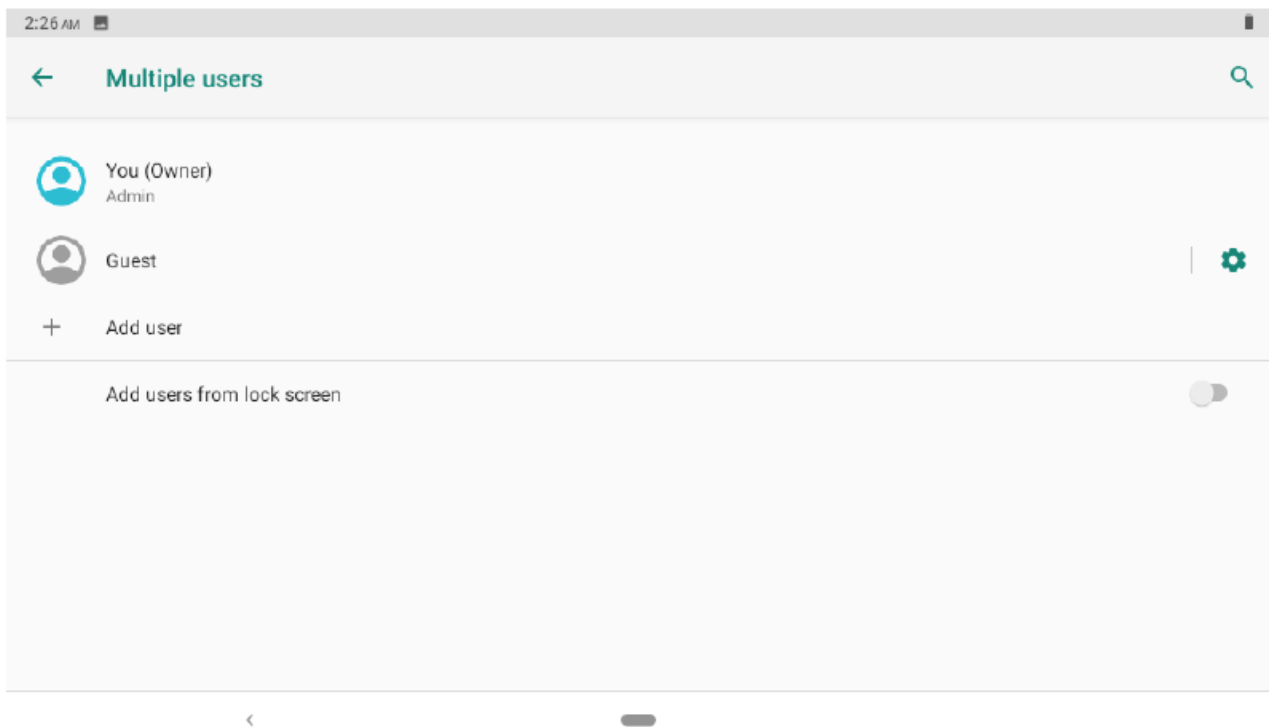

Picture 4.11-12

Engineer Selection

 1. USB debugging After opening USB debugging, you can use some software to read MID software, but when USB debugging is turned on, USB storage needs to manual adjust.
2. Stay awake If you open stay awake, it will never auto sleep when your MID is charging.
3. Pointer Location If you open pointer location, it will display touch vertical and horizontal direction.
4. Show taps If you open display touch screen operation, it will display touch operation on the screen. It is suggested to use with same direction as pointer location.
5. Show surface updates If you open screen refresh, it will display related area when the area is refreshing.
6. Show CPU usage After open CUP usage, in the right top of MID will show CPU usage situation. as Picture 4.11-

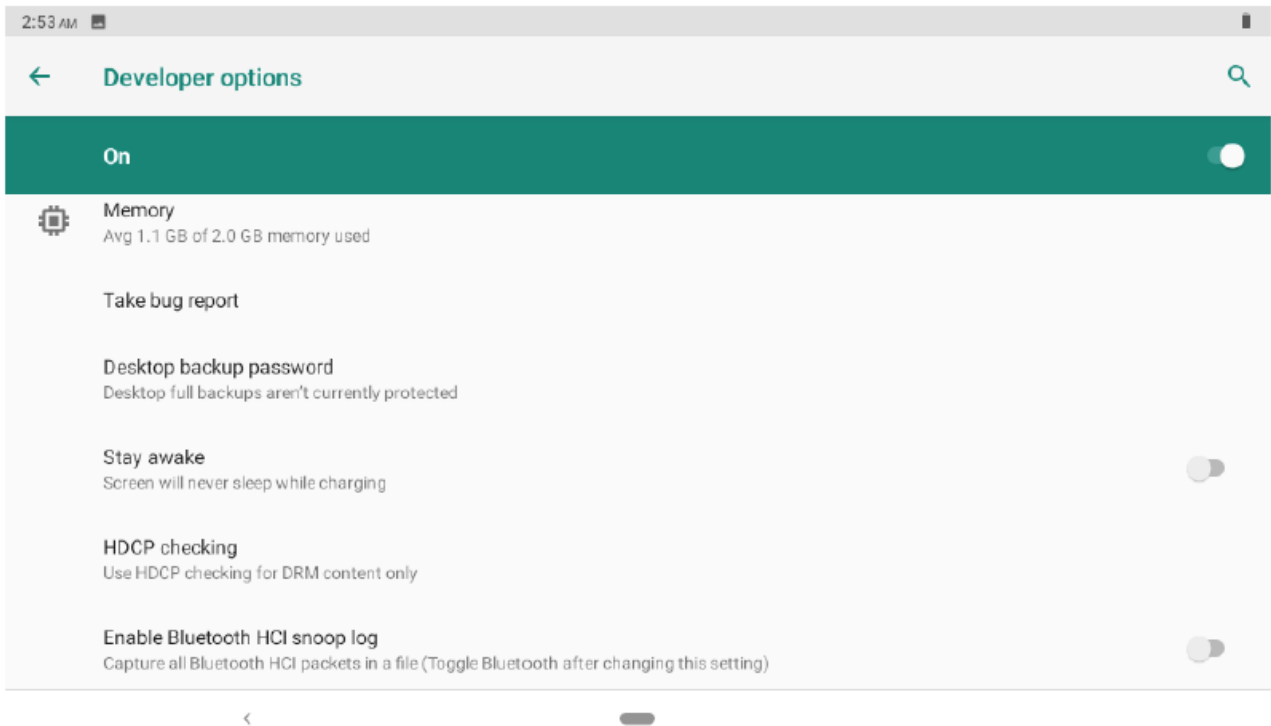

Picture 4.11-13


About Tablet

 
Check MID state

1. Check Setting application.
2. Click about tablet, check Owner Device name Emergency information Legal information SIM status Model&hardware IMEI Android version IP address and so on. (1).Click Emergency information state, you can add Medical information and Emergency contacts.Adding mdeical information and emergency contacts can help first responders in an emergency.


Multi-Media

Music

- Enter into music player: in menu or desktop click music  icon to enter into music player, click the music you want to play, as Picture 5.1-1:

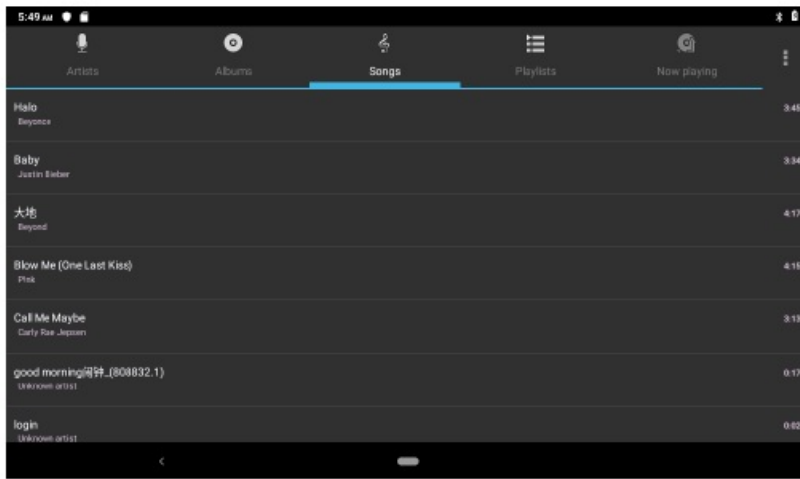

Picture 5.1-1

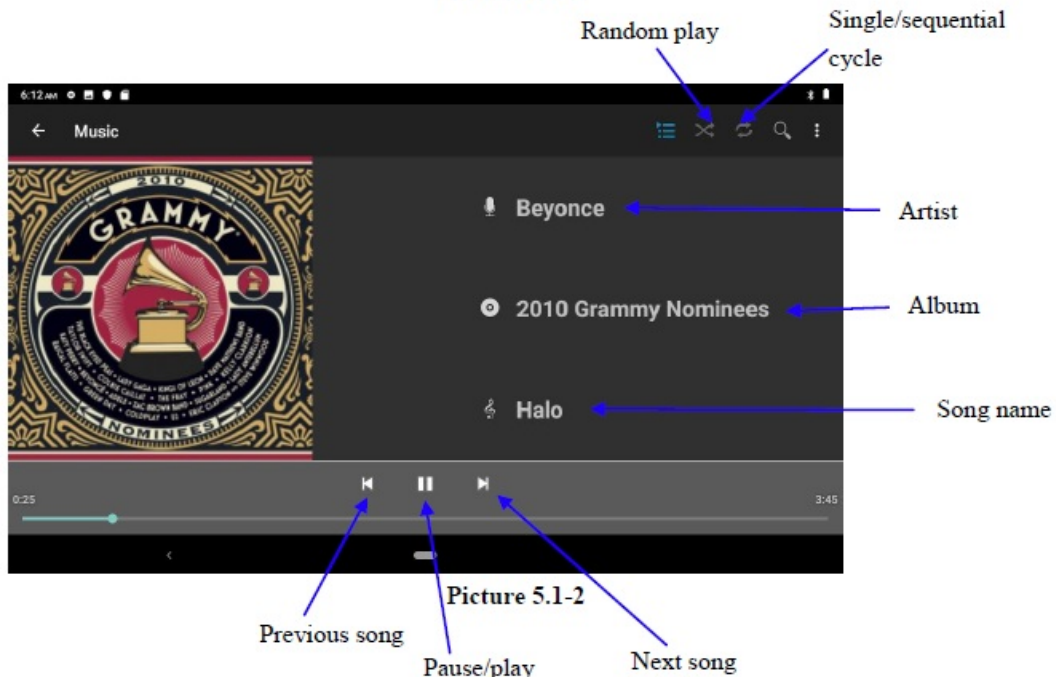 

Picture 5.1-2

- Drag the progress bar to adjust play progress.
- Operation of music player button as Picture 5.1-2

Photo Gallery

Photo gallery application can auto search photos and video files in SD card, and photo gallery will classify these photos and videos in folder. You can apply photo gallery to view and edit photos, set the photos as wallpaper and watch the video.

View pictures

1. Click gallery application in main interface.
2. Enter into gallery, click the folder you want to view.
3. Click the picture you want to view, the system will play it in full screen mode automatically.
4. The pictures can be zoom in and zoom out, put two fingers on the screen, the separate the fingers(gather up the fingers, the picture will be zoom in) or double click the screen.

Note: when you browse the pictures, slide left or right to view more pictures.

Edit and set pictures

When check the pictures in full screen mode, click menu key to display menu selection, you can choose the selection you need to edit and setting pictures.

Slide Show

1. Open a picture, use virtual key to click menu key, display menu selection.
2. Click slide show, it will auto loop play


Crop

1. Click menu key to display menu selection.
2. Then click crop, click and drag related area to adjust the cropper.
3. Click cropper and drag it inside and outside to adjust the image.
4. After adjust the size you want, click crop.
5. If you wish to give up to crop, click cancel to return to picture browse.

Edit

1. Click menu key, display the menu selection.
2. Click edit.
3. Adjust the brightness, style, color, ant alias setting in selection.
4. Click save.
5. If you want to give up edit, click return key, click not to return to picture browse.

Camera

- In the main interface or desktop, click camera application procedure  , enter into camera
- Operation of camera ,Switch camera: choose Menu key, click switch front/back camera, as Picture 5.3-1.

Switch ICONS for front and rear cameras

Click it to record

HDR capturing

Flash on/off mode


Click it to enter the submenu




Picture 5.3-1

Internet


Browser

 - In case of Wi-Fi or mobile internet is connected well (Please refer to Chapter 4.1 for wireless and internet setting), click IE browser  in the main menu or desktop to enter the IE interface, as Picture 6.1-1

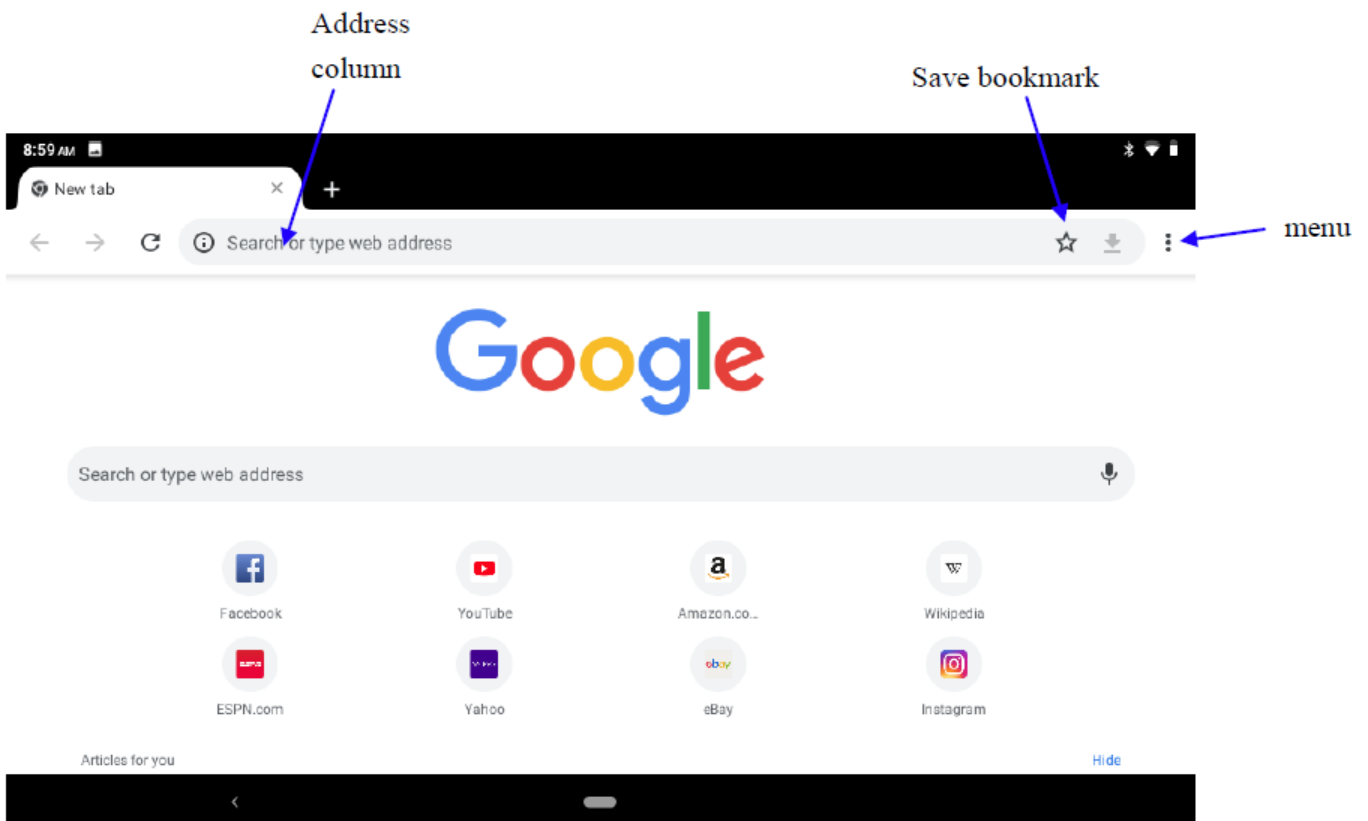

Picture 6.1-1

 
- Click address bar to input the website, click start, enter into related webpage, then you can browse the website information, as Picture 6.1-2 and you can click the menu you can refresh ,save to bookmarks, share page, bookmarks, history and setting the webpage.

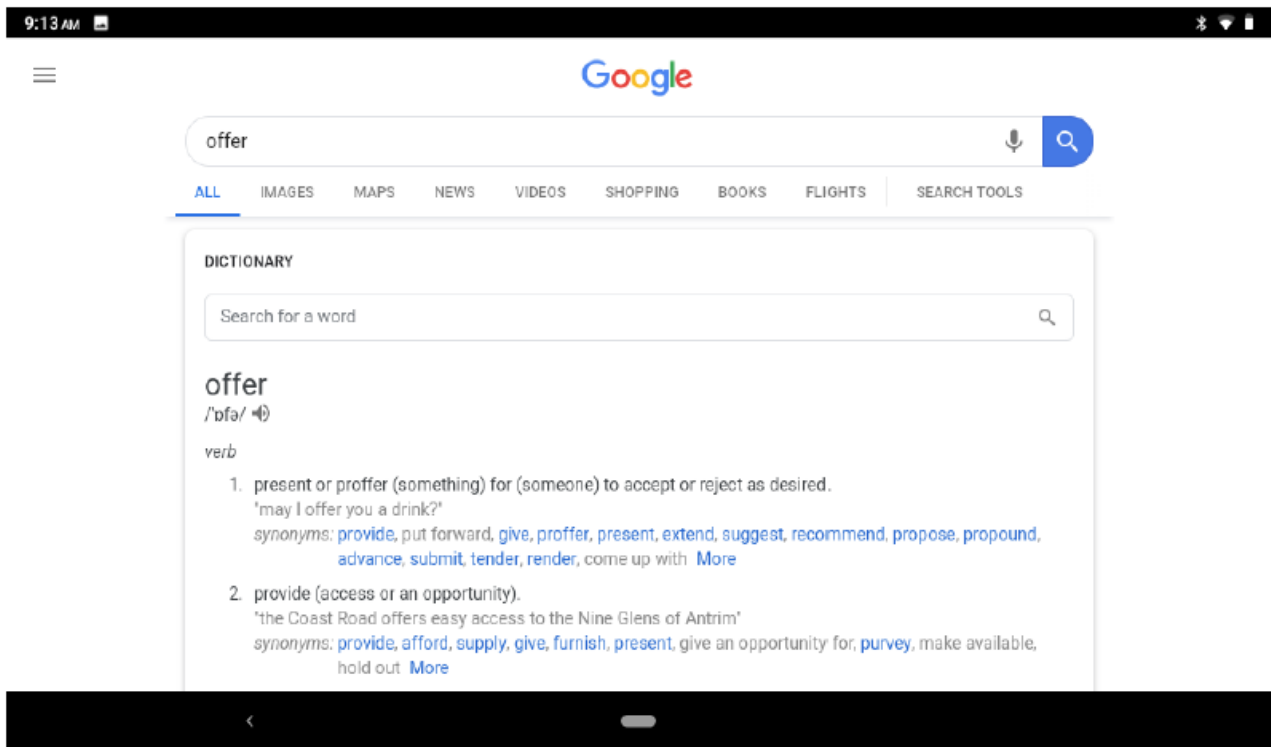

Picture 6.1-2

Email

 
- Email application procedure contains email setting guide, you can add the external POP3 OR IMAP email account of normal web email service provider (For instance, Google,Outlook,Hotmail,and Live,Yahoo, Gmail, Hotmail Exchange and office 365and other),as Picture 6.2-1

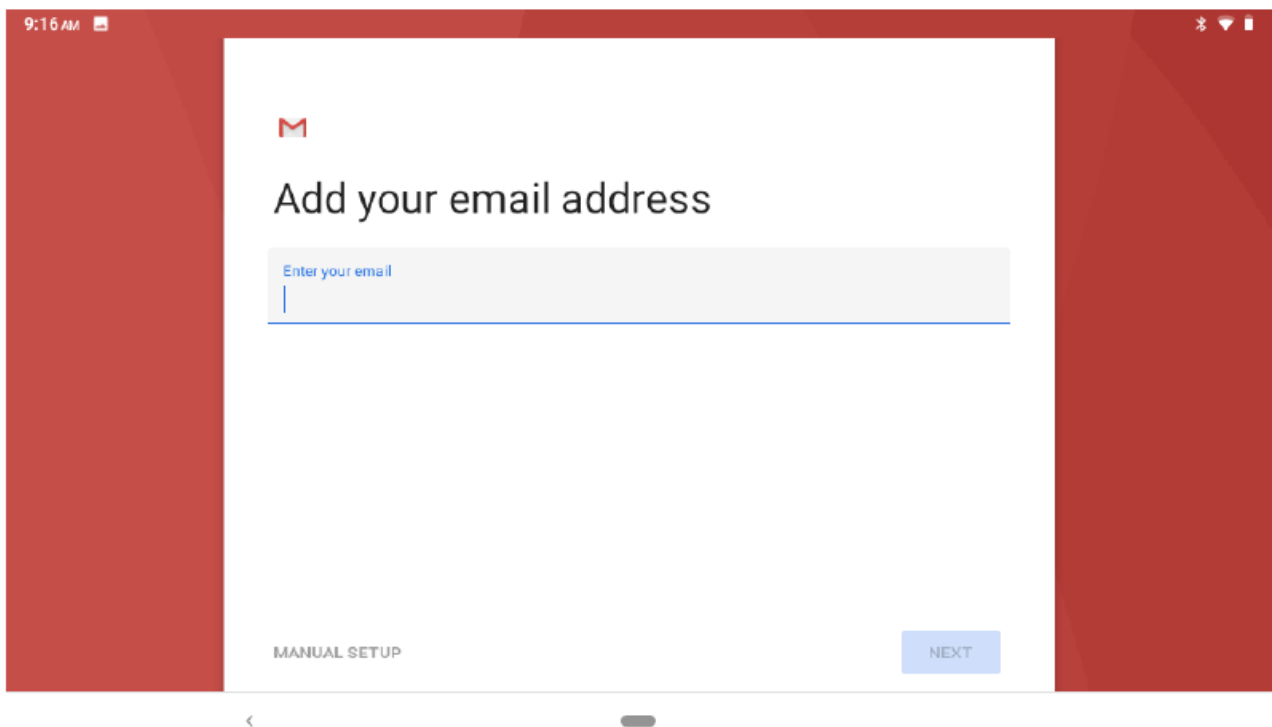

Picture 6.2-1

Email Setting



1. After you click the sending email icon  , you can see the email setting guide, which can help you to set.
2. Input your email address and password.
3. Click “Next step” button, choose your email type is POP3 or IMAP.
4. Click “Next Step” button to check whether the email box servicer can receive or send emails
5. Input the email account and display the email subject, and click finish.
6. If the email box is available, you will enter into your mail box automatically.

Delete the email account




You can delete stetted POP3 or IMAP email account from your MID. Click


1. Enter into your mail box.
2. Press Menu key.
3. Click Account
4. Press the account you want to delete.
5. Click confirm to remove.

Send E-mail



1. Click  to display your mail box.
2. Click the inbox, it will refresh the new emails automatically; click it to read new email.

3. Press Menu key. Menu will popup.

4. Click Edit  to enter into new email editing interface.

 
5. Input the receiver's email address.

6. Input the subject and email content.

7. If you want to add attachment, click menu key, the menu popup.

8. Click "Attach file" (photo, music, video, contacts).

9. Click "send" to send the email out.

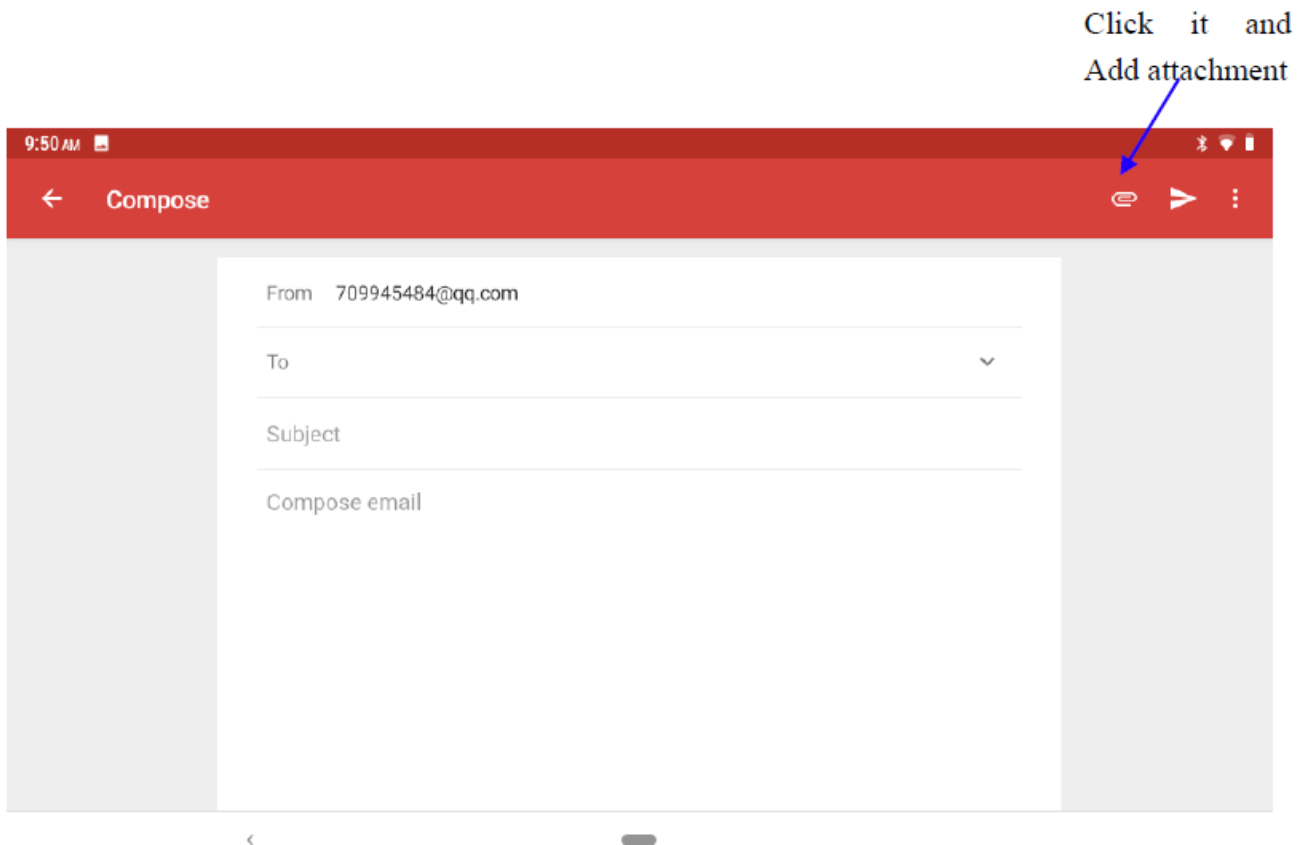


Picture 6.2-2

other characteristics

New gesture navigation

 
The Android 11 officially eliminates the three Android king kong buttons and replaces a virtual navigation bar similar to the one on the iPhone X. Long press: start Google smart assistant; Swipe up half: enter the switch window; Swipe up: go to the app drawer; Swipe left and right: scroll through the most recent application, back button: return (only within the application), as Picture 7.1-1

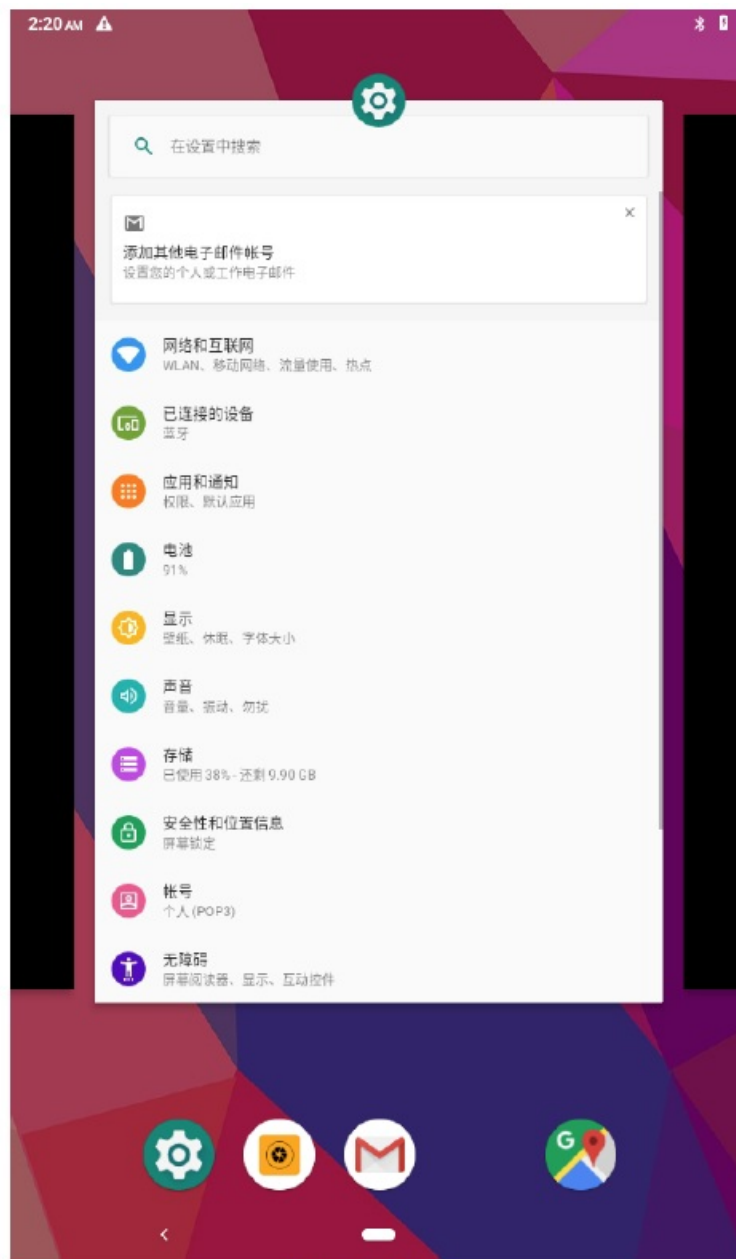

Picture 8.1-1

PIP function

 1. PIP function is a special type of multi-window mode
2. The window that is playing the video can be hovered over other apps that are in use. The floating window can be dragged anywhere and then continue working on the home screen. When playing video in full screen on Google Chrome browser, press the Home button or double-click on the multi-tasking button to return to the desktop, and the video being watched will be displayed in picture-in-picture mode. as Picture 7.2-1

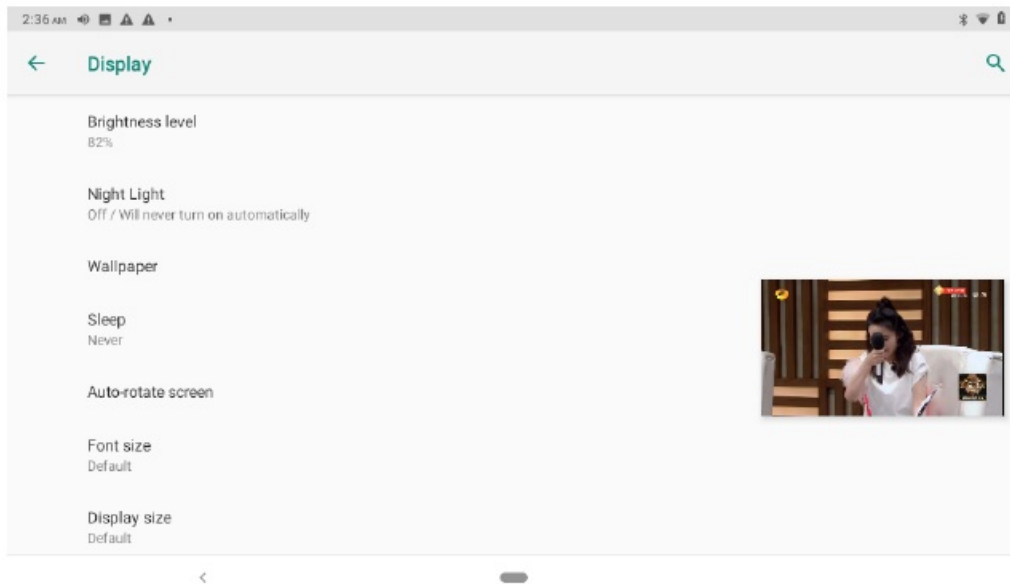

Picture 7.2-1

Specific operation:

1. Is to install the latest version of chrome, then open a video site to play video, and then full screen.
2. The last home button switches background tasks and switches on automatically when switched back to the desktop.
3. Tap the video window to pause, next set, and full screen.

Note: There are few applications currently supported.

SmartTextSelection

Automatically detect the function that applies it to the corresponding application. If you click on the address of a restaurant sent to you by a friend, Google will know what you want and automatically use the map to start the route. Telephone numbers, e-mail addresses, etc. can also be done as Picture 7.3-1




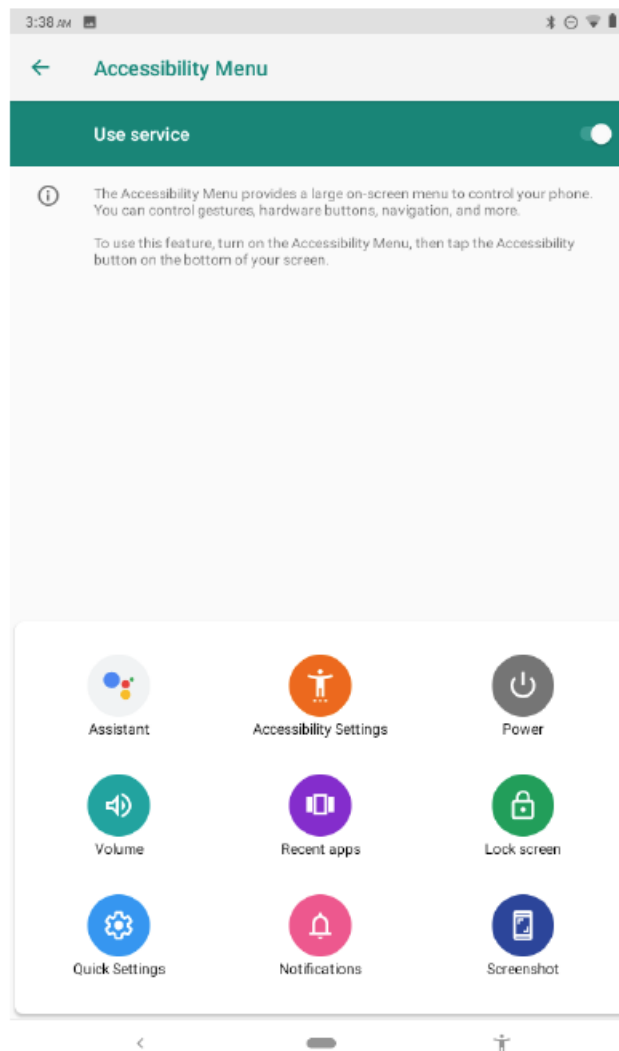 
Picture 7.3-1

Auto-Fill

- For the most frequently used applications on the user's device, it will help the user to log in quickly without having to fill in the account name and password every time.
- For example, when users use a new device, they can extract saved account names and passwords from Chrome. After the selection, the auto-fill function can be performed locally. It is suitable for most applications that you may use.

Accessibility Menu


- In the Settings>Accessibility >Accessibility Menu, you can activate the new Accessibility Menu, which will enable an icon that you can click  to perform quick Settings, set the most recent application, volume, and more, as Picture 7.3-2



Picture 7.3-2

Dark mode

 
- You can turn this feature on by selecting the 'Dark' option in Settings>System > Display > Advanced > Devicetheme to dim Android devices, as Picture 8.3-3

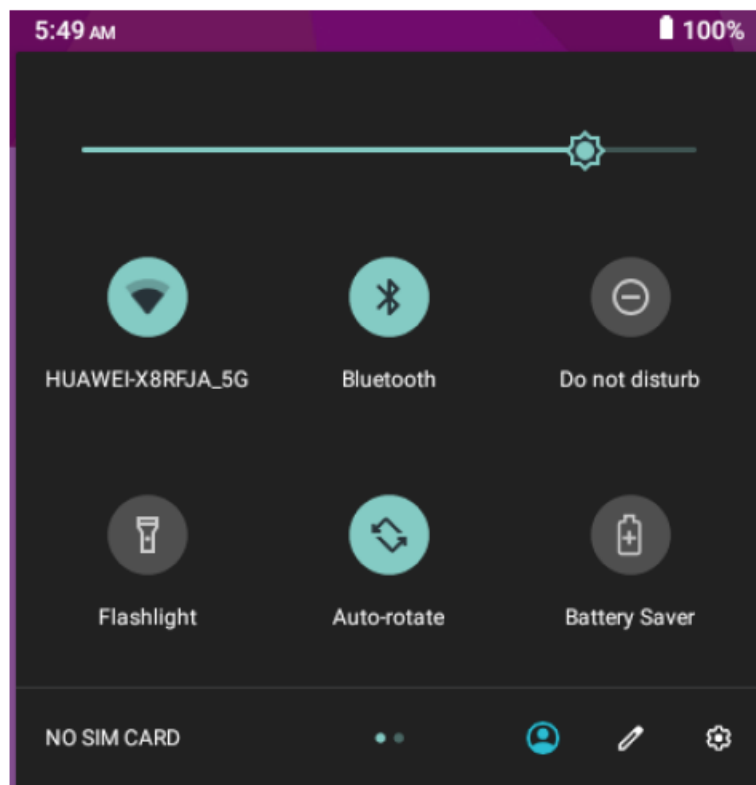

Picture 7.3-3

New screenshot shortcuts

 - Say goodbye to the default Power+ Volume Down button combo, and now you can grab a screenshot at any time by clicking on the icon in the Power menu, as Picture 8.3-4

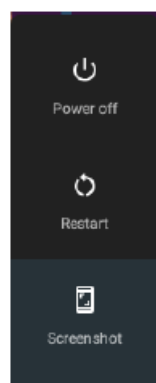


Picture 7.34

Other Application Procedures

Clock

 
- Click Clock procedure, enter into below interface as Picture 8.1-1.
- There are clock, picture, music and homepage buttons.

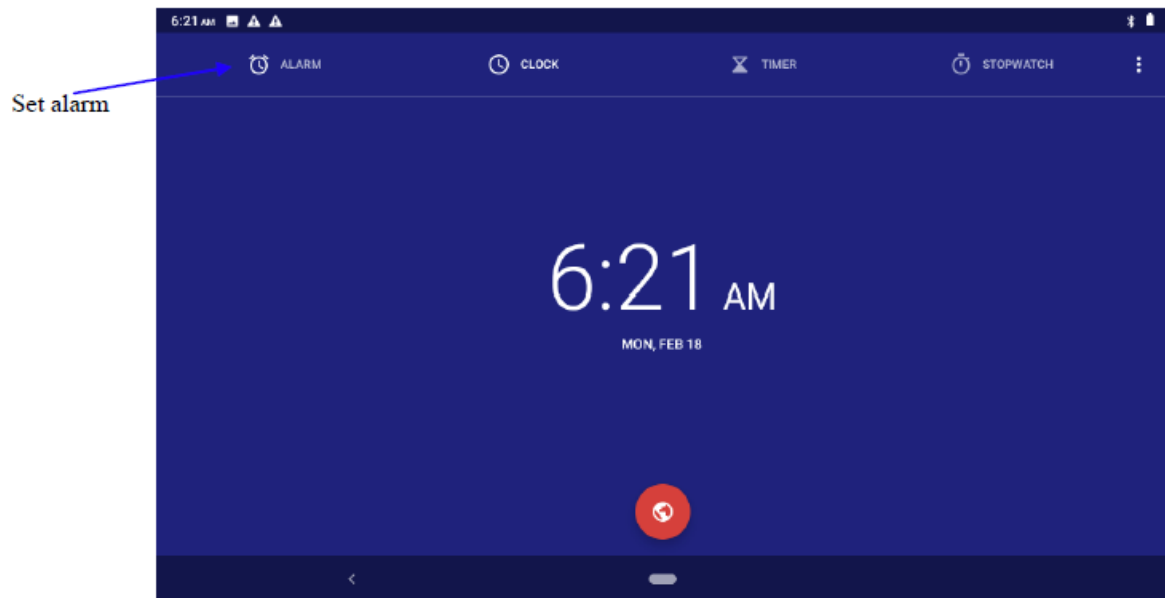


Picture 8.1-1

 Calculator




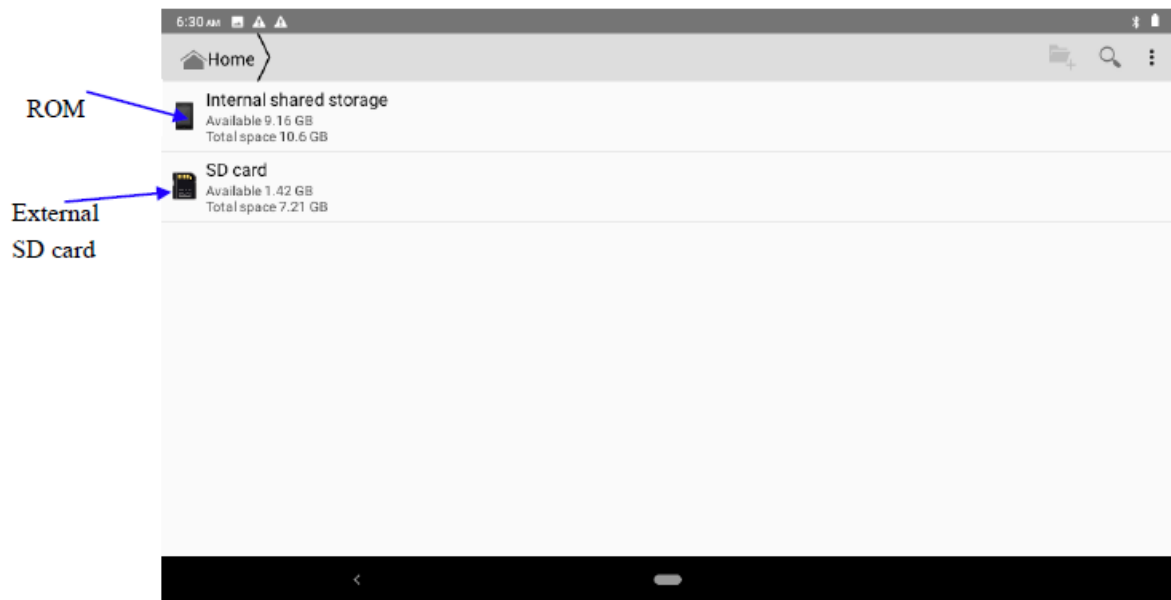 
1. Click .
2. Enter into the basic board of calculator.
3. Soft touch the numbers or operator in calculator to calculate.

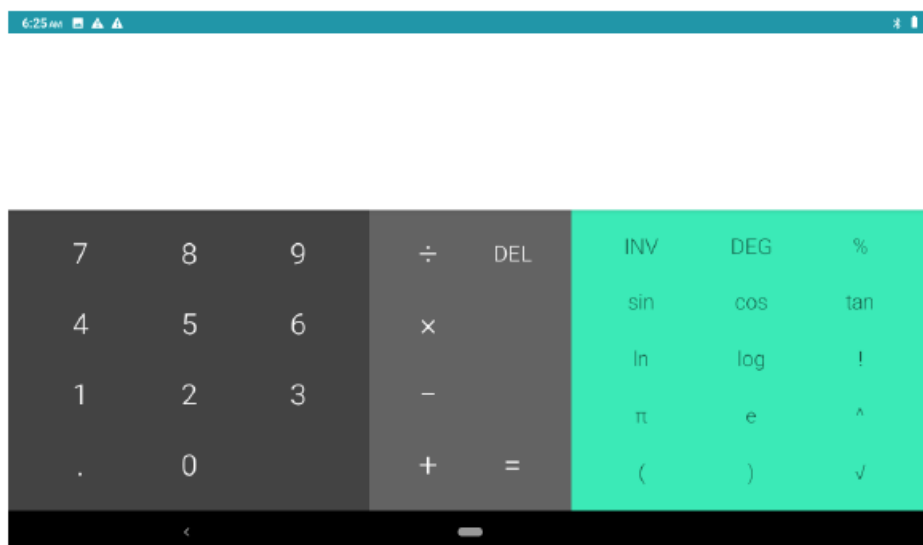

Picture 8.2-1


File Manager

- File manager will copy, cut, delete, rename the documents or the folder in the TF card, it also will share the files, install apk etc as Picture 8.3-1
- In the main menu or desktop, click the document manager icon  to enter into documents manager.




Picture 8.3-1

 - Copy, cut, delete, rename the files and folder: choose the file or folder, long press the file or folder to enter into the interface as Picture 8.3-2, you can operate the file or folder.

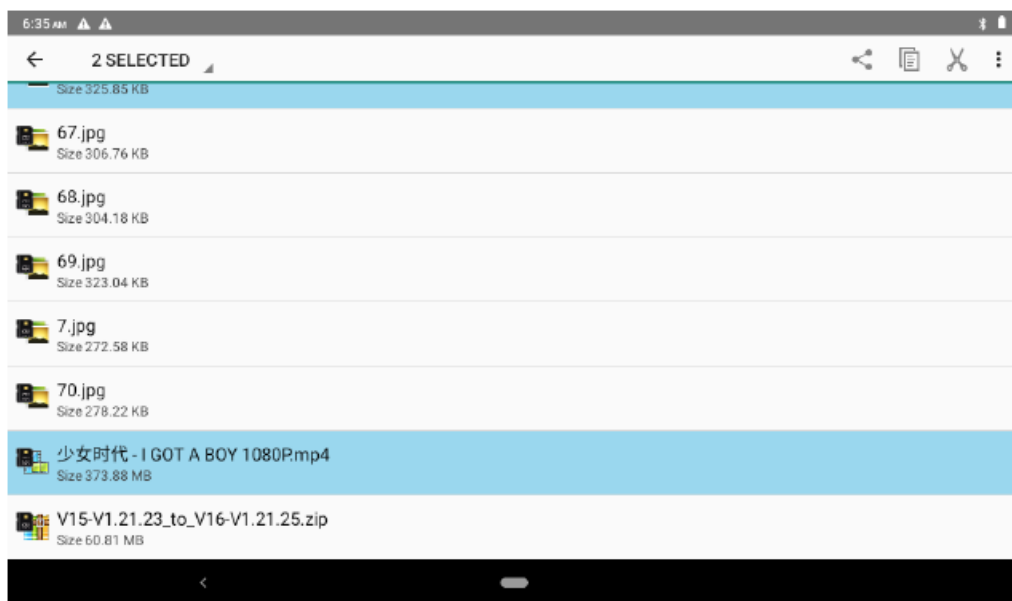


Picture 8.3-2

 - Paste the copy or cut file: choose the file you want to paste, icon to enter into Picture 8.3-3,

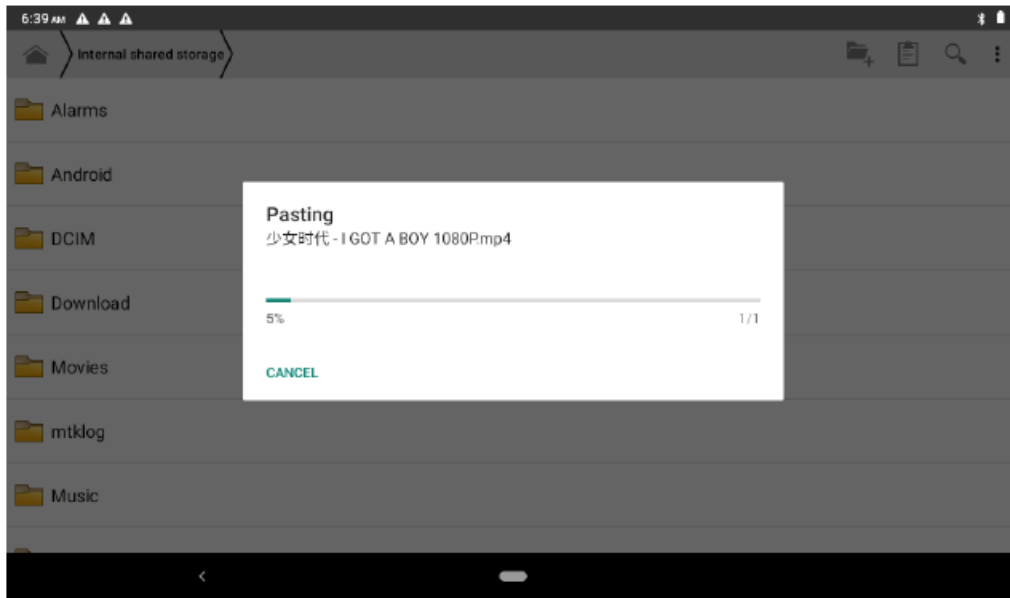


Picture 8.3-3



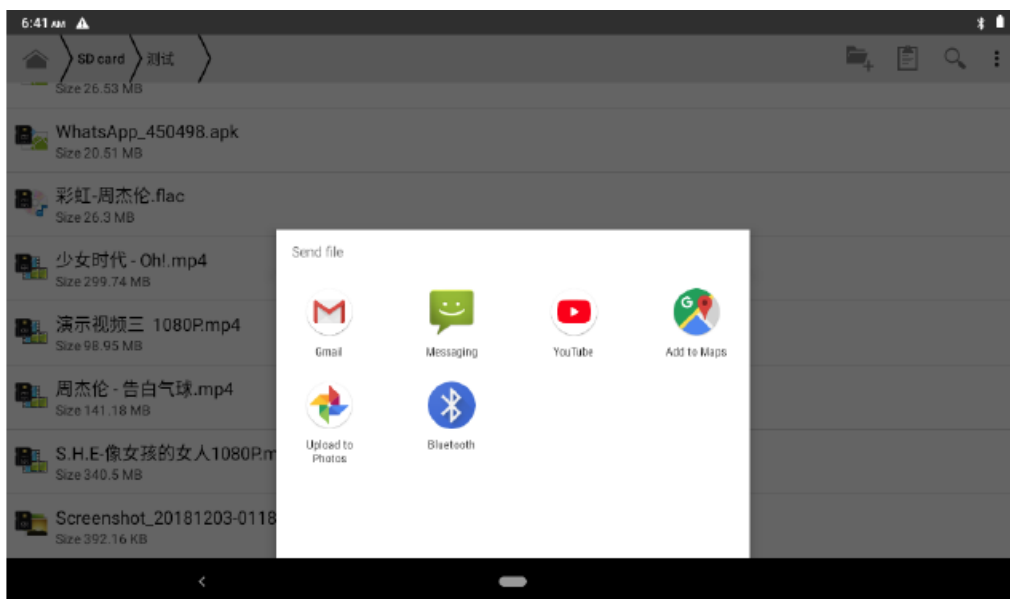 

- Share file: choose any file, long press it, it will popup “share”, choose the share way you want in the list Picture 8.3-4




Picture 8.3-4

- Install apk file Choose the file suffixed .apk in the file manager, you can install the third part software as reminder.
- Build new folder: Choose the menu you want to build the file, click  icon in right top, choose new folder, you can build new folder as reminder.

Recorder

In the main interface or desktop, click recorder icon  to enter into record interface, click record key  to start record. Click Stop key  to stop recording. Click Play key  to play the recorded sound. The system will auto remind you to use or abandon this record, please choose it manually. Play the record: choose the video player to

 play the recorded sound, choose the recorded sound in the source manager, and click it to play.

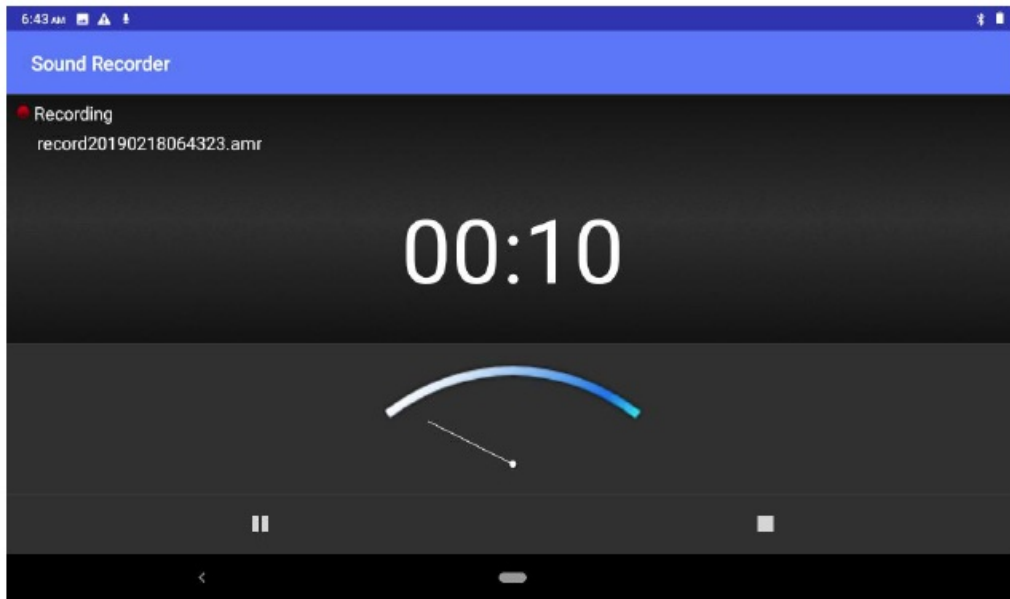

Picture 9.4-1

Installation of Procedures

Installation

Install the third party application procedure

1. Click “file manager” application procedure; choose the application procedure you need to install.
2. Hold the application procedure you need to install.
3. It popup install, click install apk.
4. Finish the installation as guide, it will operate.

Note: The third party procedure searched from internet to use on the system are all suffixed with .apk.

Uninstall

Uninstall application procedure

1. Click setting icon in main interface.
2. Click apps, list all the application procedures installed in the system.
3. Click the APK you want to uninstall, click uninstall.
4. Click confirm to finish uninstallation.

Skill: The procedure manager installed by system has many convenient methods to uninstall after opening procedure manager, click uninstall, it will list all the application procedures installed by system.

Troubles Shooting

The first startup of MID is slow

- After the MID system upgraded, the first startup need to install the pre-installed application software, the lead time is around 2-3 minutes, the startup afterwards will be much quicker.

MID can't connect Wi-Fi

- Make sure the wireless router of internet service can work in normal.
- Ensure the MID and wireless router in certain distance, and no wall or other barrier between them.
- Ensure the user name and password both correct.

MID feels hot

- When many application procedures are used in meanwhile, or the brightness of screen open to the lightest or under charging, MID may feel fever. It is normal.

Email can't be set or Registration of application procedure.

- Ensure your internet is well connected.
- Make sure your email setting way is correct.
- Keep your system time and local time consistent.

The system is abnormal and can't work

- When you install some third party application procedure, it may cause abnormal work, you can press Reset key(next to power port) to reset the system.

The webpage can't be opened

- Please keep the distance between from route to MID in effective range.
- Please restart WIFI and try again.

MID works terribly slow sometimes

- It is normal phenomenon. Please turn off some application you don't need in advanced task management, or uninstall some third party application to release more system resource.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is1.6 W/kg averaged over one gram of this Device TR6 WiFi (2AV3BTR6) has been tested against this SAR limit. SAR information on this can be viewed on-line at <http://www.fcc.gov/oet/ea/fccid/>. Please use the device FCC ID number for search. This device was tested for typical operations 0mm from the body. To maintain compliance with FCC RF exposure requirements, 0mm separation distance should. maintained to the user’s bodies

Documents / Resources

<div>TR6</div> <div>USER MANUAL</div>	<div> Technosource Hk TR6 10inches High Clear Board Computer [pdf] User Manual </div> <div> TR6 10inches High Clear Board Computer, TR6, 10inches High Clear Board Computer, High Cl ear Board Computer, Clear Board Computer, Board Computer, Computer </div>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.