



# TechTarget SN140MIAU Note Book Computer Instruction Manual

[Home](#) » [TechTarget](#) » TechTarget SN140MIAU Note Book Computer Instruction Manual 

TechTarget SN140MIAU Note Book Computer



## Contents

### 1 Product schematic

- 1.1 Instructions for use
- 1.2 User use of the security statement
- 1.3 Troubleshooting
- 1.4 Packing List
- 1.5 Wireless function
- 1.6 FCC WARNING

### 2 Documents / Resources

- 2.1 References


### 3 Related Posts

## Product schematic

1. Camera
2. Digital MIC
3. Touch Pad



- 4. TYPE-C
- 5. USB 3.1
- 6. HDMI
- 7. TYPE-C
- 8. Safe lock
- 9. Headphone combo
- 10. RJ45
- 11. USB 3.1
- 12. USB2.0
- 13. Micro SD

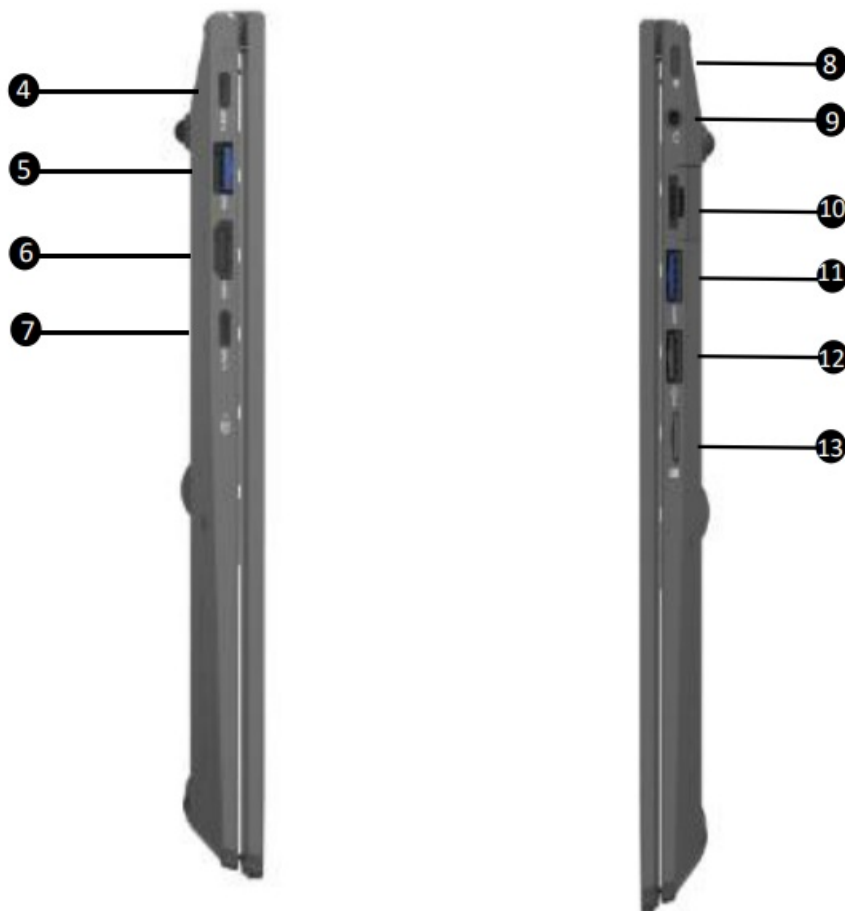

## Instructions for use

- When the computer is connected to the power adapter or the battery power is higher than the minimum requirement, press the power button short to start the computer;
- Press the power key briefly during use to suspend/resume/shutdown your computer.

## Function keys

This product has a total of 12 function keys-F1-F12;

These function keys are assigned different application functions, please refer to the following instructions to use;

**Fn +F1:**Increase the brightness of the display backlight.

**Fn +F2:**Decrease display backlight brightness.

**Fn +F3:**Turns the built-in speaker on or off.

**Fn+F4:**Decrease the built-in speaker volume.

**Fn +F5:**Increase the built-in speaker volume.

**Fn +F6:**Quick screenshot.

**Fn +F7:**Home

**Fn +F8:**Display mode switch

**Fn +F10:**Display mode off

**Fn +F11:**Play or pause media

**Fn +F12:**Turn airplane mode on or off

## Power supply and charging

- Please use the original power adapter to avoid damage to the computer.
- Do not expose the computer to rain or dew.

- Batteries contain toxic and harmful substances; please recycle the battery according to environmental protection regulations. Do not dispose of the battery at will to avoid environmental pollution.
- Do not place the computer near the edge of a fire source or other heat sources.
- Do not fiddle with the battery, and keep it out of the reach of children.
- Do not expose the notebook to dust or corrosive chemicals.
- Do not forcefully close the notebook screen, or pinch the display to lift the computer.

### **Cleaning, maintenance and storage**

- Do not spray water or other organic solvents directly onto the notebook display.
- It is strictly forbidden to use non-original batteries or other types of batteries; otherwise, there will be a risk of explosion.
- Turn off the system and unplug the adapter before cleaning the product.
- Wipe the product shell with a wet towel and dry it with a soft cloth.
- It is forbidden to clean with corrosive cleaning liquids.
- Do not immerse the product in water or other liquids.
- After cleaning, store the product in a dry, flat environment.

### **User use of the security statement**

Before using this product, please read the following guidelines in detail and abide by these rules, which can increase the service life of this product and avoid violation of the law.

### **Notes:**

- Turn off the laptop first.
- Make sure that the AC power adapter is connected to the computer and the power supply socket is powered.
- Ensure that all external devices connected are also unplugged to avoid them becoming a possible source of error.
- When charging the battery, if you are still using the laptop, the charging time will be longer.
- If you want to charge the battery quickly, put the computer on hold or turn off the laptop while charging.
- In order to extend the life of lithium batteries, it will be charged when the power <95% and not charged when the power  $\geq 95\%$ .
- When the battery is low, the screen will show prompt information. The battery will continue to work until the power is too low and might cause data loss. Please charge it in time.

### **Troubleshooting**

General issues can often be resolved by following these steps:

1. Turn off the laptop.
2. Ensure the AC power adapter is connected and powered.
3. Ensure all external devices are unplugged.
4. Verify the boot sequence after opening or restarting the laptop

## Packing List

- Quick start guide \*1
- Adapter \*1
- Notebook computer \*1

## Wireless function

- BT
- BLE
- 2.4GWIFI
- 5GWIFI

**Note:** The device could not support transmission with BT, BLE, 2.4GWIFI and 5GWIFI simultaneously.

## FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.


**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radiocommunications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Note:** The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or in conjunction with any other antenna or transmitter.

## Documents / Resources

	<p><a href="#">TechTarget SN140MIAU Note Book Computer</a> [pdf] Instruction Manual 2AQNA-SN140MIAU, 2AQNASN140MIAU, sn140miau, SN140MIAU Note Book Computer, SN140MIAU, Note Book Computer, Book Computer, Computer</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.