



techtopy FOGGER V9 Stage Fog Machine User Manual

[Home](#) » [techtopy](#) » techtop FOGGER V9 Stage Fog Machine User Manual 

Contents

- 1 techtop FOGGER V9 Stage Fog Machine
- 2 INTRODUCTION
 - 2.1 SAFETY INSTRUCTIONS
 - 2.2 FEATURES
- 3 STARTING OPERATION
- 4 TECHNICAL SPECIFICATIONS
- 5 Documents / Resources
- 6 Related Posts



techtopy FOGGER V9 Stage Fog Machine



CAUTION

- Keep this device away from rain and moisture
- Unplug mains lead before opening the housing
- Make sure of the voltage on your end suitable for the unit

For your own safety, please read this user manual carefully before you initially start-up. Every person involved with the installation, operation and maintenance of this device has to

- be qualified
- follow the instructions of this manual

INTRODUCTION

Thank you for having chosen club smoke DMX series. You will see you acquired a powerful and versatile device. Unpack your item. Before you initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.

SAFETY INSTRUCTIONS

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature. Always plug in the power plug last. Make sure that the power switch is set to OFF position before you connect the device to the mains. Never let the power cord come into contact with other cables! Handle the power cord and all connections with the mains with particular caution! Make sure that the available voltage is not higher than stated on the rear panel. Make sure that the power cord is never crimped or damaged by sharp edges. Check the device and the power cord from time to time.

CAUTION! Before filling the machine disconnect from mains. Never drink fluid or use it on the inside or outside of a human body. If fluid gets in contact with skin or eyes, rinse thoroughly with water. If it is necessary call a doctor immediately!

DANGER OF EXPLOSION! Never add flammable liquids of any kind to the fog liquid. Keep device upright. Never aim the output nozzle directly at people or at open flames.

DANGER OF BURNING! Keep minimum distance of 50 cm to nozzle! Always disconnect from the mains, when the device is not in use or before cleaning it. Only handle the power cord by the plug. Never pull out the plug by tugging the power cord. Keep away children and amateurs!
Never leave this device running unattended.

FEATURES

- Ideal for party-rooms or small discotheques,
- Powerful output,
- With remote control,
- Quality thermostat,
- Overheat protective switch,
- Constant and steady output fog;

STARTING OPERATION

1. ON/OFF control

Connect the remote control box to the 5-pin socket on the rear of the fogger and then you can press the button on the box to on/off emit the fog. After a certain warm-up time, the device is ready to operate. Upon warming up, the stand-by lamp, red LED, of the remote control lights up. When the green led lights up, the fogger is ready to emit and by switching the control box the fogger starts emission. The temperature is regulated by a high quality thermostat.

2. Wireless remote control

Connect the remote control box/receiver to the 5-pin socket on the rear of the fogger and then you can use the wireless launcher to on/off emit the fog. The dip switches on the remote receivers of foggers can be set to the same addressing and then the foggers can be controlled simultaneously by the remote launcher.

CAUTION: The escape nozzle will heat up during operation. Therefore do not touch the nozzle until it has cooled down completely.

Cleaning the heating element

The heating element should regularly be cleaned every 30 operational hours in order to avoid clogging. Use haze machine cleaner available at your dealer.

Procedure:

Fill cleaner into empty tank. Run the machine several times in a well-ventilated room only. The number of repetitions depends on the pollution level of the vaporizing elements. After use clean all remaining cleaner and rinse the tank thoroughly. There are no serviceable parts inside the device except for the fuse. Maintenance and service operations are only to be carried out by authorized dealers.

Replacing the fuse

If the fine-wire fuse of the device fuses, only replace the fuse by a fuse of same type and rating. Before replacing the fuse, unplug mains lead.

Procedure:

Step 1: Open the fuse holder on the rear panel with a fitting screwdriver.

Step 2: Remove the old fuse from the fuse holder.

Step 3: Install the new fuse in the fuse holder.

Step 4: Replace the fuse holder in the housing.

Should you need any spare parts, please use genuine parts.

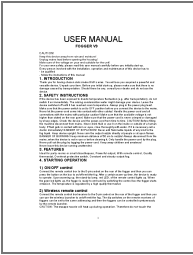
If the power supply cable of this device will be damaged, it has to be replaced by a special power supply cable available at your dealer. If defective, please dispose of the unusable device in accordance with the current legal regulations. Should you have further questions, please contact your dealer.

TECHNICAL SPECIFICATIONS

Power supply: 230 V AC, 50 Hz
Fuse: 250V 5A
Power consumption: max.900 W
Warm-up time: approx. 5 min.
Fog output:4500 cuft/min
Tank capacity:1.3L
Dimension:250*250*175mm
Weight:3.60kgs

Please note: Every information is subject to change without prior notice.

Documents / Resources

	<p>techtap FOGGER V9 Stage Fog Machine [pdf] User Manual FOGGER V9, Stage Fog Machine, FOGGER V9 Stage Fog Machine</p>
---	--