



TechXtras TECH2007 Bluetooth Portable Karaoke with Disc Lights User Manual

[Home](#) » [Techxtras](#) » TechXtras TECH2007 Bluetooth Portable Karaoke with Disc Lights User Manual 

Contents

- [1 TechXtras TECH2007 Bluetooth Portable Karaoke with Disc Lights](#)
- [2 Functions](#)
- [3 Operation](#)
- [4 Specifications](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)




TechXtras TECH2007 Bluetooth Portable Karaoke with Disc Lights



Functions

1. Light Mode
2. Song Selection
3. Power ON/OFF
4. Drum Rhythms
5. Play/Pause
6. Previous Track/Next Track
7. Bluetooth Mode
8. Volume Adjustment
9. Microphone Jack
10. USB Power Cable
11. DC SV Port
12. Aux Line-in
13. 3.5mm Cable
14. Aux Jack on your Device

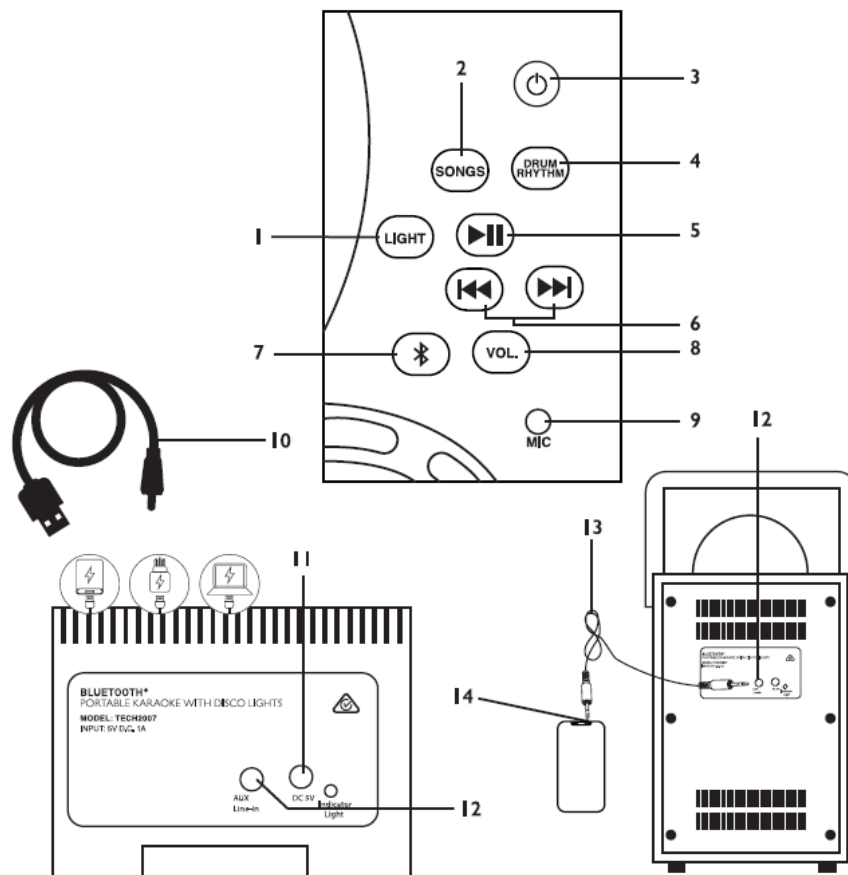

Operation

Powering up the Unit

The Karaoke Speaker is powered with the USB Power Cable (supplied). Connect the USB Power Cable with the Karaoke Machine DC SV port (/ /). Insert the USB Power Cable end into an appropriate SV 1 A USB port.

Switching ON/OFF


To switch ON/OFF, simply press the button  (3).

Note: 10 minutes after turning the Karaoke Machine on and no operation, it will turn off automatically

Demo Songs

This Karaoke Machine has 70 preloaded demo songs.

To choose the preloaded tracks, press the SONGS key (2) in succession.

Press  (5) to play/pause the song.

Rhythm Selections

You can select one of the 20 rhythms by pressing the DRUM RHYTHM (4) button.

Press  (5) to play/pause the Drum Rhythm.

Playing Music via Bluetooth

1. Press Bluetooth button(7) you will hear a prompt sound.
2. Turn on Bluetooth on your electronic device. Search on the Bluetooth menu and select the pairing name relevant to the color of your karaoke machine TECH2007 or TECH2111. Once connected you will hear a prompt sound.
3. Choose a song from the playlist on your electronic device and play it. You can listen to the song through the Karaoke speaker and sing along.
4. Press Bluetooth button (7) again to disconnect from your mobile device or turn off the Bluetooth connection on your mobile device. You will hear a prompt sound.

Note: Please switch off the Bluetooth connection when you receive calls from your mobile devices. Do this by simply pressing the Bluetooth button* (7).

Playing Music via 3.5mm audio cable

With the 3.5mm cable supplied, you can connect an external audio source (MP3 player, iPod, smartphone, etc.).

1. Insert the 3.5mm cable (13) into the AUX Line-in port (/ 2).
2. Insert the other end of the cable into the 3.5mm jack of your music player or another audio source (14).
3. Turn on the player, or other music sources and adjust the volume to balance the voice with the music.

Play/Pause

While playing music, press the ►|| (5) button to pause/play the song.

Previous/Next Song

To choose the previous or next song, press the ►► or ◀◀ (6) buttons.

Volume Control

Adjust volume to the desired level by using the VOL. button (8) or the volume control buttons on your music devices.

Disco Light ON/OFF


Press the LIGHT button (/)to activate or deactivate the light effects of the Karaoke Speaker.

Product Specifications

Specifications

- Bluetooth Version: 5.0
- Bluetooth Operating Distance: 10m
- Material: ABS plastic
- Microphone jack
- AUX connection
- 70 Built-in songs
- 20 Drum rhythms
- Entertaining LED disco lights
- Built-in mobile device holder
- USB Cable Length: 82.5cm

Documents / Resources

	<p>TechXtras TECH2007 Bluetooth Portable Karaoke with Disc Lights [pdf] User Manual TECH2007, TECH2111, Bluetooth Portable Karaoke with Disc Lights, TECH2007 Bluetooth Portable Karaoke with Disc Lights</p>
---	---