



Techxtras TECH2146 Wireless Speaker with FM Radio User Manual

[Home](#) » [Techxtras](#) » Techxtras TECH2146 Wireless Speaker with FM Radio User Manual



WIRELESS SPEAKER
TECH2146 – Black, TECH2147 – Purple
TECH2148 – Rose Gold, TECH2149 – Silver



Contents [[hide](#)]

- [1 Specifications](#)
- [2 Contents](#)
- [3 How to use the Speaker:](#)
- [4 Safety Instructions](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)


Specifications

Size:	280 x 40 x 52mm
Weight:	315g
Speaker Output:	3W x 2
Frequency Range:	100Hz-20kHz
Charging Voltage:	5V d.c / 500mAh
Wireless Operating Distance:	10m
Battery Capacity:	1200mAh
Material:	ABS and Metal

Contents

1 x Wireless Speaker
1 x Charging Cable
1 x User Manual

How to use the Speaker:

Power ON/OFF	Rear Switch 
Play	Press 
Pause	Press 
Change Mode	Press 
Answer Call	Press 
End Call	Press 
Decline Call	Press and hold 
Redial Last Call	Press twice 
Next Song	Press 
Previous Song	Press 
Volume Up	Press and hold 
Volume Down	Press and hold 
FM Search	Press and hold 

Safety Instructions

- The device may become warm while charging.

- Do not press the buttons too hard as it could damage the product.
- Do not leave in direct sunlight for extended periods of time during hot weather.
- Only use a dry cloth to keep the product clean from dust.
- Do not use chemicals on this product.
- Avoid dropping the product as it could damage the product.

Charging the speaker using a charger cable

- Insert charging cable into micro USB port marked DC 5V.
- Fully charge before first use.

Mode Button

- When multiple media devices are connected via wireless, Aux, USB or TF you can cycle through them by pressing the mode button.

Wireless Music Function

- Look for the ID relevant to the color of your product TECH2146/47/48/49 and connect on your device (phone, tablet etc.) and select it.
- There is a prompt sound once the speaker is successfully connected.
- Play music from your smart device and enjoy music on the go.

FM Radio Function

- Press the mode button to switch mode to FM.
- Search for channels by pressing and holding the play/pause button.
- Adjust the tuning up or down by pressing the plus or minus button.
- Whilst in FM mode, press and hold the plus or minus button to increase or decrease volume.

Phone Calls

- To answer, press the play/pause button.
- To end the call press the play/pause button.
- To reject a call, press and hold the play/pause button.
- To redial the last number called press the play/pause button twice.
- On completion of the call, the speaker will automatically recommence playback.

AUX Function

- Use a 3.5mm AUX-In cable to connect your media device through the AUX port on the speaker.
- Connect another end of the AUX cord to your device. You can now play music through the speaker.

USB Play

- Play music from a USB flash drive by inserting the USB into the USB port.
- Supports MP3 format files.
- Press the play/pause button to start playback.

TF Card

- Play music from a TF card by inserting the card into the TF card port.
- Press the play/pause button to start playback.



WARNING Do not dispose of units in fire or water. Never attempt to disassemble and reassemble. Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. Check with your local authority for recycling advice. Keep your device and all accessories out of the reach of children and animals. Small parts may cause choking or serious injury if swallowed. Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. Do not allow your device to get wet—liquids can cause serious damage. Do not handle your device with wet hands

Documents / Resources

	<p>Techxtras TECH2146 Wireless Speaker with FM Radio [pdf] User Manual TECH2148, TECH2149, TECH2147, TECH2146 Wireless Speaker with FM Radio, TECH2146, Wireless Speaker with FM Radio</p>
--	--