

TECKNET TK-KM001 Mini Wireless Keyboard and Mouse Set User Manual

Home » TECKNET » TECKNET TK-KM001 Mini Wireless Keyboard and Mouse Set User Manual



TECKNET

Wireless Keyboard and Mouse Combo



TK-KM001 User Manual


any problem using this wireless keyboard and mouse combo, please contact us by email at support@tecknetonline.com.

The combo includes a Wireless Keyboard (EWK01315) and a Wireless Mouse (TK-KM001).


Contents


- 1 Package Contents
- **2 Product Overview**
- 3 Specifications
- 4 How to Use
- 5 IMPORTANT SAFETY INSTRUCTIONS-CAREFULLY FOLLOW THESE INSTRUCTIONS.
- **6 Limited 12-Month Warranty**
- 7 Documents / Resources
 - 7.1 References

Package Contents

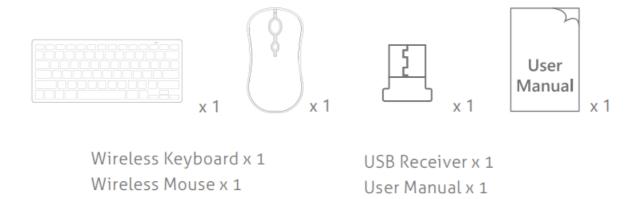


Product Overview

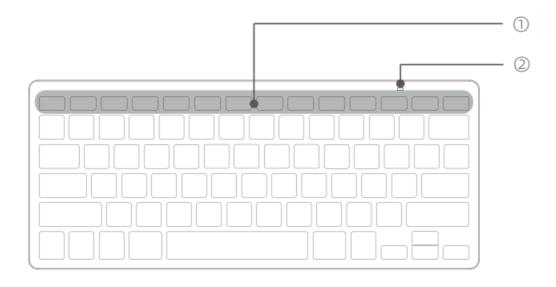

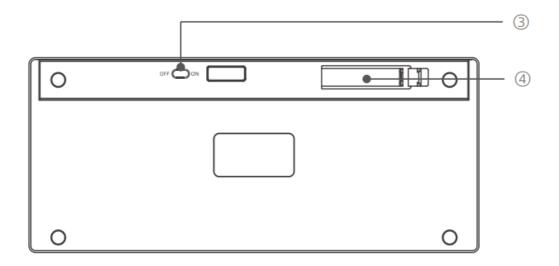

- 1. Hot Keys
- 2. Status Indicator
- 3. On/Off Switch
- 4. AAA Battery Compartment

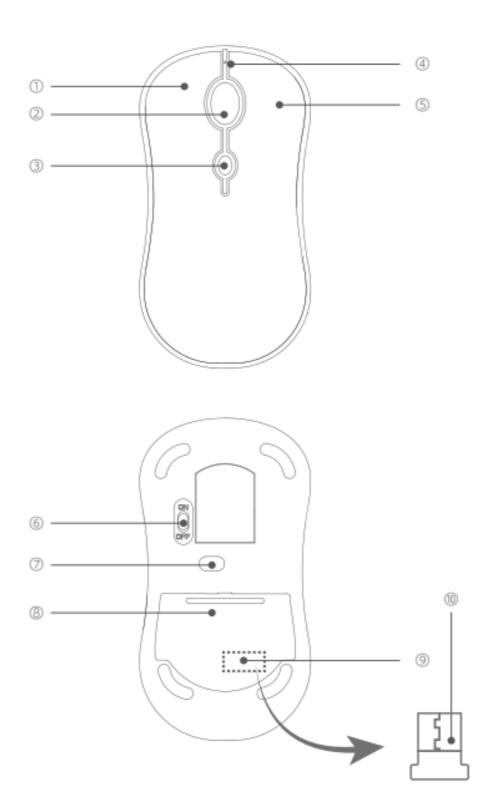

- 1. Left Button
- 2. Scroll Wheel
- 3. DPI Button
- 4. Status Indicator
- 5. Right Button
- 6. On/Off Switch
- 7. Optical Sensor
- 8. AAA Battery Compartment
- 9. Receiver Compartment
- 10. USB-A Receiver (Inside the Mouse)

Specifications

Mouse

Connection Mode: 2.4GHz Connection

Receiver Type: USB 2.0

Battery: 2 AAA Batteries (not included)

Working Voltage: 2.0-3.2V Working Current: ≤4mA Standby Current: ≤1mA Battery Life: 200hrs

Entering Sleep Mode in: 10 Minutes (without operation)

To Wake the Mouse: Click any Button

Transmission Power: 2.24dBm

Keyboard

Connection Mode: 2.4GHz Connection Battery: 2 AAA Batteries (not included)

Working Voltage: 2.0-3.2V Working Current: ≤2.5mA Standby Current: ≤1mA

Entering Sleep Mode in: 5 Seconds
To Wake the Keyboard: Press any Button


Transmission Power: -9.953dBm

How to Use

The keyboard/mouse supports 2.4GHz connection, and the receiver has been paired to the keyboard and the mouse by the manufacturer. Make sure there is an available USB-A port on your computer for inserting the receiver. Prepare 4 high-quality AAA batteries before connecting. The mouse and keyboard combo is supplied with a receiver, which is placed in the receiver compartment beside the battery compartment. The supplied receiver support connecting both the mouse and the keyboard to the computer, or connecting the mouse or the keyboard to the computer separately.

To Connect the Mouse

- 1. Open the battery cover at the bottom of the mouse and take out the receiver.
- 2. Insert 2 AAA batteries with the correct polarity (refer to the polarity instructions in the battery compartment), and then close the battery cover.
- 3. Plug the receiver into a USB-A port on the computer, and the computer will recognize the receiver.
- 4. Turn on the On/Off switch of the mouse, and the status indicator lights in red for 3 seconds and goes out. The mouse can be used now.

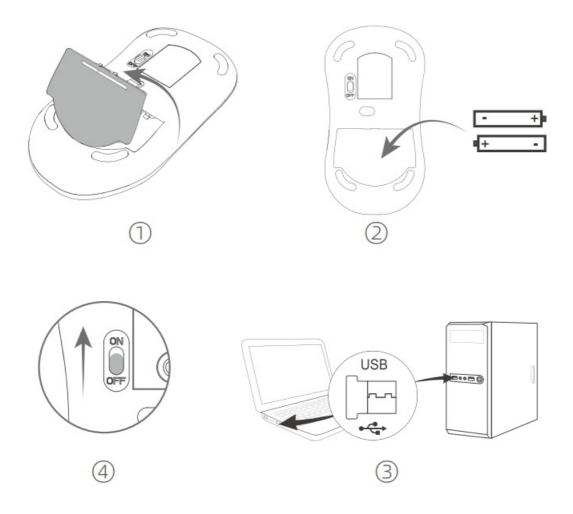

To Change the DPI Setting

- 1. The mouse supports 3 DPI levels
- 2. Short press the DPI button and the status indicator flashes, indicating the DPI level has been changed. Repeat pressing the DPI button to cycle through the 3 DPI levels.

To Connect the Keyboard

- 1. Open the battery cover at the bottom of the keyboard.
- 2. Insert 2 AAA batteries with the correct polarity (refer to the polarity instructions in the battery compartment), and then close the battery cover.
- 3. If you want to use the keyboard alone, take out the receiver from the mouse and plug it into a USB-A port on the computer. The computer will recognize the receiver. Skip this step if using the keyboard and the mouse together.
- 4. Turn on the On/Off switch of the keyboard, and the status indicator on the keyboard lights in red for 3 seconds and goes out. The keyboard can be used now.

Keyboard Status Indicator

- 1. When the keyboard is in Caps Lock mode, the status indicator lights in green. When Caps Lock is off, the green light goes off.
- 2. The red light is the power indicator. When the power is turned on, the status indicator lights in red for 3

seconds and goes out.

3. The status indicator flashes once per second in red when the battery is low (5%). Replace the batteries ASAP.

Function Keys

Fn + Ecs Media = Start the Player Fn +F1 ^{▶/||} =Play/Pause Fn + F2 = Previous Track Fn +F3 ► =Next Track Fn +F4 ^{◀)))} =Volume Up Fn + F5 =Volume Down Fn + F6 = Mute Fn + F8 =Search Fn + F9 =Open Browser Favorites Fn + F10 =Put the PC into Sleep Mode Fn + F11 Insert = Toggle between Overwrite and Insert Text Mode Fn + F12 Prt Sc = Screenshot Fn + Home = Move the Cursor to the Beginning of the Line Fn + PgDn =Page Down/Scroll Down Fn + End = Move the Cursor to the End of the Line =Page Up/Scroll Up

To Change the Batteries Mouse

- 1. The status indicator flashes red to indicate that the mouse is in a low-battery condition (5%) until the batteries run out, and then the mouse will shut down.
- 2. Open the battery cover and remove the batteries.
- 3. Insert 2 AAA batteries and replace the battery cover.

Keyboard

- 1. The status indicator flashes once per second in red when the battery is low (5%) until the batteries run out, and then the keyboard will shut down.
- 2. Open the battery cover and remove the batteries.
- 3. Insert 2 AAA batteries and replace the battery cover.

To Pair the Receiver and the Mouse/Keyboard

The receiver has been paired to the keyboard and the mouse by the manufacturer. If a disconnection occurs or repairing is needed, follow the steps below:

- 1. Turn on the keyboard. Press and hold Esc + Q for 3 seconds, and the status indicator flashes red quickly, indicating the keyboard enters pairing mode. Immediately plug the receiver into the USB-A port of the computer, and move the keyboard close to the receiver. The status indicator flashes slowly for 3 seconds and goes out to indicate that the connection is established. The status indicator flashes quickly for 10 seconds and goes out to indicate that the connection has failed.
 - Unplug the receiver and turn off the keyboard. Try the pairing steps above again.
- 2. After the keyboard is paired, unplug the receiver and get ready to pair the mouse.
- 3. Press and hold the Scroll Wheel and Right Button, and turn on the mouse at the same time. Two seconds after the mouse is turned on, release the Scroll Wheel and Right Button, then the status indicator on the mouse flashes quickly to indicate that the mouse enters pairing mode. Immediately plug the receiver into the USB-A port of the computer, and move the mouse close to the receiver. The status indicator flashes slowly for 3 seconds and goes out to indicate that the connection is established. The status indicator flashes quickly for 10 seconds and goes out to indicate that the connection has failed. Unplug the receiver and turn off the mouse. Try the pairing steps above again.

Notes:

- 1. The sequence in which the keyboard/mouse is paired with the receiver does not affect the pairing. When the keyboard is pairing, turn off the mouse.
- 2. Plug the receiver into the USB-A port on the computer immediately after the keyboard/mouse enters pairing mode. If the interval is too long, you may fail to establish the connection.
- 3. If the connection fails, unplug the receiver, turn off the keyboard/mouse, and then try the pairing steps again.

Sleep Mode

Both the keyboard and mouse have an automatic sleep function, which saves power consumption and increases battery life. When the computer is on and not in hibernation, the mouse will enter sleep mode after 10 minutes of inactivity. Press any button of the mouse to wake it up, and the wake-up time is within 1 second. The keyboard will enter sleep mode after 5 seconds of inactivity. Press any key on the keyboard to wake it up, and the wake-up time is within 1 second.

Cautions

- 1. Do not expose the product to liquid and humid environments or use it near bathtubs, sinks, or swimming pools.
- 2. Do not expose the product to excessively high or low temperatures.
- 3. Do not leave the product in direct sunlight for a long time.
- 4. Avoid scratching the product with sharp objects.
- 5. If the product will not be used for a long time, turn off the product and take out the batteries.
- 6. Replace the batteries in time for the product when the battery is low.
- 7. Batteries are not included in the package.

IMPORTANT SAFETY INSTRUCTIONS-CAREFULLY FOLLOW THESE INSTRUCTIONS.

- 1. RETAIN THESE INSTRUCTIONS This sheet contains important safety and operating instructions.
- 2. Before using the product, read all instructions and caution markings on the product, accessories, and device.
- 3. Children should be supervised to ensure that they do not play with the appliance.

- 4. Keep the product away from the fire to avoid an explosion.
- 5. Do not place the product in or near an inflammable, explosive, or hazardous object.
- 6. Do not operate the product with a damaged cord or plug.
- 7. Do not operate the product if it has been damaged in any way.
- 8. Do not disassemble the product. Disassembly may result in a risk of safety hazards.
- 9. Do not throw or shake the product.
- 10. To reduce the risk of electric shock, unplug the product from the power supply when not in use or switch off the power supply.

Correct Disposal of This Product (Waste Electrical& Electronic Equipment)

This Marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contact. This product should not be mixed with other commercial wastes for disposal.

Limited 12-Month Warranty



What this warranty covers.

Shenzhen Unichain Technology Co., LTD. (Manufacturer: "Unichain") warrants to the original purchaser of this TeckNet product that the product shall be free of defects in design, assembly, material, or workmanship.

What the period of coverage is.

Unichain warrants the TECKNET product for 12 Months.

What will we do to correct problems?

Unichain will repair or replace, at its option, any defective product free of charge (except for shipping charges for the product).

What is not covered by this warranty?

All above warranties are null and void if the TeckNet product is not provided to Unichain for inspection upon Unichain's request at the sole expense of the purchaser, or if Unichain determines that the TeckNet product has been improperly installed, altered in any way, or tampered with. The TeckNet Product Warranty does not protect against acts of God such as flood, earthquake, lightning, war, vandalism, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (e.g. brownouts or sags), non-authorized program, or system equipment modification or alteration.

How to claim the warranty

Please contact retailers or visit TECKNET website or email support@tecknetonline.com for more information. To extend the warranty period, please visit TECKNET website and register your TECKNET products within 90 days of purchase.

Disclaimer

Every effort has been made to ensure that the information and procedures in this guide are accurate and complete, no liability can be accepted for any errors or omissions and we reserve the right to make any changes without further notice to any products mentioned herein.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, Shenzhen Unichain Technology Co., Ltd. declares that the product type TK-KM001 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: https://eu.tecknetonline.com/

Documents / Resources

TECKNET TK-KM001 Mini Wireless Keyboard and Mouse Set [pdf] User Manual EWK01315, TK-KM001, TK-KM001 Mini Wireless Keyboard and Mouse Set, Mini Wireless Keyboard and Mouse Set, Wireless Keyboard and Mouse Set, Keyboard and Mouse Set, Mouse Set, Set

References

- SestShop | Best Price, Smart Shopping
- M TECKNET EU
- User Manual

Manuals+.