

TECSHOW 3 In 1 Effect Strobebox User Manual

Home » TECSHOW » TECSHOW 3 In 1 Effect Strobebox User Manual

Contents

- 1 TECSHOW 3 In 1 Effect
- Strobebox
- 2 Specifications
- **3 Product Usage Instructions**
- **4 Frequently Asked Questions**
- **5 INTRODUCTION**
- **6 DISPLAY MENU**
- **7 DMX CHANNELS**
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts



TECSHOW 3 In 1 Effect Strobebox



Specifications

• Product Name: Strobe 3-in-1 Strobe Effect

Model: STROBEBOX

• DMX Channels: 12/45 channels

Power Supply: AC 100-240V, 50/60Hz

• Power Consumption: 50W

• Dimensions: 10 x 5 x 3 inches

• Weight: 2 lbs

Product Usage Instructions

Safety Precautions

Before installing or operating the unit, please ensure the following safety measures:

- Read the user manual carefully.
- Mount the fixture in areas away from walking paths and seating areas.
- Ensure the installation area can hold a load of at least 10 times the device's weight.
- · Always use a safety cable as a secondary attachment.
- Keep the fixture at least 0.5m away from flammable materials.

Installation

Follow these steps to install the Strobe 3-in-1 Strobe Effect:

- 1. Securely mount the fixture in a suitable location.
- 2. Use the supplied safety cable as an additional security measure.
- 3. Avoid standing directly below the device during installation or servicing.
- 4. Ensure the fixture is placed at a safe distance from any flammable objects.

Operation

To operate the Strobe Effect, follow these guidelines:

- 1. Refer to the DMX Channels section in the manual for detailed information on channel settings.
- 2. Select the desired channel mode and working mode based on your requirements.
- 3. Adjust the color settings, strobe effects, and speed controls as needed.
- 4. Utilize the sound control feature for dynamic lighting effects.

Frequently Asked Questions

• Q: How do I set up the DMX channels for different effects?

 A: Refer to the DMX Channels section in the manual for specific channel values and descriptions for various effects.

• Q: Can I use this product outdoors?

 A: It is recommended to install the fixture in covered outdoor areas to protect it from environmental elements.

• Q: What is the power supply requirement for this unit?

A: The Strobe 3-in-1 Strobe Effect operates on AC 100-240V, 50/60Hz power supply.

INTRODUCTION

For your own personal safety, please read and understand this manual completely before you attempt to install or operate this unit!

- Please keep this User Manual for future reference. If you sell the unit to another user, be sure that he also receives this instruction booklet.
- Unpack and check the unit carefully that it has not been damaged during transport before using the unit.
- Before operating, ensure that the voltage and frequency of power supply match the power requirements of the unit.
- The unit should be connected to a main socket outlet with a protective earth connection.
- The unit is for indoor use only in a dry location.
- The unit must be installed in a location with adequate ventilation, at least 0,5m from adjacent surfaces. Be sure that no ventilation slots are blocked.
- · Disconnect mains power before fuse replacement or servicing.
- Replace fuse only with the same type.
- Make sure there are no inflammable material close to the unit during operation.
- Use safety cable when fixing this unit. In the event of serious operating problem, stop using the unit immediately.
- Never try to repair the unit by yourself. Repair carried out by unskilled people can lead to damage or malfunction.
- Please contact the nearest authorized technical assistance center and always use the same type of spare parts.
- Do not touch any wires during operation as high voltage might be causing electric shock.

CAUTION!

For added protection mount the fixtures in areas outside walking paths ,seating areas,or in areas were the fixture might be reached by unauthorized personnel

Before mounting the fixture to any surface ,make sure that the installation area can hold a minimum point load of 10 times the device's weight. Fixture installation must always be secured with a secondary safety attachment ,such as an appropriate safety cable. Never stand directly below the device when mounting ,removing ,or servicing the fixture, from a ceiling,or set on a flat level surface (see illustration below). Be sure this fixture is kept at least 0.5m (1.5ft) away from any flammable (decoration etc.) Always use and install the supplied safety cable as a safe cable as safety measure to prevent accident damage and /or injury in the event the clamp fails.

DISPLAY MENU



.001	A512		Address code selection
2Ch	45ch	117ch	Channel mode selection
1ast	D512		Working mode selection
Su0	Su59		Sound control effect
6e00	Se99		Sound control sensitivity
u 0	Au59		Auto effect
Sp1	Sp 9		Auto effect speed
01	Co 7		Static color selection
Red	0	255	Red
Green	0	255	Green
Bule	0	255	Blue
Vhite	0	255	White
strobe	0	255	Strobe
SIP			Display upside down
′10	_		Machine version
	last u0 e00 u 0 p1 o1 ed reen ule l/hite trobe SIP	2Ch 45ch last D512 u0 Su59 e00 Se99 u 0 Au59 p1 Sp 9 o1 Co 7 ed 0 reen 0 ule 0 /hite 0 SIP	2Ch 45ch 117ch last D512 u0 Su59 e00 Se99 u 0 Au59 p1 Sp 9 o1 Co 7 ed 0 255 reen 0 255 ule 0 255 trobe 0 255

DMX CHANNELS

12 CHANNEL

CHS	CH VALUE	FEATURE DESCRIPTION	
1	000-255	All dimmer 0–100%	
2	000-255	strobe-5050	
3	000-255	Dimmer red-5050 0-100%	
4	000-255	Dimmer green-5050 0-100%	
5	000-255	Dimmer blue-5050 0-100%	
6	000-255	Dimmer white-3535 0-100%	
	000-007	No function	
	008-131	No function	
	132-139	No function	
	140-181	Pulse effect slow to fast, fast close and slow open	
7	180-189	No function	
	190-231	Pulse effect slow to fast, slow close and fast open	
	232-255	Pulse effect slow to fast, slow close and fast open	
	000-007	No function	
	008-12	Color chase 1	
	13-16	Color chase 2	
8	227-247	Color chase 59	
	248-255	Sound controlled strobe	
	000-007	No function	
	008-12	Pattern 1	
	13-16	Pattern 2	
9	227-247	Pattern 59	
	248-255	Pattern 60	
10	000-255	Run Color	
11	000-255	Run Background Color	
12	000-255	Speed control slow-fast	

45 CHANNEL

CHS	CH VALUE	FEATURE DESCRIPTION	
1	000-255	All dimmer 0–100%	

2	000-255	Strobe-5050	
3	000-255	Dimmer white-3535 0-100%	
	000-007	No function	
	008-131	Strobe effect slow to fast	
	132-139	No function	
	140-181	Pulse effect slow to fast, fast close and slow open	
4	180-189	No function	
	190-231	Pulse effect slow to fast, slow close and fast open	
	232-255	No function	
5	0-255	Color 1	
6	0-255	Color 2	
7	0-255	Color 3	
8	0-255	Color 4	
9	0-255	Color 5	
10	0-255	Color 6	
11	0-255	Color 7	
12	0-255	Color 8	
13	0-255	Color 9	
•••			
40	0-255	Color 36	
	000-007	No function	
	008-12	Color chase 1	
	13-16	Color chase 2	
41	227-247	Color chase 59	
	248-255	Sound controlled strobe	
	000-007	No function	
	000-007	No function	
	13-16	Pattern 2	
42	227-247	Pattern 59	
	248-255	Pattern 60	

CHS	CH VALUE	FEATURE DESCRIPTION	
43	000-255	Run Color	
44	000-255	Run Background Color	
45	000-255	Speed control slow-fast	

117 CHANNEL

снѕ	CH VALUE	FEATURE DESCRIPTION	
1	000-255	All dimmer 0–100%	
2	000-255	Strobe-5050	
3	000-255	Dimmer white-3535 0-100%	
	000-007	No function	
	008-131	Strobe effect slow to fast	
	132-139	No function	
	140-181	Pulse effect slow to fast, fast close and slow open	
4	180-189	No function	
	190-231	Pulse effect slow to fast, slow close and fast open	
	232-255	No function	
5	0-255	Red 1 0-100%	
6	0-255	Green 1 0-100%	
7	0-255	Blue 1 0-100%	
8	0-255	Red 2 0-100%	
9	0-255	Green 2 0-100%	
10	0-255	Blue 2 0-100%	
11	0-255	Red 3 0-100%	
12	0-255	Green 3 0-100%	
13	0-255	Blue 3 0-100%	
110	0-255	Red 36 0-100%	
111	0-255	Green 36 0-100%	
112	0-255	Green 36 0-100%	
	000-007	No function	
	008-12	Color chase 1	
	13-16	Color chase 2	
113	227-247	Color chase 59	
	248-255	Sound controlled strobe	

	000-007	No function
	008-12	Pattern 1
	13-16	Pattern 2
114	227-247	Pattern 59
	248-255	Pattern 60
115	0-255	Run Color
116	0-255	Run Background Color
117	0-255	Speed control slow-fast

- amproweb.com
- FB /amprogroup
- youtube /amprogroup

Documents / Resources



TECSHOW 3 In 1 Effect Strobebox [pdf] User Manual 3 In 1 Effect Strobebox, Effect Strobebox, Strobebox

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.