

TECSHOW Master Split 8 Dmx Signal Distributor User Manual

Contents

1 MASTER SPLIT 8

1.1 DMX SIGNAL DISTRIBUTOR

1.1.1 USER MANUAL

1.1.2 TECHNICAL SPECIFICATIONS

2 Documents / Resources

2.1 References

3 Related Posts

MASTER SPLIT 8

DMX SIGNAL DISTRIBUTOR



USER MANUAL

PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USE



P. 1
Tecshow Pinspot ZOOM

TECHNICAL SPECIFICATIONS


DMX512 signal.
Improved long-distance signal transmission.
1 input and 1 thru output (not isolated).
8 distributed outputs (optically isolated).
DMX input connector: XLR-D3M / XLR-D5M.
DMX thru output connector: XLR-D3F / XLR-D5F.
DMX distributed output connectors: XLR-D3F x4 / XLR-D5F.
Power supply: AC 200-240V, 50-60 Hz.
Dimensions: 48.3 x 44.5 x 1.4 cm.

NW: 4 kg, GW: 4.5 kg.



Version | **Tecshow Master Split 8**

Documents / Resources

 A photograph of the Master Split 8 Dmx Signal Distributor, a small, dark, rectangular device with multiple ports on the front. The image is set against a dark background with the product name and Tecshow logo.	<p>TECSHOW Master Split 8 Dmx Signal Distributor [pdf] User Manual Master Split 8 Dmx Signal Distributor, Master Split 8, Dmx Signal Distributor, Distributor</p>
--	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.