 **tectake**
tectake
403000
Electric
Table Frame
Piotr



tectake 403000 Electric Table Frame Piotr Instruction Manual

[Home](#) » [tectake](#) » tectake 403000 Electric Table Frame Piotr Instruction Manual 

Contents

- [1 tectake 403000 Electric Table Frame Piotr](#)
- [2 Product Usage Instructions](#)
- [3 FAQ](#)
- [4 DIMENSION](#)
- [5 Technical data](#)
- [6 Accessory list](#)
- [7 Part list](#)
- [8 Installation instruction](#)
- [9 How to use handswitch](#)
- [10 Instruction](#)
- [11 Troubleshooting](#)
- [12 Common fault treatment](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)



tectake 403000 Electric Table Frame Piotr



Specifications:

Column Number	Maximum Load	Speed	Input Voltage	Lowest Position	Highest Position	Desktop Size	Duty Cycle	Applicable Temperature
2	70KG	25 mm/s	100-240V	710mm	1210mm	1000-1600mm (width) 500-800mm (depth)	Continuous operation for 2 mins at most after pause for 18mins	—

Product Usage Instructions

Step 1: Install Pedestal

Follow the installation guide provided in the manual. Use the specified tools and parts listed in the accessory and part list.

Step 2: Install Supporting Beam

Adjust the support beam size according to the table top size. Use the wrench to tighten the screws.

Step 3: Install Transmission Rod

Do not rotate the drive rod more than a third of a turn. Follow the provided pictures and use the wrench to tighten the screws.

Step 4: Install Supporting Plate

Ensure the distance between desktop edge and supporting plate is no more than 200mm. Tighten the screws using the specified wrench.

Step 5: Install Control Box and Handswitch

Connect all cables onto the control box. Use the provided tools to tighten the screws as instructed.

Step 6: Connect All Cables onto the Control Box

Follow the cable connection instructions provided in the manual to ensure proper installation.


How to Use Handswitch:

The handswitch features different buttons for adjusting the desk height. Refer to the LED display for height positions and use the corresponding buttons for adjustment.

FAQ**Fault Phenomenon:**

If you encounter any of the following issues, refer to the common fault treatment section in the manual or contact your supplier for assistance:

1. No response while pressing up arrow/down arrow after connecting to power supply.
2. Rising in a low speed or motor not moving as instructed.
3. Desk going down but not up, downward sliding, or frequent repositioning.
4. Overwork issues related to duty cycle (Max 2min on/18min off).

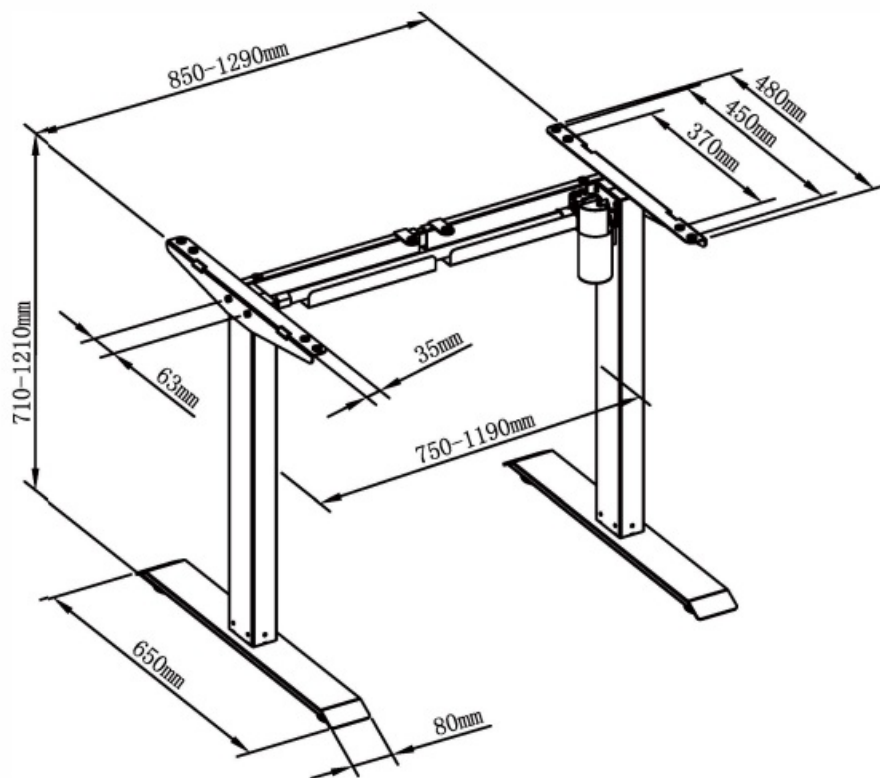DIMENSION**Technical data**





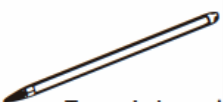

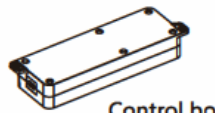




Column Number	2
Maximum Load	70KG
Speed	25mm/s
Input Voltage	100–240V
Lowest Position	710mm
Highest Position	1210mm
Desktop Size	1000–1600mm(w) 500–800mm(D)
Duty Cycle	Continuous operation for 2 mins at most after pause for 18 mins
Applicable Temperature	0~40°C

Accessory list


Attention: The drawings below are only for reference which might be slightly different from the actual object, please in kind prevail. Any tools missing or installation problems, please contact the customer service firstly.

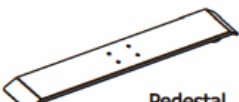

Part list

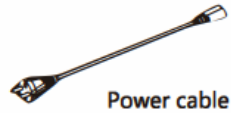
No.	Part	Qty	No.	Part	Qty	No.	Part	Qty
①	 Pedestal	2	②	 Column	1	③	 Column	1
④	 Supporting beam	1	⑤	 Transmission rod	1	⑥	 Supporting plate	2
⑦	 Control box	1	⑧	 Baffle	2	⑨	 Handswitch	1
⑩	 Power cable	1	⑪	 Cable tie	4			

Installation instruction

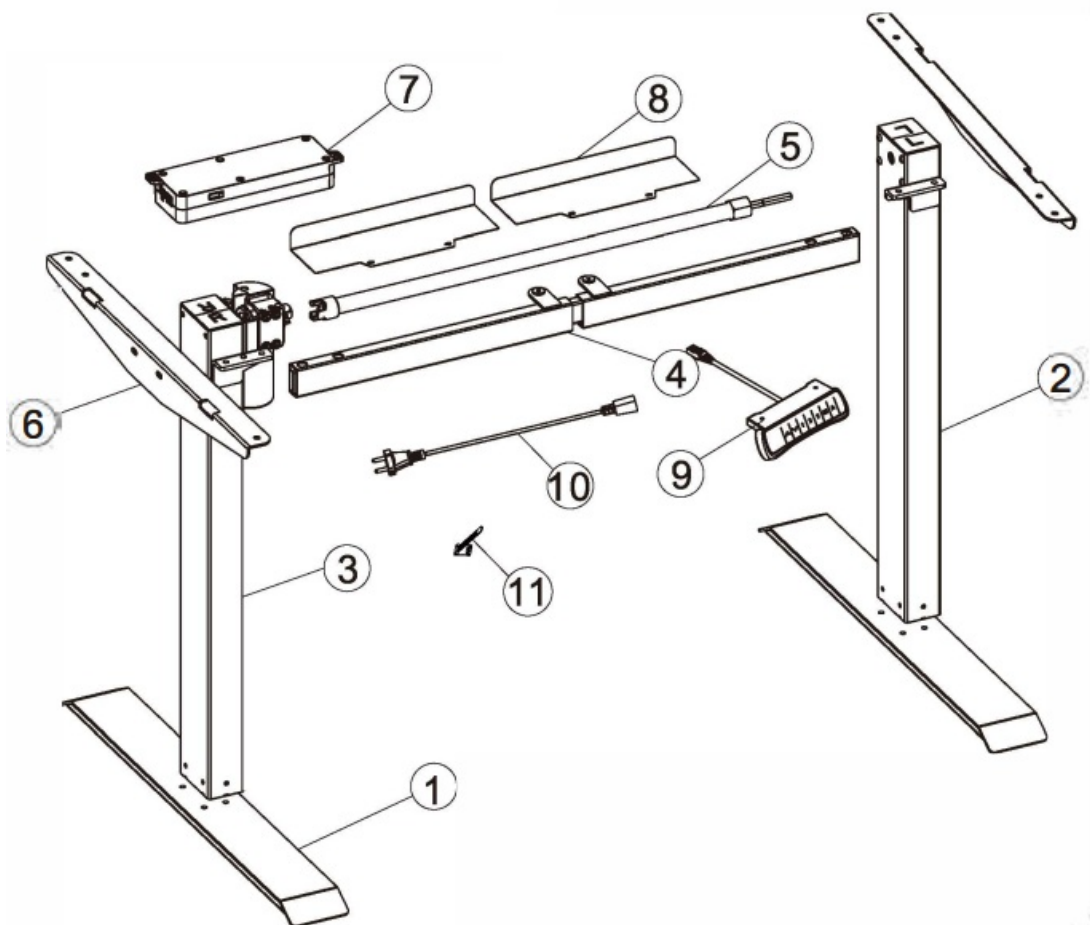


STEP1

Install Pedestal(1)

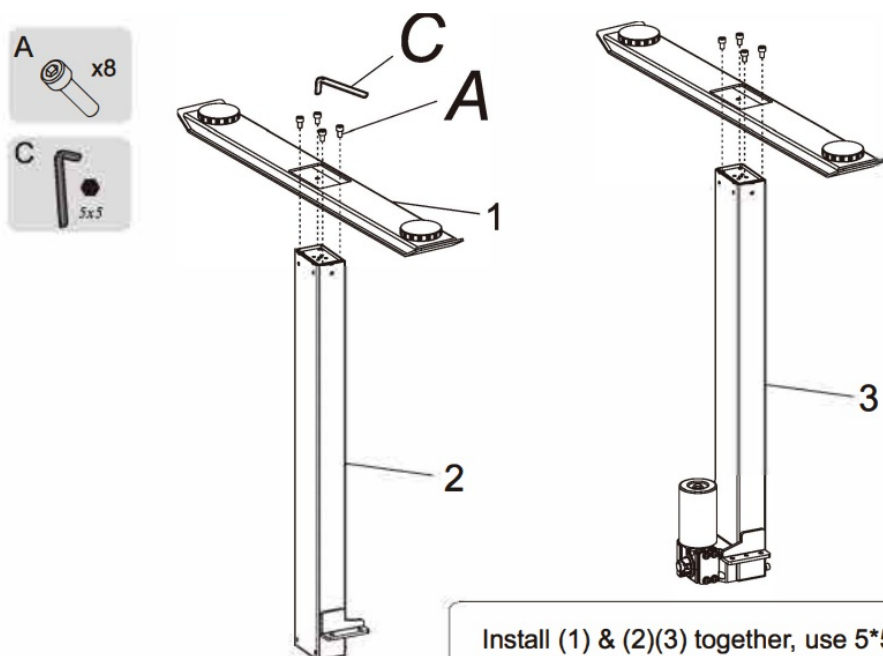


STEP2




Install Supporting beam(4)

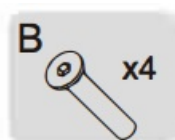

1

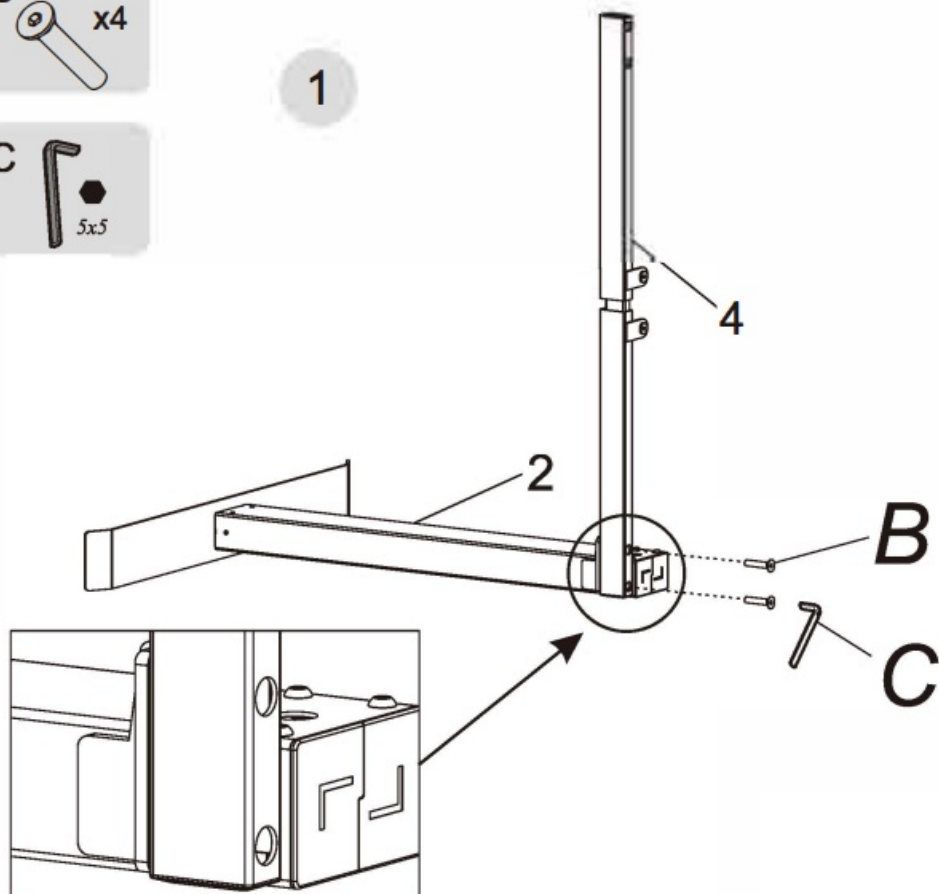



2

 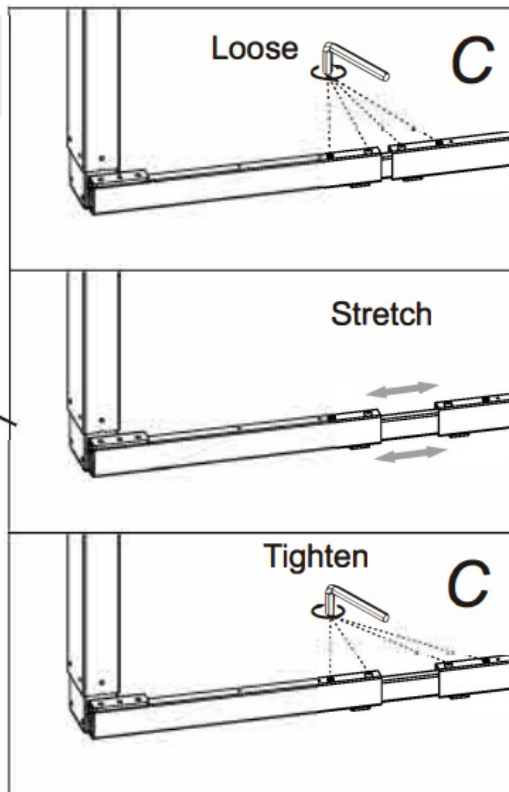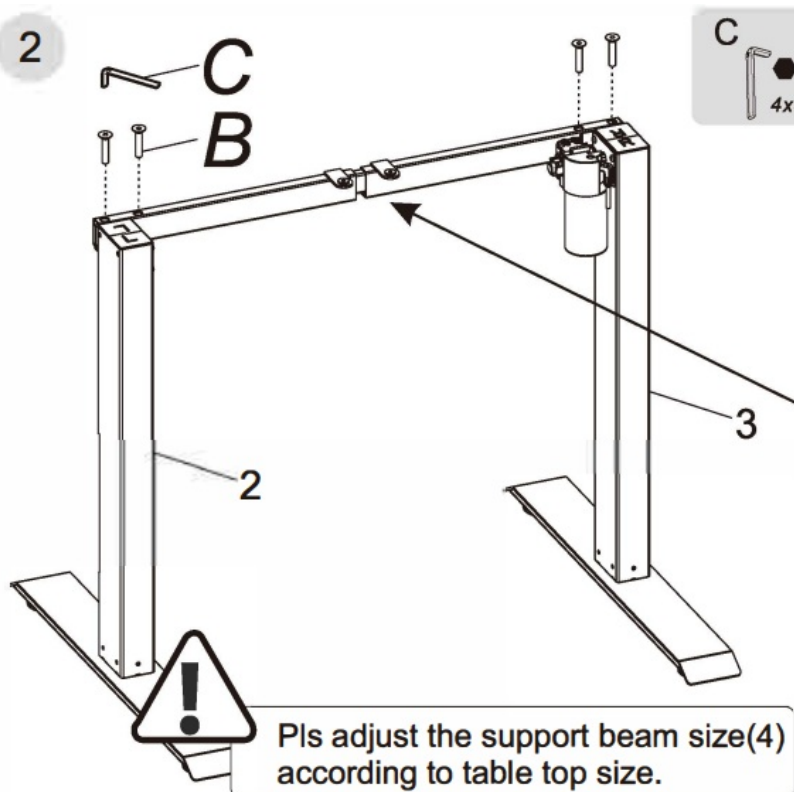


Lay Column(2) down, just like picture 1 shows, then install (4), use wrench(C) to tighten the screws(B). Install Column(3) just as picture 2 shows.

STEP3

Install Transmission rod(5)

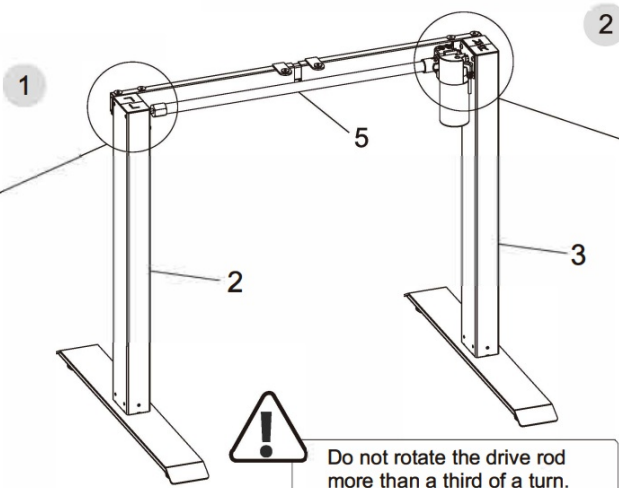
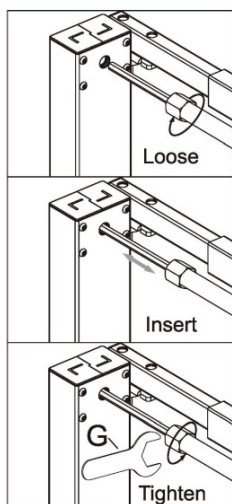


Install (5) & (2)(3), following picture1 shows first, then picture 2, use 2.5*2.5 wrench(D) to tighten.

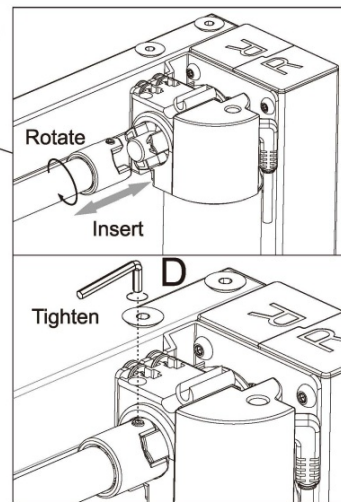

STEP4

 
Install Supporting plate(6)

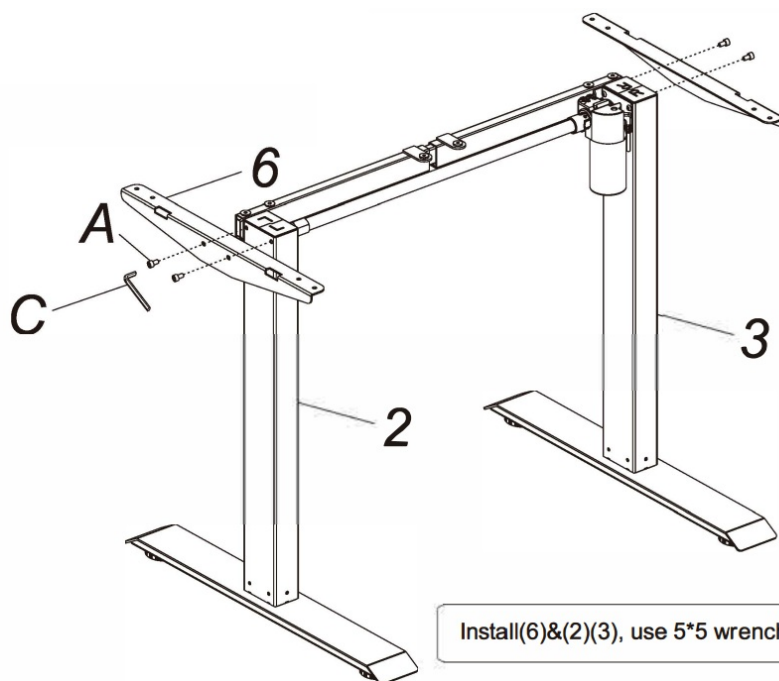


Install(6)&(2)(3), use 5*5 wrench(C) to tighten the screws(A).

STEP5

Install Control box (7) and Handswitch(9)

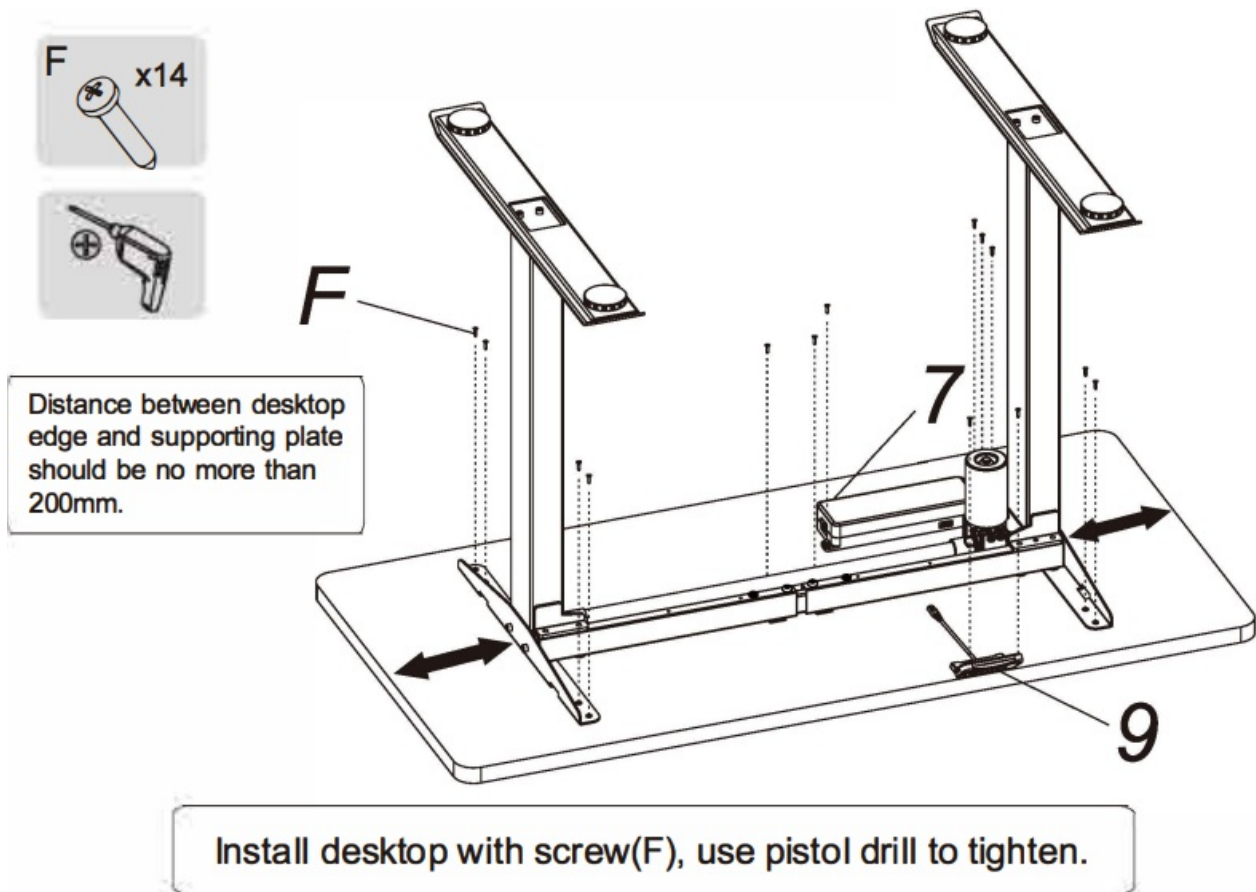


Install Baffle (8)

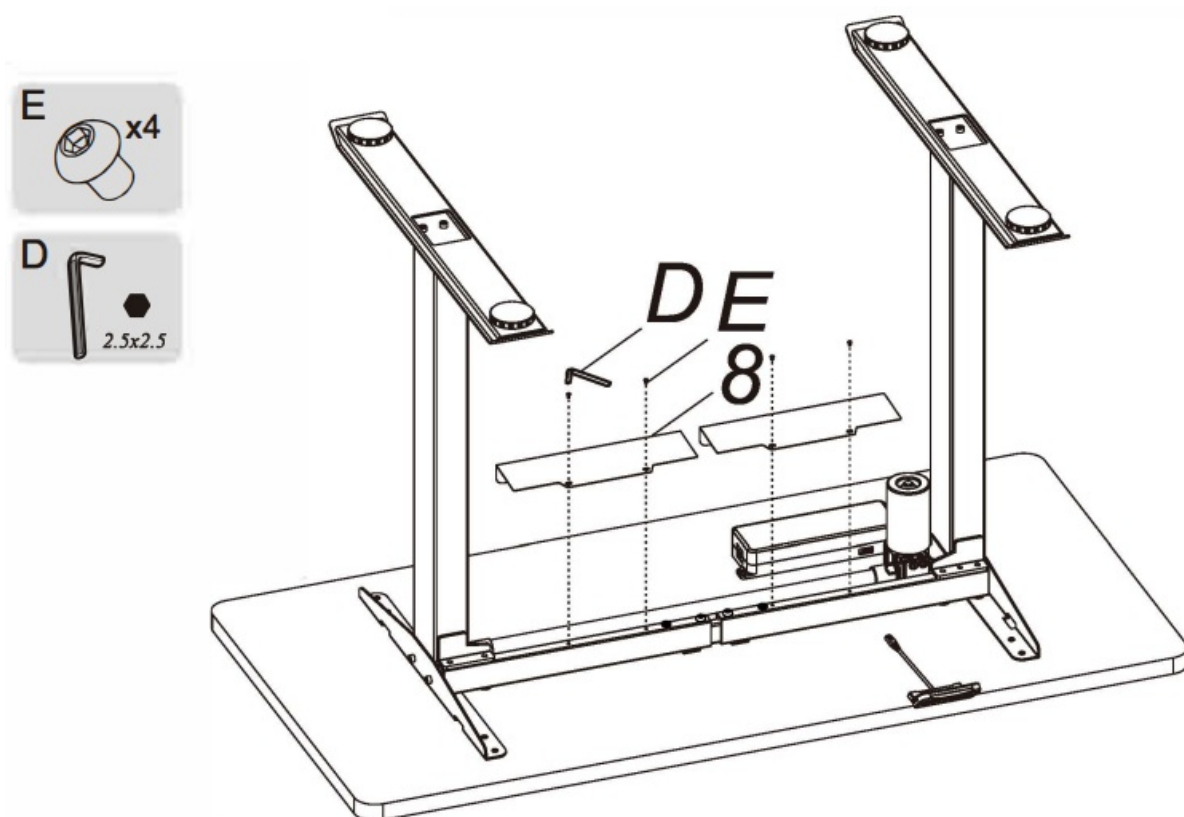

STEP6


Connect All the Cables onto the Control Box(7)

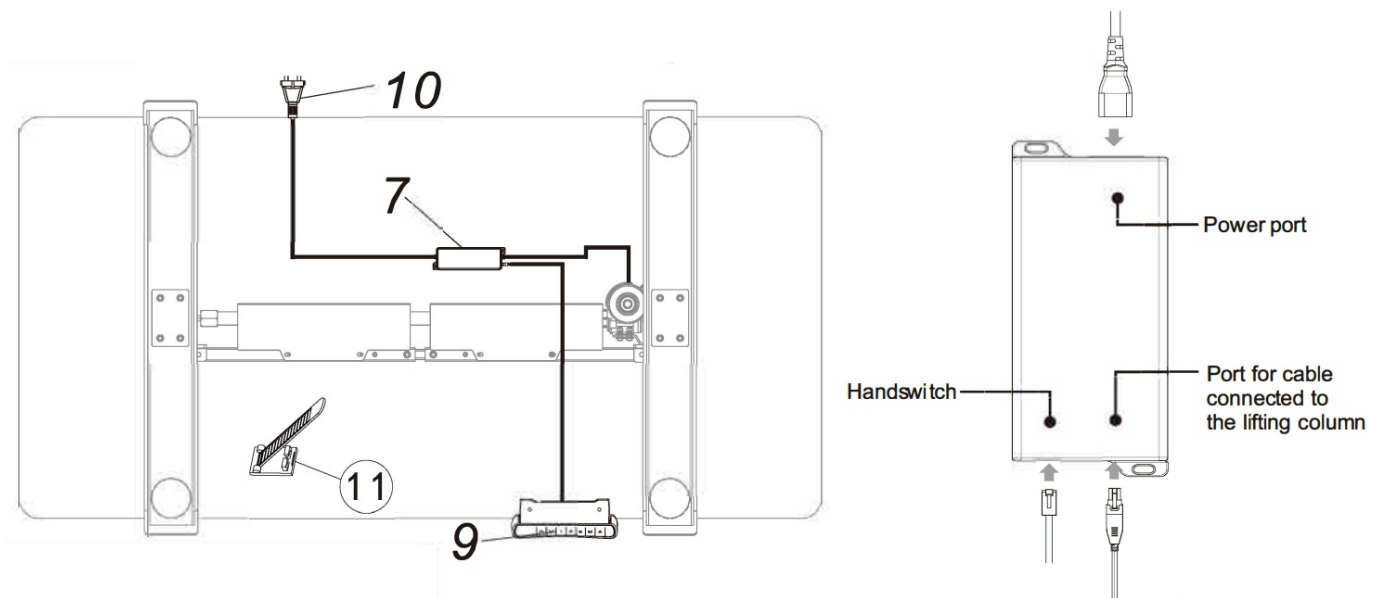

Use the cable tie(11) to fix all the connection cables on the desk to keep it clean.

How to use handswitch

Button

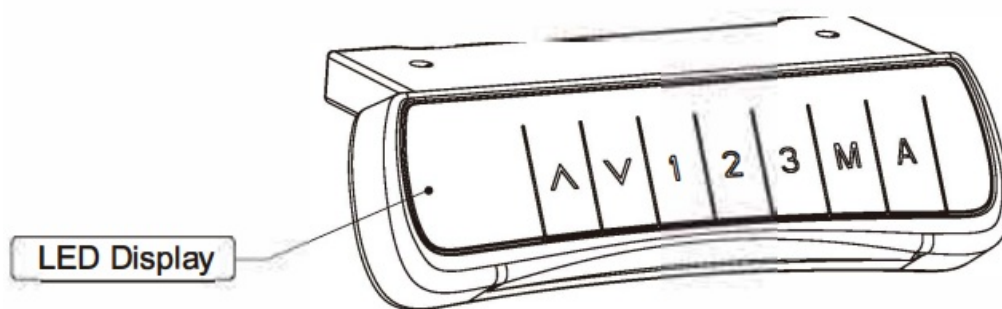

Bottom introduction: There are seven buttons that “▲”, “▼”, “1”, “2”, “3”, “M”, “A”

1. “▲” : Adjust the desk upwards
2. “▼” : Adjust the desk downwards
3. “1” : Position 1, first height position saved by the user
4. “2” : Position 2, second height position saved by the user
5. “3” : Position 3, third height position saved by the user
6. “M” : Height memory function
7. “A” : Alert button to remind users changing posture

Instruction



Height Adjustable Function:

Press the “▲” or “▼” button to adjust the height. The LED display shows the current height.



Height Memory Function:

- Press UP or DOWN button and adjust the height to the desired height. Press “M” to save the height, and the screen will display “5-“; Press “1”, “2”, or “3” then, that is, save the height to the corresponding position 1 or 2 or 3, which will show in the display screen as “5-1”, “5-2”, or “5-3”;
- Press “1”, “2” and “3” button directly to automatically adjust the memory height you saved.

Reminder Function:

- Press REMINDER button “A” to activate the function. The LED display shows “ “
- Two seconds later, press the “▲” or “▼” button to adjust the reminder time only when the display screen flashes. The default time of the reminder is 45 minutes, which is shown as “=45”. Then press any button to save the time setup, or wait 5 seconds and system will save the time setup automatically. During the countdown, any operation will lead to a repeat starting of the timer. When the countdown finishes, display screen will show “” the buzzer will be active with a 10-second “DiDi...DiDi...DiDi” tone.
- Within the 10-second reminder buzz, press any button to reactivate the time countdown that is set up in (b) step. If no operation during the 10-second reminder buzz, there will be another reminder buzz after 5 minutes. No operation during the second buzz will turn off the Long-Time Sitting Reminder.
- Press and hold the “A” button for three seconds to turn off the Long-Time Sitting Reminder. The LED display shows “OFF “

Troubleshooting

- Reset: When the LED shows “ “, press “▼” button until the desk reaches its lowest height and rebounds to stop, it means the reset has been finished.
- When it doesn't work and the LED shows “E01” or “E02”, please retry 18 mins later.
- If the “▼” button doesn't work, please check the cable connection and then cut off the power for at least 10 seconds. Reconnect to the power and press “▼” button to start the reset process when it shows the “ “.
- If all these above process are inefficient, plz contact our customer service.

Common fault treatment

The following tips will help you detected and eliminate common fault and error.

If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Fault phenomenon	Method
No response while long pressing down arrow after connected with a power supply	1.Check if all the cables be connected well
	2.Contact your supplier or dealer
No response while pressing up arrow/ down arrow after connected with a power supply	1.Check if all the cables be connected well
	2.Contact your supplier or dealer
Rising in a low speed	1. Check if overloaded, max loading: 70kg ;
	2. Contact your supplier or dealer
The motor not move as instructed	1. Contact your supplier or dealer
Go down but not go up	1.Reposition
	2.Contact your supplier or dealer
Downward sliding	1. Check if overloaded, max loading: 70kg ;
	2. Contact your supplier or dealer
Frequently Reposition	1. Check if overloaded, max loading: 70kg ;
	2. Contact your supplier or dealer
Overwork (Dutycycle : Max 2min on/18min OFF)	1. Restartafter suspend for 18mins while connecting with power;
	2. Contact your supplier or dealer;
Not enough up&down height	1. Press "M"and "3" together for 3 seconds or more, after hearing continuous beeping for twice, it will restore factory settings
	2.Contact your supplier or dealer

Attention

1. Power supply: AC100V-240V,50/60HZ
2. Service Environment: 0-40°C
3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.
4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.
5. Check carefully to ensure correct and complete assembly before using.
6. Be familiar with all functions and program settings of the product before first use.
7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on
8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
10. This appliance can be used by children aged from 8 years and above and persons with reduced physical,

sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

11. Cleaning and user maintenance shall not be made by children without supervision.
12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
13. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.
14. Keep the original package of the equipment if necessary in case of the future use in transportation.


Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable re use of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Contact Person
TecTake Ltd
18 Soho Square
London W1D 3QL
United Kingdom
Telephone: +44 203 488 4565
mail@tectake.co.uk

Documents / Resources

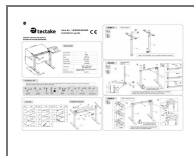

[tectake 403000 Electric Table Frame Piotr](#) [pdf] Instruction Manual
402999, 403000, 403000 Electric Table Frame Piotr, 403000, Electric Table Frame Piotr, Table F
rame Piotr, Frame Piotr

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.