



TECURS KB096 Wireless Keyboard User Manual

[Home](#) » [TECURS](#) » **TECURS KB096 Wireless Keyboard User Manual** 

Contents

- [1 TECURS KB096 Wireless Keyboard](#)
- [2 User Manual](#)
- [3 Package Contents](#)
- [4 Connection Mode](#)
- [5 IMPORTANT SAFEGUARDS & PRECAUTIONS](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

TECURS

TECURS KB096 Wireless Keyboard



User Manual

Keyboard Specifications

- **Working Voltage:** DC 3,0 V
- **Working Current:** < 10 mA
- **Battery Capacity:** AAA*2 (not included)
- **Product Weight:** 625±5g
- **Keyboard Dimension:** 429.9* 121.2 * 22,3 mm
- **Working distance:** < 10 M

Package Contents

 
 


 









 


- 1 x Wireless Keyboard
- 1 x USB Receiver
- 1 x User Manual

Compatible Systems

MacOS & Windows

 
 
Hotkeys and media keys

Note: The F1 – F12 function keys are all set in default settings. If you want to enable multimedia keys (such as Music player, Play/ Pause, etc.) in Windows operating system, you can press Fn + Multimedia Key simultaneously or press Fn + 6 to activate them. Press Fn + A again to restore the keyboard to default settings. The input language of the device should be the same as the layout of the keyboard.

 
 
	Bright +		Bright -
	Mute		Volume +
	Volume -		Screen Snot
	Play/Pause		Pre- track
	Next-track		APP Switch
	Screen Lock		FN Lock
	Search		Select all
	Cut		Copy
	Paste		

Connection Mode

1. 2.4G Mode

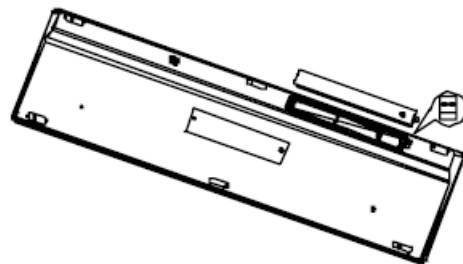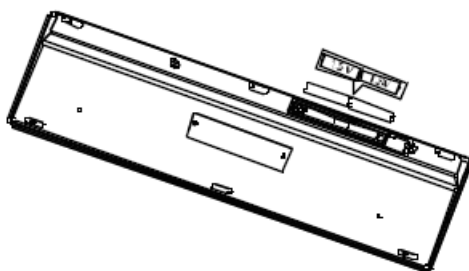

 

1. Open the battery cover. insert AAA batteries
2. Take out the receiver from the Lho battery compartment, and close the battery cover
3. Move the switch to the 2.4G position

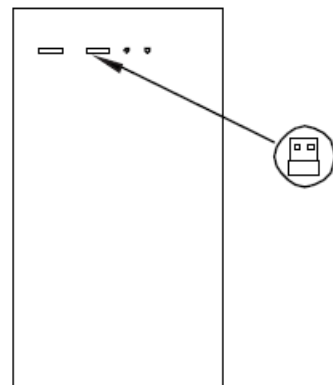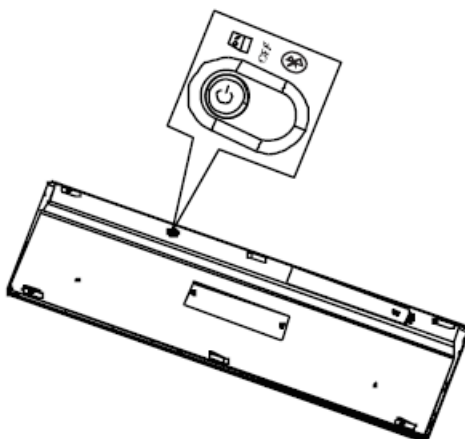

2. Insert the receiver into the main computer's USB port. and it will readvertise

The Solution to Pairing Failures If the keyboard cannot pair with your computer, or if you are using a new receiver. please try the following steps to pair the keyboard again:









1. Make sure that the positive (+) and negative (-) terminals are on the correct sides.
2. Turn on the keyboard, which should be within 7.87 inches (20cm) away from the receiver.

3. Press and hold  +  together to pair. Then the numLock indicator will flash blue until the receiver is successfully connected, and the indicator turns off.
4. Plug the receiver into the USB port of the computer.

Note: If the above solution doesn't work, please repeat these steps to pair again. If it still doesn't work, please don't hesitate to contact our service team for help.

Bluetooth Mode Pairing



1. Turn the switch on the back of the product to the "BT" gear < right gear>.
2. Press  + 01 " for 1 second to switch to the channel, the LED flashes slowly and then turns off. Press  /  for 3 seconds, or until the LED starts quickly flashing blue to enter pairing mode.
3. Verify your device's Bluetooth settings are on. Select Settings – Bluetooth -On.
4. Select "BT5.0 KB" or "BT3.0 Keyboard" from your service's list of available devices to compare pairing.
5. The blue indicator will turn off after successfully paired.
6. Follow the preceding steps to connect  /  channels respectively.
7. TALLer all three devices are connected at the same time. press "   /  1 3 " for 1 second to switch to 1#. 2# or 3# devices respectively.

Power Saving Mode

When you aren't using the Keyboard, it goes to sleep to conserve battery power. Press any button and wait for 3 seconds to reactivate it. If you won't be using your keyboard for an extended period, turn it off to conserve even more power.

Replacing Batteries

Low battery Indicator will flash RCC when batteries are running low. Replace the spent batteries with two new AA batteries to continue typing (batteries not included).

Troubleshooting If you cannot connect the Bluetooth keyboard to your device, or if the keyboard is not working, please try the following

1. Ensure your device has bluetooth and Bluetooth is enabled.
2. Delete the pairing name on the Bluetooth settings. Restart the device and try to pair it again,
3. Cancel the Bluetooth connection with other devices, and try to pair again.
4. Check to see if the Bluetooth software has been updated recently. If it hasn't, update the software and try to pair again.
5. Make sure the Bluetooth keyboard is within 33ft (10m) of your device.

IMPORTANT SAFEGUARDS & PRECAUTIONS

1. SAVE THESE INSTRUCTIONS-This sheet contains important safety and operating instructions.
 2. Remove the batteries if the product is not going to be used for a long period of time.
 3. For indoor use only. Never exposed to direct sunlight or wet weather conditions.
 4. Do not use if the equipment is damaged.
 5. Do not disassemble the product. Disassembly may result in a risk of safety hazards.
 6. Do not throw or shake the product.
-

Documents / Resources

	<p>TECURS KB096 Wireless Keyboard [pdf] User Manual 2BDWR-5518D, 2BDWR5518D, 5518d, KB096 Wireless Keyboard, KB096, Wireless Keyboard , Keyboard</p>
---	--

References

- [User Manual](#)