



# TECURS MK203 Mechanical Led Wired Keyboard User Manual

[Home](#) » [TECURS](#) » TECURS MK203 Mechanical Led Wired Keyboard User Manual 

## Contents

- [1 TECURS MK203 Mechanical Led Wired Keyboard](#)
- [2 Specifications](#)
- [3 Package Includes](#)
- [4 Product Overview](#)
- [5 Function Description](#)
- [6 Backlight operation instructions](#)
- [7 Important Safeguards and Precautions](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)



**TECURS MK203 Mechanical Led Wired Keyboard**



## Specifications

- Working voltage:  $5 \pm 0.25V$
- Working current:  $110 \pm 10mA$
- Number of keys: 61 Keys
- Weight:  $635 \pm 5g$
- Dimension:  $294 \times 104 \times 40mm$
- Power:  $< 0.6W$
- Cable length:  $1.6 \pm 0.1m$
- Keys Life: 50 million clicks



## Package Includes

- 1 x Mechanical Keyboard
- 1 x User Manual
- 1 x USB-C Cable
- 1 x Key Puller

## Compatible Systems

Windows XP / Vista / 7 / 8 / 10, Linux and Limited Mac OS keyboard support.

## Product Overview

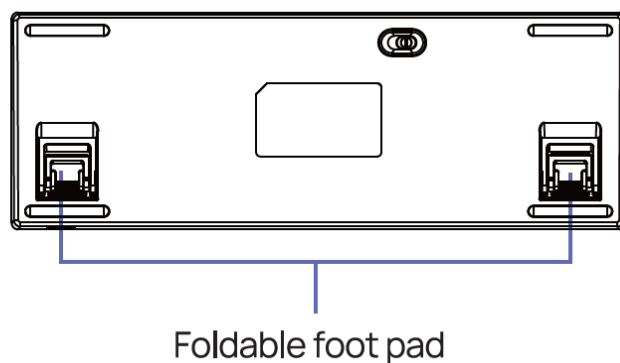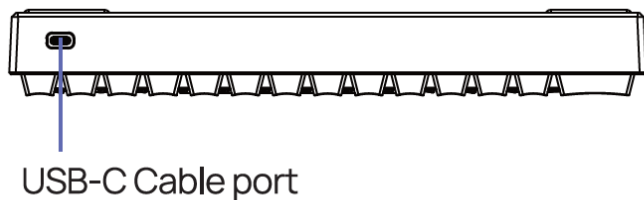

## Function Description

Fn + Esc = `	Fn + 4 = F4	Fn + 9 = F9
Fn + shift + Esc = ~	Fn + 5 = F5	Fn + 0 = F10
Fn + 1 = F1	Fn + 6 = F6	Fn + - _ = F11
Fn + 2 = F2	Fn + 7 = F7	Fn + = / + = F12
Fn + 3 = F3	Fn + 8 = F8	

Fn + Backspace = Del	Fn + (right)Ctrl + 2 = Browser
Fn + I = PrtSc	Fn + (right)Ctrl + 3 = Email
Fn + O = ScrLk	Fn + (right)Ctrl + 4 = Calculator
Fn + P = Pause	Fn + (right)Ctrl + 5 = Music player
Fn + J = Insert	Fn + (right)Ctrl + 6 = Stop
Fn + K = Home	Fn + (right)Ctrl + 7 = Prev track
Fn + L = PgUp	Fn + (right)Ctrl + 8 = Play/ Pause
Fn + N = Del	Fn + (right)Ctrl + 9 = Next track
Fn + M = End	Fn + (right)Ctrl + 0 = Mute
Fn + , < = PgDn	Fn + (right)Ctrl + - _ = Volume -
Fn + (right)Ctrl + 1 = My computer	Fn + (right)Ctrl + + = Volume+

## Note:

1. The computer (notebook) input language must be the same as the layout of the keyboard.
2. Connect the USB-C Cable to the keyboard and begin to work.

## Backlight operation instructions

1. Press Fn + [I] to switch between 19 different backlight patterns.

2. Press Fn + [I] = Decrease LED brightness, total 6 steps and the lowest brightness is turn off the LED. Default third step.
3. Press Fn + [J] = Increase LED brightness, total 6 steps, default third step.
4. Press Fn + [K] = Decrease LED breathing frequency, total 6 steps, default third step.
5. Press Fn + [L] = Increase LED breathing frequency, total 6 steps, default third step.
6. When the Caps Lock is enabled, the backlight of this key is white and does not participate in the light effect.
7. Press Fn + Space about 3 seconds to reset the keyboard to factory settings.
8. Press Fn + Win to lock the WIN.

1 and 2



3,4 and 5



#### Note:

1. Press Fn + t to activate the arrow key function.  
I? = t Alt=<- App = -1- Ctrl=>
2. Press Fn +t again to activate the functions of the keys other than the arrow keys.

### Important Safeguards and Precautions

1. SAVE THESE INSTRUCTIONS-They contain essential safety and operating instructions.
2. For indoor use only. Do not expose the keyboard to direct sunlight or wet conditions.
3. Do not use the keyboard if equipment is damaged.
4. Do not disassemble the product. Disassembly can result in safety hazards.
5. Do not throw or shake the product.

Web [www.tecurs.com](http://www.tecurs.com)

E-mail· [gamesupportservice@tecurs.com](mailto:gamesupportservice@tecurs.com)

---

## Documents / Resources

	<a href="#">TECURS MK203 Mechanical Led Wired Keyboard</a> [pdf] User Manual MK203 Mechanical Led Wired Keyboard, MK203, Mechanical Led Wired Keyboard, Led Wired Keyboard, Wired Keyboard, Keyboard
--	---

## References

- [User Manual](#)