



TECWARE B68+ 3-Mode Wireless Mechanical Keyboard User Guide

[Home](#) » [TECWARE](#) » TECWARE B68+ 3-Mode Wireless Mechanical Keyboard User Guide

Contents [[hide](#)]

1

TECWARE B68+ 3-Mode Wireless Mechanical Keyboard

2

Fn Shortcut Keys

3

Various LED modes can be triggered by Fn + Right Ctrl Keys

4

Charging

5

Package Contents

6

System Requirements

7

Warranty

8

Documents / Resources

9

 
 
Related Posts

 
 


TECWARE B68+ 3-Mode Wireless Mechanical Keyboard




Fn Shortcut Keys

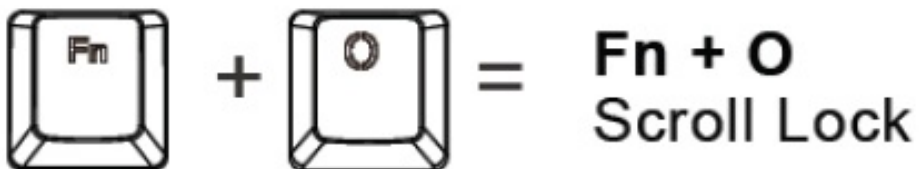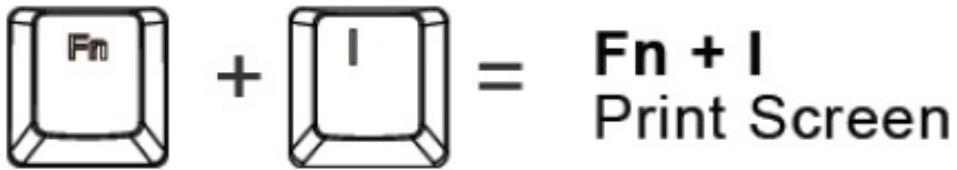

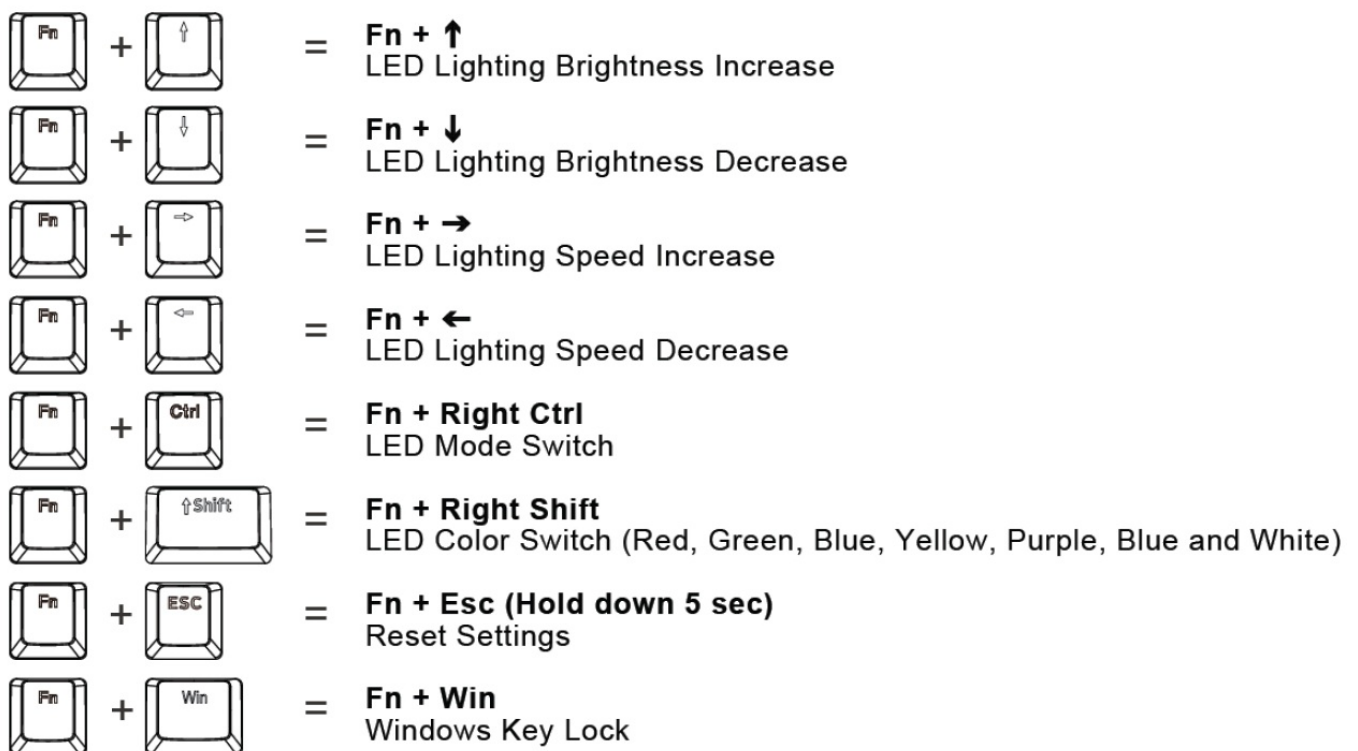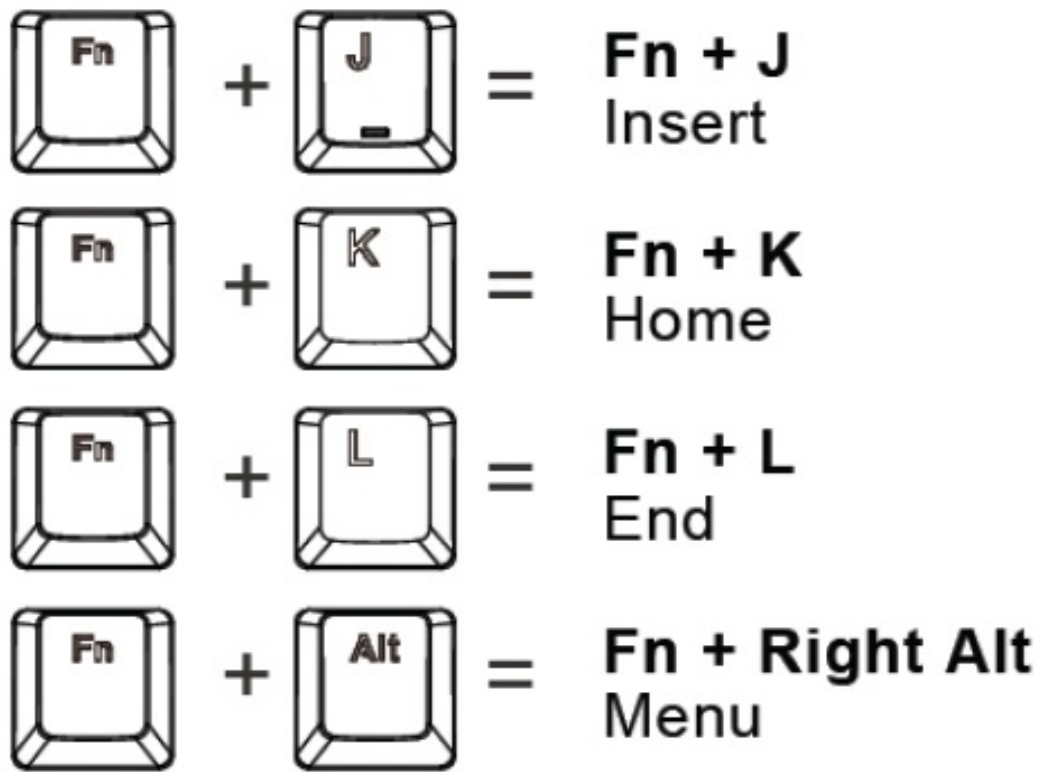

 Various LED modes can be triggered by Fn + Right Ctrl Keys

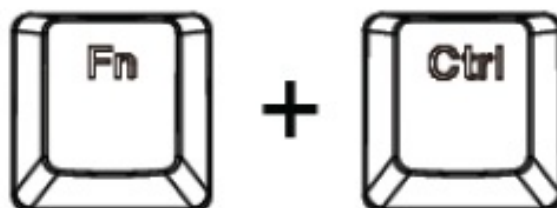


2. Color Cycle
3. Spectrum
4. Reactive Sideways
5. Reactive
6. Reactive Burst
7. Sine wave
8. Windmill
9. Static
10. Custom 1, 2
11. Breathing

The CAPSLOCK key acts as a secondary FN key when held down by default. To turn this function off, please press "FN+Left ALT "once.


- **Connectivity switch:** (located at the back of the keyboard) Toggle Left for BT mode, Middle for WIRED MODE, Right for 2.4G MODE.z
- **BT Connection:** (Connect/Store up to 3 Devices) The tab key will be backlit in White when in BT mode and Esc will blink to search connection

 Long press (3 sec) for pairing mode between the BT device. Esc Key will blink fast when discoverable. When pairing is complete, the ESC key will stop blinking. Single press to connect/disconnect to a paired device. Esc Key will stop blinking when a connection is established.

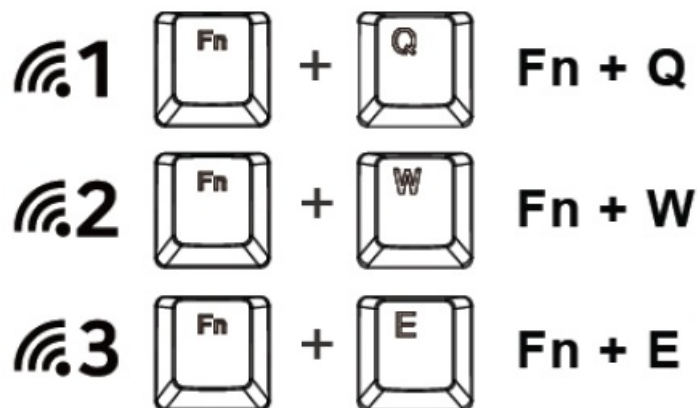

Charging

 FN + Backspace displays battery power level. Keys 1-0 light up in green to show battery level.

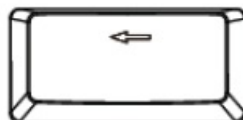

- **Blinking Blue:** Keyboard battery is charging. The backspace key will stop blinking when fully charged
- **Blinking Red:** Low Battery, will stop functioning after 10 seconds. Connect your USB Wire to charge.

Package Contents

- TECWARE B68+ Mechanical Keyboard
- Quick Start Guide
- USB Dongle x 1
- 1.8m Removable USB-C Cable x 1
- Switch Puller x 1
- Keycap Puller x 1

System Requirements

- PC with USB port
- Windows 7/8/10, Mac

Warranty

- 1 Year. Please contact your local distributor for support.

Documents / Resources



[TECWARE B68+ 3-Mode Wireless Mechanical Keyboard](#) [pdf] User Guide
B68, 3-Mode Wireless Mechanical Keyboard, B68 3-Mode Wireless Mechanical Keyboard