



TECWARE B68 Mechanical Keyboard User Guide

[Home](#) » [TECWARE](#) » TECWARE B68 Mechanical Keyboard User Guide



 
Mechanical Keyboard B68 User Guide









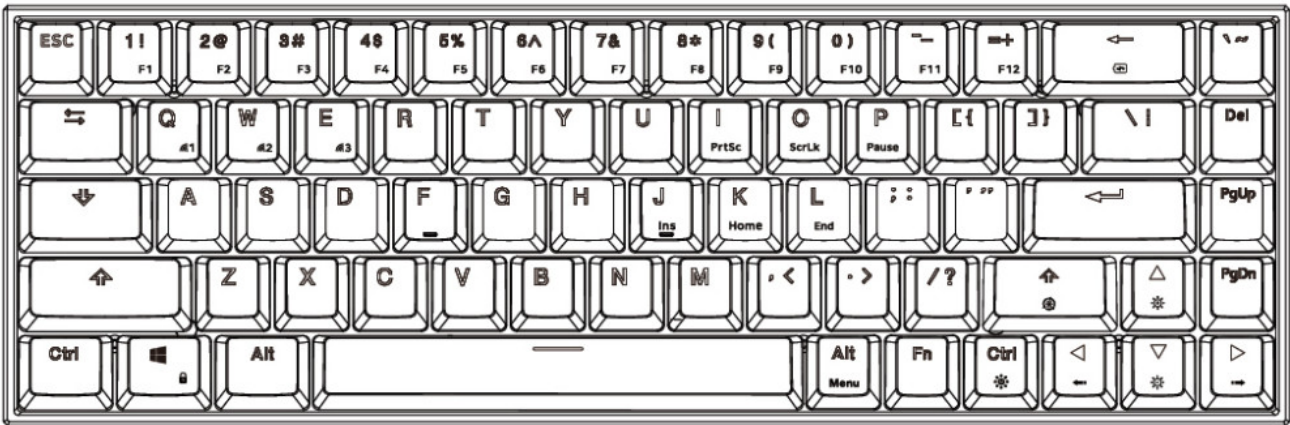


Contents [[hide](#)]

































 
 


- 1 B68 Mechanical Keyboard
- 2 Charging:
- 3 Package Contents
- 4 System Requirements
- 5 Documents / Resources
- 6 Related Posts

B68 Mechanical Keyboard


Fn Shortcut Keys:

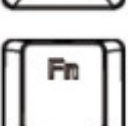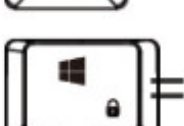

 +  -  =	Fn + 1 thru 12 F1 thru F12
	Fn + I Print Screen
	Fn + O Scroll Lock
	Fn + P Pause
 +  =	Fn + J Insert
	Fn + K Home
	Fn + L End
	Fn + Right Alt Menu
 +  =	
 +  =	
 +  =	
	Fn + ↑ LED Lighting Brightness Increase
	Fn + ↓ LED Lighting Brightness Decrease
	Fn + → LED Lighting Speed Increase
	Fn + ← LED Lighting Speed Decrease
	Fn + Del Enter Normal Mode (Default RED LED Color)
	Fn + Right Ctrl LED Mode Switch





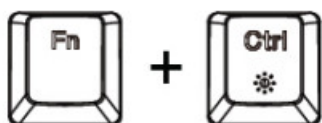 




   	Fn + Right Shift LED Color Switch (Red, Green, Blue, Yellow, Purple, Blue and White)
   	Fn + Esc Reset Settings
   	
   	
   	
   	Fn + Win Windows Key Lock
   	
   	
   	

Various LED modes can be triggered by Fn + Right Ctrl Keys




1. Snake 2. Spectrum 3. Reactive 4. Sine wave 5. Static 6. Breathing	7. Color Cycle 8. Reactive Sideways 9. Reactive Burst 10. Windmill 11. Custom 1, 2
---	--

Connectivity switch: (located at the back of the keyboard)
 Toggle Left for BT mode, Middle for OFF, Right for WIRED MODE
BT Connection: (Connect/Store up to 3 Devices)

 1  +  Fn + Q	Tab key will be backlit in White when in BT mode and Esc will blink to search connection Long press (3 sec) for pairing mode between the BT device. Esc Key will blink fast when discoverable. When pairing is complete, ESC key will stop blinking. Single press to connect/disconnect to paired device. Esc Key will stop blinking when connection is established.
 2  +  Fn + W	
 3  +  Fn + E	

 Charging:



FN + Backspace displays battery power level. Keys 1-0 lights up in green to show battery level.

Blinking Blue • Keyboard battery is charging. Backspace key will stop blinking when fully charged.

Blinking Red • Low Battery, will stop functioning after 10 seconds. Connect your USB Wire to charge.

Sleep/Time Out:

- The keyboard goes to sleep after 90 seconds when the keyboard is disconnected from the device or the device fails to reconnect.
- The keyboard goes to sleep when the keyboard is inactive for 120 seconds.

Package Contents

- TECWARE B68 Mechanical Keyboard
- Quick Start Guide
- Esc Key Dyesub PBT Keycap x 1
- Removable Type-C cable
- Switch Puller x 1
- Keycap Puller x 1

System Requirements


- PC with USB port
- Windows 7/8/10, Mac

Warranty

- 1 Year. Please contact your local distributor for support.



www.tecware.co

	<p>TECWARE B68 Mechanical Keyboard [pdf] User Guide</p> <p>B68 Mechanical Keyboard, B68, Mechanical Keyboard, B68 Keyboard, Keyboard</p>
---	--