

Tefal
Tefal CM533811
Coffee Machine
with Filter



Tefal CM533811 Coffee Machine with Filter Instructions

[Home](#) » [Tefal](#) » Tefal CM533811 Coffee Machine with Filter Instructions 

Contents

- [1 Tefal CM533811 Coffee Machine with Filter](#)
- [2 Safety Instructions](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)

Tefal

Tefal CM533811 Coffee Machine with Filter



Please read the instructions for use carefully before using your appliance for the first time and retain them for future reference: In case of professional use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.

Safety Instructions

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use the appliance if the power cord or plug is damaged. The power cord must be replaced by the manufacturer, its after-sales service or similarly qualified persons in order to avoid danger.
- Your appliance is intended for domestic use inside the home only at an altitude below 2000 m.
- Do not immerse the appliance, power cord or plug in water or any other liquid.
- This appliance is intended for household use only.
- It is not intended to be used in the following cases, which are not covered by the guarantee: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- Always follow the cleaning instructions to clean your appliance;
 - Unplug the appliance.
 - Do not clean the appliance while hot.
 - Clean with a damp cloth or sponge.
 - Never immerse the appliance in water or any other liquid, or put it under running water.
- WARNING: Risks of injuries if you do not use this appliance correctly.
- WARNING: During and after use, do not touch the heating plate, subjected to residual heat.
- Be sure to manipulate only the handle of the glass jug during heating until it has completely cooled down.
- This appliance may be used by children of at least 8 years of age, as long as they are supervised and have been given instructions about using the appliance safely and are fully aware of the dangers involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and they are supervised by an adult.
- Keep the appliance and its cord out of reach of children under 8 years of age.
- This appliance may be used by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, provided they are supervised or have received instruction concerning use of the appliance by a person responsible for their safety.
- Children should not use the appliance as a toy.
- The temperature of the accessible surfaces may be high when the appliance is in operation. Do not touch the hot surfaces of the appliance.
- This appliance must not be placed in a closet when it is in use.
- Before plugging the appliance in, make sure that the power it uses corresponds to your electrical supply system and that the outlet is earthed.
- Any error in the electrical connection will negate your guarantee.
- Unplug the appliance during extended periods of absence.
- Do not use the appliance if it is not working properly or if it has been damaged. If this occurs, contact an authorised service centre.

- All interventions other than cleaning and everyday maintenance by the customer must be performed by an authorised service centre.
- The power cord must never be close to or in contact with the hot parts of your appliance, near a source of heat or over a sharp edge.
- For your safety, only use the manufacturer's accessories and spare parts designed for your appliance.
- Do not pull on the cord to unplug the appliance.
- Do not use the carafe in a microwave oven.
- Do not fill the appliance with water if it is still hot.
- All appliances are subject to strict quality control procedures. These include actual usage tests on randomly selected appliances, which would explain any traces of use.



Environment protection first!

Your appliance contains valuable materials which can be recovered or recycled.
Leave it at a local civic waste collection point.

European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), stipulates that used household appliances must not be disposed of in normal unsorted municipal waste. Old appliances must be collected separately to optimise the sorting and recycling of their parts and to reduce the impact on human health and the environment.

* Depending on model

Documents / Resources



[Tefal CM533811 Coffee Machine with Filter](#) [pdf] Instructions

3203000121, CM533811 Coffee Machine with Filter, CM533811, Coffee Machine with Filter, Machine with Filter, Filter

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.