



## TELEFUNKEN TF-MS2211 Portable Music System with Bluetooth Instruction Manual

[Home](#) » [TELEFUNKEN](#) » TELEFUNKEN TF-MS2211 Portable Music System with Bluetooth Instruction Manual 

# TELEFUNKEN

TF-MS2211 Portable Music System with Bluetooth  
Instruction Manu



**PORTABLE MUSIC SYSTEM WITH BLUETOOTH**

 
### Dear customer!



Thank you for purchasing our product. For safety, It Is strongly recommended to read this manual carefully before connecting, operating, and/or adjusting the product and keep the manual for reference In the future.

 
## Contents

- [1 Description](#)
- [2 Connection diagram](#)
- [3 Important safeguards](#)
- [4 Power supply](#)
- [5 General operations](#)
- [6 USB/MicroSD operation](#)
- [7 FM radio](#)
- [8 Microphone](#)
- [9 Recording](#)
- [10 TWS function](#)
- [11 Maintenance and care](#)
- [12 Accessories](#)
- [13 Specifications](#)
- [14 Documents / Resources](#)
- [15 Related Posts](#)
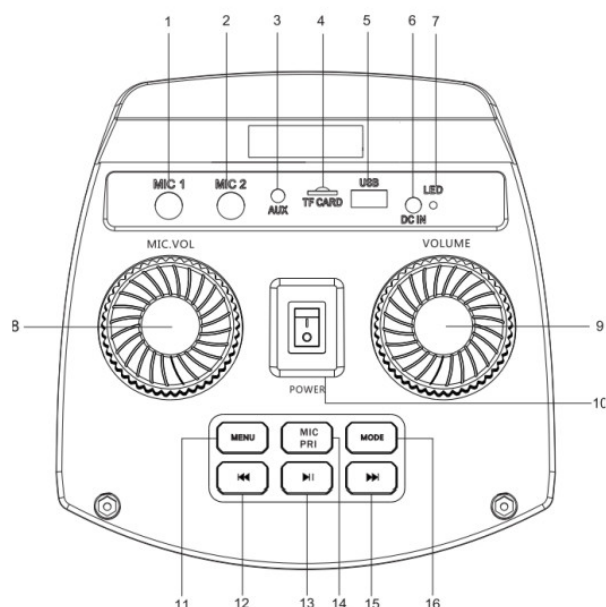
## Description



1. Microphone 1 input	9. Master volume knob
2. Microphone 2 input	10. Power On/Off switch
3.AUXinput	11. the MENU button
4. TF (micro SD) card slot	12. PREVIOUS (  ) button
5. USB port	13. PLAY/PAUSE (  ) button
6. DC IN (DC 9V, 1.5A charging port)	14. MIC PAI button
7. Power/Charge LED	15. NEXT (  ) button
8. Microphone volume knob	16. MODE button (USB/TF/FM/BT/AUX)

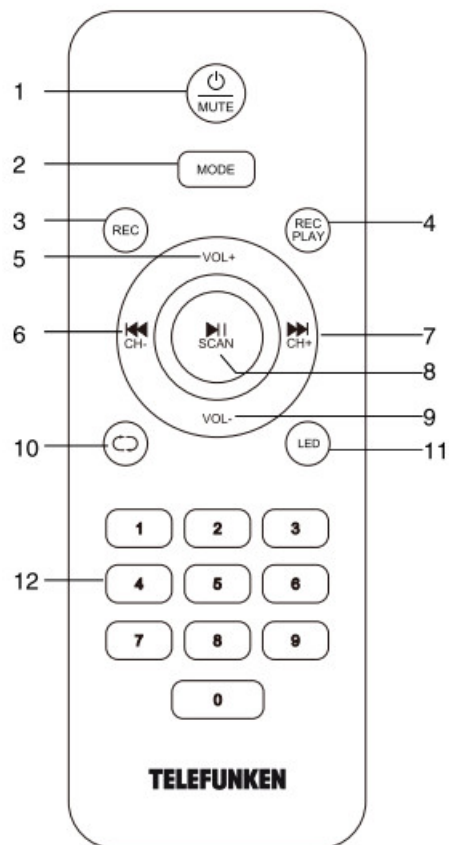 


1. POWER/MUTE button	7. CH+ / ►► button
2. MODE button	8. SCAN/ ► button
3. REC button	9. VOL- button
4. REC PLAY button	10. EPEAT ( ↻ ) button
5. VOL+ button	11. LED button
6. CH- / ◀◀ button	12. Numeric buttons



The remote control works on 2AAA batteries (not included).

## Connection diagram

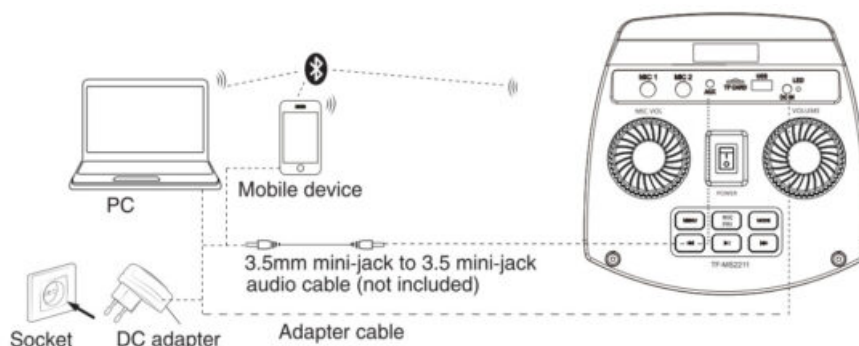

## Important safeguards

- The instruction manual contains important operating and maintenance instructions. For your safety, it is necessary to refer to the manual. Keep the manual for future use.
  - Do not hit or drop the unit
  - Do not expose the unit to vibration, direct sunlight, too high or low temperatures, or humidity.
  - Do not disassemble the unit yourselves
- Refer servicing to qualified service personnel

All the illustrations in this manual are schematic images, which may differ from actual objects.

## Power supply




- The unit operates on an internal rechargeable Li-ion battery and 220V mains via a DC adapter.
- The battery can be recharged with the provided power adapter with an output voltage of 9V, and a current of 1.5A. Before first plugging the appliance check that the voltage indicated on the rating label corresponds to the mains voltage in your home.
- Plug the adapter cable into the DC IN socket on the unit.
- Plug the adapter into the power source (e.g. wall outlet).
- For best results, try to fully charge the battery before each use. If the battery is drained, please allow it to recharge for a few hours.
- Push the OFF/ON switch into the ON position to switch the unit on. Put it into the OFF position to switch it off.

## General operations

### Bluetooth wireless playback

- This unit can wirelessly playback audio from any device with Bluetooth A2DP function.
- The wireless range is approximately within 10 meters in direct line of sight.

### HOW TO PAIR YOUR DEVICE TO THIS UNIT:



- Make sure the Bluetooth function is switched on in your device (e.g. smartphone, tablet).
- Switch on the unit and press the MODE button repeatedly to select the Bluetooth mode (selected by default). The display will show "BLUE".
- Once the Bluetooth pairing indicator begins flashing, you will find the unit listed in the Bluetooth connections list of your device (as TF-MS2211).
- If asked for a passcode, enter "0000".
- The initial setup is required only once per device. The unit will automatically pair to the last paired device.
- The LED indicator will flash when searching for a Bluetooth device and stay on when the devices are paired.
- When playing files, you can press the  button to pause and resume playback.
- Press the  or  button to go to a previous or next track. Rotate the volume knob to adjust the volume or press the VOL+VOL- buttons on the remote.

### External device connection

- You can connect the audio output of an external device to this unit, to listen to the sound of that device through the speaker.
- To connect an external audio device, please use an AUX audio cable with 3.5mm- to-3.5 mm plugs (not included) to connect the headphone out or audio line-out of the external device to the AUX input of this unit.
- Press the MODE button to select the AUX mode.
- Turn on the external device. You can press the volume buttons to adjust the volume or press the VOL+NOL- buttons on the remote.

## USB/MicroSD operation





### Playback

- Turn on the device.
- Insert a MicroSD (TF) card into the slot.  
Or insert a USB drive into the USB port. Press the MODE button repeatedly to select the USB or MicroSD mode.
- When playing, you can press  to play/pause the playback.
- During the playback, you can press the w and ... buttons to go to the previous and next track. Rotate the volume knob or press VOL+NOL- buttons on the remote to adjust the volume.
-  It may take up to 60 seconds to open a large microSD card / USB drive with many files.
- Press the REPEAT button to display the current playback mode. Press REPEAT to repeat one track or repeat all tracks.

### General USB/MicroSD notes

- This unit is equipped with a microSD slot and USB port that can read and play MP3 files stored on standard microSD cards and USB drives up to 32 GB.
- FAT and FAT32 file system is supported by this unit.  
Never remove microSD cards and USB drives from the unit during playback, always stop playback, then press the MODE button to switch to another mode before removing the storage to prevent damage to your files and cards/drives themselves.

### FM radio

- Turn on the device.
- Press the MODE button repeatedly to select the FM mode.
- Press and hold SCAN /  on the remote or  on the device to automatically scan and save all available radio stations. The procedure will take several minutes and cannot be interrupted.
- Once the search is finished, you can press the  and  buttons to go to a previous or next radio station.
- Press the buttons with digits on the RC to input the FM frequency directly.

### Microphone

- You can connect a microphone (not included) for karaoke or other purposes to this unit by connecting it to the 6.35mm microphone input jack. Please do not plug the microphone when the unit is charging.
- Press the MIC PRI button to switch the microphone priority on and off.




Slight noise during playback pauses is not a construction defect, it is determined by the factory presets of the dynamic noise reduction system.

## Recording

- You can record the sound source when using a microphone. These recordings are stored on a connected USB device or micro SD card. If both USB and micro SD devices are connected, the recording will be stored on the USB.
- Press the 'REC' Button on the remote control to start recording. The microphone must be plugged in. Press again to stop the recording, it will then play automatically.
- Press the 'REC Play' button on the remote control to play your recording.

## TWS function

- If you have two units at your disposal, you can pair them with each other and enable the True Wireless (TWS) stereo sound.
- Turn both units on and switch them into Bluetooth mode. Press and hold  on to any of the units. A prompt voice will sound, indicating that the units are paired. Use your mobile device to connect to main and secondary speakers via Bluetooth. Then the two speakers can be used for playback together. Press and hold MODE on any of the speakers to disconnect them.

## Maintenance and care

Switch off the unit, and unplug from the power supply. The outside of the appliance can be cleaned with a slightly damp cloth.

## Accessories

Audio system	1pc
DC adapter	1 pc
Remote control	1 pc
Instruction manual	1 pc

## Specifications


Rated Maximum Sinusoidal (RMS) Peak music power output (PMP O)	100 W 900 W
Adapter input voltage	DC 9 V 1.5 A
Nominal power consumption	13 W
FM radio	87.5 – 108 MHz
Battery / Mains power supply	Li-ion, 7.4V, 3000 mAh / 220V-50/60 Hz
Battery life	up to 10 hours*
Net weight	4.9 kg
Unit dimensions	260 mm 4 250 mm " 600 mm

\*The battery life is approximate and depends on the conditions and nature of use (the number of recharge cycles of the built-in battery, environmental conditions, the use of lighting effects, sound volume level, playback source, type of content being played).

Specifications and functions are subject to change without notice. It is connected with continual improvement of the device.

MANUFACTURED AND DISTRIBUTED BY TECHNO ELECTRIC LIMITED, Legal address: 801 Luk Yu Building, 24 – 26 Stanley Street, Central, China TELEFUNKEN and the TELEFUNKEN logo are trademarks of TELEFUNKEN Licenses GmbH and are used under a trademark license.

## Documents / Resources

 <p>PORTABLE MUSIC SYSTEM WITH BLUETOOTH PORTABLE MUSIC SYSTEM WITH BLUETOOTH TF-MS2211 Instruction Manual Purchased in Germany</p>	<p><a href="#">TELEFUNKEN TF-MS2211 Portable Music System with Bluetooth</a> [pdf] Instruction Manual TF-MS2211 Portable Music System with Bluetooth, TF-MS2211, Portable Music System with Bluetooth</p>
--	---