



TELEFUNKEN TF-MS3303B Portable Music System with Bluetooth Instruction Manual

[Home](#) » [TELEFUNKEN](#) » TELEFUNKEN TF-MS3303B Portable Music System with Bluetooth Instruction Manual



TELEFUNKEN TF-MS3303B Portable Music System with Bluetooth




Dear customer!




Thank you for purchasing our product. For safety, it is strongly recommended to read this manual carefully before connecting, operating and/or adjusting the product and keep the manual for reference in future.

Contents


- 1 Description
- 2 Remote control
- 3 Important safeguards
- 4 Power supply
- 5 General operations
 - 5.1 Bluetooth wireless playback
 - 5.2 External device connection
 - 5.3 LED display
- 6 USB/MicroSD operation
 - 6.1 General USB/MicroSD notes
- 7 Mood light
- 8 FM radio
- 9 Microphone
- 10 Recording
- 11 TWS function
- 12 Maintenance and care
- 13 Accessories
- 14 Specifications
- 15 Documents / Resources
- 16 Related Posts

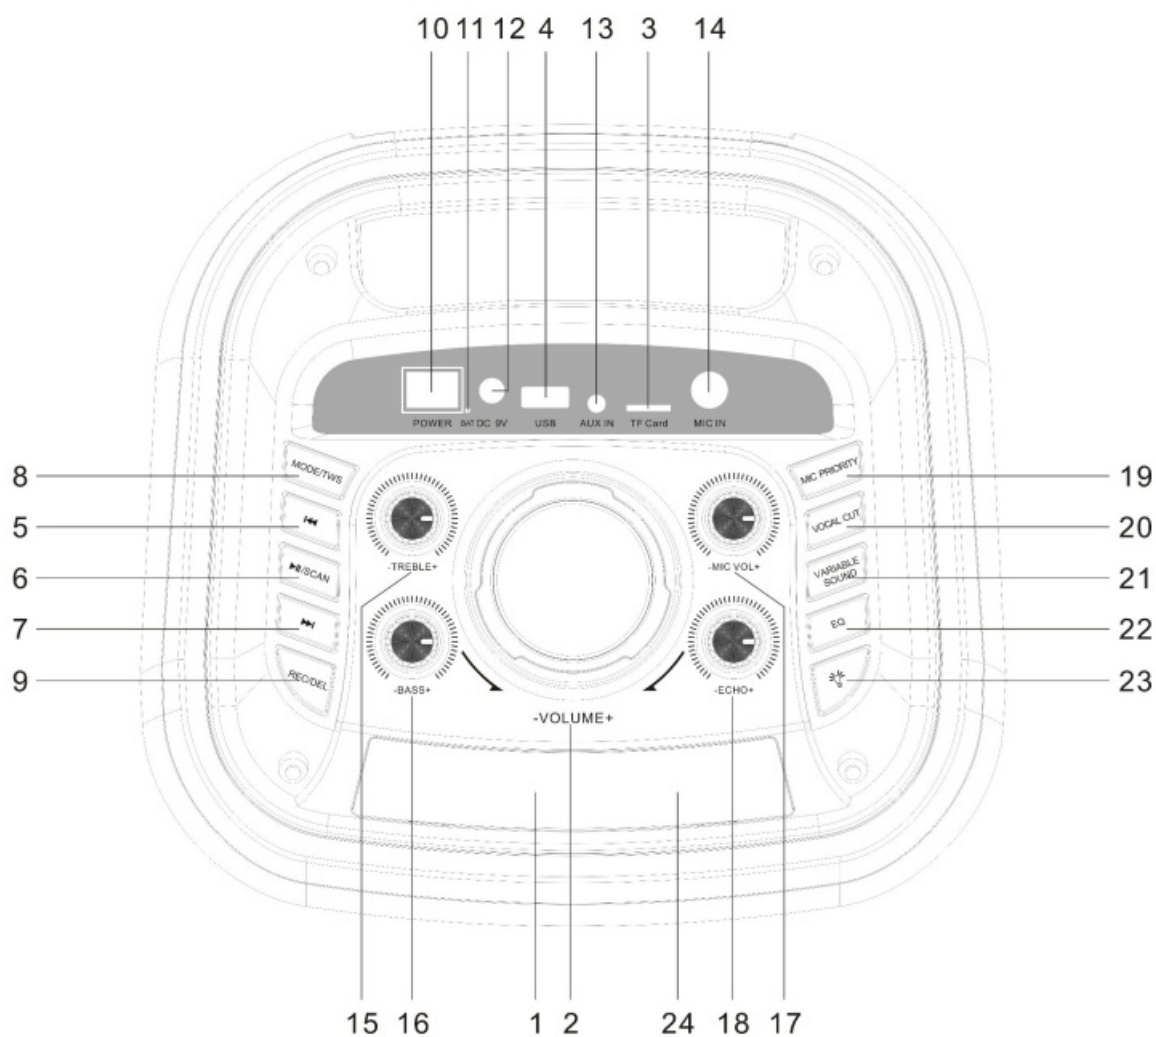Description



1. LED screen
2. Master volume knob
3. TF (microSD) card slot
4. USB port
5.  (PREVIOUS) button
6.  (PLAY/PAUSE) /SCAN button
7.  (NEXT) button
8. MODE/SHIFT/TWS button
9. REC/DEL button
10. Power ON/OFF switch
11. Charge indicator LED DC 9V charging port AUX IN 3.5mm
12. Microphone input 6.35mm
13. Treble knob
14. Bass knob
15. Microphone volume knob
16. Microphone reverberation knob
17. MIC PRIORITY button
18. VOCAL CUT button
19. VARIABLE SOUND button
20. EQ button
21. LIGHT button
22. Remote control receiver

Remote control

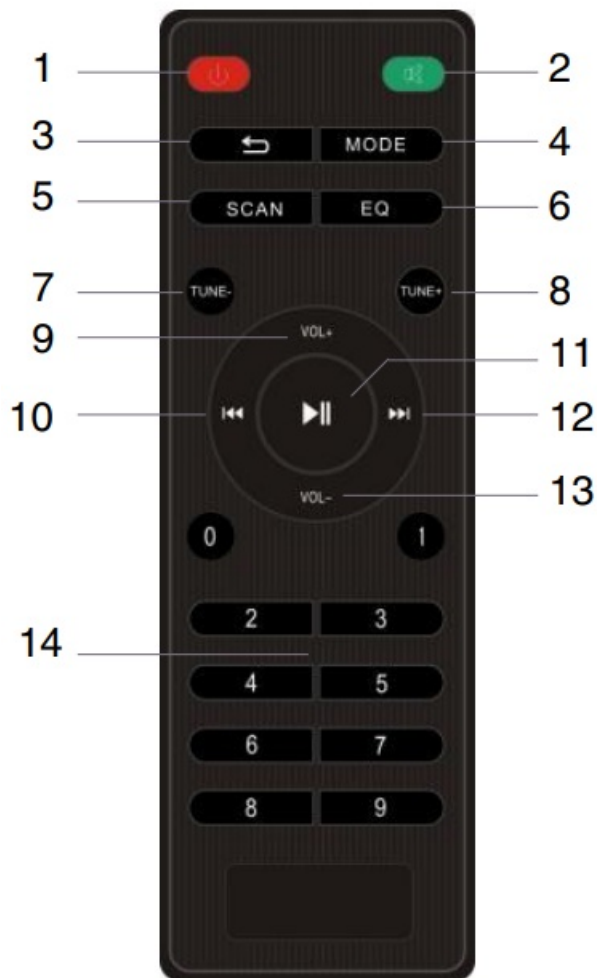

1. (Power) button
2. MUTE button
3. REPEAT button
4. MODE button
5. SCAN button
6. EQ button
7. TUNE- button
8. TUNE+ button
9. VOL+ button
10. (PREVIOUS) button
11. (PLAY/PAUSE) button
12. (NEXT) button
13. VOL- button
14. Numeric buttons

Important safeguards

- The instruction manual contains important operating and maintenance instructions. For your safety, it is necessary to refer to the manual. Keep the manual for future use.
- Do not hit or drop the unit

- Do not expose the unit to vibration, direct sunlight, too high or low temperatures or humidity.
- Do not disassemble the unit yourselves. Refer servicing to qualified service personnel.

All the illustrations in this manual are schematic images, which may differ from actual objects.

Power supply




- The unit operates on an internal rechargeable Li-ion battery and 220V mains via DC adapter.
- The battery can be recharged with the provided DC adapter. Before first plugging the appliance, check that voltage indicated on the rating label corresponds to the mains voltage in your home.
- Insert the adapter into the DC IN input on the unit and plug it into the 220V outlet.
- For best results, try to fully charge the battery before each use. If the battery is drained, please allow it to recharge for a few hours.
- Put the OFF/ON switch into ON position to switch the unit on. Put it into OFF position to switch off.

General operations

Bluetooth wireless playback

- This unit can wirelessly playback audio from any device with Bluetooth A2DP function.
- The wireless range is approximately within 10 meters in direct line of sight.
- Wireless audio streaming requires pairing of a Bluetooth device (e.g. smartphone).

HOW TO PAIR YOUR DEVICE TO THIS UNIT:

- Make sure the Bluetooth function is switched on in your device (e.g. smartphone, tablet).
- Switch on the unit and press the MODE button repeatedly to select the Bluetooth mode.
- Once the Bluetooth pairing begins, you will find the unit listed in the Bluetooth connections list of your device (as TFMS3303B).
- If asked for a passcode, enter "0000".
- The initial setup is required only once per device. The unit will automatically pair to the last paired device.
- When playing files, you can press the  button to pause and resume playback.
- Press the  or  buttons to go to a previous or next track. Rotate the volume knob or press the volume buttons on the remote to adjust volume.

External device connection




- You can connect the audio output of an external device to this unit, to listen to the sound of that device through the speaker.
- To connect an external audio device, please use an audio cable with 3.5mm-to-3.5 mm plugs (not included) to connect the headphone out or audio line-out of the external device to the AUX input of this unit.
- Press MODE to select the AUX mode.
- Turn on the external device. You can rotate the volume knob or press the volume buttons on the RC to adjust volume.

LED display

- The display shows the selected operation mode when you press MODE.
- Bass and treble adjustments are also visible on the display.

USB/MicroSD operation

Turn on the device.

- Insert a microSD (TF) card into the slot. Or insert a USB drive into the USB port. Press the MODE button repeatedly to select the USB or MicroSD mode.
- When playing, you can press  to play/pause the playback.
- During the playback you can press the  and  buttons to go to the previous and next track. Rotate the volume indicator to adjust volume.



It may take up to 60 seconds to open and verify a large microSD card / USB drive with many files.

- Press the REPEAT button on the RC to switch between various playback repeat modes (one track – folder – random – all tracks – off).



The SD and USB are available only when the corresponding storage device is present.

General USB/MicroSD notes

This unit is equipped with a microSD slot and USB port that can read and play MP3 files stored on standard microSD cards and USB drives up to 32 GB.

- FAT32 file system is supported by this unit.

Never remove microSD cards and USB drives from the unit during playback, always stop playback, then press the MODE button to switch to another mode before removing the storage to prevent damage to your files and cards/drives themselves.






Slight noise during playback pauses is not a construction defect, it is determined by the factory presets of the dynamic noise reduction system.

Mood light

The speakers will light up during playback. Press the  button to switch it on and off.

FM radio


- Turn on the device.

- Press the MODE button repeatedly to select the FM mode.
- Press  (PLAY/PAUSE) / SCAN to automatically scan and save all available radio stations. The procedure will take several minutes and cannot be interrupted.
- Radio frequency can be set manually using the numeric buttons on the remote control.
- Once the search is finished, you can press the  and  buttons to go to a previous or next radio station. Also you can input the frequency directly using the numeric buttons on the remote

Microphone

- You can connect the microphone for karaoke or other purposes into this unit by connecting it to the 6.35mm microphone input jack. Please do not plug the microphone when the unit is charging.
Microphone is not included.
- While connected, you can control the microphone volume and reverberation effect by adjusting the corresponding sliders on the top panel.

Recording

- You can record the sound source when using a microphone. These recordings are stored on to a connected USB device or micro SD card.
- Press the  button on the unit or REC on the remote control to start recording. Press again to stop.
- During the recording tune the ECHO knob to the minimum.

TWS function

- If you have two units at your disposal, you can pair them to each other and enable the True Wireless (TWS) stereo sound.
- Turn the both units on and switch them into the Bluetooth mode. Press and hold TWS on any of the units. A beep will sound, indicating that the units are paired. Press and hold TWS on any of the devices to disconnect them.

Maintenance and care

Switch off the unit, unplug from the power supply. The outside of the appliance can be cleaned with a slightly damp cloth.

Accessories

Music system 1 pc
DC 9V adapter 1 pc
Remote control 1 pc
Instruction manual 1 pc

Specifications

Rated Maximum Sinusoidal (RMS) Peak music power output (PMPO)	90 W 900 W
Adapter input voltage	DC 9 V 1.5 A
Nominal power consumption	13 W
FM radio	87.5 – 108 MHz
Battery / Mains power supply	Li-ion, 7.4V, 5000 mAh / 220V ~50/60 Hz
Battery life	up to 10 hours*
Net weight	5.1 kg
Unit dimensions	220 x 210 x 650 mm

*The battery life is approximate and depends on the conditions and nature of use (the number of recharge cycles of the built-in battery, environmental conditions, the use of lighting effects, sound volume level, playback source, type of content being played).




Specifications and functions are subject to change without notice. It is connected with continual improvement of the device.

MANUFACTURED AND DISTRIBUTED BY TECHNO ELECTRIC LIMITED, Legal address: 801 Luk Yu Building, 24 – 26 Stanley Street, Central, China TELEFUNKEN and the TELEFUNKEN logo are trademarks of TELEFUNKEN Licenses GmbH and are used under a trademark license.



TELEFUNKEN

Documents / Resources

  <p>PORTABLE MUSIC SYSTEM WITH BLUETOOTH ПОРТАБЕЛЬНАЯ СИСТЕМА С БЛУТУЗ TF-MS3303B Instruction manual Инструкция по эксплуатации</p> 	<p>TELEFUNKEN TF-MS3303B Portable Music System with Bluetooth [pdf] Instruction Manual TF-MS3303B Portable Music System with Bluetooth, TF-MS3303B, Portable Music System with Bluetooth, Portable Music System, Music System</p>
--	---